



## MOMENTUM True Wireless

True wireless stereo earphones

M3IETW (M3IETW L, M3IETW R, M3IETW C)



### Instruction manual

Use the navigation (left) or the following links:

[“Product overview”](#)

[“Getting started”](#)

[“Using the earphones”](#)

[“FAQ/If a problem occurs ...”](#)

[“Specifications”](#)

Version: 08/18 A01

Sennheiser electronic GmbH & Co. KG

Am Labor 1

30900 Wedemark

Germany

[www.sennheiser.com](http://www.sennheiser.com)

# Contents

Important safety instructions	3
Package contents	5
Product overview	6
Charging case	6
Earbuds	6
Overview of the LED indications of the charging case	7
Overview of the LED indications of the earbuds	8
Getting started	10
Using the earphones	11
Information on the rechargeable battery, the charging process and the first use	11
Charging the rechargeable battery of the earbuds and the charging case	11
Connecting the earphones to a Bluetooth device	12
Information on the Bluetooth wireless connection	12
Pairing the earbuds with a Bluetooth device	12
Disconnecting the earphones from a Bluetooth device	13
Installing the Smart Control app	13
Selecting suitable ear adapters for optimum fit of the earbuds	13
Inserting the earbuds into the ears	14
Switching the earbuds on	14
Switching the earbuds off	14
Adjusting the volume	15
Listening of ambient noise or conversations - activating/deactivating the Transparent Hearing function	15
Adjusting the Transparent Hearing function	16
Using the voice assistant/voice dialing	16
Using the Smart Pause function	16
Controlling music playback	16
Making calls using the earphones	17
Displaying the battery charge status	17
Adjusting sound effects/the equalizer	18
Setting the voice prompts/beep sounds	18
Storing or transporting the earphones in the charging case	18
Care and maintenance	20
Changing ear adapters	20
Information on the built-in rechargeable battery	20
Installing firmware updates	20
FAQ/If a problem occurs ...	21
Specifications	23
Manufacturer Declarations	24



## Important safety instructions

- ▷ Read this instruction manual carefully and completely before using the product.
- ▷ Always include this instruction manual when passing the product on to third parties.
- ▷ Do not use an obviously defective product.
- ▷ Only use the product in environments where Bluetooth wireless transmission is permitted.

### Preventing damage to health and accidents



- ▷ Protect your hearing from high volume levels. Permanent hearing damage may occur when headphones are used at high volume levels for long periods of time. Sennheiser headphones sound exceptionally good at low and medium volume levels.
- ▷ Do not insert the earphones too deep into your ears and never insert them without ear adapters. Always remove the earphones slowly and carefully from your ears.



- ▷ The product generates stronger permanent magnetic fields that could cause interference with cardiac pacemakers, implanted defibrillators (ICDs) and other implants. Always maintain a distance of at least 3.94"/10 cm between the product component containing the magnet (earbuds and charging case) and the cardiac pacemaker, implanted defibrillator, or other implant.
- ▷ Keep the product, accessories and packaging parts out of reach of children and pets to prevent accidents and choking hazards.
- ▷ Do not use the product in an environment that requires your special attention (e.g. in traffic or when performing skilled jobs).

### Preventing damage to the product and malfunctions

- ▷ Always keep the product dry and do not expose it to extreme temperatures (hairdryer, heater, extended exposure to sunlight, etc.) to avoid corrosion or deformation.
- ▷ Use only attachments/accessories/spare parts supplied or recommended by Sennheiser.
- ▷ Clean the product only with a soft, dry cloth.

### Safety instructions for Lithium-Polymer rechargeable batteries







#### WARNING

If abused or misused, the rechargeable batteries may leak. In extreme cases, they may even present a risk of

- explosion,
- fire development,
- heat generation,
- smoke or gas development.

	<p>Only use rechargeable batteries and chargers recommended by Sennheiser.</p>
	<p>Charge products with built-in rechargeable batteries at ambient temperatures between 10 and 40°C/50 and 104°F.</p>

	Do not heat above 70°C/158°F, e.g. do not expose to sunlight or throw into fire.
	When not using the product for extended periods of time, charge its built-in rechargeable battery regularly (about every 3 months).
	Switch rechargeable battery-powered products off after use.
	Dispose of defective products with built-in rechargeable batteries at special collection points or return them to your specialist dealer.

**Note on firmware updates**



Make sure that your headphones are always updated to the latest firmware.

Firmware updates can be downloaded free of charge from the Internet using the Sennheiser Smart Control app.

**Intended use/Liability**

These headphones have been designed as an accessory for Bluetooth compliant devices. They are intended for wireless audio communication such as music playback and phone calls via Bluetooth wireless technology.

It is considered improper use when the product is used for any application not named in the corresponding product documentation.

Sennheiser does not accept liability for damage arising from improper use or misuse of this product and its attachments/accessories.

Sennheiser is not liable for damages to USB devices that are not consistent with the USB specifications. Sennheiser is not liable for damages resulting from the loss of connection due to flat or overaged rechargeable batteries or exceeding the Bluetooth transmission range.

Before putting into operation, please observe the respective country-specific regulations.

# Package contents

Right earbud R (M3IETW R) and left earbud L (M3IETW L), each with built-in rechargeable battery

Charging case with built-in rechargeable battery for the earbuds (M3IETW C)

USB charging cable with USB-C and USB-A connector, approx. 0.25 m

Silicone ear adapters (size XS, S, M (pre-mounted to the earphones) and L



Quick guide



Safety guide



Online you can find:

- a detailed instruction manual ([www.sennheiser.com/download](http://www.sennheiser.com/download))
- the Sennheiser Smart Control app for configuring the earphones and for additional functions ([www.sennheiser.com/device-control-app](http://www.sennheiser.com/device-control-app))



A list of accessories can be found on the MOMENTUM True Wireless product page at [www.sennheiser.com](http://www.sennheiser.com). Contact your local Sennheiser partner: [www.sennheiser.com](http://www.sennheiser.com) > “Sales Partner”.

# Product overview

## Charging case

M3IETW C

- ① Type plate
- ② LED  
displays the charging process/charge status of the rechargeable battery of the charging case or of the earbuds (when inserted into the charging case)
- ③ LED button  
activates the LED display for 5 seconds
- ④ Built-in rechargeable battery for charging on the go
- ⑤ Input for USB-C connector  
for charging the rechargeable batteries
- ⑥ Charging compartment for the left earbud L
- ⑦ Charging compartment for the right earbud R
- ⑧ Magnetic holders
- ⑩ Charging contacts

## Earbuds

M3IETW L and M3IETW R

- ⑪ Right earbud R (master earbud, controls the Bluetooth connection to the smartphone and to the left earbud)
- ⑫ Right touch control panel

- ⑬ left earbud L (slave earbud, receives Bluetooth signals from the right earbud)
- ⑭ Left touch control panel
- ⑮ Status LED
- ⑯ Charging contacts
- ⑰ Magnetic holders
- ⑱ Changeable silicone ear adapters
- ⑲ Microphones for phone calls
- ⑳ Microphones for the perception of ambient noise (“Transparent Hearing”)

## Overview of the LED indications of the charging case

When a USB cable is connected, the LED of the charging case permanently displays the charging process:

LED	Charging case WITH earbuds inserted	Charging case WITHOUT earbuds inserted
pulses yellow	... earbuds and charging case are being charged	... charging case is being charged
lights up green	... earbuds and charging case are fully charged	...charging case is fully charged
flashes red	... a charging error/battery error has been detected in at least one earbud (see page 20)	... .. a charging error/ battery error has been detected in the charging case (see page 20)

If you press the LED button and no USB cable is connected, the LED of the charging case displays the battery charge status or the charging process of the earbuds for 5 seconds:

LED	Charging case WITH earbuds inserted	Charging case WITHOUT earbuds inserted
lights up green	... the earbuds are fully charged	... the charging case is charged between 50-100 %
pulses yellow	...the earbuds are being charged via the rechargeable battery of the charging case	–
lights up yellow	... the rechargeable battery of the charging case is empty and the earbuds are not fully charged	... the charging case is charged less than 50 %

LED	Charging case WITH earbuds inserted	Charging case WITHOUT earbuds inserted
lights up red	... the rechargeable batteries of the earbuds and the charging case are empty	... the rechargeable battery of the charging case is empty
flashes red	... a charging error/battery error has been detected in at least one earbud (see page 20)	... a charging error/battery error has been detected in the charging case (see page 20)

## Overview of the LED indications of the earbuds

LED	Meaning; the earbud ...
flashes red-blue for approx. 1 min	... is in Bluetooth pairing mode
flashes blue 3 times	... Bluetooth pairing successful
flashes red 2 times	... Bluetooth pairing failed
lights up blue	... is connected to a device via Bluetooth (master earbud (R) is connected to the smartphone, slave earbud (L) is connected to the master earbud (R))
lights up red	... is not connected to a device via Bluetooth or the connection has been lost (master earbud (R) is not connected to a smartphone, slave earbud (L) is not connected to the master earbud (R))
flashes red quickly	... rechargeable battery is almost empty
flashes red slowly	... system error. Perform a restart (see page 22).

**i** When you insert the earbuds into your ears, the LEDs of the earbuds automatically go off after approx. 5 seconds.



### Notes on voice prompts

The earphones output voice prompts for the following functions. Using the Smart Control app, you can change the language of the voice prompts, choose between voice prompts and beep sounds, or deactivate the status messages with a few exceptions (e.g. rechargeable battery is empty).

Voice prompt	Meaning/earbud...
“Power on”	... switched on
“Power off”	... switched off
“Connected”	... connected via Bluetooth
“No connection”	... not connected via Bluetooth
“Pairing”	... is in Bluetooth pairing mode
“Pairing cancelled”	... Bluetooth pairing cancelled



<b>Voice prompt</b>	<b>Meaning/earbud...</b>
"Pairing successful"	... Bluetooth pairing successful
"Pairing failed"	... Bluetooth pairing failed
"Recharge headset"	... Rechargeable battery almost empty – recharge the battery
"Call rejected"	... incoming call rejected
"Call ended"	... Call ended
"Volume min"	... Volume set to maximum
"Volume max"	... Volume set to minimum

# Getting started

## 1. Waking up the earphones and the charging case and charging the rechargeable batteries

Upon delivery, the rechargeable batteries of the earphones and the charging case are in sleep mode and have to be woken up by connecting them to a power source once.

- ▷ Insert the earphones into the charging case.
- ▷ Connect the USB-C cable to the charging case and to a USB power source (see page 11).

The earphones and the charging case are woken up and the rechargeable batteries are being charged. The earphones are now ready for use.

## 2. Selecting suitable ear adapters for optimum fit of the earbuds

The perceived sound quality and bass performance of the earphones depends to a large extent on the correct fit of the earbuds in the ear.

- ▷ Test which ear adapter size gives you the best sound quality and the best wearing comfort.
- ▷ You can choose between 4 different ear adapters in size XS, S, M and L (see page 13).

## 3. Connecting the earphones to a Bluetooth device

Connect the earphones to your smartphone via Bluetooth (see page 12).

## 4. Installing the Smart Control app on your smartphone

The Sennheiser Smart Control app allows you to use all functions and settings of the earphones and to e.g. adjust the sound to your liking using the equalizer (see page 13).

# Using the earphones

## Information on the rechargeable battery, the charging process and the first use

The earbuds and the charging case each have a built-in rechargeable battery. The charging case allows you to store your earphones safely at all times while they are being charged.

Upon delivery, the rechargeable batteries of the earphones and the charging case are in sleep mode and have to be woken up by connecting them to a power source once. Sennheiser recommends charging the earphones and the charging case for a complete charging cycle without interruption before using them for the first time.

A complete charging cycle of the charging case and the earphones takes about 1.5 hours. A charging time of approx ## minutes gives you 1 hour of listening time with the earphones.

Sennheiser recommends using the supplied USB cable and a compatible standard USB power supply unit for charging the headphones.

When a USB cable which is connected to a power source is also connected to the charging case, the rechargeable battery of the charging case is being charged. When the earbuds are inserted into the charging case, their rechargeable batteries are being charged at the same time. The LED of the charging case displays the charging process (see page 7).

When the battery charge drops to a critical level, a voice prompt asks you to recharge the earphones (“Recharge headset”).

The charge status of the rechargeable battery of the charging case is displayed by the LED on the charging case (see page 7).

## Charging the rechargeable battery of the earbuds and the charging case

1. Open the charging case and insert the left earbud into the left charging compartment and the right earbud into the right charging compartment.

The earbuds are magnetically pulled into the charging compartment.

2. Connect the USB-C connector of the USB cable to the USB-C socket of the charging case.

3. Connect the USB-A connector to a corresponding socket of a charger, e.g. a computer or power supply unit (to be ordered separately). Make sure that the charging case is connected the power supply system.

The rechargeable batteries of the earphones and the charging case are being charged.

If no earphones are inserted into the charging case, only the rechargeable battery of the charging case is being charged.

The LED of the charging case displays the charge status:

LED	Charging case WITH earbuds inserted	Charging case WITHOUT earbuds inserted
pulses yellow	... the earbuds and charging case are being charged	... the charging case is being charged
lights up green	... the earbuds and charging case are fully charged	... the charging case is fully charged
flashes red	... a charging error/battery error has been detected in at least one earbud (see page 20)	... a charging error/battery error has been detected in the charging case (see page 20)

## Connecting the earphones to a Bluetooth device

To be able to use the Bluetooth wireless connection, you must register both devices (earphones and e.g. smartphone) via the device settings of your smartphone. This process is called pairing.

If operation differs from the steps mentioned, also refer to the instruction manual of the Bluetooth device you are using.

**i** If you switch the earphones on for the first time after initial charging, they automatically go into pairing mode.

## Information on the Bluetooth wireless connection

The earphones are compatible with Bluetooth 5.0.

If your audio source supports one of the following high-resolution audio encoding methods, music is automatically played in high audio quality: aptX, aptX<sup>®</sup> LL or AAC. Otherwise, the headphones will play your music in normal audio quality (SBC).

Paired devices establish the Bluetooth wireless connection immediately after switch-on and are ready for use.

When you switch the earphones on, they automatically try to connect to the last connected Bluetooth device. The earphones can save the connection profiles of up to eight Bluetooth devices with which they have been paired.

If you pair the earphones with the ninth Bluetooth device, the saved connection profile of the least used Bluetooth device will be overwritten. If you want to re-establish a connection with the overwritten Bluetooth device, you have to pair the earphones again.

## Pairing the earbuds with a Bluetooth device

1. Take both earbuds out of the charging case and insert them into your ears (see page 14). The distance between the earbuds and the Bluetooth device should not exceed 50 cm.

2. Simultaneously touch and hold the right and the left touch control panel for 5 seconds until you hear the voice prompt “Pairing” and a beep sound.  
The LEDs of the earbuds flash blue and red. The earbuds are in pairing mode.
3. Activate Bluetooth on your Bluetooth device.
4. Via the menu of your Bluetooth device, start the search for new Bluetooth devices.  
All active Bluetooth devices in the proximity of your smartphone are displayed.
5. From the list of found Bluetooth devices, select “MOMENTUM TW”. If necessary, enter the default pin code “0000”.  
If pairing was successful, you hear the voice prompt “Pairing successful” and the LEDs of the earbuds flash blue 3 times.

**i** If no connection is established within 1 minute, pairing mode is terminated and the earbuds switch to idle mode. If necessary, repeat the pairing procedure.

## Disconnecting the earphones from a Bluetooth device

- ▷ Via the menu of your Bluetooth device, disconnect the connection to the earphones.  
The earphones are disconnected from the Bluetooth device. The earphones then search for other paired devices. If no device is found, you hear the voice prompt “No connection”. The earphones go to idle mode.

**i** If you want to clear the Bluetooth pairing list of the earphones, reset the earphones to the factory default settings (see page 22).

## Installing the Smart Control app

To be able to make full use of all the settings and functions of the earphones, you need to have the free Sennheiser Smart Control app installed on your smartphone.

Download the app from the App Store or Google Play and install it on your smartphone. Alternatively, you can use your smartphone to scan the following QR code or to call up the following Internet site:

[www.sennheiser.com/device-control-app](http://www.sennheiser.com/device-control-app)

- ▷ Connect your smartphone to the earphones using Bluetooth (see page 12).
- ▷ Start the Smart Control app.  
The Smart Control app recognizes the earphones and activates all available settings and functions.


## Selecting suitable ear adapters for optimum fit of the earbuds


The perceived sound quality and bass performance of the earphones depends to a large extent on the correct fit of the earbuds in the ear.

- ▷ Pull the ear adapter away from the in-ear sound tunnel.
- ▷ Mount the new ear adapter to the in-ear sound tunnel. Ensure that it locks into place.
- ▷ Test which ear adapter size gives you the best sound quality and the best wearing comfort.  
You can choose between 4 different ear adapters in size XS, S, M and L. The ear adapters must fit snugly in the ear canal and completely seal your ears.

## Inserting the earbuds into the ears

- ▷ Insert the right earbud into your right ear and the left earbud into your left ear.
- ▷ Insert the earbuds at a slight angle into the ears and twist them slightly into the ear canal so that they sit comfortably and snugly in the ear canal (see also page 13).

 You can use the right earbud alone without using the left earbud.

 The Smart Pause function automatically stops music playback if you remove an earbud from your ear (see page 16).

## Switching the earbuds on



### WARNING


#### Danger of hearing damage due to high volumes!


Listening at high volume levels can lead to permanent hearing defects.

- ▷ Before putting your headphones on, adjust the volume to a low level (see page 15).
- ▷ Do not continuously expose yourself to high volume levels.

- ▷ Take both earbuds out of the charging case and insert them into your ears (see page 14).

If a paired Bluetooth device is within the transmission range, you hear the voice prompts “Power On” and “Connected”. The LEDs of the earbuds light up blue.

 If the earbuds do not find a paired Bluetooth device within 15 minutes, they automatically switch to sleep mode. You can wake up the earbuds by touching their touch control panel once or by briefly inserting them into the charging case.

 If the earbuds are inactive for approx. 60 minutes, they switch off automatically. Briefly insert the earbuds into the charging case to switch them on again.

## Switching the earbuds off

The earbuds do not have to be switched off explicitly.

- ▷ Insert the earbuds into the charging case to switch them off. As soon as the earbuds are inserted into the charging case, they switch off and are being charged (see page 11).

**i** If the earbuds are inactive for approx. 60 minutes, they switch off automatically. Briefly insert the earbuds into the charging case to switch them on again.

**i** If you remove an earbud from your ear, music playback is paused. This Smart Pause function can be deactivated (see page 16).

**i** If the earbuds do not find a paired Bluetooth device within 15 minutes, they automatically switch to sleep mode. You can wake up the earbuds by touching their touch control panel once or by briefly inserting them into the charging case.

## Adjusting the volume



### WARNING

#### Danger of hearing damage due to high volumes!

Listening at high volume levels can lead to permanent hearing defects.

- ▷ Before putting the headphones on and before toggling between the audio sources, adjust the volume on the headphones to a low level.
- ▷ Do not continuously expose yourself to high volume levels.

To increase the volume:

- ▷ Touch and hold the touch control panel of the right earbud until the volume is increased.

To reduce the volume:

- ▷ Touch and hold the touch control panel of the left earbud until the volume is reduced.

When the minimum or maximum volume is reached, you hear the voice prompt “Volume max” or “Volume min”.

**i** You can also adjust the volume using the connected Bluetooth device or the Smart Control app.

## Listening of ambient noise or conversations - activating/deactivating the Transparent Hearing function

With Transparent Hearing activated, you can hear ambient sounds or communicate without having to remove the earbuds from your ears. This allows you to hear e.g. announcements in the train or airplane or to have short conversations.

- ▷ Tap the touch control panel of the right earbud 2 times. The Transparent Hearing mode set in the Smart Control App is activated. You can hear ambient sounds without having to remove the earbuds from your ears.

To deactivate Transparent Hearing:

- ▷ Tap the touch control panel of the right earbud once.

## Adjusting the Transparent Hearing function

To be able to fully use Transparent Hearing, you require the Smart Control app (see page 13).

- ▷ Select the desired Transparent Hearing function in the Smart Control app:

Transparent Hearing	Description
“keep music playing and mix with ambient sound”	The audio playback (e.g. music) continues and is mixed with ambient sounds.
“no music playback, only ambient sound”	The audio playback (e.g. music) is muted and you hear only ambient sounds.

## Using the voice assistant/voice dialing

- ▷ Tap the touch control panel of the right earbud once.  
The available voice assistant of your smartphones is activated (depending on the system or app on your smartphone, Siri, Google Assistant, Baidu, ...).
- ▷ Ask the voice assistant your question or make a request.  
To disable the voice assistant/voice dialing:
- ▷ Tap the touch control panel of the right or left earbud once.

## Using the Smart Pause function

The earbuds are equipped with a carrying sensor that automatically detects whether the earbuds are worn in the ear or removed from the ear.

Music playback pauses when you remove an earbud from the ear and continues when you insert it again.

You can also deactivate the carrying sensor via the Smart Control app.

**i** The right earbud (master earbud) can be used alone. The left earbud (slave earbud) cannot be used alone because it requires the right earbud for Bluetooth transmission.



## Controlling music playback

The music playback functions are only available when the earphones and the device are connected via Bluetooth. Some smartphones or music players may not support all functions.

The left earbud allows you to control music playback.

### Playing/pausing music

- ▷ Tap the touch control panel of the left earbud once.

Left touch control panel	Function
Tap once	Plays or pauses music



### Plays the next track

- ▷ Tap the touch control panel of the left earbud 2 times.

Left touch control panel	Function
Tap 2 times	Plays the next track in the playlist

### Plays the previous track

- ▷ Tap the touch control panel of the left earbud 3 times.

Left touch control panel	Function
Tap 3 times	Plays the previous track in the playlist



## Making calls using the earphones

The call functions are only available when the earphones and the smartphone are connected via Bluetooth. Some smartphones may not support all functions.

The right earbud allows you to control the call functions.

### Making a call

- ▷ Dial the desired number on your smartphone.  
If your smartphone does not automatically transfer the call to the earphones, select MOMENTUM True Wireless as the audio source on your smartphone (see the instruction manual of your smartphone if necessary).

### Accepting/rejecting/ending a call

If your earphones are connected to a smartphone and you receive a call, you hear a ring tone in the earphones.

If you are playing music when you receive a call, the music pauses until you end the call.

Right touch control panel	Function
Tap once	Accepts a call
Tap once	Ends a call Voice prompt "Call ended"
Tap 2 times	Rejects a call Voice prompt "Call rejected"
Tap once	Accepts an incoming call and ends the active call
Tap 2 times	Rejects an incoming call and continues the active call



## Displaying the battery charge status

If the earphones are connected to your Bluetooth device, the battery charge status can be displayed on the screen of your smartphone or device (depending on the device and operating system used).

The Sennheiser Smart Control app also displays the charge status of the earphones' rechargeable battery.

### Displaying the battery charge status using the charging case

If no USB cable is connected to the charging case:

- ▷ Press the LED button of the charging case.  
The LED of the charging case displays the battery charge status for 5 seconds:

LED	Charging case WITH earbuds inserted	Charging case WITHOUT earbuds
lights up green	... the earbuds are fully charged	... the charging case is charged between 50-100 %
pulses yellow	... the earbuds are being charged via the rechargeable battery of the charging case.	–
lights up yellow	... the rechargeable battery of the charging case is empty and the earbuds are not fully charged	... the charging case is charged less than 50 %
lights up red	... the rechargeable batteries of the earbuds and the charging case are empty	... the rechargeable battery of the charging case is empty.
flashes red	... a charging error/battery error has been detected in at least one earbud (see page 20)	... a charging error/battery error has been detected in the charging case (see page 20)

### Adjusting sound effects/the equalizer

To be able to use the sound effects/equalizer, you require the Smart Control App (see page 13).

- ▷ In the Smart Control app, select the desired sound effects via the equalizer.  
The sound effects are stored in the earphones. These sound settings are active even without the Smart Control app, i.e. when you are using another Bluetooth device.

### Setting the voice prompts/beep sounds

To be able to set the voice prompts and beep sounds, you require the Smart Control app (see page 13).

You can change the language of the voice prompts, choose between voice prompts and beep sounds, or deactivate the status messages with a few exceptions (e.g. rechargeable battery is empty).

### Storing or transporting the earphones in

## the charging case

Store the earphones in the charging case to prevent damage to the earphones when you are not using or transporting them. The earphones are automatically charged in the charging case so you always have the full battery life to work with.

- ▷ Open the charging case and insert the left earbud into the left charging compartment and the right earbud into the right charging compartment.  
The earbuds are magnetically pulled into the charging compartment.
- ▷ Close the charging case.

## Care and maintenance

---

### CAUTION

Liquids can damage the electronics of the product!

Liquids entering the housing of the product can cause a short-circuit and damage the electronics.

- ▷ Keep all liquids far away from the product.
  - ▷ Do not use any solvents or cleansing agents.
- 
- ▷ Clean the product only with a soft, dry cloth.
  - ▷ Clean the charging contacts on the earbuds and in the charging case from time to time using e.g. a cotton swab.

## Changing ear adapters

For reasons of hygiene, you should replace your ear adapters from time to time. Spare ear adapters are available from your local Sennheiser partner.

1. Pull the ear adapter away from the in-ear sound tunnel.
2. Mount the new ear adapter onto the in-ear sound tunnel. Ensure that it locks into place.

## Information on the built-in rechargeable battery

Sennheiser ensures and guarantees that the rechargeable batteries perform at their optimum upon purchase of the product. If, upon purchase or within the warranty period, you suspect that a rechargeable battery is obviously defective or if a charging/rechargeable battery error is displayed (see page 7), stop using the product, disconnect it from the power supply system and immediately return the product to any Sennheiser service partner.

## Installing firmware updates

Firmware updates can be downloaded free of charge from the Internet using the Sennheiser Smart Control app.

- ▷ Connect your earphones to your smartphone and start the Smart Control app (see page 13).
- ▷ The app provides information on available firmware updates and guides you through the installation process

## FAQ/If a problem occurs ...

### The left earbud cannot be used?

Make sure that the earbud is charged (see page 11) and that the earphones are paired with your Bluetooth device and connected to it (see page 12). The left earbud can only be used when the right earbud is also used (the right earbud controls the Bluetooth transmission). The transmission range between the left earbud and the right earbud is approx. 25 cm.

### The right earbud cannot be used?

Make sure that the earbud is charged (see page 11) and that the earphones are paired with your Bluetooth device and connected to it (see page 12).

### The earphones cannot be switched on/do not react to any touch?

Make sure that the earphones are charged (see page 11). If this is the case, perform a restart of the earphones (see page 22).

### The earphones cannot be charged?

Perform a restart of the earphones (see page 22).

### The operating time is decreasing?

The rechargeable batteries are exhausted. Have the rechargeable battery replaced by an authorized Sennheiser service partner.

### The sound occasionally drops out?

Make sure that the earphones are within the transmission range of the Bluetooth device (see page 22).

### The sound is too low?

Increase the volume (see page 15).

### The sound is only audible on one side?

Make sure that both earbuds are charged (see page 11) and that the earphones are paired with your Bluetooth device and connected to it (see page 12). Also make sure that the earbuds are inserted into your ears correctly (see page 14).

### The sound is not in lip-sync with the TV/PC picture?

Make sure you are using a Bluetooth device with aptX Low Latency (LL) to have low audio latency.

### The earphones are uncomfortable?

Test the different ear adapters to find the size that suits you best and delivers the best sound quality (see page 13).

### Your question has not been answered or the problem persists?

If a problem occurs that is not listed in the FAQ section or if the problem cannot be solved with the proposed solutions, please contact your Sennheiser partner for assistance.

To find a Sennheiser partner in your country, search at [www.sennheiser.com](http://www.sennheiser.com) > “Service & Support”.

### Leaving the Bluetooth transmission range

Wireless calling and streaming are only possible in the Bluetooth transmission range of your smartphone. The transmission range largely depends on environmental conditions such as wall thickness, wall composition etc. With a free line of sight, the transmission range of most smartphones and Bluetooth devices is up to 10 meters. If you, and therefore the earphones, leave the Bluetooth transmission range of the smartphone, the sound quality deteriorates increasingly until you hear the voice prompt “No connection” and the connection breaks down completely. If you immediately re-enter the Bluetooth transmission range of the smartphone, the connection is automatically re-established and you hear the voice prompt “Connected”. If this is not the case, tap the touch control panel of the earbud once.

The right earbud (master earbud) can be used alone. The left earbud (slave earbud) cannot be used alone because it requires the right earbud for Bluetooth transmission.

### Restarting the earphones

If the function of the earphones is disturbed, perform a restart:

- ▷ Use the USB cable to connect the charging case to a power source (see page 11).
- ▷ Insert the earphones into the charging case.  
The charging process starts.
- ▷ Simultaneously touch and hold the right and the left touch control panel for 6 seconds.  
The earphones are restarted.

### Resetting the earphones to the factory default settings/Reset

If the function of the earphones is disturbed and a manual restart does not improve, reset the earphones to the factory default settings. This deletes, among other things, all pairing settings.

- ▷ Use the USB cable to connect the charging case to a power source (see page 11).
- ▷ Insert the earphones into the charging case.  
The charging process starts.
- ▷ Simultaneously touch and hold the right and the left touch control panel for at least 30 seconds.  
The earphones are reset to the factory default settings.



You can also reset the earphones to the factory default settings using the Smart Control app.

# Specifications

## MOMENTUM True Wireless M3IETW

Wearing style	true wireless stereo earphones
Ear coupling	ear canal
Frequency response	5 Hz to 21 kHz
Transducer principle	dynamic, closed-back
Transducer size	7 mm
Sound pressure level (SPL)	107 dB (1 kHz/1 mW)
THD (1 kHz, 94 dB SPL)	< 0.08 %
Microphone principle	MEMS
Microphone frequency response	100 Hz to 10 kHz
Microphone sensitivity	94 dB SPL at 1 kHz
Microphone pick-up pattern (speech audio)	2-mic beamforming array
Power supply	built-in Lithium rechargeable batteries, 3.7 V --- earbud left: 60 mAh earbud right: 85 mAh charging case: 600 mAh USB charging via USB-C socket of the charging case: 5 V ---, 650 mA
Operating time	4 hrs (A2DP) with rechargeable batteries of the earbuds; 12 hrs with rechargeable battery of the charging case
Charging time of rechargeable batteries	approx. 1.5 hours/ ## min for 1 hour of operation
Temperature range	<i>operation</i> : 0 to +40°C <i>storage</i> : -25 to +70°C
Relative humidity	<i>operation</i> : 10 to 80%, non condensing <i>storage</i> : 10 to 90%
Magnetized field strength	earbuds: 1.6 mT charging case: 130 mT
Earbud housing	sweat resistant and splash proof (IPX4)
Weight	earbuds (both): 17 g charging case: 54 g

## Bluetooth

Version	Bluetooth 5.0 compatible, class 1, BLE
Transmission frequency	2,402 MHz to 2,480 MHz
Modulation	GFSK, $\pi/4$ DQPSK / 8DPSK
Profiles	HSP, HFP, AVRCP, A2DP
Output power	10 mW (max)
Codec	aptX®, aptX® LL, AAC, SBC

# Manufacturer Declarations

## Warranty

Sennheiser electronic GmbH & Co. KG gives a warranty of 24 months on this product.

For the current warranty conditions, please visit our website at [www.sennheiser.com](http://www.sennheiser.com) or contact your Sennheiser partner.

## In compliance with the following requirements

- General Product Safety Directive (2001/95/EC)
- Compliant to **Sound Pressure Limits** according to country specific requirements

## EU declaration of conformity



- RoHS Directive (2011/65/EU)

Hereby, Sennheiser electronic GmbH & Co. KG declares that the radio equipment type M3IETW L, M3IETW R, M3IETW C is in compliance with the Radio Equipment Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following Internet address:

[www.sennheiser.com/download](http://www.sennheiser.com/download).

## Notes on disposal



- Battery Directive (2006/66/EC & 2013/56/EU)
- WEEE Directive (2012/19/EU)

The symbol of the crossed-out wheeled bin on the product, the battery/rechargeable battery (if applicable) and/or the packaging indicates that these products must not be disposed of with normal household waste, but must be disposed of separately at the end of their operational lifetime. For packaging disposal, please observe the legal regulations on waste segregation applicable in your country.

Further information on the recycling of these products can be obtained from your municipal administration, from the municipal collection points, or from your Sennheiser partner.

The separate collection of waste electrical and electronic equipment, batteries/rechargeable batteries (if applicable) and packaging is used to promote the reuse and recycling and to prevent negative effects caused by e.g. potentially hazardous substances contained in these products. Herewith you make an important contribution to the protection of the environment and public health.

## Trademarks

Sennheiser is a registered trade mark of Sennheiser electronic GmbH & Co. KG.

Apple, iPhone, iPod, iPod touch, iPad, and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. The trademark "iPhone" is used with a license from Apple Inc.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sennheiser electronic GmbH & Co. KG is under license.

The aptX mark and the aptX logo are trademarks of CSR plc or one of its group companies and may be registered in one or more jurisdictions.

Android and Google Play are registered trademarks of Google Inc.



Other product and company names mentioned in the user documentation may be the trademarks or registered trademarks of their respective holders.