




# ew 100 G4

- |                           |                    |
|---------------------------|--------------------|
| Quick Guide               | Kort vejledning    |
| Kurzanleitung             | Pikaohje           |
| Guide rapide              | Γρήγορος οδηγός    |
| Guida rapida              | Kısa Kılavuz       |
| Guía de inicio rápido     | Краткая инструкция |
| Guia rápido               | 快速指南               |
| Beknopte handleiding      | 快速使用指南             |
| Krótko instrukcja obsługi | クイックガイド            |
| Snabbguide                | 퀵 가이드              |

SENNHEISER

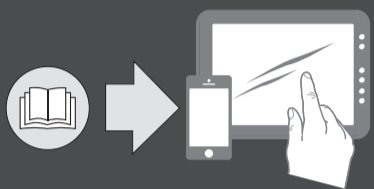

Sennheiser Documentation App



ANDROID APP ON  
Google play

Available on the  
App Store

or online at  
[www.sennheiser.com/download](http://www.sennheiser.com/download)  
ew 100 G4\_


Sennheiser electronic GmbH & Co. KG  
Am Labor 1, 30900 Wedemark, Germany  
[www.sennheiser.com](http://www.sennheiser.com)

Printed in Germany, Publ. 03/18, 575860/A02


## EM 100



## SKM 100

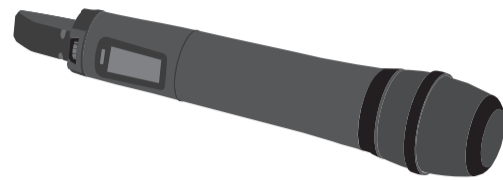


## SKM 100-S

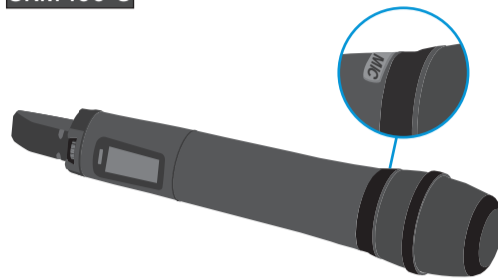

## SK 100



## Battery

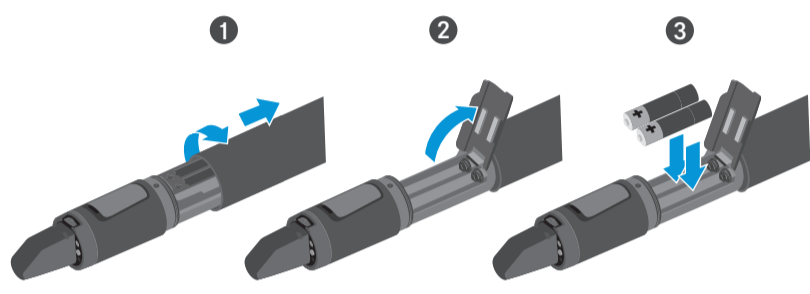


## Low Battery




	100 %	> 8 h
	70 %	4 - 6 h
	30 %	2 - 3 h
LOW BATT		

## Setup

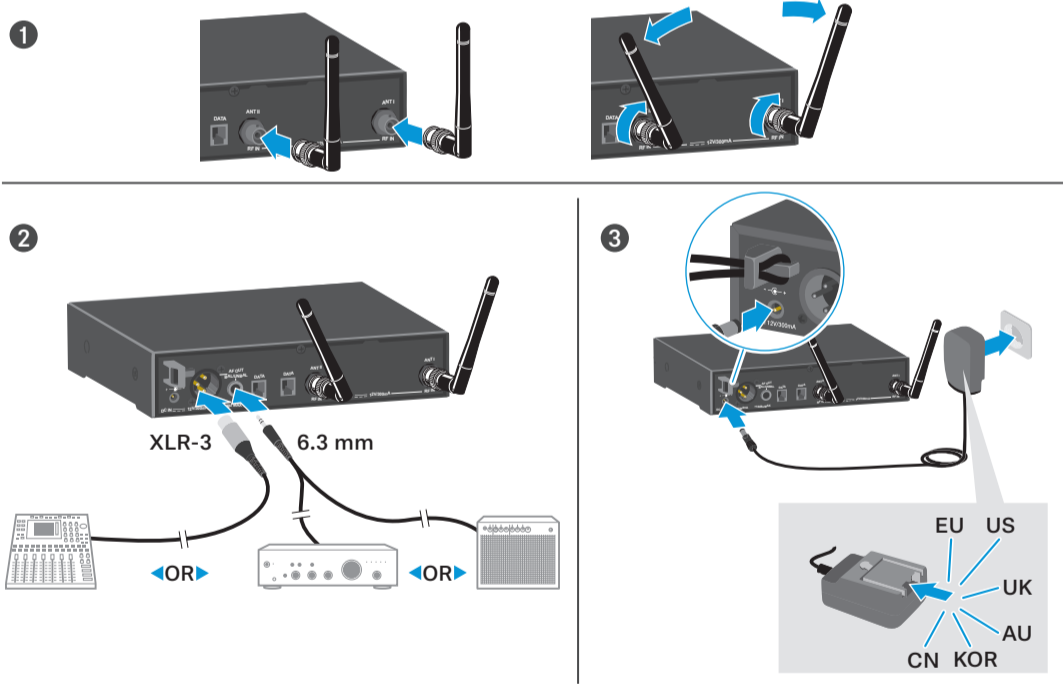


## On

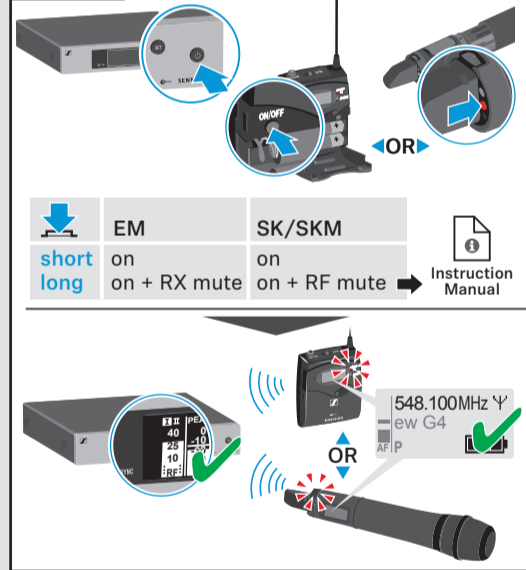



## Off




## Menu

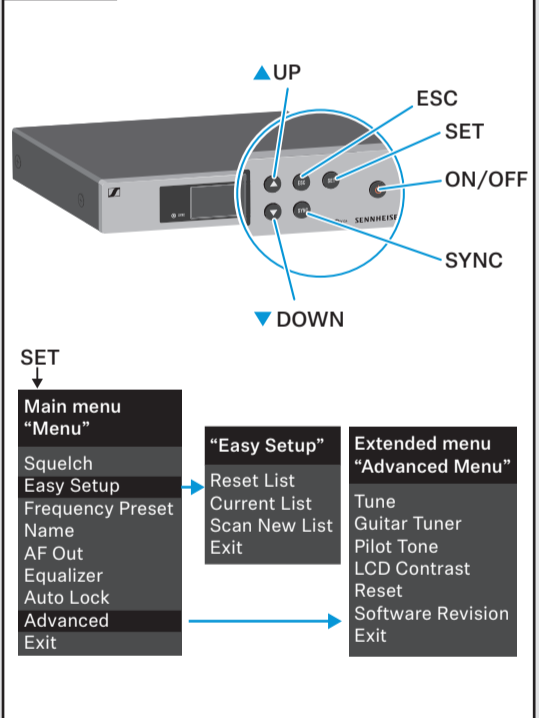

## Standard display

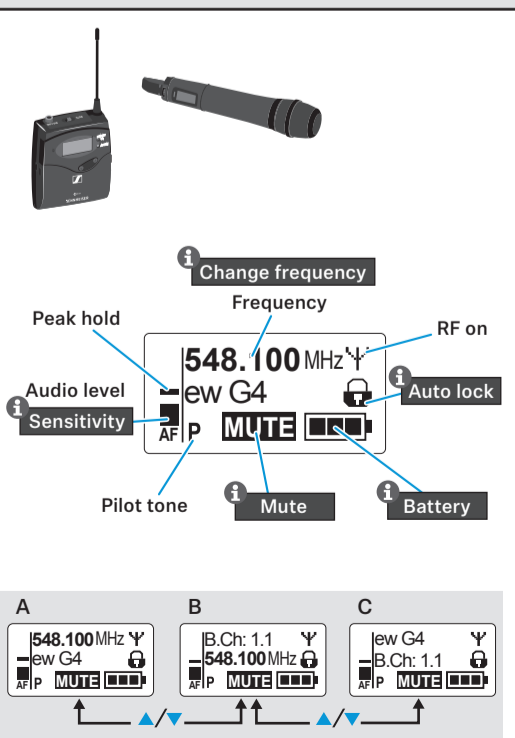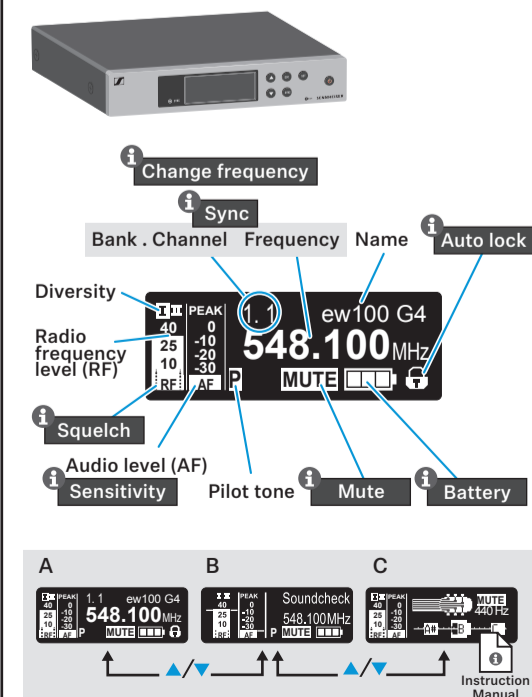

## Menu

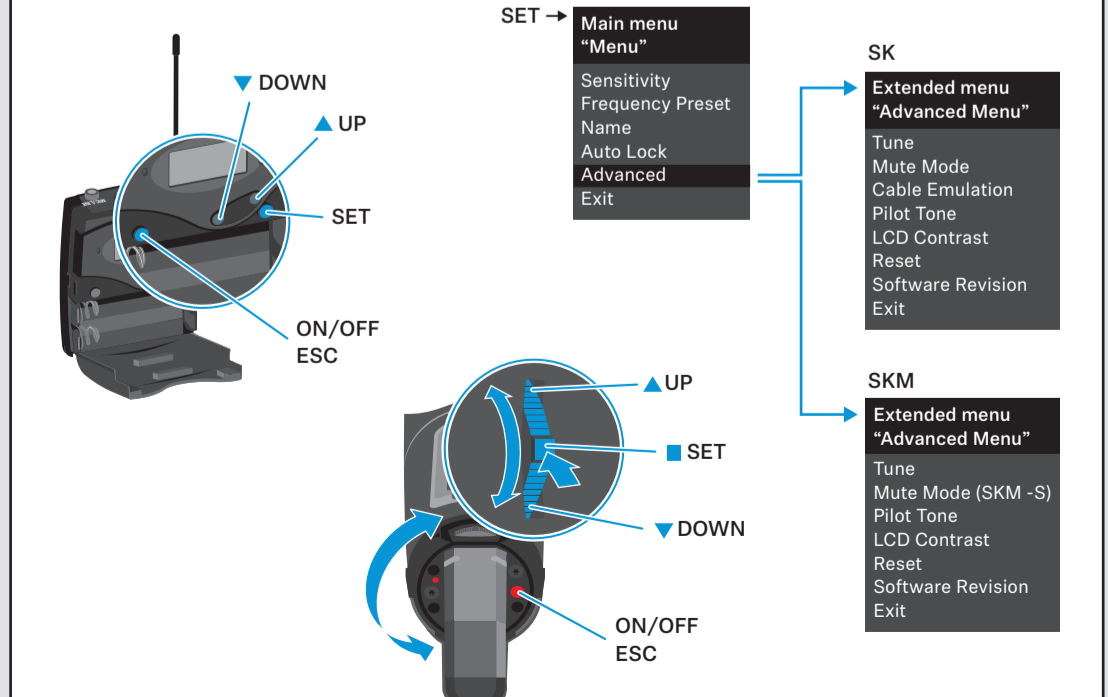

### Auto lock

**EM**

- 1
- 2
- 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

**SKM**

- 1
- 2
- 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

**SK**

- 1
- 2
- 3

Locked  $\Delta/\nabla$  Unlock?

SET  $\Delta/\nabla$  SET

10 s → Auto lock

Instruction Manual

### New frequency

#### Squelch

- 1

High 40  
Middle 25  
Low 10

### Change frequency

- 2
- 3

**Easy Setup EM**

Menu Easy Setup SET

Easy Setup Scan New List SET

Scan New List 734 ... 776 MHz WAIT 30s

Easy Setup Bank 1 ... 20 SET

Easy Setup B.Ch: 1...12 SET

**Stored**

**Frequency Preset EM, SK, SKM**

Menu Frequency Preset SET

Frequency Preset B.Ch: 1.1 SET

Frequency Preset B.Ch: 15.6 SET

Frequency Preset B.Ch: 15.6 SET

**Stored**

No frequency → 1 Squelch: Middle ...

Instruction Manual

### Sync

- 4

≤ 10 cm  
≤ 4"

OR

✓ SYNC

OR

✗ SYNC

Instruction Manual

### Sensitivity

- 5

Menu Sensitivity -24dB

-60 dB ... 0 dB

-48 dB ... 0 dB

AF PEAK

### AF out

- 6

Menu AF Out +18 dB

LEVEL

-24 dB ... +24 dB

### Mute

Instruction Manual

EM 100

SKM 100

short

RF Mute On?  $\Delta/\nabla$  SET

RF Mute Off?  $\Delta/\nabla$  SET

RX Mute On?  $\Delta/\nabla$  SET

RX Mute Off?  $\Delta/\nabla$  SET

SK 100

Menu Advanced SET

Advanced Mute Mode AF On/Off SET

Mute Mode AF On/Off SET

SK only:

Mute Mode RF On/Off SET

AF Mute

Mute On

Mute Off

RF Mute

Mute On

Mute Off

SKM 100-S

### Multichannel - Easy Setup

Bank 1 ... 20; U

Channel 1 ... 12

max. 12 channels

>12 channels → Instruction Manual

RJ 10

Instruction Manual

### SKM

### ME 2 | ME 4

ME 2

25 cm (10")

ME 4

ME 3-II

2...3 cm (1")