

Antennas

***optional accessories:**
ADP UHF (470 - 1075 MHz)
AD 1800 (1400 - 2400 MHz)

EW-D Smart Assist

Download on the **App Store** | GET IT ON **Google Play**

Sennheiser Documentation App

Download on the **App Store** | GET IT ON **Google Play**

or online at www.sennheiser.com/download
EW-DX

Sennheiser electronic GmbH & Co. KG
Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Printed in Germany
Publ. 04/22, 587467/A01

Evolution Wireless Digital

EW-DX EM 2
EW-DX SK
EW-DX SKM

Quick Guide
Kurzanleitung
Guide rapide
Guida rapida
Guía de inicio rápido
Guia rápido
Beknopte handleiding
Krótka instrukcja obsługi
Snabbguide

Kort vejledning
Pikaohje
Γρήγορος οδηγός
Kisa Kilavuz
Краткая инструкция
快速指南
クイックガイド
퀵 가이드

SENNHEISER

Audio Out

6.3 mm | XLR-3

OR

Power supply

EU | US | UK | AU | KOR | CN

Remote control

EW-D Smart Assist App

Download on the **App Store** | GET IT ON **Google Play**

Wireless Systems Manager (WSM)
www.sennheiser.com/wsm

Sennheiser Control Cockpit (SCC)
www.sennheiser.com/control-cockpit-software

In the box

Rack mount angles
Power supply adapters
Power supply

Battery

2 AA batteries | BA 70 rechargeable battery

SKM(-S)

2 AA batteries | BA 70 rechargeable battery

EW-DX EM 2

Headphone output | LED ch. 1 | Channel 1 | UP | SET | ESC
Headphone volume control | LED ch. 2 | Channel 2 | Display | DOWN | SYNC | ON/OFF

Power supply

PoE / Network control (WSM / SCC) | Audio outputs | Antenna inputs

On/Off

EM: Off -> On (short)

SKM(-S): On -> Off (long)

SK: (Diagram showing button press)

Identify/Battery check

(Empty space for identification and battery check instructions)

EW-DX SKM-S | EW-DX SKM

ON/OFF | DATA LED | ESC | UP | Display | LINK LED | SYNC | DOWN | SET | MUTE (EW-DX SKM-S)

EW-DX SK | EW-DX SK 3-PIN

EW-DX SK: 3.5 mm jack, DATA LED, LINK LED, SYNC, MUTE, Display

EW-DX SK 3-PIN: 3 pin socket, ON/OFF, ESC, DOWN, SET, UP

Display & Menu



System Home Screen

Channel 1 Home Screen

Channel 2 Home Screen

LEDs

LED Ch.1/2 (EM 2)	LINK LED (SK/SKM)
	- Link ok - audio active
	- Link ok - audio muted or no capsule on SKM
	- Link ok - audio clip
	- No link
	- Link ok - Low transmitter battery
	- No link - Device switched off

EM 2

SKM(-S)

LED Ch.1/2 (EM 2)	DATA LED (SK/SKM)
	Bluetooth active to - sync with transmitter - connect with app
	Firmware update in progress

SK

Instruction Manual

Sync

Instruction Manual

Auto Setup

Mute

 
Key Lock

Auto Lock

Mute Lock → **Instruction Manual**

10s → **Auto Lock** → **Instruction Manual**

SKM | SKM-S



Instruction manual | Bedienungsanleitung | Notice d'emploi | Istruzioni per l'uso |
 Instrucciones de manejo | Manual de instruções | Gebruiksaanwijzing |
 Instrukcja obsługi | Bruksanvisning | Betjenings vejledning | Käyttöohje |
 Οδηγίες λειτουργίας | Kullanım kılavuzu | Инструкция по эксплуатации | 使用说明书 |
 取扱説明書 | 사용 설명서 |

Sennheiser Documentation App

Available on the **App Store** **Google play**

EW-D Smart Assist

Available on the **App Store** **Google play**