




Before returning this product to the store for any reason,
please contact our Parent Service Center at
1-800-533-6708 or www.thefirstyears.com
We can provide helpful tips and instructions, and may be
able to resolve your problem over the phone or via e-mail.

49 MHz Monitor

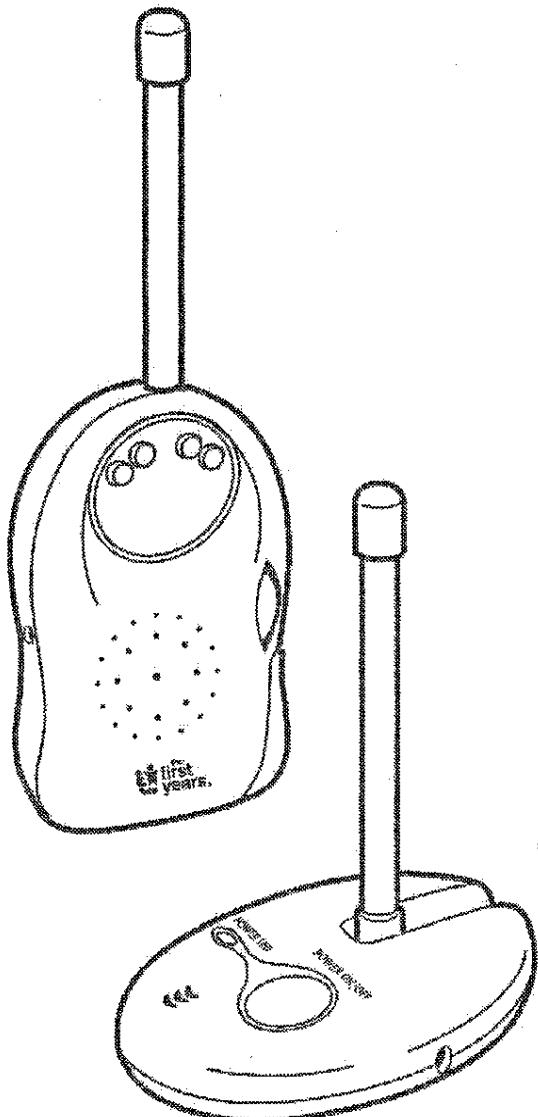

QUICK START INSTRUCTIONS

You'll find detailed instructions inside.
Please read the safety instructions on page 2.

Set up the Parent's Unit

- Install three AA batteries. Battery compartment is located on the side of unit. Slide button down to release cover.
- Or, plug one of the AC adapters provided into the Parent's Unit.

Set up the Child's Unit

- Place the unit near your child (within 6 feet, but well beyond child's reach).
- Position the antenna straight up.
- Plug in the second AC adapter provided.
- Slide the channel switch to A or B.
- Press the ON/OFF button to turn on the unit.

Use the Monitor (Parent's Unit)

- Slide the channel switch to the same channel as the Child's Unit (A or B).
- Rotate the volume dial clockwise to the on position. Adjust to desired volume level.
- Keep the Parent's Unit with you, and keep it positioned upright.

WARNING

- This product is a monitoring device designed to assist in the monitoring of children, not as a prevention for injury to or loss of child.
- This product is not a substitute for adult supervision. All children should be monitored at all times by responsible adults.
- This product is not a toy. Do not allow children to play with it.
- To prevent electric shock, strangling by cord, choking, or eye injury, do not place the monitor in, or attach it to, a crib or playpen.
- Never place either unit within a child's reach.

Safety Instructions



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute the risk of electric shock.

CAUTION

RISK OF ELECTRICAL SHOCK. DO NOT OPEN.

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE THE COVER OR BACK OF EITHER UNIT.

THERE ARE NO USER-SERVICEABLE PARTS INSIDE.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE.

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

1. THE USER SHOULD NOT ATTEMPT TO SERVICE THIS PRODUCT. READ ALL SAFETY AND OPERATING INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

2. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

3. OBSERVE ALL WARNINGS

4. FOLLOW ALL OPERATING INSTRUCTIONS

5. WATER AND MOISTURE

This product should not be used near water, for example, near a bathtub, or sink, in a wet basement or near a swimming pool.

6. VENTILATION

This product should be situated in such a way that it has proper ventilation. Do not place on a bed, sofa, rug, or similar surface that may block ventilation openings. Do not place in an enclosed area, such as a cabinet or book case that might impede the flow of air through the ventilation openings.

7. HEAT

This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.

8. POWER SOURCE

This product should be connected to a power supply only of the type described in these instructions or marked on the product itself.

IMPORTANT: The following applies only to UL LISTED UNITS. This product is being supplied with the required safety feature of a polarized plug. You will note that one prong is larger than the other so that the plug fits into the outlet only one way. DO NOT TAMPER WITH THE PLUG under any circumstances.

9. POWER CORD PROTECTION

The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, at the convenience receptacle, and at the point it exits from the appliance.

10. CLEANING

Before cleaning, be sure to unplug. Clean only as recommended in these instructions.

11. NON-USE PERIODS

The power cord of the product should be unplugged from the outlet when the Monitor will be unused for a long period of time.

12. OBJECT AND LIQUID ENTRY

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.

13. DAMAGE REQUIRING SERVICE

This product should be serviced by qualified service personnel (see below) when:


- a. The power supply cord or plug has been damaged; or
- b. Objects have fallen or liquid has been spilled into it; or
- c. The product has been exposed to rain; or
- d. The product does not appear to operate normally or exhibits a marked change in its performance; or
- e. The product has been dropped or the enclosure damaged.

14. WALL MOUNTING


The monitor should be mounted to a wall only as recommended in these instructions.

Contents

Parent's Unit (receiver)

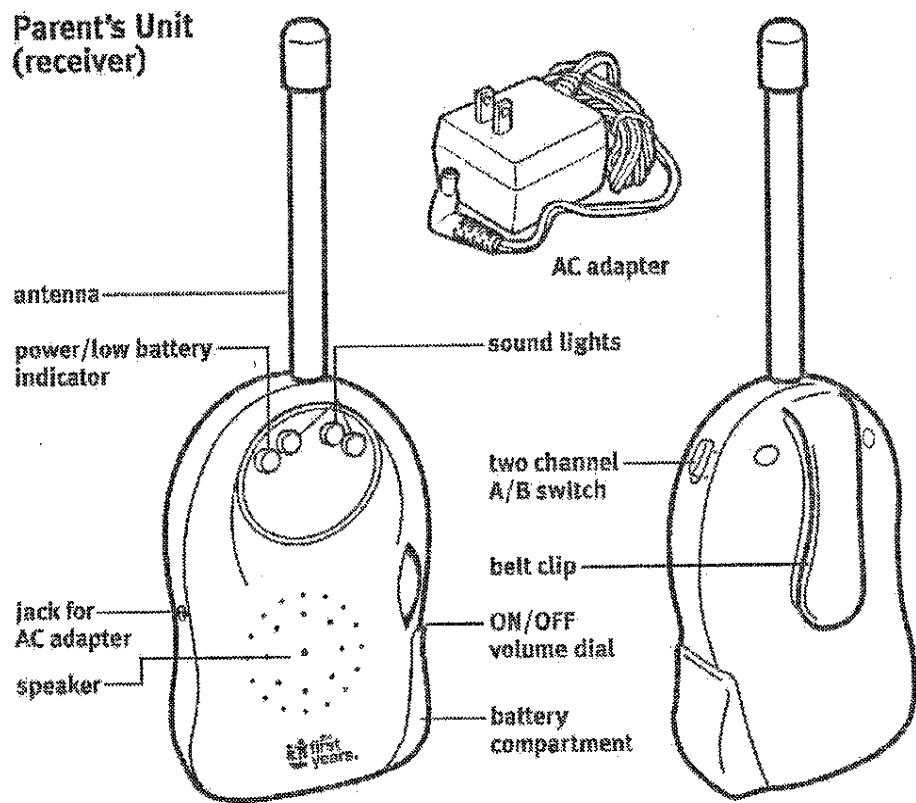

Child's Unit (transmitter)

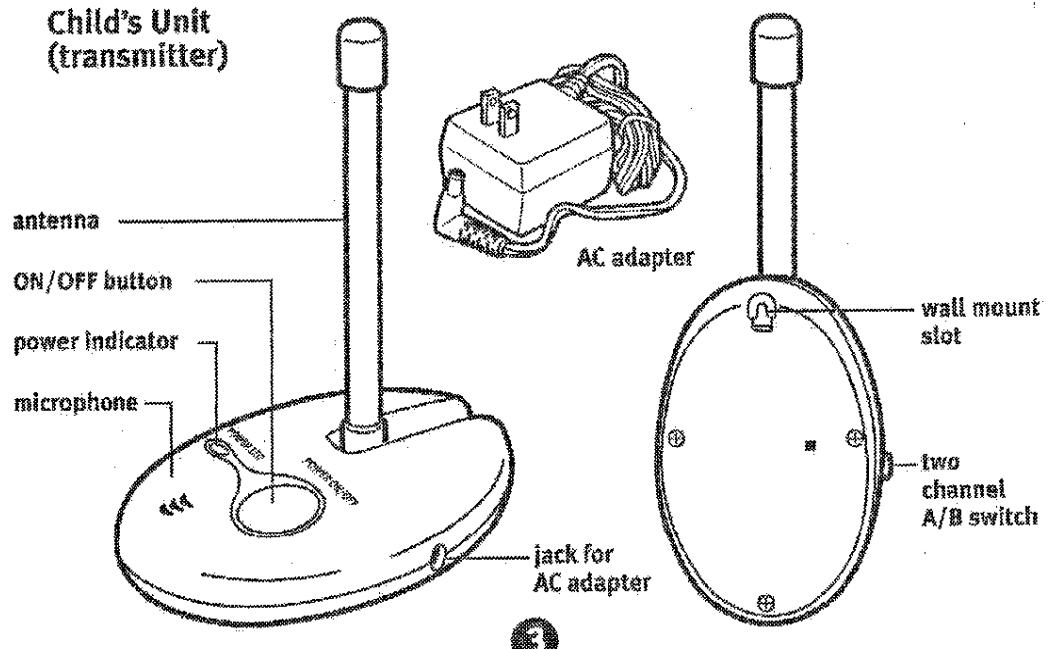

To Set Up


Parent's Unit

To operate with batteries:

1. Press on the tab to release the battery compartment cover, then pull it open.
2. Insert three AA batteries. Position them so the + and - contacts are aligned with the corresponding contacts on the battery clip.
3. Close the battery compartment cover; be sure it clicks shut.
4. When it's time to change the batteries, the power indicator light will turn red. Replace batteries with three new AA batteries at that time.

To operate with AC adapter:

Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.

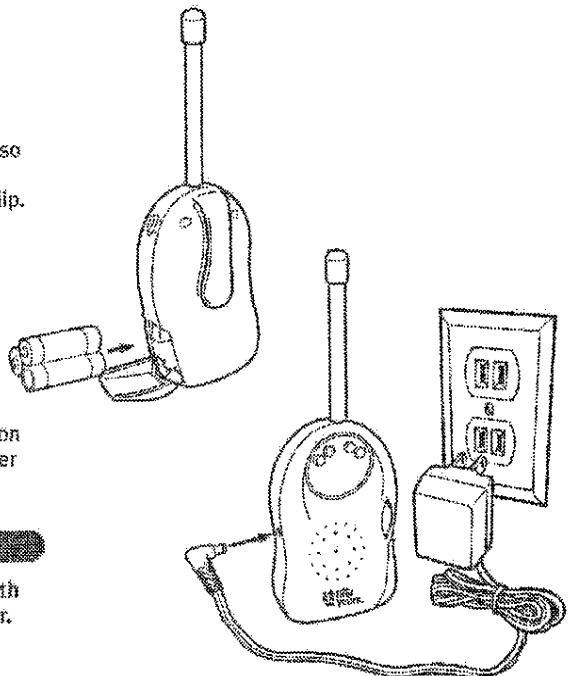


CAUTION

Always use the AC adapter(s) supplied with this product. Do not use any other adapter. Monitor could become damaged, and warranty would become void.

Child's Unit

1. Position the Child's Unit within approximately 6 feet of your child, yet out of the child's reach.

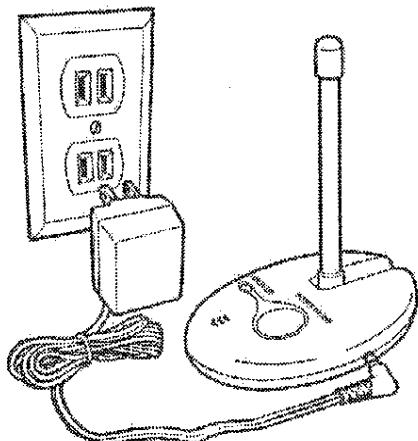

WARNING

Do not place Child's Unit in crib or attach to crib.


(To prevent heat build-up, place on an open surface away from heat sources; do not place in an enclosed space.)

2. Position the antenna straight up, as shown.
3. Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.

For wall mounting (optional):

1. Securely fasten one #6 flat head wood screw on the wall. (For best results, use a 3/4-inch screw; mount in a solid wood panel, or use a screw anchor).
2. Leave the screw head protruding from the wall by at least 1/4-inch.
3. Fit the screw head slot (on the back of the unit) over the screw head and slide the unit down to seat it firmly.
4. To test that the unit is securely mounted, press on its edges.

To Use Monitor

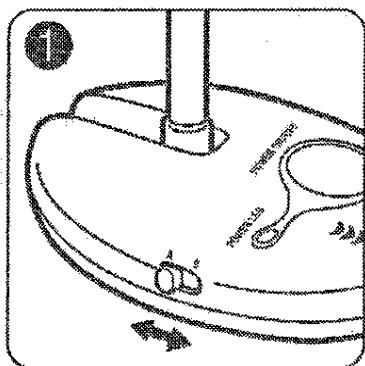

1. Slide the channel A/B switch on the Child's Unit to either A or B. Turn the unit on by pressing the ON/OFF button.
2. Rotate the volume dial clockwise to the on position. Adjust to desired volume level.
3. Slide the channel selector switch on the Parent's Unit to the same channel as the Child's Unit (A or B). For the Monitor to work properly, both units must be set to the same channel.
4. Keep the Parent Unit with you. For best reception keep both units as near upright as possible.

Range:

The range of the Monitor will vary with the surroundings. You may want to test its workable range by walking through your house and yard and listening for the volume and clarity of the sounds being transmitted.

Using belt clip:


Slide onto your belt or waistband.

Changing channels:

Always keep both units set to the same channel (A or B). If you experience interference or static with one channel, switch to the other.

Positioning antennas:

Always be certain the antennas on both units are straight up.

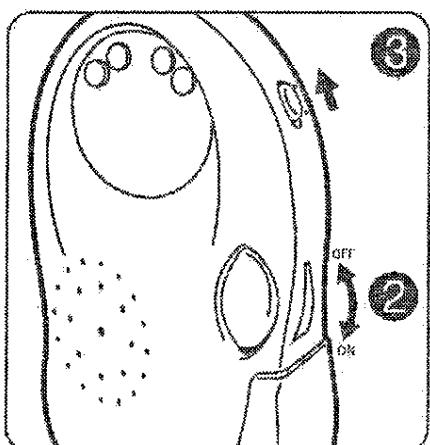


5

To Use Monitor (continued)

Lights

Here's how to interpret the lights on the Parent Units.

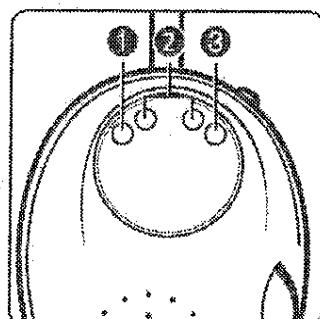

① Power Indicator

Light is Green	Both units are ON, and the Monitor is ready to transmit sound.
Light is Red	Batteries in Parent Unit are weak. Replace with three "AA" batteries.
Not Lit	Unit is not receiving power. (See "Troubleshooting," "No power.")

② Two Quiet Sound Lights

No Lights Lit	No sound from Child's Unit (baby is quiet).
One or Two Lights Green	Quiet sounds (baby may be whimpering or talking).

③ One Loud Sound Light

Light is Red	Loud sounds (baby may be crying or talking loudly).
--------------	---

Care of Your Monitor

Replacing Batteries (Parent Units):

Remove old batteries and see "To Set Up Parent Units" on page 4.

WARNING

Keep batteries away from children. Parents are urged to exercise care in the storage, use, and disposal of all batteries.

- Do not dispose of batteries in fire. They may explode.
- Failure to follow the following instructions may cause the batteries to make "popping" sounds and leak battery acid resulting in personal injury and damage to the monitor. If battery leakage occurs, thoroughly wash the affected skin and clothes. Keep battery acid away from your eyes and mouth. Contact the battery manufacturer for further information. To avoid battery leakage:
- Be sure to insert batteries correctly following instructions. Do not put batteries in backwards (positive (+) and negative (-) ends must face the proper direction).
- Do not mix old and new, rechargeable and non-rechargeable or carbon zinc and alkaline batteries.
- Always remove exhausted batteries from the product.
- Never use a screwdriver or any other tool to pry batteries from the compartment, as the supply terminals may be short-circuited.
- Do not leave batteries in the monitor for long periods of non-use.

To Clean Units

Wipe exterior surfaces with a clean, dry cloth.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
No power	Parent's Unit: Unit is not turned on. Batteries are dead.	Turn the unit on. Replace batteries or plug in adapter. (See "Care of Your Monitor.")
	Child's Unit: Unit is not turned on. Adapter not plugged in.	Press ON/OFF button. Plug in adapter.
	Adapter plugged into outlet that's turned off.	If outlet is controlled by a wall switch, be sure switch is turned on.
Hissing sound	Parent's Unit is turned on, but Child's Unit is off.	Leave Child's Unit plugged in and turned on at all times (or if you turn it off, turn off Parent's Unit also.)
Static or interference	Units set to different channels. Appliances (fan, hair dryer, or mixer for example) causing interference. Cross talk from cordless phone or some other nearby transmitter. Child's Unit not receiving power. Batteries are low.	Set both units to same channel. Try turning off any nearby appliances or switching channels. Try switching channels. Make sure adapter is plugged in and outlet is receiving power. Replace batteries or plug in adapter.
Noisy feedback (high-pitched "screech")	Units too close together. Volume too high.	Be sure Parent's Unit is at least 3 feet from Child's Unit. Lower volume setting on Parent's Unit.
No sound or very weak reception	Unit is getting little or no power. Out of range. Antenna is not vertical or is covered. Units are set to different channels. Weak batteries. Volume is set too low.	Parent's Unit: Replace batteries or plug in adapter. Child's Unit: Make sure adapter is plugged in and outlet is receiving power. Move Parent's Unit closer to Child's Unit (and be sure Child's Unit is turned on.) Be sure antenna is straight up and not obstructed. Set both units to the same channel. Replace batteries or use AC adapter. Raise volume setting.

099-Y3041EN (English version)

One (1) Year Limited Warranty

The First Years warrants this product to be free from defects in material and workmanship for a period of one year from the date of original purchase.

Should this product prove to be defective at any time during the warranty period, The First Years will, at its option, either replace or repair it without charge.

For warranty service, please return the product, along with dated sales receipt or other proof of the purchase date, to The First Years, One Kiddie Drive, Avon, MA 02322-1171.

This warranty does not apply to battery life or to damage caused by battery leakage or improper handling or installation of batteries. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A charge will be made for repair of such damage.

This warranty excludes all incidental or consequential damages.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights which vary from state to state.

IMPORTANT: USE ONLY THE ADAPTERS SUPPLIED WITH THIS PRODUCT. USE OF OTHER ADAPTERS WILL VOID THIS WARRANTY.

Visit us at www.thefirstyears.com

©2005 RC2 Brands, Inc.
Avon, MA 02322-1171

Made in China.

3041.05.27.05

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE.

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following:

- Re-orient or relocate the receiver.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.