

# **Digital Monitor**



Before returning this product to the store for any reason, please contact our Parent Service Center at

1-800-533-6708 or www.thefirstyears.com

We can provide helpful tips and instructions, and may be able to resolve your problem over the phone or via e-mail.

#### QUICK START INSTRUCTIONS

You'll find detailed instructions inside. Please read the safety instructions on page 2.

#### Set up the Parent's Unit

- Install three AAA batteries. Battery compartment is located on the back of unit. Open by loosening the screw and removing the cover.
- . Or, plug one of the AC adapters provided into the Parent's Unit.

## Set up the Child's Unit

- Place the unit near your child (within 6 feet, but well beyond child's reach).
- · Plug in the second AC adapter provided.
- Press and hold the ① ON/OFF button to turn on the unit.

## Use the Monitor (Parent's Unit)

- . Push and hold the () ON/OFF button to turn on.
- . Push the + or buttons to increase or decrease the volume level.
- . Keep the Parent's Unit with you, and keep it positioned upright.

# WARNING:

- This product is a monitoring device designed to assist in the monitoring of children, not as a prevention for injury to or loss of child.
- This product is not a substitute for adult supervision. All children should be monitored at all times by responsible adults.
- . This product is not a toy. Do not allow children to play with it.
- To prevent electric shock, strangling by cord, choking, or eye injury, do not place the monitor in, or attach it to, a crib or playpen.
- · Never place either unit within a child's reach.

Y3196

# Safety Instructions



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute the risk of electric shock.



RISK OF ELECTRICAL SHOCK, DO NOT OPEN.

CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE THE COVER OR BACK OF EITHER UNIT.

THERE ARE NO USER-SERVICEABLE PARTS INSIDE.



## WARNING:

TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE.

WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE EQUIPMENT.

- THE USER SHOULD NOT ATTEMPT TO SERVICE THIS PRODUCT. READ ALL SAFETY AND OPERATING INSTRUCTIONS BEFORE OPERATING THIS PRODUCT
- 2. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE
- 3. OBSERVE ALL WARNINGS
- 4. FOLLOW ALL OPERATING INSTRUCTIONS
- 5. WATER AND MOISTURE

This product should not be used near water, for example, near a bathtub, or sink, in a wet basement or near a swimming pool.

#### 6. VENTILATION

This product should be situated in such a way that it has proper ventilation. Do not place on a bed, sofa, rug, or similar surface that may block ventilation openings. Do not place in an enclosed area, such as a cabinet or book case that might impede the flow of air through the ventilation openings.

#### 7. HEAT

This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.

#### 8. POWER SOURCE

This product should be connected to a power supply only of the type described in these instructions or marked on the product itself.

IMPORTANT: The following applies only to UL LISTED UNITS. This product is being supplied with the required safety feature of a polarized plug. You will note that one prong is larger than the other so that the plug fits into the outlet only one way. DO NOT TAMPER WITH THE PLUG under any circumstances.

#### 9. POWER CORD PROTECTION

The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, at the convenience receptacle, and at the point it exits from the appliance.

#### 10. CLEANING

Before cleaning, be sure to unplug. Clean only as recommended in these instructions.

#### 11. NON-USE PERIODS

The power cord of the product should be unplugged from the outlet when the Monitor will be unused for a long period of time.

#### 12. OBJECT AND LIQUID ENTRY

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.


#### 13. DAMAGE REQUIRING SERVICE


This product should be serviced by qualified service personnel (see below) when:

- a. The power supply cord or plug has been damaged; or
- b. Objects have fallen or liquid has been spilled into it; or
- c. The product has been exposed to rain; or
- d. The product does not appear to operate normally or exhibits a marked change in its performance; or
- e. The product has been dropped or the enclosure damaged.

# Contents

# Parent's Unit (receiver)

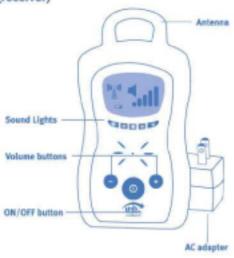

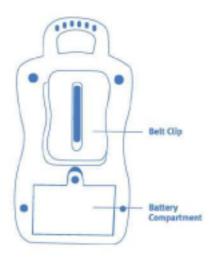

# Child's Unit (transmitter)





# Parent's Unit

## To operate with batteries:

- Loosen screw on the battery compartment cover, then pull it open.
- Insert three AAA batteries. Position them so the + and contacts are aligned with the corresponding contacts on the battery clip.
- 3. Close the battery compartment cover; and tighten screw.
- When it's time to change the batteries, the low battery symbol will turn on. Replace batteries with three new AAA batteries at that time.

## To operate with AC adapter:


Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.



Always use the AC adapter(s) supplied with this product. Do not use any other adapter. Monitor could become damaged, and warranty would become void.





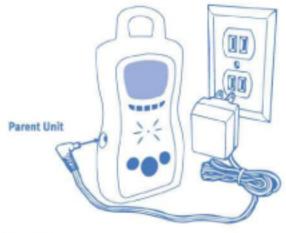

## Child's Unit

 Position the Child's Unit within approximately 6 feet of your child, yet out of the child's reach.

# WARNING:

Do not place Child's Unit in crib or attach to crib.

(To prevent heat build-up, place on an open surface away from heat sources; do not place in an enclosed space.)

Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.