



## 3-in-1 monitor, nightlight & lullaby player

superior clarity, excellent range, plus soothing music & comforting soft nightlight



### **WARNING:**

- This product is not a toy. Do not allow children to play with it.
- This product is designed to assist parents in the care of their children, not as a prevention for injury or loss of child.
- This product is not a substitute for adult supervision.
- Do not place the monitor in, or attach it to, a crib or playpen.
- Never place either unit within a child's reach.



### **QUESTIONS? COMMENTS?**

If you ever have a question about the use of your Winnie the Pooh 3-in-1 Monitor, Nightlight & Lullaby Player, or if you need information about warranty service, please call us, toll-free: 1-800-533-6708

Or visit us at [www.thefirstyears.com](http://www.thefirstyears.com)



**CAUTION: RISK OF ELECTRICAL SHOCK DO NOT OPEN**



**CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE THE COVER OR BACK OF EITHER UNIT. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.**

**REFER ALL SERVICING TO A QUALIFIED FIRST YEARS TECHNICIAN**

(Call 1-800-533-6708 if you believe your unit needs service).



**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO WATER OR MOISTURE.**



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

**INFORMATION FOR INDUSTRY CANADA:**

Transmitter carrier frequencies are 49.890MHz and 49.830MHz.  
Field strength is 76.4dBµV/m at 3 meters distance.

## Safety Instructions

**1. THE USER SHOULD NOT ATTEMPT TO SERVICE THIS PRODUCT. READ ALL SAFETY AND OPERATING INSTRUCTIONS BEFORE OPERATING THIS PRODUCT**

**2. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE**

**3. OBSERVE ALL WARNINGS**

**4. FOLLOW ALL OPERATING INSTRUCTIONS**

**5. WATER AND MOISTURE**

This product should not be used near water, for example, near a bathtub or sink, in a wet basement or near a swimming pool.

**6. VENTILATION**

This product should be situated in such a way that it has proper ventilation. Do not place on a bed, sofa, rug, or similar surface that may block ventilation openings. Do not place in an enclosed area, such as a cabinet or bookcase that might impede the flow of air through the ventilation openings.

**7. HEAT**

This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.

**8. POWER SOURCE**

This product should be connected to a power supply only of the type described in these instructions or marked on the product itself.

**IMPORTANT:** The following applies only to **UL LISTED A/C ADAPTERS**. This product is being supplied with the required safety feature of a Polarized Plug. You will note that one prong is larger than the other so that the plug fits into the outlet only one way. **DO NOT TAMPER WITH THE PLUG** under any circumstances.

**9. POWER CORD PROTECTION**

The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, at the convenience receptacle, and at the point it exits from the appliance.

**10. CLEANING**

Before cleaning, be sure to unplug. Clean only as recommended in these instructions.

**11. NON-USE PERIODS**

The power cord of the product should be unplugged from the outlet when the Monitor will be unused for a long period of time.

**12. OBJECT AND LIQUID ENTRY**

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.

**13. DAMAGE REQUIRING SERVICE**

This product should be serviced by qualified service personnel (see below) when:

- ① The power supply cord or plug has been damaged; or
- ① Objects have fallen or liquid has been spilled into it; or
- ① The product has been exposed to rain; or
- ① The product does not appear to operate normally or exhibits a marked change in its performance; or
- ① The product has been dropped or the enclosure damaged.



**WARNING: CHANGES OR MODIFICATIONS TO THIS UNIT NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE EQUIPMENT.**


**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Operation is subject to the following two conditions:


- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.



## 3-in-1 Monitor, Nightlight & Lullaby Player

### Parent's Unit (receiver)

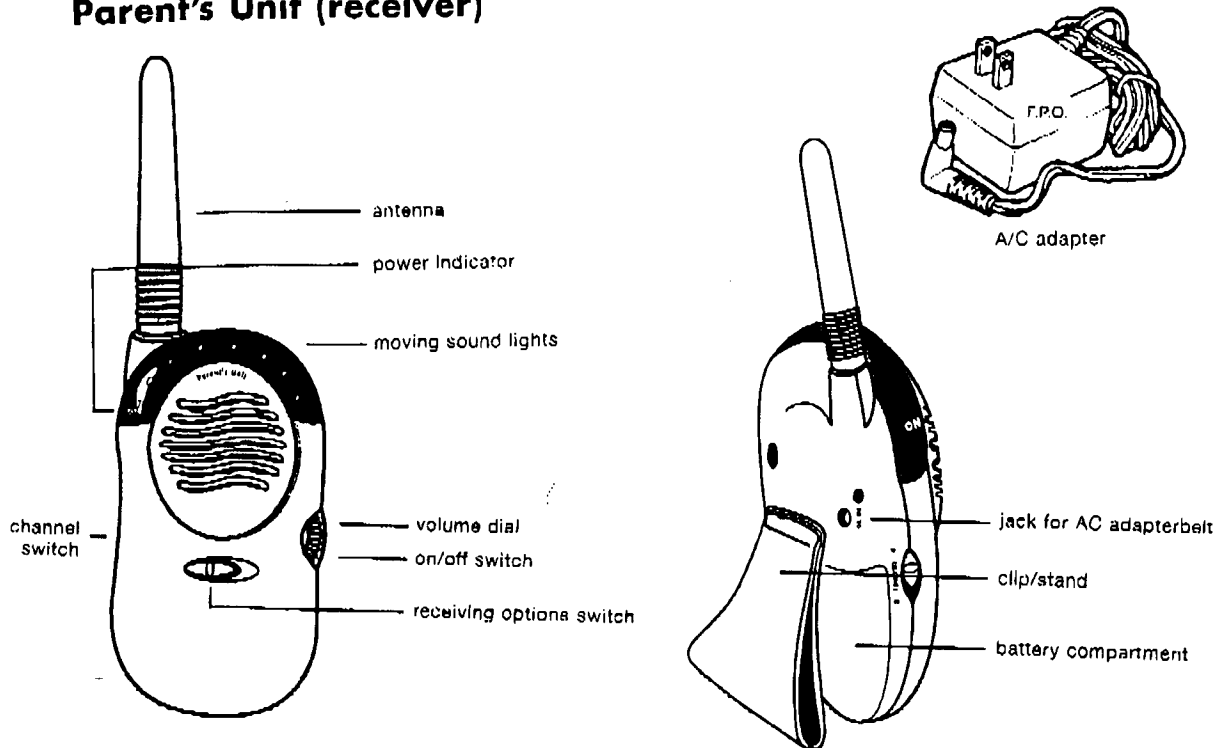

### Nursery Unit (transmitter)

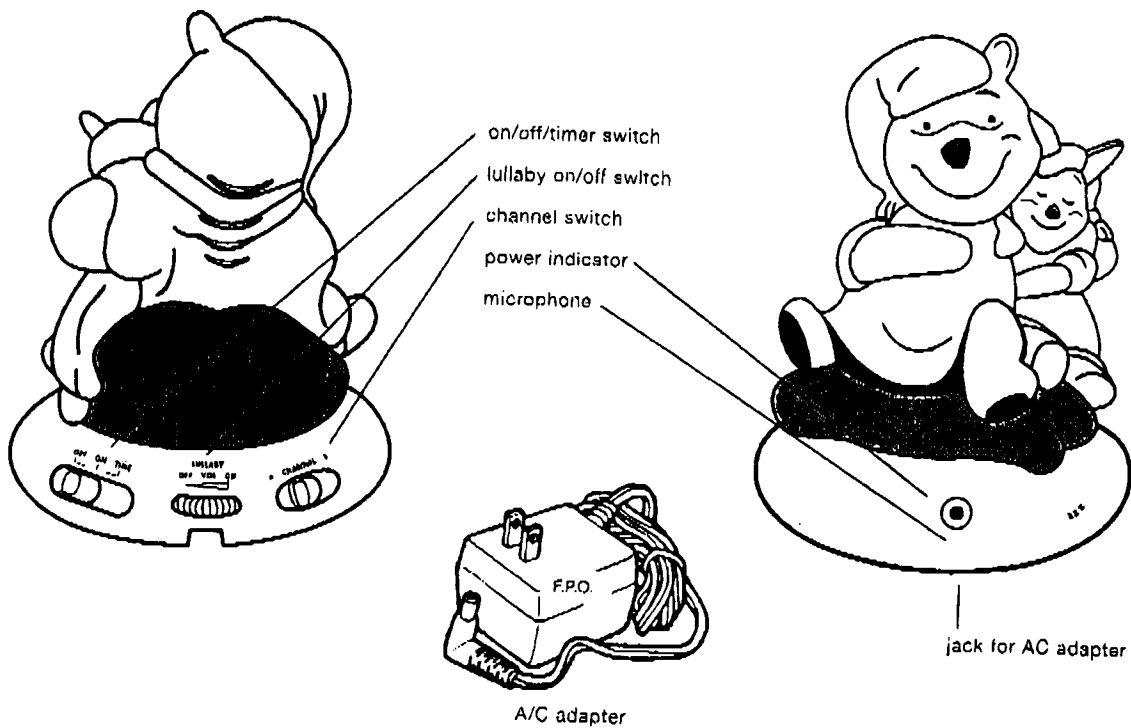

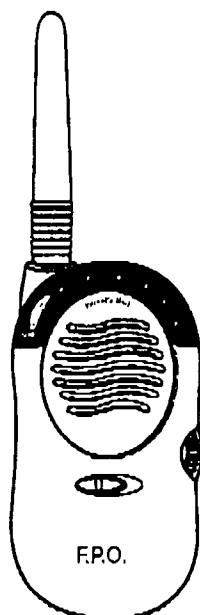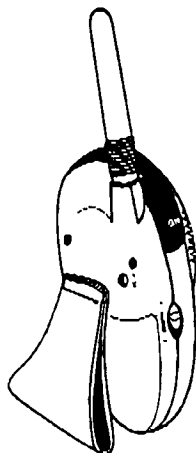

(ILLUSTRATION SHOW PARENT'S UNIT ATTACHING TO ADAPTER)

## To Set Up

### Parent's Unit

For portable use, install the batteries:

1. Using a screwdriver, turn the screw on the battery compartment cover to loosen, and remove the cover.
2. Insert four AAA 1.5v batteries (alkaline recommended). Position them so the + and - contacts are aligned with the corresponding contacts in the battery compartment.
3. Replace the battery compartment cover and tighten the screw.



#### WARNING:

- Keep batteries away from children. Parents are urged to exercise care in the storage, use, and disposal of all batteries.
- **DO NOT** attempt to recharge non-rechargeable batteries.
- **DO NOT** dispose of batteries in fire; they may explode.
- If using rechargeable batteries, remove from product before recharging. Recharging should be done only under adult supervision.

#### Caution:

To avoid battery leakage:

- Be sure to position + and - symbols as indicated in battery compartment.
- Never mix old and new batteries, rechargeable and non-rechargeable batteries, or standard (carbon zinc) and alkaline batteries.
- Always remove exhausted batteries from the product.
- Never use a screwdriver or any other tool to pry batteries from compartment, as doing so may short circuit supply terminals.

### For plug-in use, connect adapter:

Insert the AC adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.

#### Caution:

- Always use the AC adapters supplied with this product. Do not use any other adapter. Monitor could be damaged, and warranty would become void.
- Do not use the adapters supplied with this unit with any other product.

## Nursery Unit

1. Position the Nursery Unit upright on its wide, round base, and within approximately 6 feet of your child, yet out of the child's reach.


To prevent heat build-up, place on an open surface away from heat sources; do not place in an enclosed space.



#### WARNING:

Do not place Nursery Unit in crib or attach to crib.

2. Insert the AC adapter plug into the jack on the bottom of the unit, then plug the adapter into an electrical outlet.

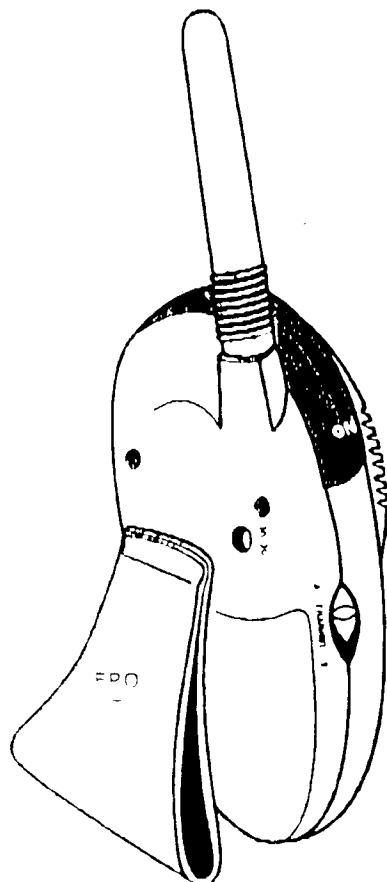

**Using belt clip:** Rotate the clip with the opening downward and slide onto your belt or waistband.

**Using stand:** Rotate belt clip/stand with opening upward, pull out base, and place unit on any flat surface.

**Changing channels:** Always keep both units set to the same channel (A or B). If you experience interference or static with one channel, switch to the other.

### To Clean Both Units

Wipe exterior surfaces with a clean, dry cloth.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

## Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
Red power indicator lights do not light up.	Units not turned on.	Turn units on.
	Batteries in Parent's Unit are dead.	Replace batteries.
	Adapters not properly attached to units.	Attach adapters firmly to AC jacks on units.
	Adapters not plugged in to wall outlets.	Plug in adapters.
	Adapter(s) plugged in to outlet that's turned off.	If outlet is controlled by a wall switch, be sure switch is turned on.
Hissing or Loud Rushing Sound	Parent's Unit is turned on, but Nursery Unit is off.	Leave Nursery Unit plugged in and turned on at all times (or, if you turn it off, turn off Parent's Unit also.) Be sure Nursery Unit is set to same channel as Parent's Unit.
Static or Interference  (You may hear sounds from outside your home, and/or you may hear rushing background noises, even though you can still hear your child.)	Units set to different channels.	Set both units to the same channel.
	Appliances (fan, hair dryer or mixer, for example) causing interference.	Try turning off any nearby appliances or switching channels.
	Cross-talk from cordless phone or some other nearby transmitter.	Try switching channels.
	Nursery Unit not receiving power.	Make sure adapter is plugged in and outlet is receiving power.
	Parent's Unit may be too far from Nursery Unit.	Move Parent's Unit closer to Nursery Unit.
	Batteries are weak.	Recharge or replace batteries, or use AC adapter.
Noisy feedback (high-pitched "screech")	Units too close together.	Be sure Parent's Unit is at least 3 feet from Nursery Unit.
	Volume too high.	Lower volume setting on Parent's Unit.
No sound or very weak reception	Unit is getting little or no power.	Make sure adapter(s) are plugged in and outlet(s) is receiving power.
	Out of range.	Move Parent's Unit closer to Nursery Unit (and be sure Nursery Unit is turned on.)
	Antenna on Parent's Unit is not vertical or is covered.	Be sure antenna is straight up and not obstructed.
	Units are set to different channels.	Set both units to the same channel.
	Weak batteries.	Replace batteries or use AC adapter.
	Volume is set too low.	Raise volume setting.
Nightlight does not come on	Switch is not turned on.	Slide on/off/timer switch to on or time. Press top of Pooh's head.
Lullaby does not come on	Switch is not turned on.	Slide on/off/timer switch to on or time. Press top of Pooh's head.
	Volume is set too low.	Turn up volume.

## To Use Nightlight/Lullaby Player

1. Slide the on/off/timer switch to the on position.
2. Gently press the top of Pooh's head once to turn the soft nightlight and lullaby on.
3. Use the volume control dial to turn the lullaby on and off and to adjust loudness.

Press Pooh's head again to turn them off.

**Note:** The lullaby player will not work unless the soft nightlight is turned also on.

### Timer

Slide the on/off/timer switch to the timer position. Soft nightlight (and Lullaby Player, if it is on) will turn off automatically after five minutes.

### Monitor

**Note:** When Nursery Unit is plugged in it is automatically turned on, and will stay on, whether Soft Nightlight and Lullaby Player are turned on or off, and even if the timer is being used.


1. Slide the on/off/timer switch on the Nursery Unit to the on position.
2. Slide the channel switch on the Nursery Unit to either A or B.
3. Slide the channel selector switch on the Parent's Unit to the same channel as the Nursery Unit (A or B). For the Monitor to work properly, both units must be set to the same channel.
4. Slide the receiving options switch on the Parent's Unit to your preferred setting:  
**LIGHT AND SOUND** - to hear your baby and to turn on moving light display.  
**MUTE** - to turn on moving light display only; you will not be able to hear your baby.  
**SOUND ONLY** - to hear your baby; light display will be turned off. This setting is recommended for portable use, as it will conserve battery power.
5. Turn the volume dial on the Parent's Unit clockwise to the desired loudness level.
6. Keep the Parent's Unit with you. Depending on the setting you choose, you will be able hear the sounds your child is making and/or see the loudness level of the sounds in your child's room.

**Positioning units:** For best reception be certain both units are upright.

**Power Indicator:** This light will be on when both units are turned on and set to transmit your baby's sounds. The light will not be on when you set the Parent's Unit to MUTE.

**Moving Lights:** The semi-circle of lights around the top of the Parents Unit will light up when your baby makes a noise. The louder your baby's sounds, the more lights will turn on and move from left to right.

**Range:** The range of the Monitor will vary with the surroundings. You may want to test its workable range by walking through your house and yard and listening for the volume and clarity of the sounds being transmitted.

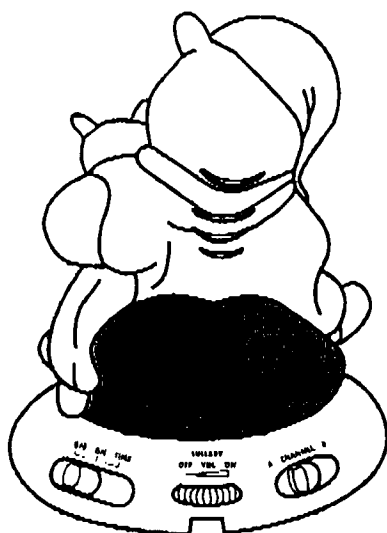

## One (1) Year Limited Warranty

The First Years warrants this product to be free from defects in material and workmanship for a period of one year from the date of original purchase.

Should this product prove to be defective at any time during the warranty period, The First Years will, at its option, either replace or repair it without charge.

For warranty service, please return the product, along with dated sales receipt or other proof of the purchase date, to The First Years, One Kiddie Drive, Avon, MA 02322-1171.

This warranty does not apply to battery life or to damage caused by battery leakage or improper handling or installation of batteries. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A charge will be made for repair of such damage.

This warranty excludes all incidental or consequential damages and any liability other than what is stated above. No other warranties are given.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on implied warranties, so the above limitations or exclusions may not apply to you. Legal rights vary from state to state.

**IMPORTANT:** USE ONLY THE ADAPTERS SUPPLIED WITH THIS PRODUCT. USE OF OTHER ADAPTERS WILL VOID THIS WARRANTY.

## Service

If your Monitor is not working properly, please call The First Years at 1-800-533-6708.

Often, we can explain how to get your unit working again. If the unit needs repair, you will be requested to pack it carefully and send it to:

The First Years/Service Department  
One Kiddie Drive  
Avon, MA 02322-1171

©Disney

Based on the "Winnie the Pooh" works by A.A. Milne and E.H. Shepard

Visit the Disney web site at [www.disney.com](http://www.disney.com)

©2001 The First Years Inc., Avon, MA 02322-1171

Visit us at [www.thefirstyears.com](http://www.thefirstyears.com)

Made in China to The First Years' quality specifications.