 



900MHz Monitor

Save These Instructions

Parent's Unit (receiver)

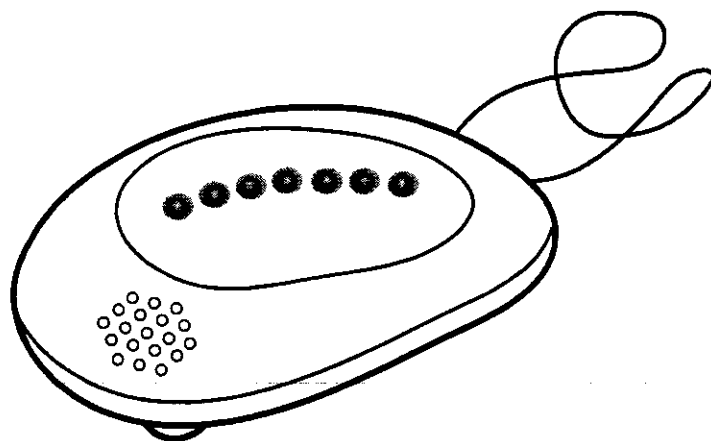

 Child's Unit (transmitter)

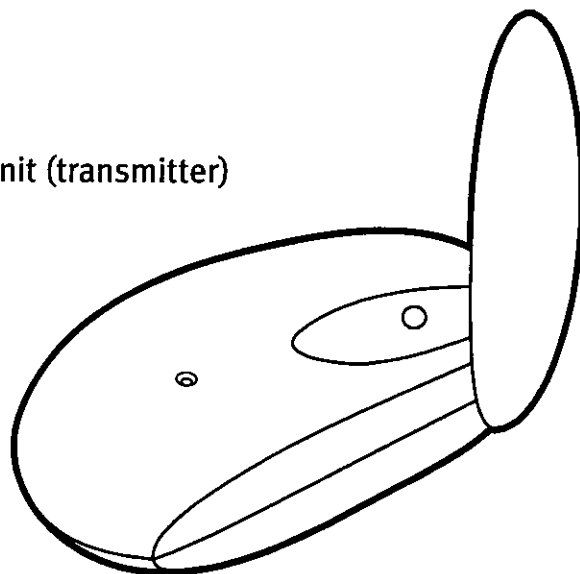

Quick Start Instructions

(You'll find detailed instructions inside.)

Please read the safety instructions on page 2.

1. Set up the Parent's Unit

- Install the batteries (not supplied) or
- Plug one of the two A/C adapters provided into the Parent's Unit.

2. Set up the Child's Unit

- Place the unit near your child (within 6 feet, but well beyond child's reach).
- Position the antenna straight up.
- Plug in the second A/C adapter provided, and turn the unit on.

3. Use the Monitor

- Set both units to the same channel (A or B).
- Rotate the volume dial to turn the Parent's Unit on and set the volume.
- Keep the Parent's Unit with you, and keep it positioned upright.

WARNING:

- This product is not a substitute for adult supervision.
- This product is not a toy.
- This product is a monitoring device designed to assist in the monitoring of children, not as a prevention of injury or loss of child.
- Do not place Child's Unit in crib or attach to crib.

If you have questions about the use of your 900 MHz Jewel Monitor, please call the First Years Parents Service Center toll-free: 1-800-533-6708.

Safety Instructions

CAUTION

RISK OF ELECTRICAL SHOCK
DO NOT OPEN

⚠ WARNING: To reduce the risk of fire or electrical shock, do not expose this product to water or moisture.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. The device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.



CAUTION: To reduce the risk of electrical shock, do not remove the cover or back of either unit. There are no user-serviceable parts inside.

Refer all servicing to a qualified Technician (see below for our toll-free number).

1. THE USER SHOULD NOT ATTEMPT TO SERVICE THIS PRODUCT. READ ALL SAFETY AND OPERATING INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

2. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

3. OBSERVE ALL WARNINGS

4. FOLLOW ALL OPERATING INSTRUCTIONS

5. WATER AND MOISTURE

This product should not be used near water, for example, near a bathtub, or sink, in a wet basement or near a swimming pool.

6. VENTILATION

This product should be situated in such a way that it has proper ventilation. Do not place on a bed, sofa, rug, or similar surface that may block ventilation openings. Do not place in an enclosed area, such as a cabinet or book case that might impede the flow of air through the ventilation openings.

7. HEAT

This product should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances that produce heat.

8. POWER SOURCE

This product should be connected to a power supply only of the type described in these instructions or marked on the product itself.

IMPORTANT: The following applies only to ULLISTED UNITS. This product is being supplied with the required safety feature of a Polarized Plug. You will note that one prong is larger than the other so that the plug fits into the outlet only one way. DO NOT TAMPER WITH THE PLUG under any circumstances.

9. POWER CORD PROTECTION

The power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. Pay particular attention to the cord at the plug, at the convenience receptacle, and at the point it exits from the appliance.

10. CLEANING

Before cleaning, be sure to unplug. Clean only as recommended in these instructions.

11. NON-USE PERIODS

The power cord of the product should be unplugged from the outlet when the Monitor will be unused for a long period of time.

12. OBJECT AND LIQUID ENTRY

Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through the openings.

13. DAMAGE REQUIRING SERVICE




This product should be serviced by qualified service personnel (see below) when:

- a. The power supply cord or plug has been damaged; or
- b. Objects have fallen or liquid has been spilled into it; or
- c. The product has been exposed to rain; or
- d. The product does not appear to operate normally or exhibits a marked change in its performance; or
- e. The product has been dropped or the enclosure damaged.




14. WALL MOUNTING

The monitor should be mounted to a wall only as recommended in these instructions.

Child's Unit (transmitter)

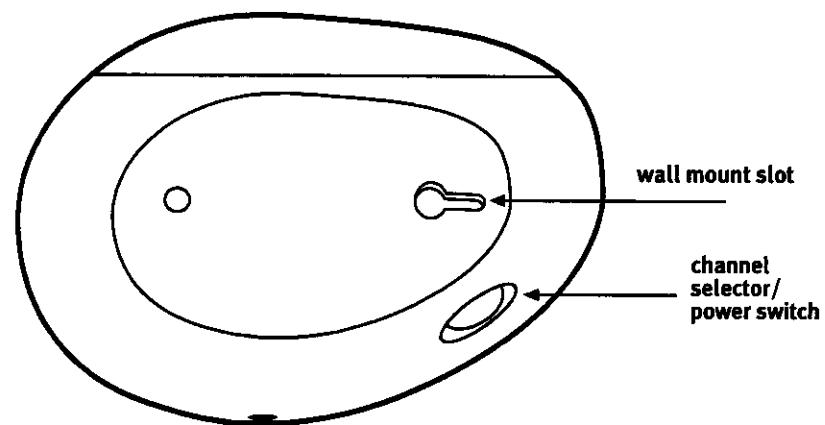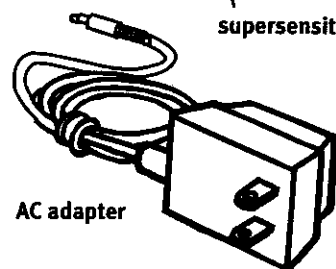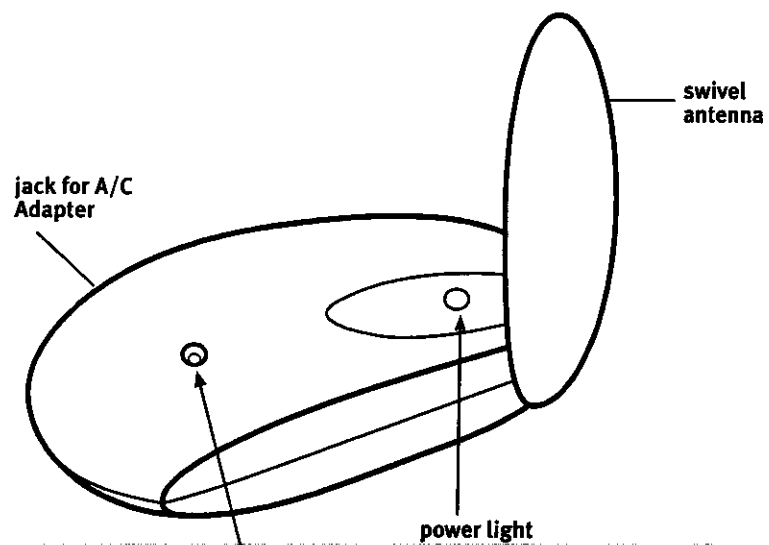

Parent's Unit (receiver)

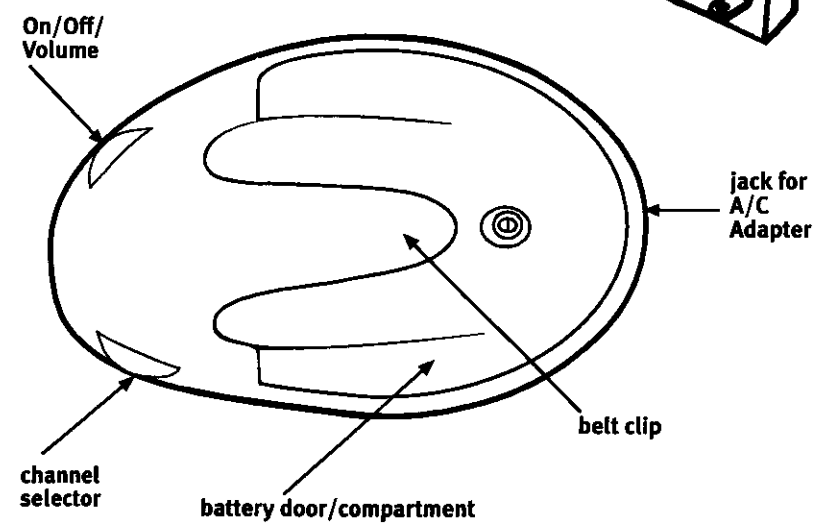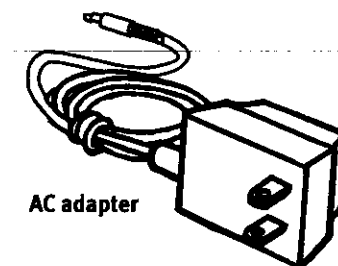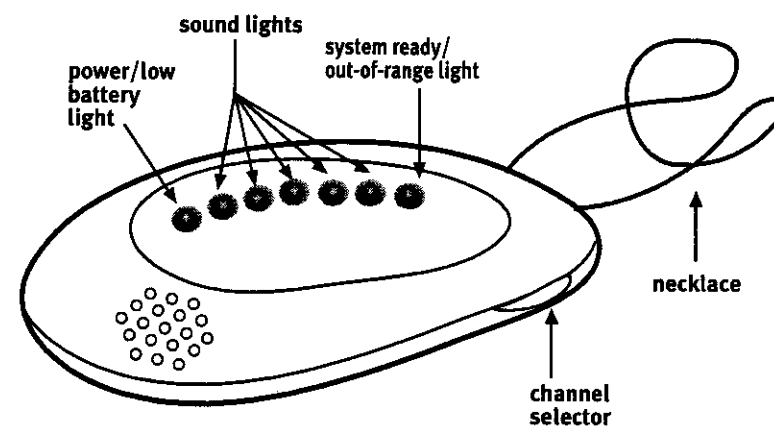

1 To Set Up



Parent's Unit

1. Install the batteries

- Loosen screw and release battery compartment cover.
- Insert the three AAA batteries. Position them so the + and - contacts are aligned with the corresponding contacts on the battery clip.
- Reassemble battery compartment, close the cover and tighten the screw.

When it's time to change the batteries:
Remove batteries and replace them.

CAUTION: Always use the AC adapter(s) supplied with this product. Do not use any other adapter. Monitor could be damaged and warranty would become void.

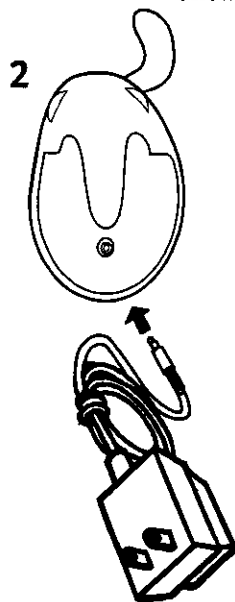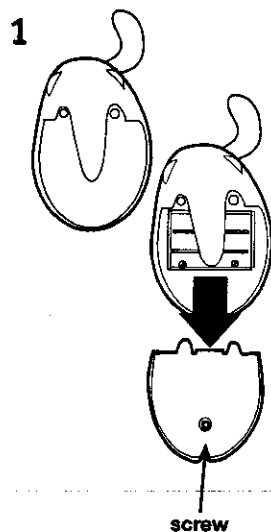


Child's Unit

- Position the Child's Unit within approximately 6 feet of your child, yet out of the child's reach.

CAUTION: Do not place Child's Unit in crib or attach to crib.


(To prevent heat build-up, place on an open surface away from heat sources; do not place in an enclosed space.)

- Position the antenna straight up, as shown.
- Insert the A/C adapter plug into the jack on the side of the unit, then plug the adapter into an electrical outlet.

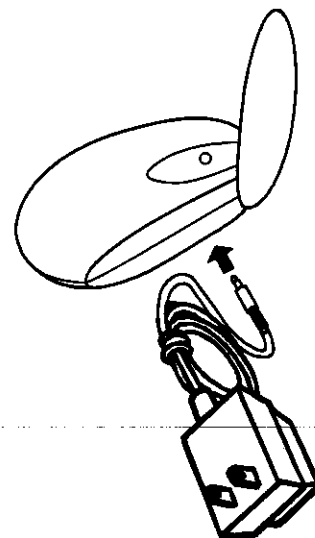

For wall mounting (optional):

- Securely fasten one #6 flat head wood screws on the wall (For best results, use 3/4-inch screw; mount in a solid wood panel, or use screw anchor).
- Leave screw head protruding from the wall by at least 1/8-inch.
- Fit the screw headslot (on the back of the unit) over the screw head and slide the unit down to seat it firmly.
- To test that the unit is securely mounted, press on its edges.
- Raise antenna as shown.

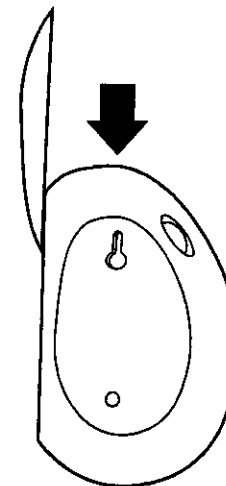

2 To Use Monitor

1. Slide the channel selector on the Child's Unit to either A or B to turn the unit on. The power light will come on.
2. Set the Parent's Unit to the same channel as the Child's Unit (A or B). For the Monitor to work properly, both units must be set to the same channel.
3. Turn the volume dial on the Parent's Unit clockwise to turn the unit on. The power light should be green.
4. Keep the Parent's Unit with you. For best reception keep both units as near upright as possible.

Range: The range of the Monitor will vary with the surroundings. You may want to test its workable range by walking through your house and yard observing the range light and listening for the volume and clarity of the sounds being transmitted. If the range light turns red, then you have gone out of range.

Using belt clip: Remove beltclip prior to using belt clip. Slide onto your belt, or waistband.

Using neck strap: Place neck strap around your neck, with monitor resting on your chest.

Changing channels: Always keep both units set to the same channel (A or B). If you experience interference or static with one channel, switch to the other.

Positioning antennas: Always be certain the antenna on the child's unit is straight up.

Sound Lights

Here's how to interpret the seven sound lights:

1. Power Light

Green - Both units are on and the Monitor is ready to transmit sound.

Red - Batteries in Parent's Unit are weak. Charge batteries as soon as possible.

Not Lit - Batteries in Parent's Unit are dead. Replace.

2. Three Quiet Sound Lights

No Lights Lit - Baby is quiet (no sound from Child's Unit).

One or More Lights Green - Quiet sounds (baby may be whimpering or talking).


3. Two Loud Sound Lights

One or More Lights Red - Loud sounds (baby may be crying or talking loudly).

4. Range Light

Green - Both units are within range. Parent's Unit is receiving sounds transmitted by Child's Unit.

Red - Parent's unit is not receiving sounds transmitted by Child's Unit. (See Troubleshooting, "No sound or very weak reception.")

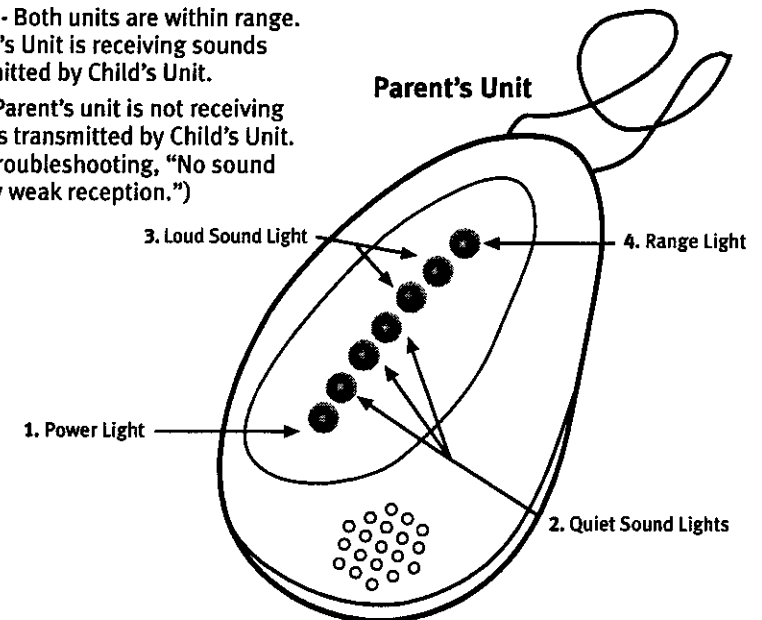

3 Care of Your Monitor

Maintenance

Replacing Batteries in the Parent's Unit:

The rechargeable batteries in the Parent's Unit need to be replaced when the battery will not hold a charge (power light stays red after extended charging time), or will hold a charge for only a brief time (less than an hour).

Replace with three AAA Alkaline batteries. For detailed instructions, please see "To Set Up," Parent's Unit, #2.

WARNING: Keep batteries away from children. Parents are urged to exercise care in the storage, use, and disposal of all batteries.

- Do not dispose of batteries in fire. They may explode.

CAUTION: To avoid battery leakage:

- Be sure to insert batteries correctly following instructions.
- Never mix old and new batteries, or standard (carbon zinc) with alkaline batteries.
- Always remove exhausted batteries from the product.
- Never use screwdriver or any other tool to pry batteries from compartment.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antenna.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

To Clean Both Units:

Wipe exterior surfaces with a clean, dry cloth.

One Year (1) Limited Warranty

The First Years Warrants this product to be free from defects in material and workmanship for a period of one year from the date of original purchase.

Should this product prove to be defective at any time during the warranty period, The First Years will, at its option, either replace or repair it without charge.

For warranty service, please return the product, along with dated sales receipt or other proof of the purchase date, to The First Years, One Kiddie Drive, Avon, MA 02322-1171.

This warranty does not apply to battery life or to damage caused by battery leakage or improper handling or installation of batteries. This warranty does not cover damage caused by accident, misuse, abuse, improper maintenance, unauthorized modification, or connection to an improper power supply. A charge will be made for repair of such damage.

This warranty excludes all incidental or consequential damages and any liability other than what is stated above. No other warranties are given.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on implied warranties, so the above limitations or exclusions may not apply to you. Legal rights vary from state to state.

IMPORTANT: USE ONLY THE ADAPTERS SUPPLIED WITH THIS PRODUCT. USE OF OTHER ADAPTERS WILL VOID THIS WARRANTY.

Service

If your Monitor is not working properly, please call The First Years Parents Service Center at 1-800-533-6708. Often, we can explain how to get your unit working again. If the unit needs repair, you will be requested to pack it carefully and return it to The First Years.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	SOLUTION
No power (Power light red or not lit at all)	Parent's Unit: Unit is not turned on.	Turn the volume dial clockwise to preferred setting.
	Battery is dead	Replace batteries. (See "Care of Your Monitor")
	Child's Unit: Unit is not turned on.	Slide ON/OFF switch to A or B (whichever channel Parent's Unit is set to).
	Battery is dead. Adapter not plugged in.	Replace battery, or plug in adapter.
	Adapter plugged in to outlet that's turned off.	If outlet is controlled by a wall switch, be sure switch is turned on.
Hissing sound	Parent's unit is turned on, but Child's Unit is off.	Leave Child's Unit plugged in and turned on at all times (or, if you turn it off, turn off Parent's Unit also.)
Static or interference	Units set to different channels.	Set both units to the same channel.
	Appliances (fan, hair dryer or mixer, for example) causing interference.	Try turning off any nearby appliances or switching channels.
	Cross-talk from cordless phone or some other nearby transmitter.	Try switching channels.
	Child's unit not receiving power.	Make sure adapter is plugged in and outlet is receiving power.
	Batteries are low in one or both units.	Replace batteries in Parent's unit.
Noisy feedback (high-pitched "screech")	Units too close together. Volume too high.	Be sure Parent's Unit is at least 3 feet from Child's Unit. Lower volume setting in Parent's Unit.
Battery in Parent's Unit will not charge	Battery needs to be replaced	(See "Care/Maintenance of Your Monitor.")
No sound or very weak reception (Range light will be red instead of green)	Unit is getting little or no power.	Parent's Unit: Replace batteries. Child's Unit: Make sure adapter is plugged in and outlet is receiving power.
	Out of range.	Move Parent's Unit closer to Child's Unit (and be sure Child's Unit is turned on).
	Antenna is not vertical or is covered.	Be sure antenna is straight up and not obstructed.
	Units are set to different channels.	Set both units to the same channel.
	Weak batteries.	Replace batteries or use A/C adapter.
	Volume is set too low.	Raise volume setting.