

## Appendix A Hot key examples

---

**This section contains the following topics:**

Example 1: selecting a specific channel (328)

Example 2: displaying an information screen (329)

Example 3: displaying and/or changing a setting in the Control List (330)

Example 4: changing a value to the next value in a list (331)

Example 5: opening a list at the marker entry (332)

Example 6: making a call using a specific entry in the Address List (333)

Example 7: setting up one-touch discreet operation (334)

### Example 1: selecting a specific channel

This example shows you how to create a macro to select a specific channel in the Channel List.

When you run this macro, the transceiver:

- opens the Channel List
- selects the channel specified in the macro
- briefly displays the new channel
- returns you to the screen you were on

To create this macro:

- Press **VIEW** until the channel screen is displayed.
- Scroll to the channel you want the macro to select.
- Hold **Q** to open the List Manager.
- Scroll to **Macros...**, then press **✓**.
- Scroll to **Create macro**, then press **✓**.

The transceiver asks you to select the action you want the macro to perform.

- Scroll to **Go to this chan**, then press **✓**.

The transceiver asks you to select the timing with which the macro operates.

- Scroll to **Before pause**, then press **✓**.

**NOTE** When you use a macro to select a channel the channel is always selected before the channel screen is displayed. You can therefore select **Before pause** or **After pause**. The end result is the same.

- Press the key to which you want to assign the new macro.
- Scroll to the macro that you want to have in the list immediately after the new macro, then press **✓**.
- Type a name for the macro, then press **✓**.

The macro is created and assigned to the key, and the List Manager remains open.

## Example 2: displaying an information screen

The time and LQA screens are information screens. You can view the information on these screens but you cannot change it. This example shows you how to create a macro to display the time screen in the Control List.

When you run this macro, the transceiver:

- goes to the time screen entry in the Control List
- briefly displays the current time and date
- returns you to the screen you were on

To create this macro:

- Log into admin level (for help see [page 110, Logging into admin level from user level](#)).
- Press **X** until **Main Menu** is displayed.
- Scroll to **Control**, then press **✓**.
- Scroll to **Time Screen**, then press **✓**.
- Hold* **Q** to open the List Manager.
- Scroll to **Macros...**, then press **✓**.
- Scroll to **Create macro**, then press **✓**.

The transceiver asks you to select the timing with which the macro operates.

- Scroll to **Before pause**, then press **✓**.

**NOTE** This macro displays an information screen and does not change any values, so you can select **Before pause** or **After pause**. The end result is the same.

- Press the key to which you want to assign the new macro.
- Scroll to the macro that you want to have in the list immediately after the new macro, then press **✓**.
- Type a name for the macro, then press **✓**.

The macro is created and assigned to the key, and the List Manager remains open.

### Example 3: displaying and/or changing a setting in the Control List

This example shows you how to create a macro to display and/or change a setting in the Control List. You can then change the value or press **X** to leave it as it is.

When you run this macro, the transceiver:

- goes to the Cfg Alert Tones entry in the Control List
- displays the current value
- waits for you to act

To create this macro:

- Log into admin level (for help see [page 110, Logging into admin level from user level](#)).
- Press **X** until **Main Menu** is displayed.
- Scroll to **Control**, then press **✓**.
- Scroll to **Cfg Alert Tones**, then *hold* **✓**.

A question mark is displayed at the end of the top line to indicate that you can now change the value.

- Hold* **Q** to open the List Manager.
- Scroll to **Macros...**, then press **✓**.
- Scroll to **Create macro**, then press **✓**.

The transceiver asks you to select the action you want the macro to perform.

- Scroll to **Display value**, then press **✓**.

The transceiver asks you to select the timing with which the macro operates.

- Scroll to **Waits**, then press **✓**.
- Press the key to which you want to assign the new macro.
- Scroll to the macro that you want to have in the list immediately after the new macro, then press **✓**.
- Type a name for the macro, then press **✓**.

The macro is created and assigned to the key, and the List Manager remains open.

#### Example 4: changing a value to the next value in a list

For many entries in the Control List, changing a value involves selecting a value from a short list of possible values. For example, when you change the brightness of the screen you can select bright, medium or dark. This example shows you how to create a macro to change the current value to the next value in one of these entries, whatever that value may be.

For entries where the values are on and off, creating a macro to go to the next value means you can toggle the entry on and off using the same macro. For other entries it means you go to the next value each time you use the macro.

This example shows you how to create a macro to switch Help Mode on or off.

When you run this macro, the transceiver:

- goes to the Help Mode entry in the Control List
- changes the value to the next value in the list (that is, from On to Off, or Off to On)
- saves the value

The timing with which this macro operates is immediate. This means that the macro operates in the background and simply displays the result (that is, Help Mode is switched on or off).

To create this macro:

- Log into admin level (for help see [page 110, Logging into admin level from user level](#)).
- Press **X** until **Main Menu** is displayed.
- Scroll to **Control**, then press **✓**.
- Scroll to **Help Mode**, then *hold* **✓**.

A question mark is displayed at the end of the top line to indicate that you can now change the value.

- Hold* **Q** to open the List Manager.
- Scroll to **Macros...**, then press **✓**.
- Scroll to **Create macro**, then press **✓**.

The transceiver asks you to select the action you want the macro to perform.

- Scroll to **Set next value**, then press **✓**.

The transceiver asks you to select the timing with which the macro operates.

- Scroll to **Immediately**, then press **✓**.

If you want to briefly view the value to which the setting is changing, select **Before pause**.

- Press the key to which you want to assign the new macro.
- Scroll to the macro that you want to have in the list immediately after the new macro, then press **✓**.

- Type a name for the macro, then press ✓.

The macro is created and assigned to the key, and the List Manager remains open.

### Example 5: opening a list at the marker entry

This example shows you how to create a macro to open a list at the entry on which a marker has been set.

When you run this macro, the transceiver:

- opens the list
- goes to the entry on which the marker has been set
- waits for you to act

To create this macro:

- Set a marker on the entry to which you want the macro to go (see [page 94, Setting a marker](#)).

If you have already set the marker, open the list in which the entry is stored.

- Hold **Q** to open the List Manager.
- Scroll to **Macros...**, then press ✓.
- Scroll to **Create macro**, then press ✓.

The transceiver asks you to select the action you want the macro to perform.

- Scroll to **Go to marker**, then press ✓.

The transceiver asks you to select the timing with which the macro operates.

- Scroll to **Waits**, then press ✓.
- Press the key to which you want to assign the new macro.
- Scroll to the macro that you want to have in the list immediately after the new macro, then press ✓.
- Type a name for the macro, then press ✓.

The macro is created and assigned to the key, and the List Manager remains open.

### Example 6: making a call using a specific entry in the Address List

This example shows you how to create a macro to make a call using a specific entry in the Address List.

When you run this macro, the transceiver:

- opens the Address List
- goes to the entry specified in the macro
- begins a call to the address specified in the entry

The timing with which this macro operates is *Immediately*. This means that the macro begins the call without displaying the Address List entry first. The transceiver may, however, prompt you for information about the call depending on the details supplied in the entry.

To create this macro:

- Press **VIEW** until the Address List is displayed.
- Scroll to the entry you want the macro to call.
- Hold* **Q** to open the List Manager.
- Scroll to **Macros...**, then press **✓**.
- Scroll to **Create macro**, then press **✓**.

The transceiver asks you to select the action you want the macro to perform.

- Scroll to **Go to this entry**, then press **✓**.

The transceiver asks you to select the timing with which the macro operates.

- Scroll to **Immediately**, then press **✓**.
- Press the key to which you want to assign the new macro.
- Scroll to the macro that you want to have in the list immediately after the new macro, then press **✓**.
- Type a name for the macro, then press **✓**.

The macro is created and assigned to the key, and the List Manager remains open.

### Example 7: setting up one-touch discreet operation

This example shows you how to create a macro that will put your transceiver into discreet operation.

When you run this macro, the transceiver switches off:

- the internal speaker
- alert tones
- backlighting
- key beeps

This macro is created by joining four macros together.

To create this macro:

- Log into admin level (for help see [page 110, Logging into admin level from user level](#)).
- Create separate macros to perform the following tasks:

Control List entry	Selected setting	Macro action	Timing	Assign to	Name
Cfg Speaker Internal	Disabled	Set this value	Immediately	Unassigned	Speaker
Cfg Alert Tones	Disabled	Set this value	Immediately	Unassigned	Tones
Screen Brightness (🔊 + 0)	Dark	Set this value	Immediately	Unassigned	Dark
Key Beeps	Off	Set this value	Immediately	Unassigned	Beeps

**NOTE** For help see [page 330, Example 3: displaying and/or changing a setting in the Control List](#).

- Join the macros together, selecting Speaker as the first macro each time (see [page 247, Joining macros](#)).
- Rename the Speaker macro to Discreet.
- Delete the Tones, Dark and Beeps macros.

**NOTE** The internal speaker is switched on again by *holding MUTE*, and the screen backlighting is changed by pressing 🔊. If the user needs to restore key beeps and alert tones, you should create new macros that enable the user to switch on these settings (see [page 330, Example 3: displaying and/or changing a setting in the Control List](#)).



## Appendix B Get Status calls

When you make a Get Status call you need to specify whether you want to retrieve diagnostic or configuration information from the remote station (see [Table 46](#) and [Table 47](#)). You do this by entering the number 1 or 2 in the Message setting when prompted by the transceiver. You can also pre-type and store these numbers in the Messages entry in the Control List (see [page 225, Messages entry](#)), or create an entry for the call in the Address List (see [page 154, Programming the Address List](#)).

### Diagnostic information

To obtain diagnostic information, enter '1' as the message for the Get Status call. Transceivers from other vendors may obtain diagnostic information from a 2110 SSB Transceiver by sending an AMD message containing #CMD 1 in a Plain network.

Table 46: Diagnostic information from a Get Status call made to a Codan transceiver

Information received	Description
RXnn.n	Battery voltage in receive
TXnn.n	Battery voltage in transmit
S1=nnn	Signal strength of received call ( $\mu$ EMF)
S2=nnn	Signal strength 2 seconds after call was received ( $\mu$ EMF)
SWRn.n	SWR of the antenna
Pnnn	Power output of the transmitter (W)
Tnn	Temperature ( $^{\circ}$ C)

## Configuration information

To obtain configuration information from a Codan transceiver, enter '2' as the message for the Get Status call.

Table 47: Configuration information from a Get Status call made to a Codan transceiver

 
Information received	Description
SR VR VR Mobile 2110	Product type as held in the Customer Radio entry in the Control List
RF: n.nn JB:n.nn NRI:n.nn 2110:n.nn	Product name as held in the Devices entry in the Control List, followed by the firmware version number for the device

## Appendix C Forgotten passwords

If you have forgotten your user password, contact Codan to obtain a code to erase your password. You will be asked to quote the ESN of the transceiver unit.


To obtain the required ESN and/or enter the code provided by Codan:

- Switch on the transceiver then wait until you are prompted to enter a password.

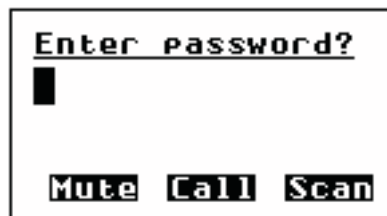

- Hold **Q** to display the Option code screen.

 The ESN is displayed on the bottom line of the screen.

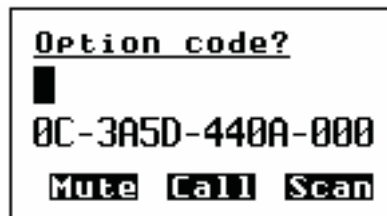

- Do one of the following:
  - To exit this screen and return to the Enter password screen, hold **X**.
  - To enter the code to erase your password, start typing. The transceiver automatically enters dashes in the appropriate places. When you have entered the code, press **✓**. The password is erased and the home screen is displayed.

**NOTE** The ESN is displayed in a similar manner during Admin login.

**NOTE** To enter a new password, use the Password User or Password Admin entry in the Control List (for help see [page 96, Changing a setting in the Control List](#)).

This page has been left blank intentionally.

## Appendix D Limiting user access

---

**This section contains the following topics:**

[Introduction \(340\)](#)

[Syntax for the Message 10 entry \(340\)](#)

[Activating configuration commands in the Message 10 entry \(341\)](#)

[Restricting access to the List Manager \(341\)](#)

[Restricting access to admin level \(342\)](#)

[Restricting access to call types \(342\)](#)

[Enabling the automatic removal of the incoming call pop-up \(343\)](#)

[Restricting access to holding CALL \(343\)](#)

[Restricting access to Voice Encryptor features \(344\)](#)

## Introduction

You can limit access by users to certain areas in the 2110 SSB Transceiver's user interface by entering special configuration commands in the Message 10 entry in the Control List. These commands may prevent accidental changes to setup information, and enable you to hide information on a 'need to know' basis.

You can:

- restrict access to the List Manager in total, or restrict access to certain functions (category LM) (see [page 341, Restricting access to the List Manager](#))
- restrict access to the admin level (category BAL) (see [page 342, Restricting access to admin level](#))
- restrict the call types that can be used to make a call unless they have already been used in an address entry (category BCT) (see [page 342, Restricting access to call types](#))
- enable the automatic removal of an incoming call pop-up (category TIC) (see [page 343, Enabling the automatic removal of the incoming call pop-up](#))
- restrict access to **holding CALL** and hence preventing changes to calling information (category HCD) (see [page 343, Restricting access to holding CALL](#))
- restrict access to the secure PIN function with the Voice Encryptor feature (category BSP) (see [page 344, Restricting access to Voice Encryptor features](#))
- restrict access to the Secure Standby Mode (category SSD) (see [page 344, Restricting access to Voice Encryptor features](#))

**NOTE** These configuration commands operate at the user level. If you are logged into admin level you will have full access to the above functions, regardless of the setting in the Message 10 entry.

## Syntax for the Message 10 entry

The following rules apply to configuration commands used in the Message 10 entry in the Control List:

- Commands must begin with the characters **#!** followed by a space, for example, **#! BSP**. If you do not use these characters, the transceiver will read any characters in the entry as a standard message.
- Category commands must be followed by a hyphen, then the specific commands (see [Table 48](#) and [Table 49](#)), separated by commas. Each category and corresponding commands are separated by a space, for example:

**LM-FV,UL BCT-M,GP**

## Activating configuration commands in the Message 10 entry

After entering a configuration command in the Message 10 entry, you must switch your transceiver off then on again.

## Restricting access to the List Manager

A configuration command for restricting access to the List Manager begins with **#\$! LM-**. Follow this command with the codes that you want to use from [Table 48](#).

Table 48: Codes for restricting access to the List Manager

Use this code...	If you want to...
Ad (Advanced)	Prevent access to the Advanced... features in the List Manager via the Quick Start menu.
AO (Administration Only)	Prevent access to the List Manager.
Ent (Entries)	Prevent creating, renaming, copying, editing and deleting of entries unless it is via the Quick Start menu.
FV (Full View)	Prevent access to full view (see <a href="#">page 112, <i>Displaying full and normal view</i></a> ).
Grp (Group)	Prevent toggling between grouped and ungrouped entries (see <a href="#">page 103, <i>Grouping and ungrouping entries</i></a> ).
HP (Home Page)	Prevent changing the home screen (see <a href="#">page 95, <i>Setting the home screen</i></a> ).
Itm (Item)	Prevent adding and deleting of items unless it is via the Quick Start menu.
Mcr (Macro)	Prevent use of macros.
SM (Set Marker)	Prevent changing the marker on any list (see <a href="#">page 94, <i>Setting a marker</i></a> ).
SS (Show Settings)	Prevent toggling between hiding and showing settings for an entry (see <a href="#">page 101, <i>Hiding and showing settings</i></a> ).
UH (User Hide)	Prevent changing the hide or show status of an entry at user level (see <a href="#">page 113, <i>Hiding and showing information</i></a> ).
UL (User Lock)	Prevent changing the locked or unlocked status of an entry at user level (see <a href="#">page 115, <i>Locking and unlocking information</i></a> ).
ULO (User Locks Off)	Prevent toggling between Locks off and Locks on at user level (see <a href="#">page 116, <i>Switching locks off or on at user level</i></a> ).
BIT (Built-in Test)	Prevent access to built-in tests.

For example, if you want to restrict access to all features in the List Manager, enter the following into the Message 10 entry:

**#\$! LM-AO**

If you want to restrict access to full view and ungrouping entries that are already grouped, enter the following into the Message 10 entry:

**#\$! LM-FV,Grp**

## Restricting access to admin level

If you want to prevent entry to admin level, enter the following into the Message 10 entry:

**#\$! BAL**

**CAUTION** This command can only be removed from the Message 10 entry using NSP.

## Restricting access to call types

A configuration command for restricting access to call types begins with **#\$! BCT-**. Follow this command with the codes that you want to use from [Table 49](#).

Table 49: Codes for restricting access to call types

Use this code...	If you want to restrict access to this call type...
AL	ALL
AN	ANY
CT	Channel Test
E	Emergency
GP	Get Position
GRP	Group Selective
GS	Get Status
M	Message
NE	NET
P	Phone
S	Selective
SP	Send Position
WC	Wildcard



For example, if you want to restrict access to using Message and Get Position call types, enter the following into the Message 10 entry:

**#\$! BCT-M,GP**

## Enabling the automatic removal of the incoming call pop-up

A pop-up message is displayed when you receive an incoming call. This message usually remains on the display until you acknowledge it by pressing ✓ or ✕. When you use the Timeout Incoming Call (TIC) configuration command, the incoming call pop-up is removed after 30 seconds.

If you want to automatically remove all incoming call pop-ups after 30 seconds, enter the following into the Message 10 entry:

**#\$! TIC**

## Restricting access to *holding CALL*

When you *hold CALL*, you gain access to changing call details as you make a call. If you want to prevent the user from having access to networks and channels, use the Hold Call Disable configuration command.

For example, if you want to disable the *hold CALL* function, enter the following into the Message 10 entry:

**#\$! HCD**

## Restricting access to Voice Encryptor features

You can restrict access to two features of the Voice Encryptor. A configuration command for restricting access to these features begins with **#\$!** . Follow this command with the codes that you want to use from [Table 50](#).

Table 50: Codes for restricting access to Voice Encryptor features

Use this code	If you want to...
BSP (Block Secure PIN)	Prevent access to the Secure PIN function when the user <i>holds</i> <b>SEC</b> . The function of <i>holding</i> <b>SEC</b> enters Secure Mode in the default setting.
SSD (Secure Standby Disable)	Prevent access to Secure Standby Mode (see <a href="#">page 83, Using the voice encryptor in Standby Mode</a> ).

If you want to disable the Secure PIN function, enter the following into the Message 10 entry:

**#\$! BSP**

If you want to disable the Secure Standby Mode, enter the following into the Message 10 entry:

**#\$! SSD**

## Numerics

19-way GPIO connector  
pinouts 304

## A

accessories  
for 2110 SSB Transceiver 321  
specifications 325  
address 142, 147  
Address List 145  
address 147  
call type 147  
calling from 181  
channel/mode 149  
copying entries 155  
creating entries 154  
deleting entries 155  
editing entries 155  
message 148  
network 149  
overview 146  
phone link 148  
programming 154  
renaming entries 155  
setting up the emergency key 150  
settings 147  
address syntax  
ALL 159  
ANY 160  
Group Selective 161  
NET 162  
Wildcard 163  
admin level 108  
logging in 110  
ALE  
accept ALL call 209  
accept ANY Call 209  
accept Wildcard Call 209  
AMD position 209  
BER 200, 210  
call threshold 200, 210  
call weighting 200, 211  
Golay 201, 211  
hangup ALL call 211  
LQA average 201, 211  
LQA clear 201, 212  
LQA decay 201, 212  
LQA exchange 201, 213  
LQA mapping 201, 213  
retries 201, 213  
selective msg 213

silent mode 201, 213  
site manager 201, 214  
soundings 214  
ALE address syntaxes  
summary 164  
ALE call options 256  
ALE calls 169  
alerts and call types 190  
ALL calls 159  
alternative charger requirements 35  
Amateur Mode 231, 235  
AMD message 171  
CICS error reporting 257  
error reporting 192  
antenna  
automatic tuning 76  
broadband dipole 39  
end-fed broadband 39  
long wire and adaptor 38  
manual tuning 77  
selecting 37  
whip 37  
wire dipole 40  
antenna tuning  
manual 207  
ANY calls 160  
auto-dim 208  
automatic tuning 76

## B

battery connector  
pinouts  
battery pack 307  
transceiver unit 306  
battery discharge regime 35  
battery storage 19  
battery voltage 77  
bearing 223  
best channel  
selecting 178  
brightness  
screen 74, 208

## C

call detect time 123  
call memory, see Calls In Log 192  
call sign 25  
call systems  
ALE/CALM 24  
Codan Selcall 24

- call types 147
  - Channel Test 166, 174
  - Emergency 167
  - Get Position 167
  - Get Status 168, 335
  - Message 168
  - overview 165
  - Phone 169, 179, 182
  - Selective 169
  - Send Position 170
- calling methods 181
- calls
  - and alerts 190
  - from Address List 181
  - from Last Heard Log 182
  - from Phone Link List 179, 182
  - making 173
  - new 179, 181
  - receiving 190
  - repeating 179, 182
  - returning 179, 181
  - to groups of stations in a Codan Selcall network 170
  - using emergency key 150, 181
- Calls In Log 179, 181, 192
- Calls Out Log 179, 182, 187
- chain calls 152
- changing text
  - changing between alpha and numerical characters 54
  - deleting text 55
  - entering special characters in messages and names 55
  - entering text 53
  - entering text in call addresses 56
  - inserting text 54
  - moving the cursor 54
  - saving text changes 56
- channel
  - names 118
  - screen 48
- Channel List 117
  - channel names 118
  - frequencies 118
  - modes 118
  - programming 119
  - settings 118
- Channel Test calls 166, 174
- channel/mode 142, 149
  - in Network List 126
- channels
  - and option TxD 118
  - and option TxP 118
  - automatic selection 24
  - copying 120
  - creating 119
  - definition 23
  - deleting 120
  - editing 120
  - manual selection 51
  - overview 118
  - renaming 120
- CICS
  - address in commands 254
  - ALE call options 256
  - AMD message
    - error reporting 257
  - and 2110 terms 259
  - command prompt 253
  - commands 260
    - alebeacon 261
    - alecall 262
    - aletelcall 263
    - amd 264
    - beacon 264
    - call 265
    - chan 266
    - echo 266
    - freq 267
    - gpsbeacon 268
    - gpsposition 269
    - hangup 269
    - help 270
    - lbt 270
    - link 270
    - lock 271
    - lqa 272
    - mode 273
    - pagecall 274
    - prompt 275
    - ptt 276
    - scan 277
    - secure 278
    - selbeacon 279
    - selcall 280
    - selfid 280
    - set 281
    - sideband 282
    - sound 283
    - statusack 284
    - statuscall 284
    - statustime 285
    - telcall 286
    - ver 286
  - connecting a computer to a transceiver 258
  - control commands 253
  - entering commands 252
  - error messages 295
  - message length 257
  - outputs 257
  - overview 252
  - response messages 291
  - responses 257
  - sending and receiving calls 257
  - setting up 258

- a computer 258
  - a transceiver 258
- special characters 253
- structuring commands 252
- summary of command syntax 287
- using 252

clarifier 78, 205

clock, see time and date 67

compliance

- electromagnetic compatibility and safety notices 16
  - earth symbol 17
  - electrical safety 16
  - electromagnetic compatibility 16
  - protection of the radio spectrum 15
- European Radio and Telecommunications Terminal Equipment Directive 15

Computer Interface Command Set, see CICS 252

connectors 301

- 19-way GPIO 304
- battery (battery pack) 307
- battery (transceiver unit) 306
- handset 303

contrast

- screen 74, 208

Control List 199

- user access 75
- viewing 200

Corporate key

- setting 84

Corporate Mode

- switching to Global Mode 82

## D

date and time 208

- adjusting local time 68
- displaying time screen 69
- setting 67
- setting time zone offset 67

detection of station activity 196

direct wave 22

discharge regime

- battery 35

distance 223

dwelt time, see call detect time 123

## E

Easitalk 79

editing a screen 53

electromagnetic compatibility and safety notices

- compliance
  - earth symbol 17
  - electrical safety 16
  - electromagnetic compatibility 16
  - protection of the radio spectrum 15

electronic serial number 337

Emergency calls 167

emergency key 150, 181

encryption, see voice encryptor 80

entries

- grouping and ungrouping 103

error messages, see system messages 309

error reporting

- AMD message 192
- CICS AMD message 257

European Radio and Telecommunications Terminal Equipment Directive

- compliance 15

external power supply 51

## F

factory level 108

FED-STD-1045 ALE/CALM option 24

finding

- a value 65
- a word 64
- items in a list 64

free tune 205, 231

frequencies 118

frequency selection

- depending on distance and time of day 23

front panel

- keys 28
- screen 47

full view 109, 112

## G

Get Position calls 167

Get Status calls 168, 335

Global Mode

- switching to Corporate Mode 82

GPS calls

- see Get Position calls 167
- see Send Position calls 170

GPS screen 206, 222

ground wave 22

group calls using a Codan Selcall network 170

Group Selective calls 161

grouping entries 103

## H

handset connector

- pinouts 303

Help Mode 206

HF radio transmission

- about 22

hiding

- information 113
- settings 101

- home screen
  - displaying 95
  - setting 95
- hot keys 237
  - creating 241
  - examples 327
  - full-time and part-time 238
  - using 75

**I**

- incoming call screen 191

**K**

- Keypad List 227

**L**

- Last Heard Log 196
  - making a call 197
  - making a call from the log 179
- LBT Mode 173, 203
- limiting user access 339
- List Manager 91
  - entries 92
  - using 91
- lists
  - changing 97
  - copying an entry 99
  - creating an entry 97
  - deleting an entry 100
  - editing an entry 99
  - renaming an entry 98
  - selecting 90
- locking information 115
- locks off/on feature 116
- low current 203
- lower-case characters
  - entering 54
- LQA information
  - replacing using Channel Test call 175
- LQA screen 224

**M**

- macros 237
  - adding to 248
  - assigning several to one key 239
  - automating several tasks 239
  - copying 244
  - creating 241
  - deleting 246
  - examples 327
  - ideas for creating 240
  - joining 247
  - moving 245
  - performing two tasks 247

- renaming 246
- special 249
- storing 240
- troubleshooting 239

## Main Menu 88

- update 208

## making a call from the Last Heard Log 197

## making calls 173

## manual sounding 177

## manual tuning 77

## markers 94

## mathematical symbols

- entering 55

## Message 10 entry

- activating 341

## removing incoming call pop-up automatically 343

## restricting access to admin level 342

## restricting access to call types 342

## restricting access to Hold Call function 343

## restricting access to List Manager 341

## restricting access to Voice Encryptor features 344

## syntax 340

## Message calls 168

## messages 148

- pre-typed 207, 225

## system 309

## microphone

- using 63

## MIL-STD-188-141B ALE option 24

## Mode List 229

## modes 23, 51, 118, 207, 229

## mute 207

## muting the transceiver 61

- setting the mute type 61

**N**

## NET calls 162

## NET List 131

- address 134

## incoming calls 135

## link 135

## LQA exchange 137

## member address 134

## name 134

## network 134

## outgoing calls 135

## programming 138

## response 136

## slot width 137

## tune time 136

## viewing 134

## NETs

- copying 139

## creating 138

## deleting 139

## editing 139

- overview 132
- renaming 139
- Network List 121
  - call detect time 123
  - call systems 123
  - channel/mode 126
  - network name 123
  - nominal preamble 125
  - privacy mode 124
  - privacy password 125
  - programming 128
  - scanning 123
  - settings 123, 134
  - sounding interval 124
  - viewing 123
- networks 24, 142, 149
  - copying 129
  - creating 128
  - deleting 129
  - editing 129
  - overview 122
  - renaming 129
  - special names 127
- new calls
  - making 179, 181
- noise reduction, see Easitalk 79
- nominal preamble 125
- normal view 109, 112
- numbers
  - entering 54

**O**

- option
  - FED-STD-1045 ALE/CALM 24
  - MIL-STD-188-141B ALE 24
  - TxD 118
  - TxP 118
- option codes
  - entering 337
- options
  - for 2110 SSB Transceiver 321

**P**

- password
  - admin 207
  - entering 46
  - forgotten 337
  - user 207
- Phone calls 142, 169, 179, 182
- Phone Link List 141
  - address 142
  - calling from 179, 182
  - channel/mode 142
  - network 142
  - programming 143

- settings 142
- viewing 142
- phone links 148
  - copying 144
  - creating 143
  - deleting 144
  - editing 144
  - overview 142
  - renaming 143
- phonetic alphabet 26
- pin connections
  - 19-way GPIO connector 304
  - battery connector (battery pack) 307
  - battery connector (transceiver unit) 306
  - handset connector 303
- power
  - off 46, 207
  - on 46
- power preference 49, 203
- preamble, see nominal preamble 125
- privacy
  - mode 124
  - password 125
- punctuation marks
  - entering 55

## Q

- Quick Start 57
  - adding/editing a channel 58
  - adding/editing an entry in the Address List or Call Book 59
  - deleting an entry 60
  - opening and closing 57
  - setting the time and date 59
  - setting up a scan list 58
  - setting your station self address 59

## R

- receiving calls 190
- recognised variables 172, 256
- removing incoming call pop-up automatically 343
- repeating a call 189
- repeating calls 179, 182
- restricting access
  - to admin level 342
  - to call types 342
  - to Hold Call function 343
  - to List Manager 341
  - to Voice Encryptor features 344
- restricting information 108
- returning a call 194
- returning calls 179, 181

**S**

safety  
     radiation 16

scan rate, see call detect time 123

scanning 207  
     channels 24, 62  
     pausing 62

scrambler, see voice encryptor 80

screen  
     auto-dim 208  
     brightness 74, 208  
     contrast 74, 208  
     editable 52  
     editing 53  
     front panel 47  
     scroll rate 208  
     scroll step 208

secure  
     index 208  
     key 208  
     mode 208

selcalls, see Selective calls 169

selecting  
     a channel 51  
     an item in a list 29

selecting the best channel 178

Selective calls 169

self address  
     deleting 73  
     editing 72  
     entering 69

self ID, see self address 69

Send Position calls 170

serial numbers  
     electronic 337

settings  
     changing in the Control List 96  
     hiding and showing 101

showing  
     information 113  
     settings 101

sky wave 22

sounding  
     interval 124  
     manual 177

special network names 127

specifications 323  
     accessories 325

station self address  
     setting 69

storage  
     battery 19

SWR 77

symbols  
     entering 55

syntax for Message 10 entry 340

system messages 309

**T**

testing  
     installation 42  
     on-air 43  
     VSWR 42

testing the quality of a channel 174

text  
     entering and editing 52

time and date 208  
     adjusting local time 68  
     displaying time screen 69  
     setting 67  
     setting time zone offset 67

time screen 208  
     displaying 69

time zone offset 67, 208

transceiver  
     components 27

troubleshooting 41  
     macros 239

tuning  
     automatic 76  
     manual 77, 207

**U**

ungrouping entries 103

unlocking information 115

upper-case characters  
     entering 54

user access  
     limiting 339

user access to the Control List 75

user level 108

UTC offset 67

**V**

variable expansion 172, 256

Voice calls  
     making 180

voice encryptor 80  
     advanced security use 85  
     basic security use 84  
     Corporate key  
         setting 84  
     switching between Global and Corporate Modes 82  
     switching off 81  
     using 80  
     using in Standby Mode 83

voltage standing wave ratio 42

volume  
     audio 201



# W

wave

    direct 22

    ground 22

    sky 22

welcome

    screen 208

    text 208

Wildcard calls 163

This page has been left blank intentionally.



---

[www.codan.com.au](http://www.codan.com.au)

---

**Head Office**

Codan Limited  
ABN 77 007 590 605  
81 Graves Street  
Newton SA 5074  
AUSTRALIA  
Telephone +61 8 8305 0311  
Facsimile +61 8 8305 0411  
[asiasales@codan.com.au](mailto:asiasales@codan.com.au)

---

Codan (UK) Ltd  
Gostrey House  
Union Road  
Farnham Surrey GU9 7PT  
UNITED KINGDOM  
Telephone +44 1252 717 272  
Facsimile +44 1252 717 337  
[uksales@codan.com.au](mailto:uksales@codan.com.au)

Codan US, Inc.  
8430 Kao Circle  
Manassas VA 20110  
USA  
Telephone +1 703 361 2721  
Facsimile +1 703 361 3812  
[ussales@codan.com.au](mailto:ussales@codan.com.au)

Codan Limited  
ABN 77 007 590 605  
105 Factory Road  
Oxley Qld 4075  
AUSTRALIA  
Telephone +61 7 3716 6333  
Facsimile +61 7 3716 6350

