

### **Tune-up procedure**

- Tune-up procedure over the power range, or at specific operating power levels.

By tune up procedure, we assume you mean from the customers perspective - filter selection for the 50 Ohm port is automatic. Antenna tuning for the antenna stud is automatic, but can be manually initiated by pressing the "TUNE" button (button 1), then pressing PTT. Selection of the output ports is automatic, testing the 50 Ohm port first.

Operation without a load (neither 50 Ohm nor antenna) should be avoided.