




HF-CNTL-232-01 Digital Board (component view)

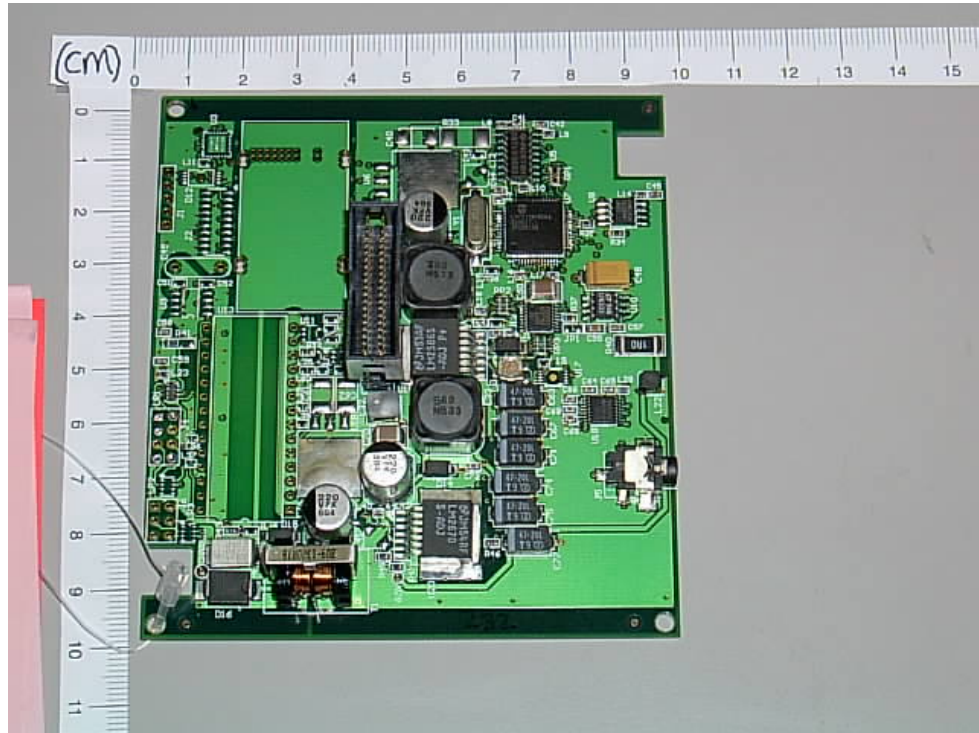


HF-CNTL-232-01 Digital Board (solder view)

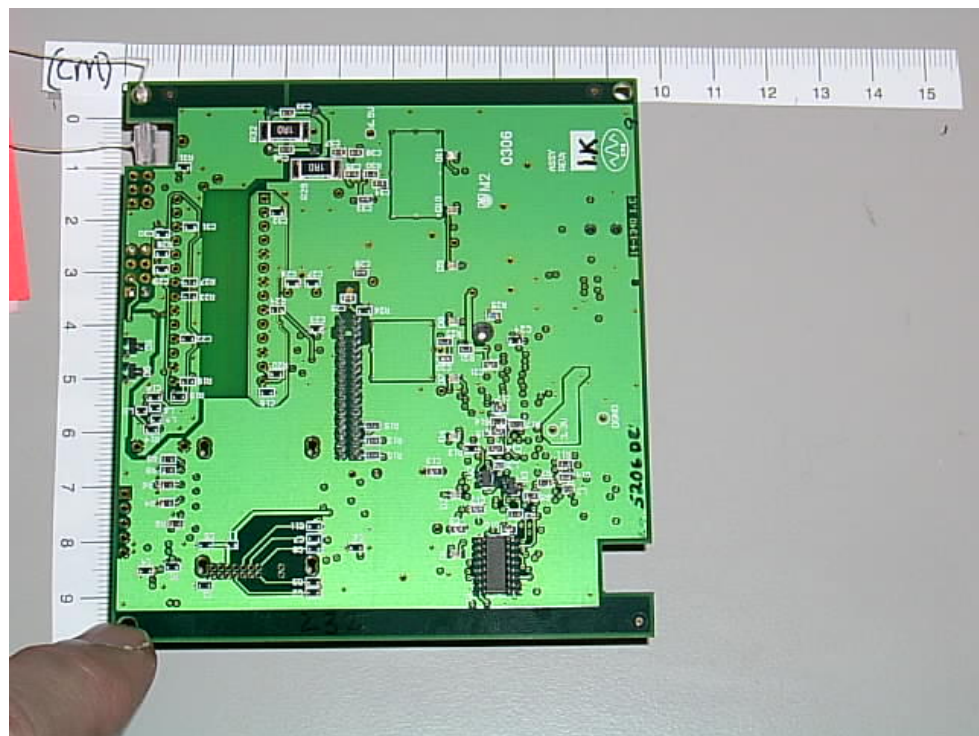


HF-CNTL-422-01 Digital Board (component view)

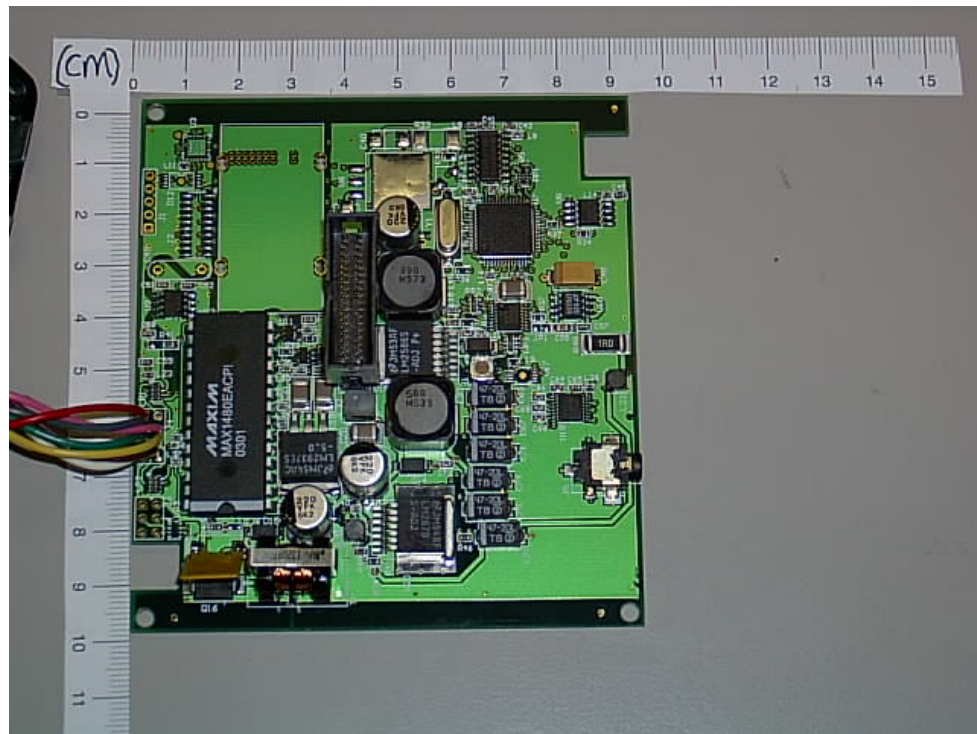


HF-CNTL-422-01 Digital Board (solder view)

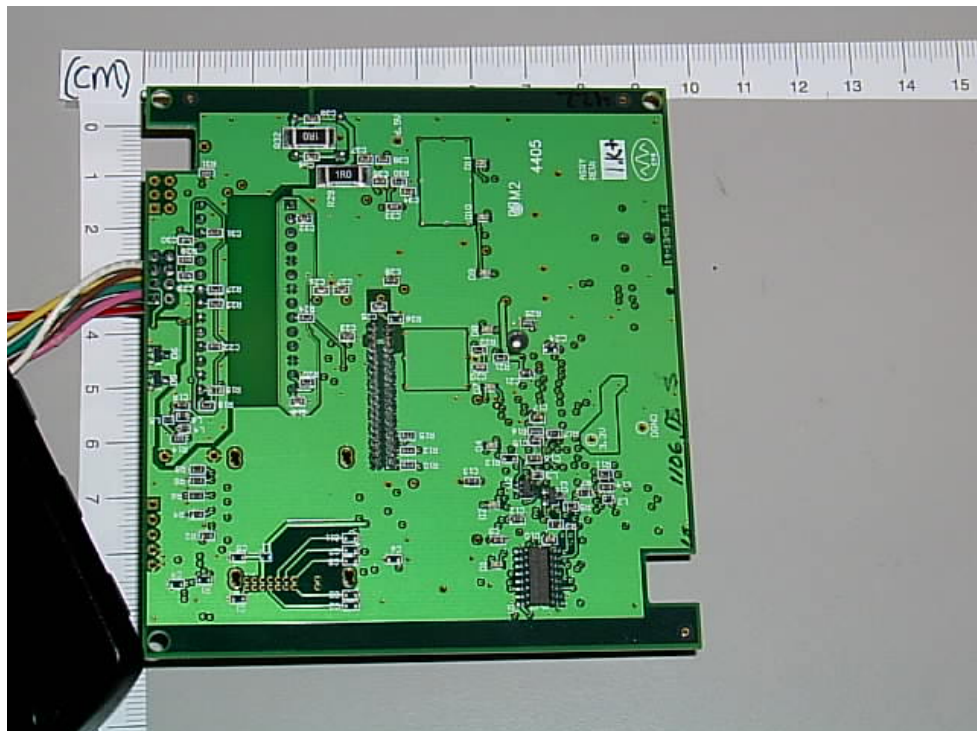


HF-CNTL-485-01 Digital Board (component view)

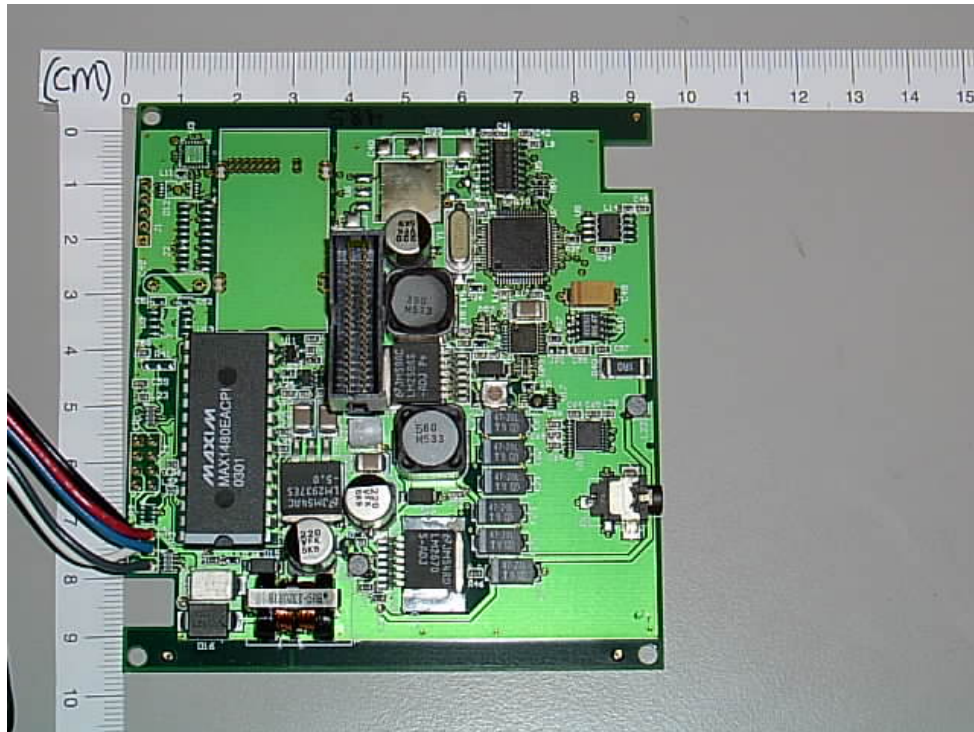


HF-CNTL-485-01 Digital Board (solder view)

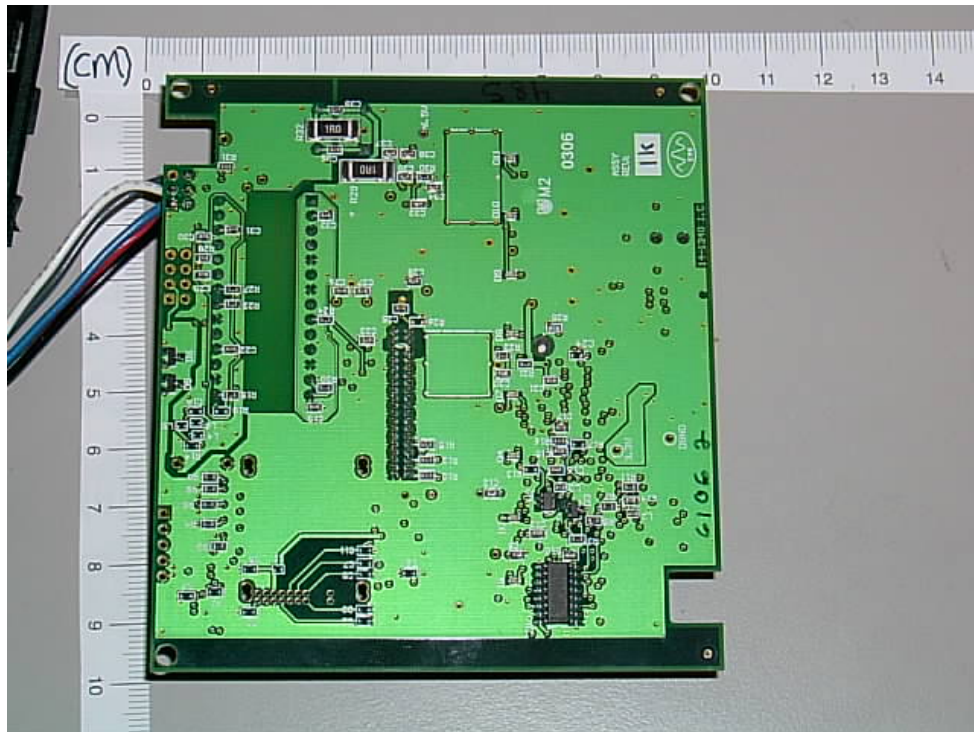


HF-CNTL-USB-01 Digital Board (component view)

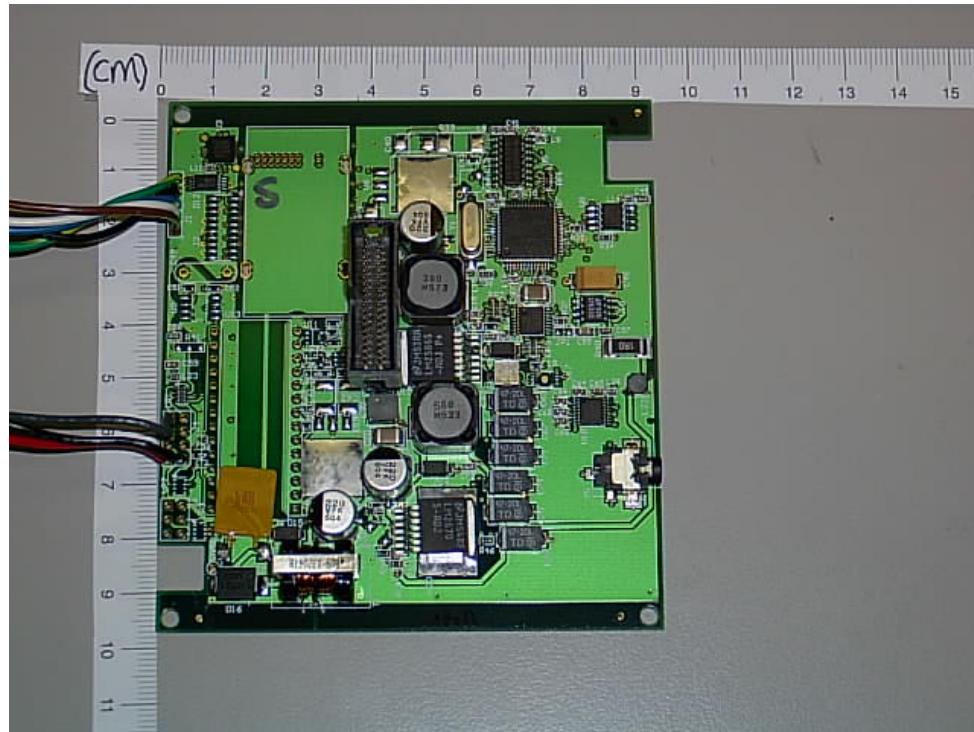


HF-CNTL-USB-01 Digital Board (solder view)

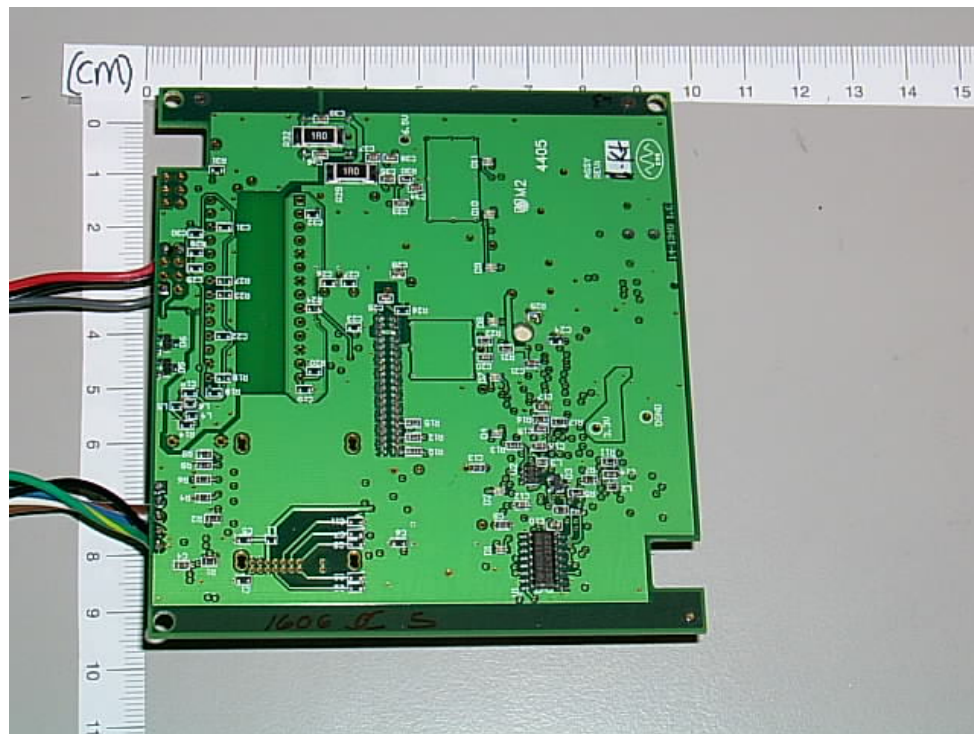


HF-CNTL-IND-01 Digital Board (component view)

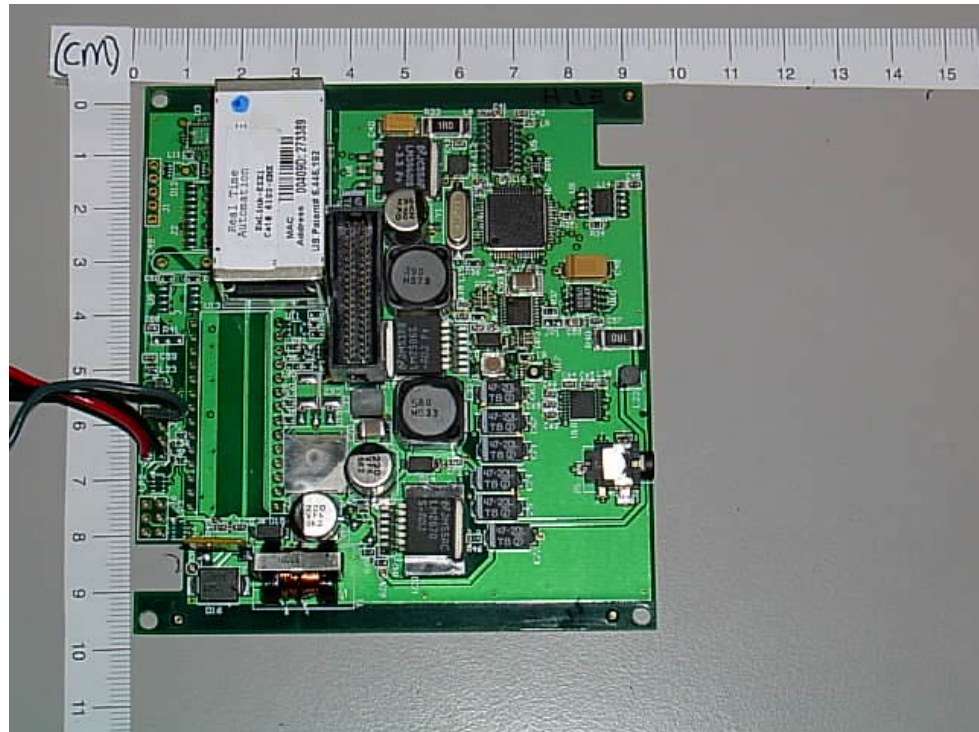


HF-CNTL-IND-01 Digital Board (solder view)

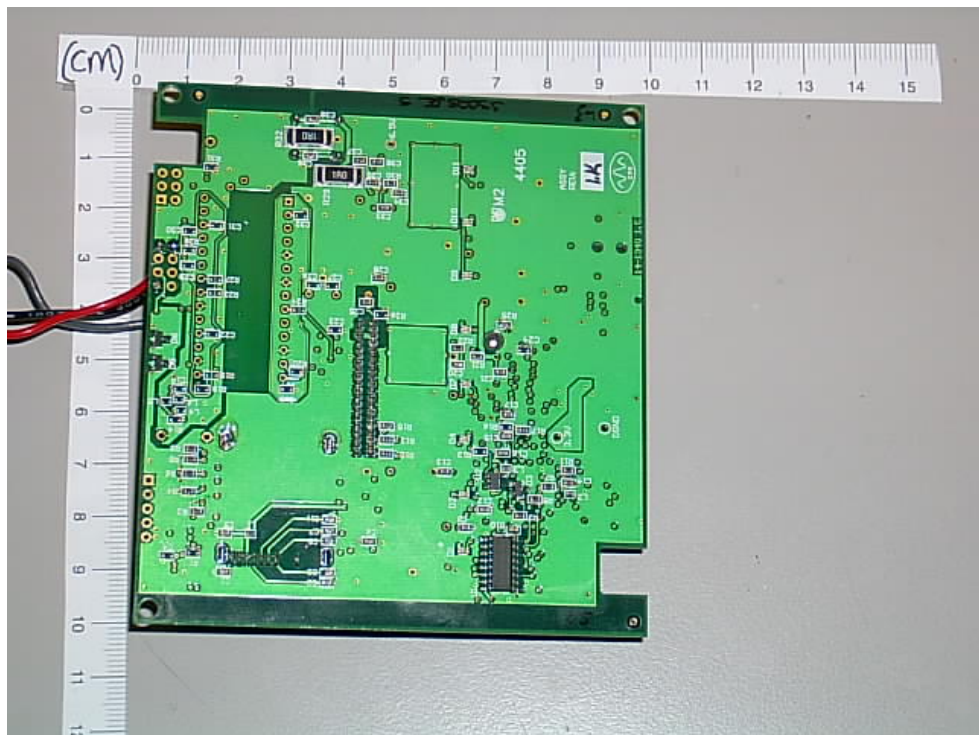


HF-CNTL-(232, 422, 485, USB, IND)-01 Radio Board (with top shield)

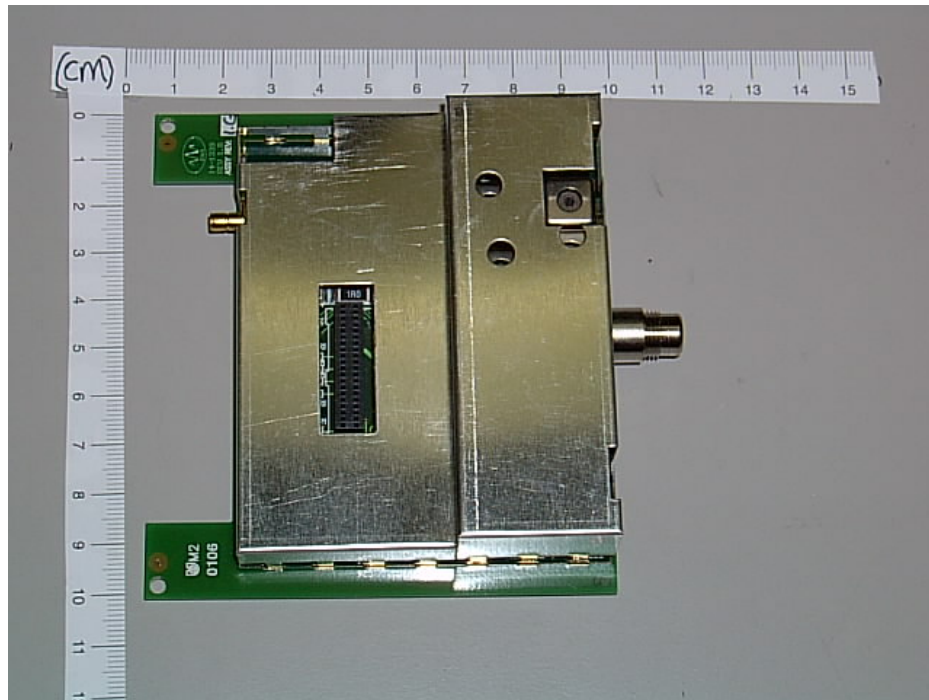

HF-CNTL-(232, 422, 485, USB, IND)-01 Radio Boards Top (without shield)

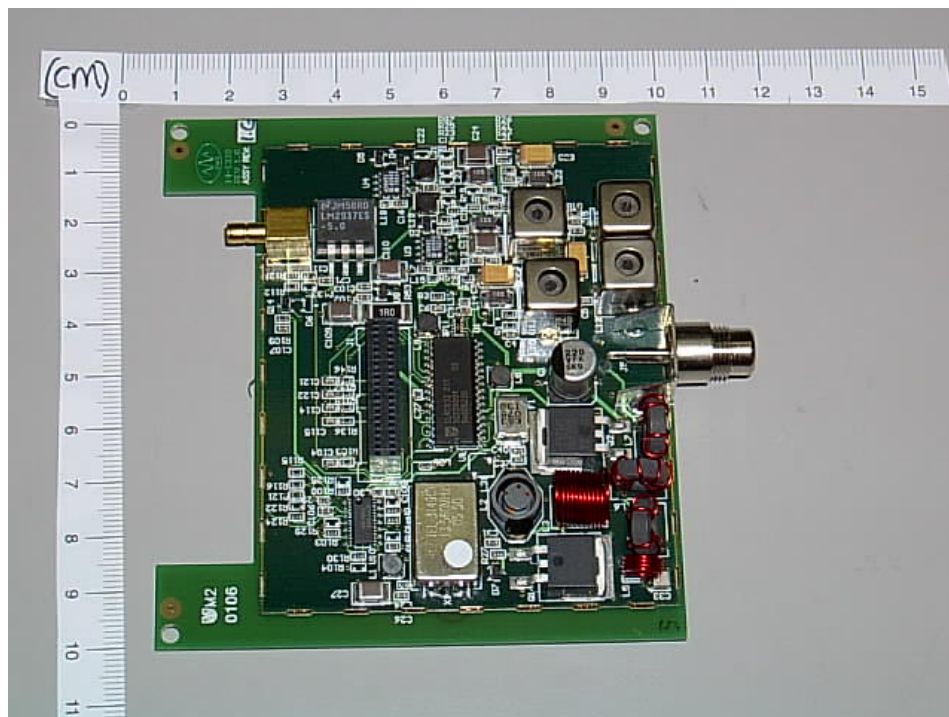

HF-CNTL-(232, 422, 485, USB, IND)-01 Radio Board Bottoms

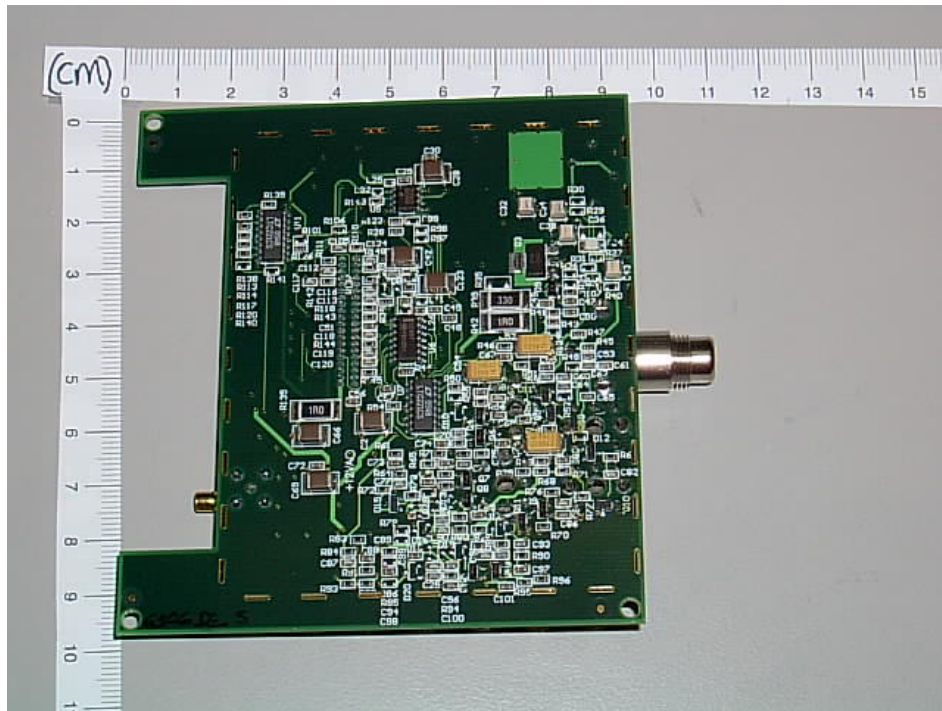

HF-CNTL-(232, 422, 485, USB, IND)-01 Antennas

