


2. User's manual (provisionally)

REMOTE TRANSMITTER

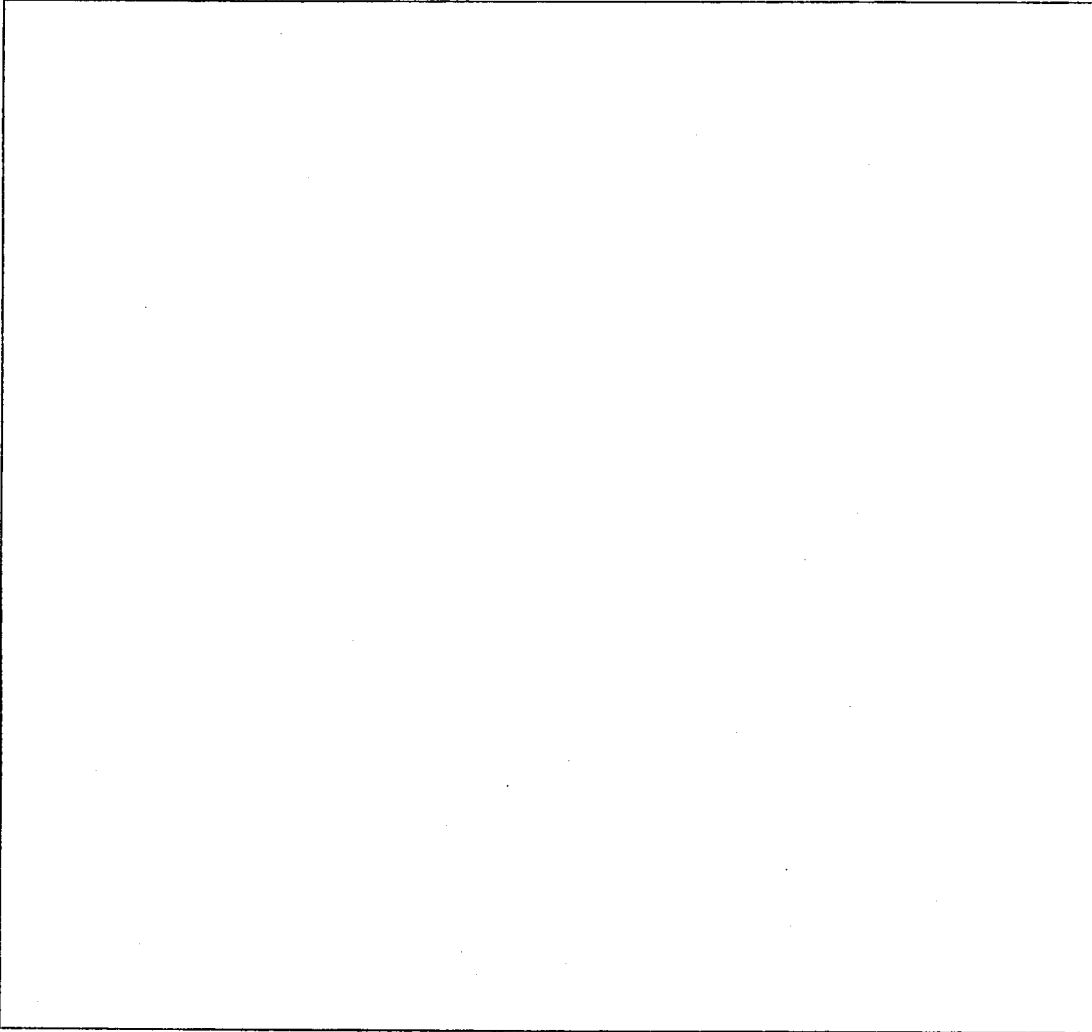

You can lock and unlock your vehicle with the remote transmitter.

LOCK

When you push the LOCK button, all the doors will lock.

You cannot lock any of the doors with the remote transmitter if any door is open or the key is in the ignition switch.

UNLOCK

When you push the UNLOCK button once, all the doors will unlock. If you unlock the doors with the remote transmitter, but do not open any of the doors within 30 seconds, the doors will automatically relocks.

You cannot unlock any of the doors with the remote transmitter if the key is in the ignition switch.

PANIC

Panic mode allows you to remotely sound's horn to attention. To activate this mode, press the PANIC button. Your vehicle's horn will beep for about 150 seconds.

To cancel Panic mode before 150 seconds, press any button on the remote transmitter.