


## 2. User's manual (provisionally)

### REMOTE TRANSMITTER (G8D-522M-A)

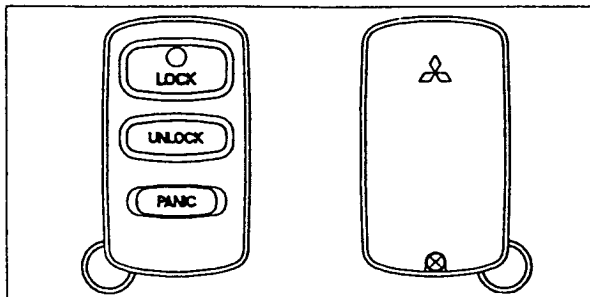

You can lock and unlock and anti-theft protection your vehicle with the remote transmitter.

#### LOCK

When you push the LOCK button, all the doors will lock.

You cannot lock any of the doors with the remote transmitter if any door is open or is in the ignition switch.

#### UNLOCK

When you push the UNLOCK button, all the doors will unlock.

If you unlock the doors with the remote transmitter, but do not open within 30 seconds, the doors will automatically relock.

You cannot unlock any of the doors with the remote transmitter if any door is open or key is in the ignition switch.

#### TRUNK (G8D-524M-A only)

When you push the TRUNK buttons, open the trunk.

#### PANIC (anti-theft protection)

When you push the PANIC button, when the vehicle disarming. Then start horn and flashing the hazard lamp intermittently. It continues 3 remote control switch.

### △ CAUTION

The remote control switch is a precision electronic device. Therefore pay attention following:

Do not impose shock on the remote control switch.

Keep the remote control switch dry.

Do not disassemble the remote control switch.

When the remote control switch is opened, keep water, dust, etc, off its inside. In addition,

do not touch the precision electronic device.