

# Appendix


- Optional Equipment..... Appendix-2
- Character Entry Method ..... Appendix-7
- Paper ..... Appendix-11
- Color balance adjustment..... Appendix-20
- Sharpness adjustment..... Appendix-21
- Color saturation adjustment..... Appendix-21
- Specifications..... Appendix-22
- Glossary ..... Appendix-27

---

## Optional Equipment

### Overview of Optional Equipment

The following optional equipment is available for the machine.

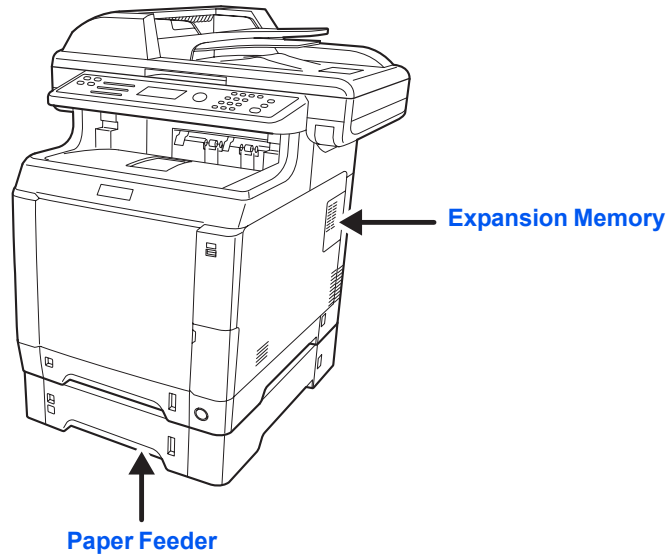

### Paper Feeder

Two additional cassettes identical to the machine's double cassettes can be installed in the machine. Paper capacity and loading method are the same as Cassettes 1.

---

**NOTE:** To allow paper to be removed when a paper jam occurs, there is a cover (rear cover) on the rear side of the paper feeder.

---

### Expansion Memory

To expand the printer memory for more complex print jobs and faster print speed, you can plug in optional memory module (dual in line memory module) in the memory slot provided on the main controller board. You can select additional memory module from 128, 256, 512 or 1024 MB. The maximum memory size is 1792 MB.

---


**NOTE:** The expansion memory should only be installed by your service technician. We shall not be liable for any damages caused by improper installation of expansion memory.

---


---

## Precautions for Handling the Memory Module

Correct


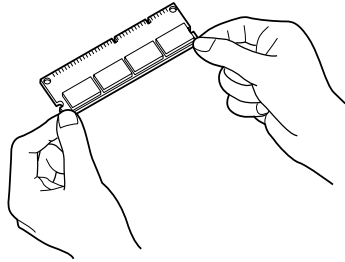


Incorrect

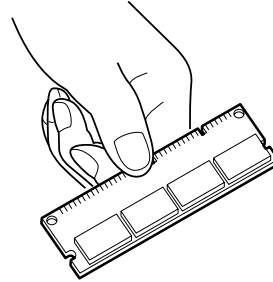

To protect electronic parts, discharge static electricity from your body by touching a water pipe (faucet) or other large metal object before handling the memory module. Or, wear an antistatic wrist strap, if possible, when you install the memory module.

## Installing the Memory Module

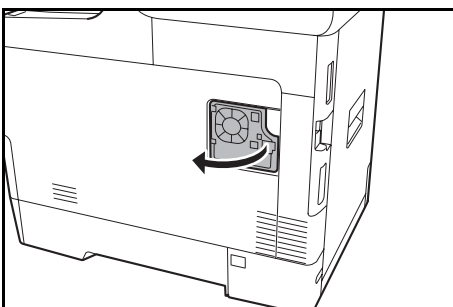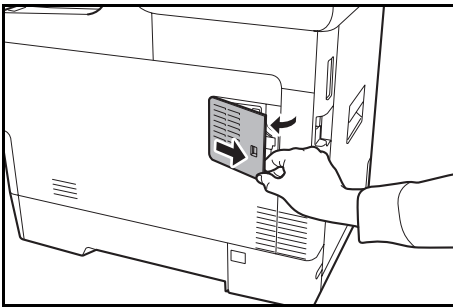


**1** Turn off the machine and disconnect the power cord and interface cable.

**2** Remove the right cover with a piece of metal similar to coin.

**3** Remove the screws and the memory slot cover as shown in the figure.

**4** Remove the memory module from its package.

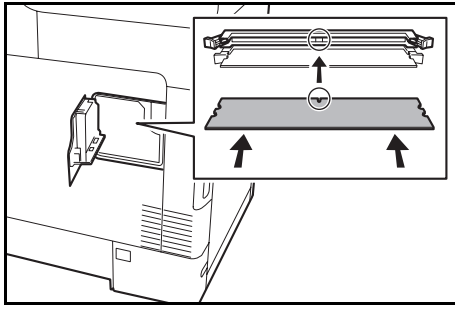

- 5 Aligning the cutouts of the memory module with the matching keys of the socket, carefully plug the memory module into the memory socket until it clicks in place. Then, push down the memory module to secure.

**CAUTION:** Before inserting a memory module in the machine, make sure that the machine is switched off.

- 6 Push down the memory module to secure.
- 7 Reinstall the right cover.

## Removing the Memory Module

To remove a memory module, remove the right cover and the memory slot cover from the machine. Then, carefully push out the two socket clamps. Ease the memory module out of the socket to remove.

## Verifying the expanded memory

To verify that the memory module is working properly, test it by printing a status page.

## Optional Functions

You can use the optional applications installed on this machine.

### Overview of the Applications


The applications listed below are installed on this machine.

You can use these applications for a limited period on a trial basis.


- UG33 (ThinPrint)

This application allows print data to be printed directly without a print driver.


**NOTE:** Restrictions such as the number of times the application can be used during the trial period differ depending on the application.

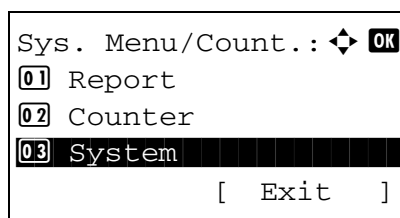


- 1 In the Sys. Menu/Count. menu, press the  $\Delta$  or  $\nabla$  key to select [System], and press the **OK** key.

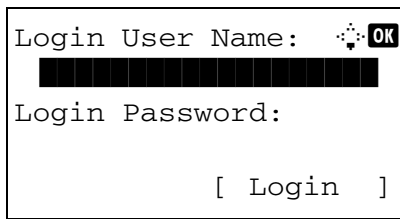

When you are performing user management and have not logged in, a login screen will appear. Then, enter the user ID and password to log in, and press [Login] (the **Right Select** key).

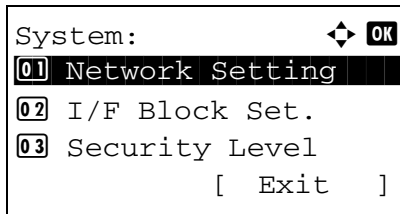


2 The System menu appears.

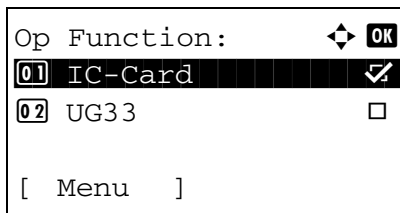


3 Press the  $\Delta$  or  $\nabla$  key to select [Op Function].

4 Press the **OK** key. The Op Function menu appears.

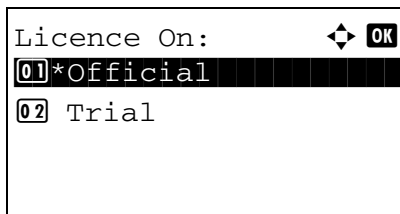

5 Press the  $\Delta$  or  $\nabla$  key to select desired application.

6 Press the **OK** key. The selected application menu appears.

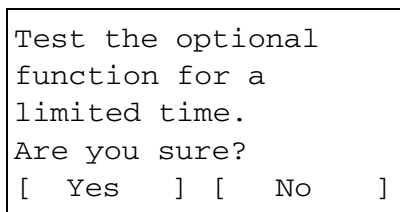

7 Press the  $\Delta$  or  $\nabla$  key to select [Official] or [Trial].

Some applications do not require you to enter a license key. If the license key entry screen does not appear, go to Step 8.

To use the application as a trial, press [Trial] without entering the license key.

If you select [Trial] and press the **OK** key, The confirmation screen appears. Press [Yes] (the **Right Select** key).

- 
- 8 *Licensed.* is displayed and the screen returns to the Op Function menu.

## Checking Application Details

Use the procedure below to check the details of an application.

```
Sys. Menu/Count. :  
01 Report
02 Counter
03 System
[ Exit ]
```

- 1 In the Sys. Menu/Count. menu, press the  $\Delta$  or  $\nabla$  key to select [System], and press the **OK** key.

```
Login User Name:   
Login Password:
[ Login ]
```

When you are performing user management and have not logged in, a login screen will appear. Then, enter the user ID and password to log in, and press [Login] (the **Right Select** key).

- 2 The System menu appears.

```
System:  
01 Network Setting
02 I/F Block Set.
03 Security Level
[ Exit ]
```

- 3 Press the  $\Delta$  or  $\nabla$  key to select [Op Function].

```
Op Function:  
01 IC-Card 
02 UG33 
[ Menu ]
```

- 4 Press the **OK** key. The Op Function menu appears.

- 5 Press [Menu] (the **Left Select** key).

```
Menu:  
01 Licence On
02 Detail
```

- 6 Press the  $\Delta$  or  $\nabla$  key to select [Detail]. The detail setting screen appears.

You can now view detailed information on the selected application.


---

## Character Entry Method

In character entry screens, use the procedure below to enter characters.

### Keys Used

Use the following keys to enter characters.

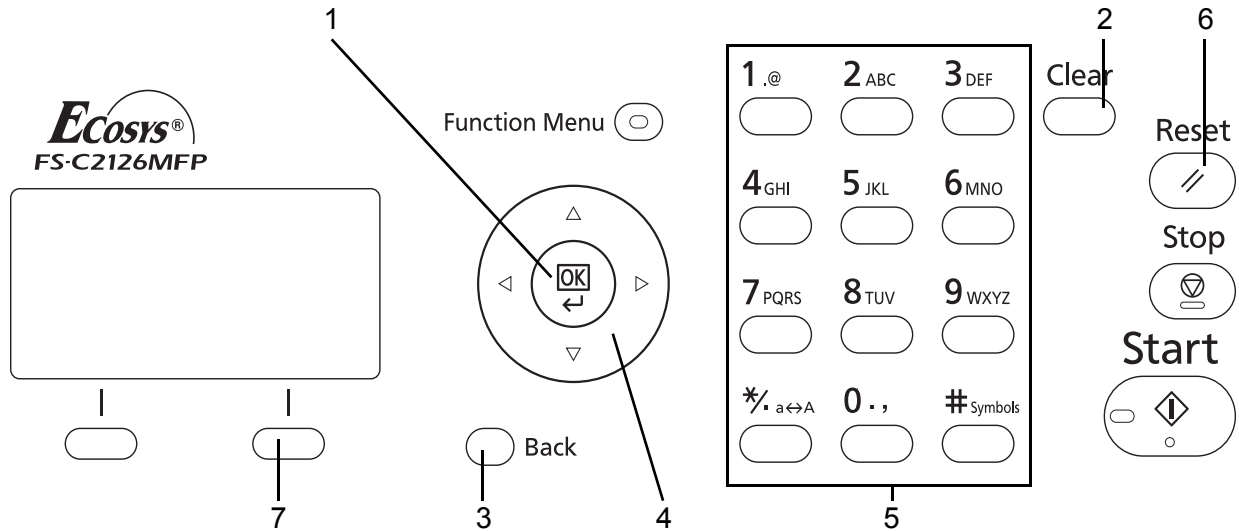


- 1. OK Key** Press this key to finalize the entered character(s).
- 2. Clear Key** Press this key to delete the character at the cursor position. If the cursor is at the end of the line, the character to the left of it is deleted.
- 3. Back Key** Press this key to return to the screen from which you invoked the character entry screen.
- 4. Cursor Keys** Use these to select the entry position, or select a character from the character list.
- 5. Numeric Keys** Use these keys to select the character you want to enter.
- 6. Reset Key** Press this key to cancel the character entry procedure and return to the standby screen.
- 7. Right Select Key** Press this key to select the type of characters you want to enter. (When [Text] is displayed)

---


## Selecting Type of Characters

To enter characters, the following three types are available:

- ABC** To enter alphabets.
- 123** To enter numerals.
- Symbols** To enter symbols.

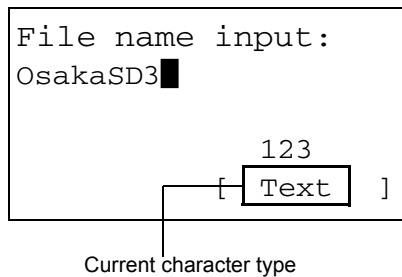

In a character entry screen, press [Text] (the **Right Select** key) to select the type of characters you want to enter.

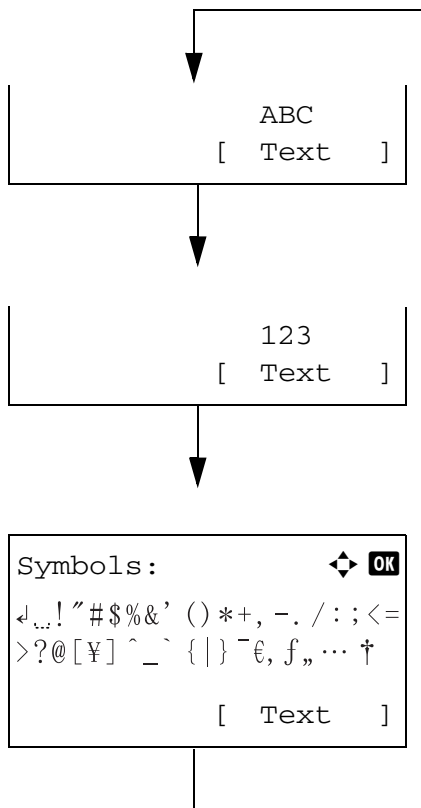

Each time you press [Text] (the **Right Select** key), the character type switches as follows: ABC, 123, Symbol, ABC ...

---

**NOTE:** By pressing  $\text{\#}$  on the numeric keys while entering characters, you can directly display the Symbols screen.

---















## Entering Characters

      After selecting a character type, use the procedure below to enter characters.

### Entering Alphabets and Numerals

Referring to the table below, press the key corresponding to the character you want to enter until it is displayed.

Key	Entry mode	Available characters
1. <sub>@</sub> 	Alphabetic/Symbol	. @ - _ / : ' 1
	Numeric	1
2 <sub>ABC</sub> 	Alphabetic/Symbol	a b c A B C 2
	Numeric	2
3 <sub>DEF</sub> 	Alphabetic/Symbol	d e f D E F 3
	Numeric	3
4 <sub>GHI</sub> 	Alphabetic/Symbol	g h i G H I 4
	Numeric	4
5 <sub>JKL</sub> 	Alphabetic/Symbol	j k l J K L 5
	Numeric	5
6 <sub>MNO</sub> 	Alphabetic/Symbol	m n o M N O 6
	Numeric	6
7 <sub>PQRS</sub> 	Alphabetic/Symbol	p q r s P Q R S 7
	Numeric	7
8 <sub>TUV</sub> 	Alphabetic/Symbol	t u v T U V 8
	Numeric	8
9 <sub>WXYZ</sub> 	Alphabetic/Symbol	w x y z W X Y Z 9
	Numeric	9
0. <sub>,</sub> 	Alphabetic/Symbol	. , - _ ' ! ? (space) 0
	Numeric	0
*/ <sub>a↔A</sub> 	Alphabetic/Symbol	Switch between upper-/lowercase
	Numeric	* or . (decimal point)*
# <sub>Symbols</sub> 	Alphabetic/Symbol	#
	Numeric	


\* '\*' is entered when [123] is selected in the character type selection, or '.' is entered when only numerals are entered and no character type is selected.

---

Characters associated with different keys can be entered consecutively. To enter a character associated with the same key after another, use cursor keys to move the cursor to the next entry position before entering it.

If you use cursor keys to move the cursor to an entry position apart from the end of the line and enter a character there, spaces are automatically entered in between.


### Entering Symbols

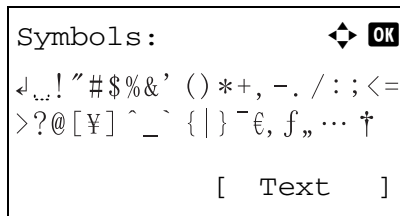

Press [Text] (the **Right Select** key) or # on the numeric keys to display the Symbols screen. Use cursor keys to select the symbol you want to enter and then press the **OK** key.

### Entry When [Select Character] Is Selected in Login Operation Settings

In the login screen that appears when user management is enabled, the character entry method may vary depending on the settings. (Refer to *Login Operation on page 8-59*.)

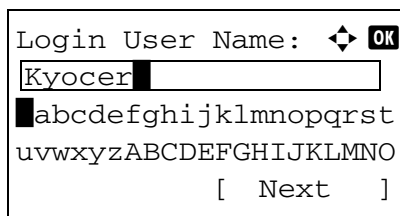

If a character palette appears on the screen, use cursor keys to select the desired character from the displayed characters, and then press the **OK** key to enter it.

---

**NOTE:** Numerals can be entered directly by pressing numeric keys.

---

---

## Paper

This section explains the paper sizes and types that can be used in the paper source.

### Cassette

Supported types	Supported paper sizes	No. of sheets
Plain, Preprinted, Bond, Recycled, Letterhead, Color (Colour), Prepunched, High Quality, Custom 1 to 8	A4, JIS B5, A5, Folio, Legal, Letter, Oficio II, Statement, Executive, A6, B6, ISO B5, Envelope C5, 16K, Custom (105 x 148 to 216 x 356mm (4-1/8 x 5-13/16 to 8-1/2 x 14 inches)	250 (80g/m <sup>2</sup> )

### Optional paper feeder

Supported types	Supported paper sizes	No. of sheets
Plain, Preprinted, Bond, Recycled, Letterhead, Color (Colour), Prepunched, High Quality, Custom 1 to 8	A4, JIS B5, A5, Folio, Legal, Letter, Oficio II, Executive, B6, ISO B5, Envelope C5, 16K, Custom (148 x 210 to 216 x 356mm (5-13/16 x 8-5/16 to 8-1/2 x 14 inches)	500 (80g/m <sup>2</sup> )

### Multi Purpose tray (MP tray)

Supported types	Supported paper sizes	No. of sheets
Plain, , Preprinted, Labels, Bond, Recycled, Vellum, Letterhead, Color (Colour), High Quality, Custom 1 to 8	Letter, Legal, Statement, Executive, Oficio II, A4, A5, A6, B5, B6, Folio, 16k  Other sizes: Portrait-2.76 to 8.50" or 70 to 216 mm Landscape-5.83 to 14.02" or 148 to 356 mm	50 (80g/m <sup>2</sup> )
Thick paper	A4, JIS B5, A5, Folio, Legal, Letter, Oficio II, Statement, Executive, A6, B6, ISO B5, 16K  Other sizes: Portrait-2.76 to 8.50" or 70 to 216 mm Landscape-5.83 to 14.02" or 148 to 356 mm	1
Postcards Oufuku Hagaki (return postcard)	Postcards (100 × 148 mm) Return postcard (148 × 200 mm)	15

---

<b>Supported types</b>	<b>Supported paper sizes</b>	<b>No. of sheets</b>
Envelopes	ISO B5, Envelope #10, Envelope #9, Envelope #6, Envelope Monarch, Envelope DL, Envelope C5, Hagaki, Oufuku Hagaki, Youkei 4, Youkei 2  Other sizes: Portrait-2.76 to 8.50" or 70 to 216 mm Landscape-5.83 to 14.02" or 148 to 356 mm	5
Transparency (OHP film)	Letter, A4	1

---

## Basic Paper Specifications

This machine is designed to print on standard copy paper as used in regular ('dry') copiers and page printers such as laser printers. It also supports a variety of other types of paper that conform to the specifications given in this appendix.

Be careful when choosing paper. Paper unsuitable for the machine may cause jams or may be wrinkled.

### Supported Paper

Use standard copy paper for regular copiers or laser printers. The printing quality will be affected by the quality of paper. Poor quality paper may result in unsatisfactory output.

### Basic Paper Specifications

The following table lists the specifications of paper that is supported with this machine. Refer to the subsequent sections for further details.

Criteria	Specifications
Weight	Cassettes: 60 to 163 g/m <sup>2</sup>
	Multi purpose tray: 60 to 220 g/m <sup>2</sup>
Thickness	0.086 to 0.110 mm
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°
Moisture content	9%
Grain direction	Long grain (paper supply direction)
Pulp content	80% or more

---

**NOTE:** Some recycled paper does not meet requirements for use with this machine as listed in the Basic Paper Specifications shown below, such as moisture or pulp content. For this reason, we recommend purchasing a small amount of recycled paper as a sample for testing prior to use. Choose recycled paper that gives the best printing results and contains low levels of paper dust.

---

We are not responsible for the problems occurred from the use of paper that does not conform to our specifications.

---

## Choosing the Appropriate Paper

This section describes guidelines for choosing paper.

### Condition

Avoid using paper with bent corners or that is curled, dirty, or torn. Do not use paper that has a rough surface or paper fiber lint, or that is especially delicate. Use of paper in any of these conditions will not only deliver poor copies but may also cause jams and shorten the useful life of the machine. Choose paper with a smooth and even surface; however, avoid coated paper or paper with a treated surface as it may damage the drum or fusing unit.

### Ingredient

Do not use paper such as paper that has been coated or surface-treated or paper that contains plastic or carbon. These paper may produce harmful fumes from the heat of printing and may damage the drum.

Be sure to use the standard paper that contains at least 80% pulp, i.e., not more than 20% of the total paper content consists of cotton or other fibers.

### Supported Paper Sizes

Paper of the following sizes is supported by the machine.

Measurements in the table take into account a  $\pm 0.7$  mm dimensional accuracy for length and width. Corner angles must be  $90^\circ \pm 0.2^\circ$ .

Multi Purpose Tray	Cassette or Multi Purpose Tray
B6 (128 × 182 mm)	Letter
ISO B5 (176 × 250 mm)	Legal
Envelope #10 (Commercial #10) (4 1/8 × 9 1/2")	Statement
Envelope #9 (Commercial #9) (3 7/8 × 8 7/8")	Executive
Envelope #6 (Commercial #6 3/4) (3 5/8 × 6 1/2")	Oficio II
Envelope Monarch (3 7/8 × 7 1/2")	A4 (297 × 210 mm)
Envelope DL (110 × 220 mm)	A5 (210 × 148 mm)
Envelope C5 (162 × 229mm)	A6 (105 × 148 mm)
Hagaki (100 × 148mm)	B5 (257 × 182 mm)
Oufuku Hagaki (148 × 200 mm)	Folio (210 × 330 mm)
Youkei 4 (105 × 235 mm)	16K (273 × 197 mm)
Youkei 2 (114 × 162 mm)	
Size Entry (70 × 148 to 216 × 356 mm)	

---

## Smoothness

The paper surface should be smooth, but it must be uncoated. With paper that is too smooth and slippery, several sheets may accidentally be supplied at once, causing jams.

## Basis Weight

In countries that use the metric system, basis weight is the weight in grams of one sheet of paper one square meter in area. In the United States, basis weight is the weight in pounds of one ream (500 sheets) of paper cut to the standard size (or trade size) for a specific grade of paper. Paper that is too heavy or too light may be supplied incorrectly or cause paper jams, which may cause excessive wear of the machine. Mixed paper weight (i.e., thickness) may cause several sheets to be supplied at once accidentally and may also cause blurring or other printing problems if the toner fails to adhere correctly.

The recommended basis weight is between 60 and 163 g/m<sup>2</sup> for the cassettes and between 60 and 220 g/m<sup>2</sup> for the multi purpose tray.

## Thickness

Avoid using paper that is too thick or thin. Signs that paper may be thin include frequent problems with paper jams or with several sheets being supplied at once. Paper jams may also indicate that the paper is too thick. The proper thickness is between 0.086 and 0.110 mm.

## Moisture Content

Paper moisture content is the ratio of moisture to dryness expressed as a percentage. Moisture affects how the paper is supplied, the electrostatic changeability of the paper, and how the toner adheres.

Paper moisture content varies depending on the relative humidity in the room. High relative humidity causes paper to become damp, making the edges expand so it appears wavy. Low relative humidity causes paper to lose moisture, making the edges tighten and weakening print contrast.

Wavy or tight edges may cause the paper to slip when it is supplied. Try to keep the moisture content between 4 to 6%.

To maintain the right level of moisture content, bear in mind the following considerations.

- Store paper in a cool, well-ventilated place.
- Store paper flat and unopened in the package. Once the package is opened, reseal it if the paper is not to be used for a while.
- Store paper sealed in the original package and box. Put a pallet under the carton to keep it raised above the floor. Especially during rainy seasons keep the paper a sufficient distance away from wooden or concrete floors.
- Before using paper that has been stored, keep it at the proper moisture level for at least 48 hours.
- Do not store paper where it is exposed to heat, sunlight, or dampness.

## Other Paper Specifications

**Porosity:** The density of the paper fibers

**Stiffness:** Paper must be stiff enough or it may buckle in the machine, causing jams.

---

**Curl:** Most paper naturally tends to curl after the package is opened. When paper passes through the fixing unit, it curls upward slightly. To deliver flat printouts, load the paper so that the curl faces towards the bottom of the paper tray.

**Static electricity:** During printing, paper is electrostatically charged so that the toner adheres. Choose paper that can be discharged quickly so that copies do not cling together.

**Whiteness:** Paper whiteness affects print contrast. Use whiter paper for sharper, brighter copies.

**Quality:** Machine problems may occur if sheet sizes are not uniform or if corners are not square, edges are rough, sheets are uncut, or edges or corners are crushed. In order to prevent these problems, be especially careful when you cut the paper yourself.

**Packaging:** Choose paper that is properly packaged and stacked in boxes. Ideally, the packaging itself should have been treated with a coating to inhibit moisture.

**Specially treated paper:** We do not recommend printing onto the following types of paper, even if it conforms to the basic specifications. When you use these kinds of paper, purchase a small amount first as a sample to test.

- Glossy paper
- Watermarked paper
- Paper with an uneven surface
- Perforated paper

## Special Paper

This section describes printing onto special paper and print media.

The following paper and media can be used.

- Transparency (OHP film)
- Vellum
- Labels
- Recycled
- Preprinted
- Bond
- Cardstock
- Color (Colour)
- Prepunched
- Letterhead
- Envelope
- Thick
- High Quality
- Custom 1 to 8

When using these paper and media, choose that are designed specifically for copiers or page printers (such as laser printers). Use the multi purpose tray for transparencies, thick paper, envelopes, cardstocks, and label paper.



---

## Choosing Special Paper

Although special paper that meets the following requirements can be used with the machine, print quality will vary considerably due to differences in the construction and quality of special paper. Thus, special paper is more likely than regular paper to cause printing problems. Before purchasing special paper in volume, try testing a sample to ensure the print quality is satisfactory. General precautions when printing onto special paper are given below. Note that we are not responsible for any harm to the user or damage to the machine caused by moisture or specifications of special paper.

Select a cassette or multi purpose tray for special paper.

### Transparency (OHP film)


Transparencies must be able to withstand the heat of printing. Transparencies must meet the following conditions.

Criteria	Specifications
Heat resistance	Must withstand at least 190°C
Thickness	0.100 to 0.110 mm
Material	Polyester
Dimensional accuracy	±0.7 mm
Squareness of corners	90° ±0.2°

To avoid problems, use the multi purpose tray for transparencies and load transparencies with the long side facing the machine.

If transparencies jam frequently at output, try pulling the leading edge of sheets gently as they are ejected.

### Cardstock

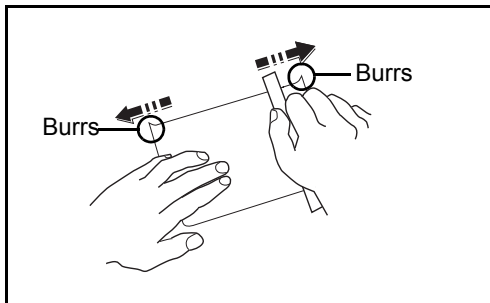

Before loading Hagaki into the multi purpose tray, fan them and align the edges. If the Hagaki paper is curled, straighten it before loading. Printing onto curled Hagaki may cause jams.

Use unfolded Oufuku Hagaki (available at post offices). Some Hagaki may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges by placing the Hagaki on a flat surface and rubbing the edges gently a few times with a ruler.

---

## Envelopes

Use the multi purpose tray for envelopes.

Due to the structure of envelopes, printing evenly over the entire surface may not be possible in some cases. Thin envelopes in particular may be wrinkled by the machine in some cases as they pass through. Before purchasing envelopes in volume, try testing a sample to ensure the print quality.

Storing envelopes for a long period may cause them to become wrinkled. Thus, keep the package sealed until you are ready to use them.

Keep the following points in mind.

Do not use envelopes with exposed adhesive. In addition, do not use the type of envelope in which the adhesive is exposed after the top layer is peeled off. Serious damage may be caused if the paper covering the adhesive comes off in the machine.

Do not use envelopes with certain special features. For example, do not use envelopes with a grommet for winding a string to close the flap or envelopes with an open or film-covered window.

If paper jams occur, load fewer envelopes at once.

To prevent paper jams when printing onto multiple envelopes, do not allow more than ten envelopes remain in the top tray at once.

## Thick Paper

Before loading thick paper in the multi purpose tray, fan it and align the edges. Some thick paper may still have rough edges developed by a paper cutter on the back side. Remove any such rough edges just as with Hagaki by placing the paper on a flat surface and rubbing the edges gently a few times with a ruler. Printing onto paper with rough edges may cause jams.

---

**NOTE:** If the paper is not supplied correctly even after it is smoothed, load the paper in the multi purpose tray with the leading edge raised a few millimeters.


---

## Label

Be sure to feed labels from the multi purpose tray.

For selecting labels, use extreme care so that the adhesive may not come in direct contact with any part of the machine and that the labels are not easily peeled from the carrier sheet. Adhesives that stick to the drum or rollers and peeled labels remaining in the machine may cause a failure.


When printing onto labels, you must be liable for the print quality and possible trouble.

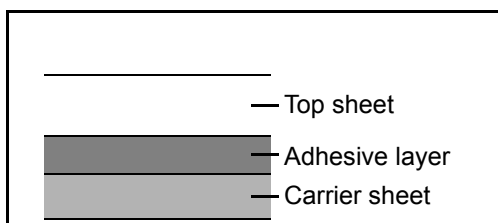

Labels consist of three layers as shown in the illustration. The adhesive layer contains materials that are easily affected by the force applied in the machine. The carrier sheet bears the top sheet until the label is used. This composition of labels may cause more problems.

The label surface must be covered completely with the top sheet. Gaps between labels may cause peeling of labels, resulting in a serious failure.

Some label paper has large margins on the top sheet. When using such paper, do not peel these margins from the carrier sheet before completing output.

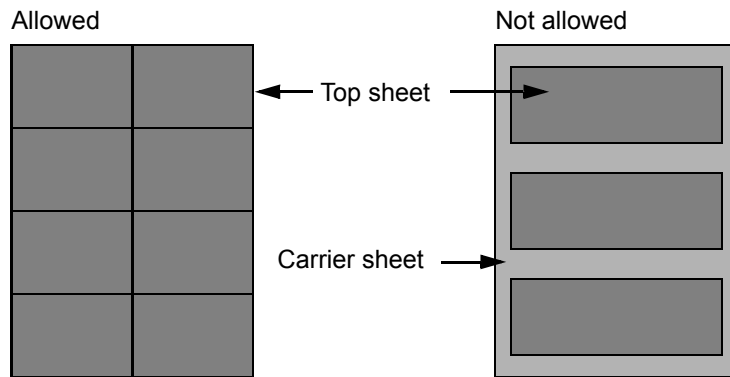

Use label paper that conforms to the following specifications.

Item	Specifications
Top sheet weight	44 to 74 g/m <sup>2</sup>
Basis weight (overall paper weight)	104 to 151 g/m <sup>2</sup>
Top sheet thickness	0.086 to 0.107 mm
Overall paper thickness	0.115 to 0.145 mm
Moisture content	4 to 6 % (composite)

### Colored Paper

Colored paper must conform to the specifications listed on the page 13 of the Appendix. In addition, the pigments in the paper must be able to withstand the heat of printing (up to 200°C or 392°F).

### Preprinted Paper

Preprinted paper must conform to the specifications listed on the page 11 of the Appendix. The colored ink must be able to withstand the heat of printing. It must be resistant to silicone oil as well. Do not use paper with a treated surface such as glossy paper used for calendars.

### Recycled Paper


Recycled paper must conform to the specifications listed on the page 13 of the Appendix; however, its whiteness may be considered separately.

**NOTE:** Before purchasing recycled paper in volume, try testing a sample to ensure that the print quality.

---

## Color balance adjustment


Adjust the strength of cyan, magenta, yellow, and black to make fine hue adjustments. (Refer to the Operation Guide for configuration details)

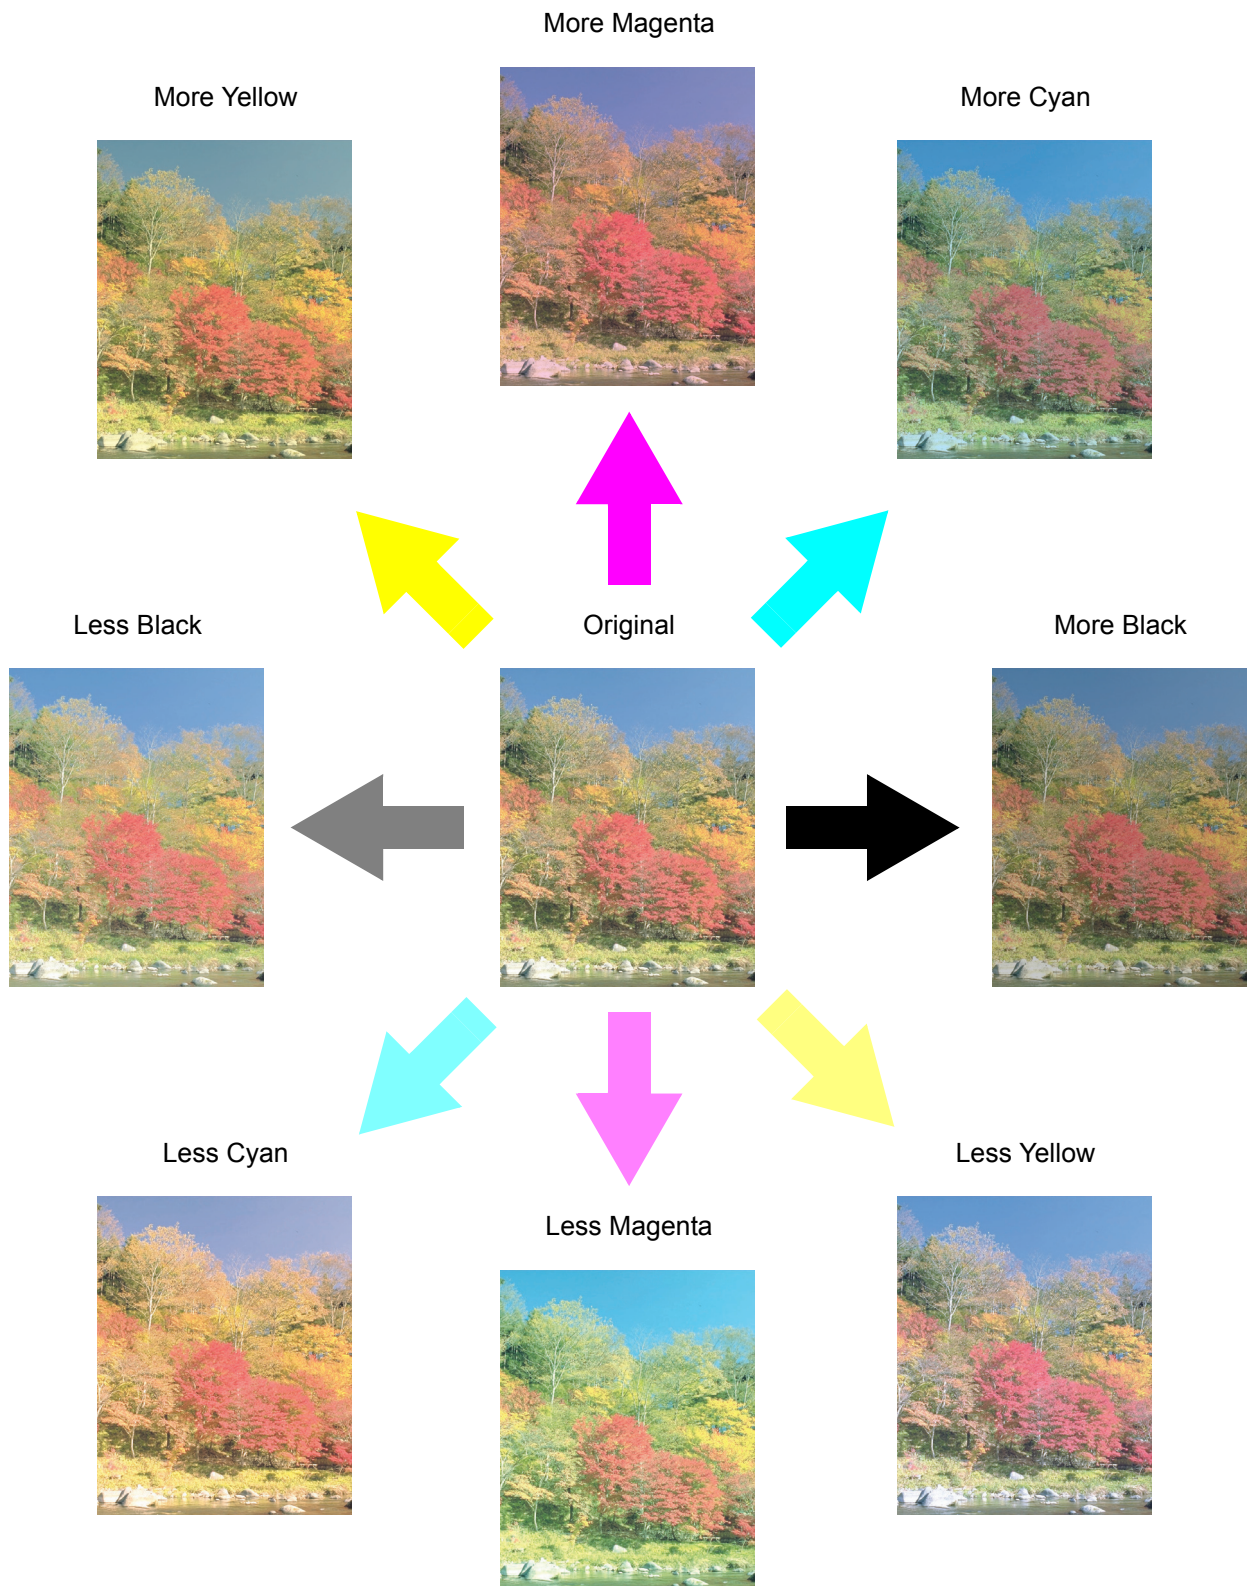

---


## Sharpness adjustment

Adjust the sharpness of image outlines. (Refer to the Operation Guide for configuration details)

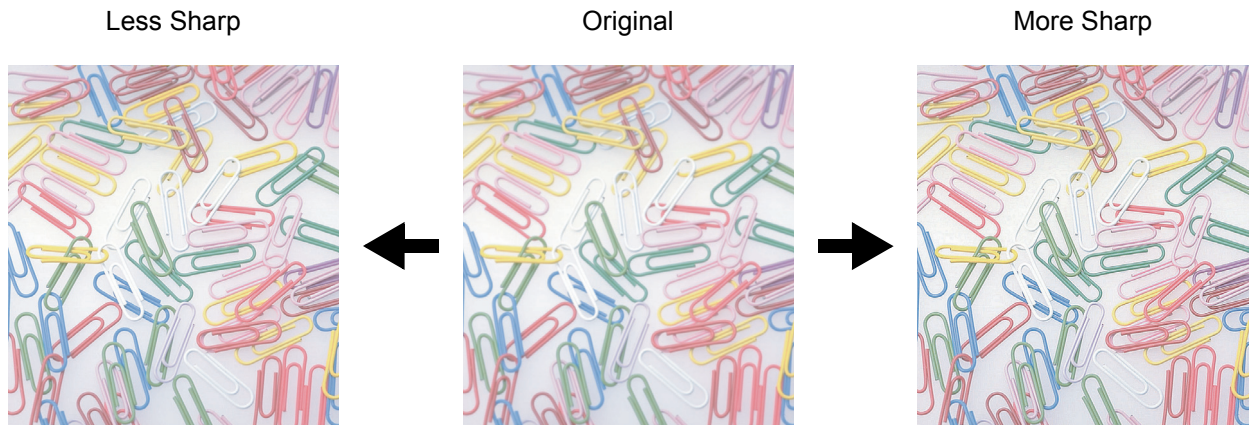

## Color saturation adjustment

The color saturation of the image can be adjusted. Color can be emphasized, or color can be made paler and closer to a monotone.

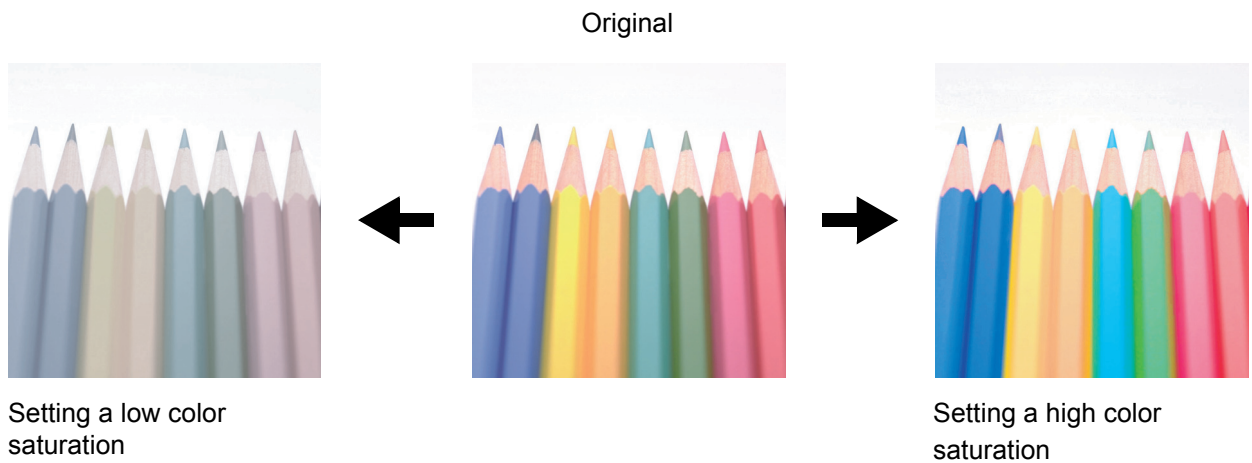

## Specifications

**NOTE:** Specifications are subject to change without notice.

### Machine

Item	Description	
	FS-C2026MFP	FS-C2126MFP
<b>Type</b>	Desktop	
<b>Printing Method</b>	Electrophotography by semiconductor laser, single drum system	
<b>Supported Original Types</b>	Sheet, Book, 3-dimensional objects (maximum original size: Folio/Legal)	
<b>Original Feed System</b>	Fixed	
<b>Paper Weight</b>	<b>Front Cassette</b>	60 to 163 g/m <sup>2</sup> (Duplex: 60 to 163 g/m <sup>2</sup> )
	<b>Multi Purpose Tray</b>	60 to 220 g/m <sup>2</sup> , 230 µm (Cardstock)
<b>Paper Type</b>	<b>Front Cassette</b>	Plain, Recycled, Preprinted, Bond, Color (Colour), Prepunched, Letterhead, High Quality, Custom 1 to 8 (Duplex: Same as Simplex)
	<b>Multi Purpose Tray</b>	Plain, Transparency (OHP film), Vellum, Labels, Recycled, Preprinted, Bond, Cardstock, Color (Colour), Prepunched, Letterhead, Thick, Envelope, High Quality, Custom 1 to 8
<b>Paper Size</b>	<b>Front Cassette</b>	Maximum: 8 1/2 × 14"/A4 (Duplex: 8 1/2 × 14"/A4) Minimum: 5 1/2 × 8 1/2"/A6 (Duplex: 7 1/4 × 10 1/2"/A5)
	<b>Multi Purpose Tray</b>	Maximum: 8 1/2 × 14"/A4 Minimum: 3 5/8 × 6 1/2"/B6
<b>Zoom Level</b>	Manual mode: 25 to 400%, 1% increments Fixed magnifications: 400%, 200%, 141%, 129%, 115%, 90%, 86%, 78%, 70%, 64%, 50%, 25%	
<b>Printing Speed</b>	<b>Simplex</b>	A4R: 26 sheets/min Legal: 23 sheets/min A5R/A6R: 28 sheets/min LetterR: 28 sheets/min B5R: 28 sheets/min
	<b>Duplex</b>	A4R: 13 sheets/min Legal: 13 sheets/min LetterR: 13 sheets/min
<b>First Print Time (A4, feed from Cassette)</b>	<b>Black &amp; White</b>	When using the document processor: 11 ± 0.5 seconds When the document processor is not used: 10 ± 0.5 seconds
	<b>Color</b>	When using the document processor: 13 ± 0.5 seconds When the document processor is not used: 12 ± 0.5 seconds

Item		Description	
		FS-C2026MFP	FS-C2126MFP
Warm-up Time (22°C/ 71.6°F,60%)	Power on	25 seconds	
	Sleep	20 seconds	
Paper Capacity	Front Cassette	250 sheets (80 g/m <sup>2</sup> )	
	Multi Purpose Tray	50 sheets (80 g/m <sup>2</sup> , plain paper, A4/Letter or less)	
Output Tray Capacity		250 sheets (80 g/m <sup>2</sup> )	
Continuous Copying		1 to 999 sheets (can be set in one sheet increments)	
Image Write System		Semiconductor laser (1 beam)	
Main Memory		Standard: 768MB Maximum: 1792MB	
Interface	Standard	USB Interface Connector: 1 (USB Hi-Speed) USB Host: 2 Network interface: 1 (10 BASE-T/100 BASE-TX)	
	Option	KUIO/W slot: 1, KUIO-G2: 1	
Resolution		600 × 600 dpi	
Operating Environment	Temperature	10 to 32.5°C/50 to 90.5°F	
	Humidity	15 to 80 %	
	Altitude	8,200 feet/2,500 m or less	
	Brightness	1,500 lux or less	
Dimension (W × D × H)		20 15/64 × 21 42/64 × 22 53/64" 514 × 550 × 580 mm	20 15/64 × 21 42/64 × 22 53/64" 514 × 550 × 580 mm
Weight (with toner container)		73.85 lb/33.5 kg	73.85 lb/33.5 kg
Space Required (W × D)		20 15/64 × 40 5/32" 514 × 1020 mm (with Multi Purpose Tray expanded)	
Power Requirement		120 V (60 Hz, more than 7.8 A) 220 to 240V (50/60 Hz, more than 14.0 A)	
Power Consumption	During printing	479.9 W (U.S.A./Canada), 470 W (European countries)	498 W (U.S.A./Canada), 484 W (European countries)
	During standby	83.8 W (U.S.A./Canada), 83.4 W (European countries)	91.8 W (U.S.A./Canada), 90 W (European countries)
	Sleep mode	8.0 W (U.S.A./Canada), 8.8 W (European countries)	10.5 W (U.S.A./Canada), 11.1 W (European countries)
	Power off	0 W	

Item	Description	
	FS-C2026MFP	FS-C2126MFP
Options	Paper feeder (up to 2 units)	

## Printer

Item		Description
Printing Speed		Same as Copying Speed.
First Print Time (A4, feed from Cassette)		Black & White: 9.0 seconds or less Color: 10.5 seconds or less
Resolution		600 dpi
Operating System		Windows 2000, Windows XP, Windows XP Professional, Windows Server 2003, Windows Server 2003 x64 Edition, Windows Vista x86 Edition, Windows Vista x64 Edition, Windows 7 x86 Edition, Windows 7 x64 Edition, Windows Server 2008, Windows Server 2008 x64 Edition, Apple Macintosh OS 10.x
Interface	Standard	USB Interface Connector: 1 (USB Hi-Speed) USB Host: 2 Network interface: 1 (10 BASE-T/100 BASE-TX)
Page Description Language		PRESCRIBE



## Scanner

Item	Description
<b>Operating System</b>	Windows 2000 (Service Pack 4), Windows XP, Windows Vista, Windows 7, Windows Server 2003, Windows Server 2008
<b>System requirements</b>	IBM PC/AT compatible CPU: Celeron 600Mhz or higher RAM: 128MB or more HDD free space: 20MB or more Interface: Ethernet
<b>Resolution</b>	600 dpi, 400 dpi, 300 dpi, 200 dpi
<b>File Format</b>	JPEG, TIFF, PDF, XPS
<b>Scanning Speed *1</b>	1-sided: B/W 25 Images/min Color 13 Images/min 2-sided: B/W 13 Images/min Color 7 Images/min (A4 landscape, 600 dpi, Image quality: Text/Photo original)
<b>Interface</b>	Ethernet (10 BASE-T/100 BASE-TX) USB 2.0 (Hi-Speed USB)
<b>Network Protocol</b>	TCP/IP
<b>Transmission System</b>	PC transmission      SMB      Scan to SMB FTP      Scan to FTP, FTP over SSL E-mail transmission    SMTP    Scan to E-mail TWAIN scan*1 WIA scan*2

\*1 Available Operating System : Windows 2000 (Service Pack 4), Windows XP, Windows Vista, Windows Server 2008, Windows 7

\*2 Available Operating System : Windows Vista, Windows Server 2008, Windows 7

---

## Document Processor

Item	Description
Original Feed Method	Automatic feed
Supported Original Types	Sheet originals
Paper Size	Maximum: Legal/A4 Minimum: Statement/A5
Paper Weight	50 to 120 g/m <sup>2</sup>
Loading Capacity	50 sheets (50 to 80 g/m <sup>2</sup> ) maximum
Dimensions (W) × (D) × (H)	19 19/64 × 21 × 4 3/32" 490 × 338 × 104 mm
Weight	3 kg or less

## Environmental Specifications

Item	Description	
	FS-C2026MFP	FS-C2126MFP
Time to Sleep mode (default setting)	1 minutes	
Recovery time from Sleep mode	20 seconds or less	
Duplexing	Standard	
Paper supply capability	100% recycled paper may be used.	

---

**NOTE:** Consult your dealer or service representative for recommended paper types.

---

---

## Glossary

### Accessibility

The machine is designed featuring good accessibility even for the elderly and those who are physically challenged or visually impaired.

### AppleTalk

AppleTalk, which comes with Apple Computer's Mac OS, is a network protocol. AppleTalk enables file/printer sharing and also enables you to utilize application software that is on another computer on the same AppleTalk network.

### Auto Form Feed Timeout

During data transmission, the machine may sometimes have to wait until receiving the next data. This is the auto form feed timeout. When the preset timeout passes, the machine automatically put paper out. However, no output is performed if the last page has no data to be printed.

### Auto Paper Selection

A function to automatically select paper in the same size as original at printing

### Auto Sleep Mode

A mode designed for electrical power saving, activated when the machine is left unused or data transfer for a specific period. In Sleep mode, power consumption is kept to a minimum.

### Bonjour

Bonjour, also known as zero-configuration networking, is a service that automatically detects computers, devices and services on an IP network. Bonjour, because an industry-standard IP protocol is used, allows devices to automatically recognize each other without an IP address being specified or DNS server being set. Bonjour also sends and receives network packets by UDP port 5353. If a firewall is enabled, the user must check that UDP port 5353 is left open so that Bonjour will run correctly. Some firewalls are set up so as to reject only certain Bonjour packets. If Bonjour does not run stably, check the firewall settings and ensure that Bonjour is registered on the exceptions list and that Bonjour packets are accepted. If you install Bonjour on Windows XP Service Pack 2 or later, the Windows firewall will be set up correctly for Bonjour.

### Default Gateway

This indicates the device, such as a computer or router, that serves as the entrance/exit (gateway) for accessing computers outside the network that you are on, When no specific gateway is designated for a destination IP address, data is sent to the host designated as the Default Gateway.

### DHCP (Dynamic Host Configuration Protocol)

Dynamic Host Configuration Protocol (DHCP) that automatically resolves IP addresses, subnet masks, and gateway addresses on a TCP/IP network. DHCP minimizes the load of network management employing a large number of client computers because it relieves individual clients including printers from the IP address being assigned.

### dpi(dots per inch)

A unit for resolution, representing the number of dots printed per inch (25.4 mm).

---

## **EcoPrint Mode**

A printing mode that helps save toner. Copies made in this mode are thus lighter than normal.

## **Emulation**

The function to interpret and execute other printers' page description languages. The machine emulates operation of PCL6, KC-GL, KPD, and KPD (automatic).

## **FTP(File Transfer Protocol)**

A protocol to transfer files on the TCP/IP network, whether the Internet or an intranet. Along with HTTP and SMTP/POP, FTP is now frequently used on the Internet.

## **Grayscale**

A computer color expression. Displayed images of this sort are typically composed of shades of gray, varying from black at the weakest intensity to white at the strongest, without any other colors. Gray levels are displayed in numerical levels: that is, white and black only for 1 bit; 256 gray levels (including white and black) for 8 bits; and 65,536 gray levels for 16 bits.

## **IP Address**

An Internet protocol address is a unique number that represents a specific computer or related device on the network. The format of an IP address is four sets of numbers separated by dots, e.g. 192.168.110.171. Each number should be between 0 and 255.

## **IPP**

IPP (Internet Printing Protocol) is a standard that uses TCP/IP networks such as the Internet to enable print jobs to be sent between remote computers and printers. IPP is an extension of the HTTP protocol used to view websites and enables printing to be carried out via routers on printers in remote locations. It also supports the HTTP authentication mechanisms along with SSL server and client authentication as well as encryption.

## **KPDL (Kyocera Page Description Language)**

Kyocera's PostScript page description language compatible with Adobe PostScript Level 3.

## **Multi Purpose (MP) Tray**

The paper supply tray on the front side of the machine. Use this tray instead of the cassettes when printing onto envelopes, Hagaki, transparencies, or labels.

## **NetBEUI (NetBIOS Extended User Interface)**

An interface, developed by IBM in 1985, as an update from NetBIOS. It enables more advanced functions on smaller networks than other protocols such as TCP/IP, etc. It is not suitable for larger networks due to lack of routing capabilities to choose the most appropriate routes. NetBEUI has been adopted by IBM for its OS/2 and Microsoft for its Windows as a standard protocol for file sharing and printing services.

## **NetWare**

Novell's network management software that is able to run on a variety of operating systems.

---

### POP3 (Post Office Protocol 3)

A standard protocol to receive E-mail from the server in which the mail is stored on the Internet or an intranet.

### PostScript

A page description language developed by Adobe Systems. It enables flexible font functions and highly-functional graphics, allowing higher quality printing. The first version called Level 1 was launched in 1985, followed by Level 2 that enabled color printing and two-byte languages (e.g. Japanese) in 1990. In 1996, Level 3 was released as an update for the Internet access and PDF format as well as gradual improvements in implementation technologies.

### PPM (prints per minute)

This indicates the number of A4 size printouts made in one minute.

### Printer Driver

The software to enable you to print data created on any application software. The printer driver for the machine is contained in the CD-ROM enclosed in the package. Install the printer driver on the computer connected to the machine.

### RAM Disk

Using part of the printer's memory as a virtual disk, you can set any amount of memory from overall printer memory as a RAM disk in order to use features such as electronic sorting (shortening print time).

### Send as E-mail

A function to send the image data stored in the machine as an E-mail attachment. E-mail addresses can be selected from the list or entered at each time.

### SMTP (Simple Mail Transfer Protocol)

A protocol for E-mail transmission over the Internet or an intranet. It is used for transferring mail between mail servers as well as for sending mail from clients to their servers.

### Status Page

The page lists machine conditions, such as the memory capacity, total number of prints and scans, and paper source settings.

### Subnet Mask

The subnet mask is a way of augmenting the network address section of an IP address. A subnet mask represents all network address sections as 1 and all host address sections as 0. The number of bits in the prefix indicates the length of the network address. The term "prefix" refers to something added to the beginning and, in this context, indicates the first section of the IP address. When an IP address is written, the length of the network address can be indicated by the prefix length after a forward slash (/). For example, "24" in the address "133.210.2.0/24". In this way, "133.210.2.0/24" denotes the IP address "133.210.2.0" with a 24-bit prefix (network section). This new network address section (originally part of the host address) made possible by the subnet mask is referred to as the subnet address. When you enter the subnet mask, be sure to set the *DHCP* setting to *Off*.

---

### **TCP/IP (Transmission Control Protocol/Internet Protocol)**

TCP/IP is a suite of protocols designed to define the way computers and other devices communicate with each other over a network.

### **TCP/IP (IPv6)**

TCP/IP (IPv6) is based on the current Internet protocol, TCP/IP (IPv4). IPv6 is the next-generation Internet protocol and expands the available address space, which resolves the problem of the lack of addresses under IPv4, while also introducing other improvements such as additional security functionality and the capacity to prioritize data transmission.

### **TWAIN (Technology Without Any Interested Name)**

A technical specification for connecting scanners, digital cameras, and other image equipment to the computers. The TWAIN compatible devices enable to process image data on any relevant application software. TWAIN is adopted on a large number of graphic software (e.g. Adobe Photoshop) and OCR software.

### **USB (Universal Serial Bus)2.0**

A USB interface standard for Hi-Speed USB 2.0. The maximum transfer rate is 480 Mbps. This machine is equipped with USB 2.0 for high-speed data transfer.

### **WIA (Windows Imaging Acquisition)**

A function to import images supported after Windows Me/XP from digital cameras and other peripheral devices. This function replaces what TWAIN used to do; the feature is provided as a part of Windows functions and improves ease of operation, so that you import images directly to My Computer without using any application.

# Index

## Numerics

---

1-sided/2-sided Selection **5-8**

## A

---

Accessibility **Appendix-27**

Adjusting Density **5-16**

Auto **3-8**

Manual **3-8**

Adjustment/Maintenance **8-100**

Copy Density Adjustment **8-100**

Correcting Fine Black Lines **8-110**

Developer Refresh **8-111**

Send/Box Density **8-101, 8-102, 8-103**

AppleTalk **Appendix-27**

Setup **8-149**

Auto Paper Selection **Appendix-27**

Auto Sleep **2-9, Appendix-27**

## B

---

Bonjour **Appendix-27**

Bundled Items **2-2**

Buzzer **8-6**

## C

---

Cassette

Loading Paper **2-27**

Paper Size and Media Type **8-13**

CD-ROM **2-2**

Changing Language **2-10, 8-3**

Cleaning

Separator **9-4, 9-6**

Slit Glass **9-3**

Color

Color / Grayscale / Black and White  
Selection **5-19**

Color mode

Color Selection (Copy) **8-34**

Combine Mode

2-in-1 Mode **4-11**

4-in-1 Mode **4-12**

Page Boundary Lines **4-12**

COMMAND CENTER **2-23**

Connecting

LAN Cable **2-5**

Power Cable **2-10**

USB Cable **2-10**

Connection Method **2-3**

Continuous Scan

Copy **4-14**

Send **5-20**

Conventions in This Guide **xxxvii**

Copy

Adjusting Density **3-8**

Collate Copying **3-17**

Duplex Copying **3-14**

Offset Copying **3-17**

Originals **4-2**

Selecting Image Quality **3-9**

Setup **8-61**

Zoom Copying **3-11**

Copy Settings **8-61**

Auto Paper Selection **8-63, 8-64**

Paper Selection **8-62**

Quick Setup Registration **8-67**

Copying Functions **4-1**

Counting the Number of Pages

Printed **11-27**

Counting the Number of Pages Printed

Each Job **11-28**

Printing a Report **11-31**

Total Job **11-27**

## D

---

Date/Timer **8-113**

Auto Panel Reset **8-124**

Date Format **8-115**

Date/Time **8-113**

Time Zone **8-116**

Default **8-30**

- Collate/Offset **8-43**
- Color Selection (Copy) **8-34**
- Continuous Scan **8-31**
- Density **8-38**
- EcoPrint **8-44**
- E-mail Subject/Body **8-41**
- File Format **8-37**
- File Name **8-40**
- Original Image **8-32**
- Original Orientation **8-30**
- Scan Resolution **8-33**
- TIFF Print **8-45**
- XPS FitTo Page **8-46, 8-47**
- Zoom **8-39**

Default Gateway **Appendix-27**

Default Screen **8-5**

Density Adjustment

- Copy **3-8**
- Send **5-16**

Destination **8-129**

- Adding **8-129**
- Adding a Group **8-135**
- Choosing by One-Touch Key **3-41**
- Choosing from the Address Book **3-39**
- Editing **8-139**
- One-touch Key **8-141**
- Search **3-40**
- Sending to Different Types of Destinations (Multi Sending) **3-42**

Device **7-20**

- Checking Status **7-20**
- Configuring **7-21**

DHCP **Appendix-27**

Document Box **6-1**

- Quick Setup Registration **8-73**

Document Processor **Appendix-26**

- How to Load Originals **2-43**
- Loading Originals **2-42**
- Not Supported Originals **2-42**
- Part Names **2-42**
- Supported Originals **2-42**

dpi **Appendix-27**

Duplex **3-14, 8-83**

---

## E

EcoPrint Mode **Appendix-28**

- Copy **4-10**
- Print **8-81**

E-mail

- Send as E-mail **3-22**

Emulation **Appendix-28**

- Selection **8-78**

Energy Star Program **xxxv**

Enter E-mail Subject and Body **5-22**

Entry

- Body **5-22**
- File Name **4-17, 5-21**
- Subject **5-22**

Environment **xx**

Error Handling **8-28**

Error Messages **10-5**

Expansion Memory **Appendix-2**

---

## F

File

- Format **5-12**

File Name **4-17**

FTP **Appendix-28**

FTP Encrypted TX **5-30, 5-31**

---

## G

GPL **xxxii**

Grayscale **5-19, Appendix-28**

---

## I

Image Quality

- Copy **3-6**
- Send **5-15**

Included Guides **2**

Interface Block **8-164**

IP Address **Appendix-28**

IPP **Appendix-28**

---

## J

Job



Available Status **7-2**  
 Canceling **3-45, 7-19**  
 Checking History **7-8**  
 Checking Status **7-2**  
 Pause and Resumption **7-19**  
 Sending the Job Log History **7-13**  
 Job Accounting **11-13**  
     Managing the Copier/Printer Counts **11-19**  
     Restricting the Use of the Machine **11-20**  
 Job Finish Notice **5-28**  
     Copy **4-15**  
     Send **5-28**

## K

---

KPDL **Appendix-28**

## L

---

Label **Appendix-18**  
 LAN Cable  
     Connecting **2-5**  
 Legal Information **xxx**  
 Login **3-2, 11-5**  
 Logout **3-2, 11-5**  
 Low Power Mode **2-9**

## M

---

Management **11-1**  
     Job Accounting **11-13**  
     User Login Administration **11-2**  
 Monotype Imaging License Agreement **xxxiv**  
 Multi Purpose (MP) Tray **Appendix-28**  
     Paper Size and Media **2-38, 8-15**  
 Multi Sending (Sending to Different Types of Destinations ) **3-42**

## N

---

NetBEUI **Appendix-28**  
 NetWare **8-147, Appendix-28**  
     Setup **8-147**

Network  
     Setup **2-14**  
 Network Cable **2-4**  
     Connecting **2-5**  
 Network Interface **2-4**  
 Network Security **8-156**  
 Network Setup  
     AppleTalk **8-149**  
     FTP (Reception) **8-153**  
     HTTP **8-153**  
     HTTPS **8-153**  
     IPP over SSL **8-154**  
     LAN Interface **8-145**  
     LDAP **8-153**  
     LPD **8-153**  
     NetBEUI **8-153**  
     NetWare **8-147**  
     POP3 (E-mail RX) **8-153**  
     Raw Port **8-153**  
     SMTP (E-mail TX) **8-153**  
     SNMP **8-153**  
     TCP/IP (IPv4) **8-146**  
     TCP/IP (IPv6) **8-146, 8-150, 8-151**

## O

---

Open SSLeay **xxxii**  
 Operation Panel **1-2**  
 Option  
     Expansion Memory **Appendix-2**  
     Overview **Appendix-2**  
     Paper Feeder **Appendix-2**  
 Optional Functions **8-170**  
 Original  
     Loading in the Document Processor **2-42**  
     Placing on the Platen **2-41**  
 Original Orientation  
     Copy **4-8**  
     Document Processor **4-8**  
     Send **5-10**  
 Original Size Indicator Plates **2-41**  
 Original Size Selection  
     Send **5-2**  
 Original SSLeay License **xxxiii**  
 Originals

Copy **4-2**  
 Custom **8-8**  
 Setup **8-8**  
 Size Selection **4-2, 5-2**

## P

### Paper

Appropriate Paper **Appendix-14**  
 Auto Selection **8-23**  
 Before Loading **2-26**  
 Cassette **8-13**  
 Custom **8-11**  
 Default Paper Source **8-22**  
 Loading Envelopes **2-31**  
 Loading in the Cassettes **2-27**  
 Loading in the Multi Purpose Tray **2-29**  
 Multi Purpose Tray **8-15**  
 Setup **8-8**  
 Size and Media **2-35, Appendix-11**  
 Special Paper **8-24, Appendix-16**  
 Specifications **Appendix-13**  
 Weight **8-17**

### Paper Feeder **Appendix-2**

### Paper Jam **10-11**

Document Processor **10-15**

### Paper Selection **4-4**

Cassette **4-4**

Multi Purpose Tray **4-5**

### Part Names **1-1**

### Platen

Placing Originals **2-41**

### POP3 **Appendix-29**

### PostScript **Appendix-29**

### Power Cable

Connecting **2-10**

### Power Off **2-7**

### Power On **2-7**

### PPM **Appendix-29**

### Preparation **2-1**

### Preparing Cables **2-4**

### Printer

Setup **8-78**

### Printer Driver **Appendix-29**

### Printer Settings **8-78**

Copies **8-84**

CR Action **8-90**

Duplex **8-83**

EcoPrint **8-81**

Emulation **8-78**

Form Feed Timeout **8-88, 8-91**

LF Action **8-89**

Orientation **8-86**

Override A4/Letter **8-82**

### Printing **3-19**

Printing from Applications **3-19**

Printing Reports/Sending Notice **8-94**

Font List **8-95**

Network Status Page **8-96**

Service Status Page **8-96**

Status Page **8-94**

Transmission Result Reports **8-98**

Product Library **2-2**

## Q

### Quick Setup Screen

Changing Registration **8-67, 8-69, 8-73**

## R

Resolution **Appendix-23, Appendix-24**

Restarting the System **8-144**

## S

### Safety Conventions **i**

SAFETY OF LASER BEAM (USA) **xxiv**

### Scan Resolution **5-18**

Default settings **8-33**

### Send

File Format **5-12**

Image Quality **5-15**

Original Size Selection **5-2**

Sending Size Selection **5-4**

Setup **8-69**

### Sending

Send as E-mail **3-22**

Send to Folder (FTP) **3-26**

Send to Folder (SMB) **3-26**

Sending E-mail **2-24**

Sending Functions **5-1**

Sending Settings **8-69**  
 Quick Setup Registration **8-69**  
 Sending Size Selection **5-4**  
 Sending to Different Types of Destinations  
 (Multi Sending) **3-42**  
 Separator  
 Cleaning **9-4, 9-6**  
 Setting Date and Time **2-11**  
 Setup  
 AppleTalk **8-149**  
 Copy **8-61**  
 Date/Timer **8-113**  
 NetWare **8-147**  
 Network **8-145**  
 Printer **8-78**  
 Send **8-69**  
 Sharpness adjustment **Appendix-21**  
 Sleep **2-9**  
 Slit Glass  
 Cleaning **9-3**  
 SMTP **Appendix-29**  
 Solving Malfunctions **10-2**  
 Specifications  
 Document Processor **Appendix-26**  
 Environmental Specifications  
**Appendix-26**  
 Machine **Appendix-22**  
 Printer **Appendix-24**  
 Scanner **Appendix-25**  
 Specifying Destination **3-39**  
 Status / Job Cancel **7-1**  
 Status Page **8-94, Appendix-29**  
 Subnet Mask **Appendix-29**  
 Switching the Language **2-10, 8-3**  
 Switching Unit of Measurement **8-27**  
 Symbols **i**  
 System Menu **8-1**

## T

---

TCP/IP **Appendix-30**  
 Trade Names **xxxi**  
 TWAIN **Appendix-30**

## U

---

Unusable Time **8-126**  
 USB **Appendix-30**  
 USB Cable  
 Connecting **2-10**  
 USB Interface **2-4**  
 USB Memory  
 Printing Documents **6-2**  
 Removing **6-7, 6-8**  
 Saving Documents **6-5**  
 TIFF Print **6-3**  
 XPS FitTo Page **6-4**  
 User Login Administration **11-2**  
 Adding **11-6**  
 Changing Properties **11-8**  
 Displaying Network User Property **11-11**  
 Enabling/Disabling **11-3**  
 Enabling/Disabling Group  
 Authentication **11-10**  
 Login **11-5**  
 Logout **11-5**  
 Unknown login user name Job **11-12**

## W

---

WIA **Appendix-30**  
 WSD Scan **5-26**

## X

---

XPS  
 File formats **5-12, 8-37**  
 Saving documents to Removable USB  
 Memory **6-5**

## Z

---

Zoom Copying  
 Auto Zoom **3-11**  
 Manual Zoom **3-11**  
 Preset Zoom **3-11**  
 Zoom Mode  
 Copy **3-11, 5-6**  
 Send **5-6**



**QUALITY  
CERTIFICATE**

This machine has passed  
all quality controls and  
final inspection

## KYOCERA MITA AMERICA, INC.

### **Headquarters:**

225 Sand Road,  
Fairfield, New Jersey 07004-0008  
TEL : (973) 808-8444  
FAX : (973) 882-6000

### **New York Branch:**

1410 Broadway 23rd floor  
New York, NY 10018  
TEL : (917) 286-5400  
FAX : (917) 286-5402

### **Northeastern Region:**

225 Sand Road,  
Fairfield, New Jersey 07004-0008  
TEL : (973) 808-8444  
FAX : (973) 882-4401

### **Midwestern Region:**

201 Hansen Court Suite 119  
Wood Dale, Illinois 60191  
TEL : (630) 238-9982  
FAX : (630) 238-9487

### **Western Region:**

14101 Alton Parkway,  
Irvine, California 92618-7006  
TEL : (949) 457-9000  
FAX : (949) 457-9119

### **Southeastern Region:**

1500 Oakbrook Drive,  
Norcross, Georgia 30093  
TEL : (770) 729-9786  
FAX : (770) 729-9873

### **Southwestern Region:**

2825 West Story Road,  
Irving, Texas 75038-5299  
TEL : (972) 550-8987  
FAX : (972) 252-9786

### **National Operation Center & National Training Center:**

2825 West Story Road,  
Irving, Texas 75038-5299  
TEL : (972) 659-0055  
FAX : (972) 570-5816

### **Latin America Division:**

8240 N.W. 52nd. Terrace Dawson Building,  
Suite 108 Miami, Florida 33166  
TEL : (305) 421-6640  
FAX : (305) 421-6666

## KYOCERA MITA CANADA, LTD.

6120 Kestrel Road, Mississauga,  
Ontario L5T 1S8, Canada  
TEL : (905) 670-4425  
FAX : (905) 670-8116

## KYOCERA MITA MEXICO, S.A. DE C.V.

Av. 16 de Septiembre #407  
Col. Santa Inés,  
Azcapotzalco México,  
D.F. 02130, México  
TEL : (55) 5383-2741  
FAX : (55) 5383-7804

## **KYOCERA MITA EUROPE B.V.**

Hoeksteen 40, 2132 MS Hoofddorp,  
The Netherlands  
Phone: +31.20.654.0000  
Home page: <http://www.kyoceramita-europe.com>  
Email: [info@kyoceramita-europe.com](mailto:info@kyoceramita-europe.com)

**KYOCERA MITA NEDERLAND B.V.**  
Beechavenue 25, 1119RA Schiphol-Rijk  
The Netherlands

Phone: +31.20.58.77.200

## **KYOCERA MITA (UK) LTD**

8 Beacontree Plaza  
Gillette Way Reading Berks RG2 0BS,  
U.K.

Phone: +44.1189.311.500

## **KYOCERA MITA ITALIA S.p.A.**

Via G. Verdi, 89 / 91, 20063 Cernusco s/N  
Milano, Italy

Phone: +39.02.92179.1

## **S.A. KYOCERA MITA BELGIUM N.V.**

Sint-Martinusweg 199-201, 1930 Zaventem,  
Belgium

Phone: +32.2.720.9270

## **KYOCERA MITA FRANCE S.A.**

Parc Les Algorithmes Saint Aubin  
91194 GIF-SUR-YVETTE,  
France

Phone: +33.1.6985.2600

## **KYOCERA MITA ESPAÑA S.A.**

Edificio Kyocera, Avda de Manacor No. 2,  
28290 Las Matas (Madrid),  
Spain

Phone: +34.91.631.8392

## **KYOCERA MITA FINLAND OY**

Kirvesmiehenkatu 4, 00880 Helsinki,  
Finland

Phone: +358.9.4780.5200

## **KYOCERA MITA (SCHWEIZ)**

Hohlstrasse 614, 8048 Zürich  
Switzerland

Phone: +41.1.908.4949

## **KYOCERA MITA DEUTSCHLAND GMBH**

Otto-Hahn-Str. 12 D-40670 Meerbusch,  
Germany

Phone: +49.2159.918.0

## **KYOCERA MITA GMBH AUSTRIA**

Eduard-Kittenberger-Gasse 95,  
1230 Wien,  
Austria

Phone: +43.1.86338.210

## **KYOCERA MITA SVENSKA AB**

Esbogatan 16B 164 75 Kista,  
Sweden

Phone: +46.8.546.55000

## **KYOCERA MITA NORGE**

Postboks 150 Oppsal, NO 0619 Oslo  
Olaf Helsetsvet 6, NO 0694 Oslo,  
Norway

Phone: +47.22.62.73.00

## **KYOCERA MITA DANMARK A/S**

Ejby Industrivej 1, DK-2600 Glostrup,  
Denmark

Phone: +45.5687.1100

## **KYOCERA MITA PORTUGAL LDA.**

Rua do Centro Cultural, 41 (Alvalade) 1700-106 Lisbon,  
Portugal

Phone: +351.21.842.9100

## **KYOCERA MITA SOUTH AFRICA (PTY) LTD.**

527 Kyalami Boulevard,  
Kyalami Business Park Midrand,  
South Africa

Phone: +27.(0)11.540.2600

## **KYOCERA MITA AMERICA, INC.**

Headquarters:

225 Sand Road,  
Fairfield, New Jersey 07004-0008,  
U.S.A.

Phone: (973) 808-8444

## **KYOCERA MITA AUSTRALIA PTY. LTD.**

Level 3, 6-10 Talavera Road, North Ryde,  
N.S.W. 2113 Australia

Phone: (02) 9888-9999

## **KYOCERA MITA NEW ZEALAND LTD.**

1-3 Parkhead Place, Albany  
P.O. Box 302 125 NHPC, Auckland,  
New Zealand

Phone: (09) 415-4517

## **KYOCERA MITA (THAILAND) CORP., LTD.**

9/209 Ratchada-Prachachem Road,  
Bang Sue, Bangkok 10800, Thailand

Phone: (02) 586-0320

## **KYOCERA MITA SINGAPORE PTE LTD.**

121 Genting Lane, 3rd Level,  
Singapore 349572

Phone: 67418733

## **KYOCERA MITA HONG KONG LIMITED**

11/F., Mita Centre,  
552-566, Castle Peak Road,  
Tsuen Wan, New Territories,  
Hong Kong

Phone: 24297422

## **KYOCERA MITA TAIWAN Corporation.**

7F-1~2, No.41, Lane 221, Gangchi Rd.  
Neihu District, Taipei, Taiwan, 114. R.O.C.

Phone: (02) 87511560

## **KYOCERA MITA Corporation**

2-28, 1-chome, Tamatsukuri, Chuo-ku  
Osaka 540-8585, Japan

Phone: (06) 6764-3555

<http://www.kyoceramita.com>

