

For Optimal Sensitivity <i>(Trades off throughput for best possible sensitivity. AP more susceptible to interference)</i>					
		AP	Remote	Units	Notes
Radio Configuration	Receive Power	-80	N/A	dBm	Sets AP receiver for highest gain.

When Heavy Interference Exists at AP <i>(Trades off range for robustness in the face of interference)</i>					
		AP	Remote	Units	Notes
Radio Configuration	Receive Power	-60	N/A	dBm	Sets AP receiver for low gain, which forces Remote transmit power to be high.

For Mobile Systems <i>(Where hand-offs between APs are required)</i>						
			AP	Remote	Units	Notes
Radio Configuration	Frequency Control	Frequency Mode	Static Hopping	Hopping w/Hand-offs		
	Advanced Configuration	Protection Margin	6	6	dB	More channel variation in mobile, so use more robust modulation with greater SNRs.
		Channel Type	Dynamic	N/A		
Network Configuration	AP Location Info Config	Retrieve Text File	N/A	AP Locations file		AP locations file with coordinates and key attributes of APs to which Remote can associate.

3.13.1 Proper Operation—What to Look For

Table 3-12 and Table 3-13 on Page 143 show target performance values for AP and Remote transceivers. View these values using the built-in menu system by navigating the path shown under each table title.

Table 3-12. Mercury Remote Transceiver
(Performance Information>>Internal Radio Status Menu)

Name	Target Value	Notes
Connection Status	Associated	Remote must be associated for network operation.
Transmit Power	Varies	Adjusts automatically as requested by AP.
RSSI (Received Signal Strength Indication)	Varies	The less negative an RSSI reading, the stronger the signal (i.e., -75 dBm is stronger than -85 dBm).

Table 3-12. Mercury Remote Transceiver (Continued)
(Performance Information>>Internal Radio Status Menu)

Name	Target Value	Notes
SNR (Signal-to-Noise Ratio)	Strong signal (bench setting): 25-28 dB Operational: 3-30 dB Typ. System: 10-20 dB	A low SNR may be caused by noise or interfering signals.
TX Freq. Offset	0-22,875 Hz	Adjusts to accommodate what is expected by the AP.
RX Freq. Offset	0-22,875 Hz	Adjusts to accommodate what is expected by the AP.
Total FEC Count	Varies	
Corrected FEC Count	Varies	
Uncorrected FEC Count	Varies	
Current AP Name	Device name of associated AP	Typically set to reflect the application or system the radio is used in.

Table 3-13. Mercury Access Point
(Performance Information>>Wireless Network Status>>Remote Performance Database)

Name	Target Value	Notes
MAC ADDR	MAC Address of associated Remote	Must match Remote's MAC address exactly
RSSI (Received Signal Strength Indication)	Varies	The less negative an RSSI reading, the stronger the signal (i.e., -75 dBm is stronger than -85 dBm).
SNR Signal-to-Noise Ratio	Strong signal (bench): 25-28 dB Operational: 3-30 dB Typ. System:10-20 dB	A low SNR may be caused by noise or interfering signals.
Downlink	Varies	QPSK/FEC-3/4 Preferred
Uplink	Varies	QPSK/FEC-3/4 Preferred
FEC Total	Varies	
Corrected FEC Count	Varies	
Uncorrected FEC Count	Varies	

Additional Considerations for Mobile Operation

Consider the following key points for all mobile installations:

- Use connectionware—The use of connectionware in the mobile laptops is highly recommended for better operation of a mobile data system. GE MDS provides connectionware from one of the vendors in this market. Contact your factory representative for details.
- Plan your network coverage—Deploy Access Points so that they provide overlapping coverage with each other. Access Points must use the same Network Name to enable roaming service.
- Set the RSSI Threshold to -70 dBm—This level is typically used for mobile systems with good performance. Make sure there is overlapping coverage of more than one AP to provide continuous coverage.
- At every AP Radio, review the following settings when providing service to mobile remotes:
 - **TDD Sync**—Set to **GPS Required**.
 - **Pattern Offset**—Each AP should be different. Cell planning is required if there are overlaps.
 - **Hop Pattern**—Set the same on all APs.
 - **Compression [disabled]**—Disable radio compression. Data compression is best performed by the connectionware running on the mobile laptop PC. Gains in efficiency are made because connectionware compresses data at a higher stack level, and it aggregates multiple data frames and streams into a single packet. Compression at the radio level, although highly efficient, works only at the individual packet level.





4 TROUBLESHOOTING & RADIO MEASUREMENTS

Contents

4.1 TROUBLESHOOTING.....	147
4.1.1 Interpreting the Front Panel LEDs	147
4.1.2 Troubleshooting with the Embedded Management Sys.	148
4.1.3 Using Logged Operation Events	151
4.1.4 Alarm Conditions	152
4.1.5 Correcting Alarm Conditions	153
4.1.6 Logged Events	153
4.2 RADIO (RF) MEASUREMENTS.....	155
4.2.1 Antenna System SWR and Transmitter Power Output	155
4.2.2 Antenna Aiming For Directional Antennas	156



4.1 TROUBLESHOOTING

Successful troubleshooting of a wireless system is not difficult, but requires a logical approach. It is best to begin troubleshooting at the Access Point unit, as the rest of the system depends on the Access Point for synchronization data. If the Access Point has problems, the operation of the entire wireless network is affected.

When you find communication problems, it is good practice to begin by checking the simple causes. Applying basic troubleshooting techniques in a logical progression identifies many problems.

Multiple Communication Layers

It is important to remember that the operation of the network is built on a radio communications link. On top of that are two data levels— wireless MAC, and the data layer. It is essential that the wireless aspect of the Access Point and the Remotes units to be associated operates properly before data-layer traffic will function.

Unit Configuration

There are numerous user-configurable parameters in the Management System. Do not overlook the possibility that human error is the cause of the problem. With so many parameters to view and change, a parameter might be incorrectly set, and then that change is forgotten.

To help avoid these problems, GE MDS recommends creating an archive of the transceiver's profile in a Configuration File when your installation is complete. You can reload this file into the transceiver to restore the unit to the factory defaults or your unique profile. For details on creating and archiving Configuration Files, see *“Configuration Scripts Menu”* on Page 130.

Factory Assistance

If problems cannot be resolved using the guidance provided here, review the GE MDS web site's technical support area for recent software/firmware updates, general troubleshooting help, and service information. Additional help is available through our Technical Support Department. (See “TECHNICAL ASSISTANCE” on the inside of the rear cover.)

4.1.1 Interpreting the Front Panel LEDs

An important set of troubleshooting tools are the LED status indicators on the front panel of the radio case. You should check them first whenever a problem is suspected. [Table 2-2 on Page 30](#) describes the function of each status LED. [Table 4-1 on Page 148](#) provides suggestions for

resolving common system difficulties using the LEDs, and [Table 4-2 on Page 149](#) provides other simple techniques.

Table 4-1. Troubleshooting Using LEDs—Symptom-Based

Symptom	Problem/Recommended System Checks
PWR LED does not turn on	<ul style="list-style-type: none"> a. Voltage too low—Check for the proper supply voltage at the power connector. (10–30 Vdc) b. Indefinite Problem—Cycle the power and wait (\approx 30 seconds) for the unit to reboot. Then, recheck for normal operation.
LINK LED does not turn on	<ul style="list-style-type: none"> a. Network Name of Remote not identical to desired Access Point—Verify that the system has a unique Network Name. b. Not yet associated with an Access Point with the same Network Name. Check the “Status” of the unit’s process of associating with the Access Point. Use the Management System. c. Poor Antenna System—Check the antenna, feedline and connectors. Reflected power should be less than 10% of the forward power reading (SWR 2:1 or lower).
PWR LED is blinking	<ul style="list-style-type: none"> a. Blinking indicates that an alarm condition exists. b. View Current Alarms and Event Log and correct the problem if possible. (See <i>“Using Logged Operation Events”</i> on Page 151) c. Blinking continues until the source of the alarm is corrected, for example, a valid IP address is entered, etc.
LAN LED does not turn on	<ul style="list-style-type: none"> a. Verify the Ethernet cable is connect at both ends. b. Verify that the appropriate type of Ethernet cable is used: straight-through or crossover.
LAN LED lights, but turns off after some time	Verify traffic in LAN. Typically, the radio should not be placed in high traffic enterprise LANs, as it will not pass this level of traffic. If needed, use routers to filter traffic.
GPS LED not lit	<p>No satellite fix has been obtained. A fix is required for all operation except single-frequency channel (non-hopping) configurations. The lack of a fix may be caused by an obstructed “view” of the satellites, or a GPS antenna problem.</p> <p>The GPS LED blinks slowly on the AP while it synchronizes its internal clock to the GPS signal. When in this condition, the AP does not transmit.</p>

4.1.2 Troubleshooting With the Embedded Management System

If you have reviewed and tried the items listed in [Table 4-1](#) and still have not resolved the problem, there are additional tools and techniques you can use. The embedded Management System is a good source of information that you can use remotely to provide preliminary diagnostic information, or may even provide a path to correcting the problem. Refer to [Table 4-2 on Page 149](#) for more information on using the Management System as a troubleshooting tool.

Table 4-2. Basic Troubleshooting Using the Management System

Symptom	Problem/Recommended System Checks
Cannot access the MS through COM1	<ol style="list-style-type: none"> Connect to unit via Telnet or Web browser. Disable the serial mode for COM1 (Serial Gateway Configuration>>Com1 Serial Data Port>>Status>>Disabled). Or, if you know the unit's data configuration: <ol style="list-style-type: none"> Connect to COM 1 via a terminal set to VT100 and the port's data baud rate. Type +++. Change the terminal's baud rate to match the transceiver's Console Baud Rate. Type +++.
Display on terminal/Telnet screen garbled	Verify the terminal/terminal emulator or Telnet application is set to VT100.
Password forgotten	<ol style="list-style-type: none"> Connect to the transceiver using a terminal through the COM1 Port. Obtain a password-resetting Authorization Key from your factory representative. At the login prompt, try the user name <i>authcode</i>, and enter the Authorization Key for the password.
Remote only gets to Connecting	<ol style="list-style-type: none"> Check Network Name, encryption, and Device Auth Mode settings. Verify that the correct MAC address is listed in the Approved Remotes List of the Security Configuration Menu.
Remote only gets to Authenticating	Check encryption settings and security mode settings.
Cannot pass IP data to WAN	<ol style="list-style-type: none"> Verify your IP settings. Use the PING command to test communication with the transceivers in the local radio system. If successful with local PING, attempt to PING an IP unit attached to a transceiver. If successful with the LAN PINGs, try connecting to a known good unit in the WAN.
Wireless Retries too high	Possible Radio Frequency Interference: <ol style="list-style-type: none"> If omnidirectional antennas are used, consider changing to directional antennas. This usually limits interference to and from other stations. Try disabling channels where persistent interference is known or suspected. The installation of a filter in the antenna feedline may be necessary. Consult the factory for further assistance. Try using an antenna with a downward tilt.

The following is a summary of how you can use several screens in the Management System as diagnostic tools. For information on how to

connect to the Management System, see “*STEP 3—CONNECT PC TO THE TRANSCEIVER*” on Page 25.

Starting Information Screen

(See *Starting Information Screen* on Page 42)

The Management System’s home page provides some valuable bits of data. One of the most important is the **Device Status** field. This item tells you if the unit is operational.

If the **Device Status** field says **Associated**, then look in the network areas beginning with network data statistics. If it displays some other message, such as **Scanning**, **Connecting**, or **Alarmed**, you must determine why it is in this state.

The *Scanning* state indicates a Remote unit is looking for an Access Point beacon signal to lock onto. It should move to the *Connecting* state and finally to the *Associated* state within less than a minute. If this Remote unit is not providing reliable service, look at the *Event Logs* for signs of lost association with the Access Point, or low signal alarms. Table 4-3 provides a description of the Device Status messages.

Table 4-3. Device Status¹

Scanning	The unit is looking for an Access Point beacon signal.
Ranging	Remote has detected AP and is synchronizing to it.
Connecting	The Remote has established a radio (RF) connection with the Access Point and is negotiating the network layer connectivity.
Authenticating²	The Remote is authenticating itself to the network to obtain cyber-security clearance in order to pass data.
Associated	This unit has successfully synchronized and is “associated” with an Access Point. This is the normal operating state.
Alarmed	The unit has detected one or more alarms that have not been cleared.

1. Device Status is available in the *Startup Information Screen* or the *Wireless Status Screen* at Remotes.

2. If Device Authentication is enabled.

If the Remote is in an *Alarmed* state, the unit might still be operational and associated. Look for the association state in the *Wireless Network Status* screen to determine if the unit is associated. If it is, look at the *Error Log* for possible clues.

If the unit is in an *Alarmed* state and is not associated with an Access Point, then there might be a problem with the wireless network layer. Call a radio technician to deal with wireless issues. Refer the technician to the *RADIO (RF) MEASUREMENTS* on Page 155 for information on antenna system checks.

Packet Statistics Menu

(See *Packet Statistics Menu on Page 113*)

This screen provides detailed information on data exchanges between the unit being viewed and the network through the wireless and the Ethernet (data) layers. These include:

Wireless Packet Statistics

- Packets received
- Packets sent
- Bytes received
- Bytes sent
- Packets dropped
- Receive errors
- Retries
- Retry errors

Ethernet Packet Statistics

- Packets received
- Packets sent
- Bytes received
- Bytes sent
- Lost carrier detected
- Packets dropped
- Receive errors
- Retries
- Retry errors

The most significant fields are the *Packets Dropped*, *Retries*, *Retry Errors*, *Receive Errors* and *Lost Carrier Detected*. If the data values are more than 10% of their sent and received counterparts, or the *Lost Carrier Detected* value is greater than a few dozen, there might be trouble with radio-frequency interference or a radio link of marginal strength.

If errors are excessive, check the aiming of the antenna system, and check for a satisfactory SWR. Refer to *RADIO (RF) MEASUREMENTS on Page 155* for information on antenna system checks.

Diagnostic Tools

(See *MAINTENANCE/TOOLS MENU on Page 122*)

The radio's Maintenance menu contains two tools that are especially useful to network technicians—the *Radio Test Menu* and the *Ping Utility*. Use the Radio Test selection for testing RF operation. Use the Ping Utility to verify communications access to pieces of equipment connected to the radio network. This includes transceivers and user-supplied Ethernet devices.

4.1.3 Using Logged Operation Events

(See *PERFORMANCE INFORMATION MENU on Page 109*)

The transceiver's microprocessor monitors many operational parameters and logs them as various classes of *events*. If the event is one that affects performance, it is an *alarm*. There are also normal or routine events such as those marking the rebooting of the system, implementation of parameter changes, and external access to the Management System. Informational events are stored in temporary (RAM) memory that is lost in the absence of primary power, and Alarms are stored in

permanent memory (Flash memory) until cleared by user request. [Table 4-4](#) summarizes these classifications.

Table 4-4. Event Classifications

Level	Description/Impact	Storage
Alarms	Transceiver has detected one or more alarm conditions	Flash Memory
Informational	Normal operating activities	Flash Memory
Temporary Informational	Transient conditions or events	RAM
Minor	Does not affect unit operation	RAM
Major	Degraded unit performance but still capable of operation	RAM
Critical	Prevents the unit from operating	RAM

These events are stored in the transceiver’s *Event Log* and can be a valuable aid in troubleshooting unit problems or detecting attempts at breaching network security.

4.1.4 Alarm Conditions

Most events, classified as “critical” will cause the PWR LED to blink, and will inhibit normal operation of the transceiver. The LED blinks until the corrective action is completed. (See also [Event Log Menu on Page 112](#).)

Table 4-5. Alarm Conditions (Alphabetical Order)

Alarm Condition Reported	Event Log Entry	SNMP Trap
EVENT_BRIDGE	Network Interface /Error	networkInterface(17)
EVENT_FREQ_CAL	Frequency Not Calibrated	frequencyCal(7)
EVENT_INIT_ERR	Initialization Error	initializationError(18)
EVENT_IPADDR*	IP Address Invalid	ipAddressNotSet(4)
EVENT_IPMASK*	IP Mask Invalid	ipNetmaskNotSet(5)
EVENT_LAN_PORT		lanPortStatus(78)
EVENT_MAC	MAC communication Failed	macCommunication(1)
EVENT_MACADDR	MAC Address Invalid	noMacAddress(6)
EVENT_NETNAME*	Netname Invalid	invalidNetname(12)
EVENT_POWER_CAL	Power Calibrated/Not Calibrated	powerCal(8)
EVENT_REMOTE	Remote Added/Removed (AP Only)	eventRemote(66)
EVENT_RSSI*	RSSI Exceeds threshold	rss(11)

Table 4-5. Alarm Conditions (Alphabetical Order) (Continued)

Alarm Condition Reported	Event Log Entry	SNMP Trap
EVENT_RSSI_CAL	RSSI Not Calibrated	rssiCal(9)
EVENT_SYSTEM_ERROR*	System Error Cleared; Please Reboot	systemError(16)
EVENT_TFTP_CONN	TFTP connectivity achieved	tftpConnection(73)
EVENT_TFTP_ERR	Attempted TFTP connection failed	tftpConnFailed(79)

* User can correct condition, clearing the alarm.

4.1.5 Correcting Alarm Conditions

(See *Event Log Menu on Page 112*)

Table 4-6 provides likely causes of events that inhibit the unit from operating, and possible corrective actions. The Event Description column appears on the **Event Log** screen.

Table 4-6. Correcting Alarm Conditions—Alphabetical Order

Event Log Entry	Generating Condition	Clearing Condition or Action
Bridge Down	The Bridge fails to be initialized.	Contact factory Technical Services for assistance.
General System Error	Internal checks suggest unit is not functioning properly.	Reboot the transceiver.
Initialization Error	Unit fails to complete boot cycle.	Contact factory Technical Services for assistance.
Invalid IP Address	The IP address is either 0.0.0.0 or 127.0.0.1.	Program IP address to something other than 0.0.0.0 or 127.0.0.1.
Network Interface Error	Unit does not recognize the LAN interface.	Contact factory Technical Services for assistance.
RSSI Exceeds Threshold	The running-average RSSI level is weaker (more negative) than the user-defined value.	Check the aiming of the directional antenna at the Remote; raise the threshold level to a stronger (less-negative) value.

4.1.6 Logged Events

The following events allow the transceiver to continue operation and do not make the PWR LED blink. Each is reported through an SNMP trap.

The left hand column, *Event Log Entry*, is what shows in the Event Log. (See also *Event Log Menu* on Page 112.)

Table 4-7. Non-Critical Events—Alphabetical Order

Event Log Entry	Severity	Description
Association Attempt Success/Failed	MAJOR	Self explanatory
Association Lost - Local IP Address Changed	MAJOR	Self explanatory
Association Lost - Local Network Name Changed	MAJOR	Self explanatory
Association Lost/Established	MAJOR	Self explanatory
Auth Demo Mode Expired -- Rebooted Radio/Enabled	MAJOR	Self explanatory
Auth Key Entered - Key Valid/Key Invalid	MAJOR	Self explanatory
Console Access Locked for 5 Min	MAJOR	Self explanatory
Console User Logged Out/Logged In	MAJOR	Self explanatory
Current AP No Longer Approved	MAJOR	May occur during the Scanning process at a Remote. Indicates that the received beacon came from an AP which is not in the "Approved AP" list. This might be caused by some Remotes hearing multiple AP's. This event is expected behavior.
Decryption Error/Decryption OK	MAJOR	A decryption error is logged when an encryption phrase mismatch has occurred. A mismatch is declared after five consecutive errors over a 40-second window. When the error has cleared, DECRYPT OK appears.
Ethernet Port Enabled/Disabled	INFORM	Self explanatory
Ranging Lost/Established	INFORM	Self explanatory
Connecting Lost/Established	INFORM	Self explanatory
HTTP Access Locked for 5 Min	MAJOR	Self explanatory
HTTP User Logged Out/Logged In	MAJOR	httpLogin(49)
Log Cleared	INFORM	Self explanatory
Reprogramming Complete	INFORM	Self explanatory
Reprogramming Failed	MAJOR	Self explanatory
Reprogramming Started	INFORM	Self explanatory
Scanning Started	INFORM	Self explanatory
SNR Within threshold/Below threshold	INFORM	Self explanatory

Table 4-7. Non-Critical Events—Alphabetical Order (Continued)

Event Log Entry	Severity	Description
System Bootup (power on)	INFORM	Self explanatory
Telnet Access Locked for 5 Min	MAJOR	Self explanatory
Telnet User Logged Out/Logged In	MAJOR	Self explanatory
User Selected Reboot	MAJOR	Self explanatory

4.2 RADIO (RF) MEASUREMENTS

There are several measurements that should be performed during the initial installation. These measurements confirm proper operation of the unit and, if they are recorded, serve as a benchmark in troubleshooting should difficulties appear in the future. These measurements are:

- Transmitter Power Output
- Antenna System SWR (Standing-Wave Ratio)
- Antenna Direction Optimization

These procedures might interrupt traffic through an established network and should only be performed by a skilled radio-technician in cooperation with the Network Administrator.

4.2.1 Antenna System SWR and Transmitter Power Output

Introduction

A proper impedance match between the transceiver and the antenna system is important. It ensures the maximum signal transfer between the radio and antenna. You can check the impedance match indirectly by measuring the SWR (standing-wave ratio) of the antenna system. If the results are normal, record them for comparison during future routine preventive maintenance. Abnormal readings indicate possible trouble with the antenna or the transmission line, and should be corrected.

Check the SWR of the antenna system before putting the radio into regular service. For accurate readings, a wattmeter suited to the frequency of operation is required. One unit meeting this criteria is the Bird Model 43™ directional wattmeter with the appropriate element installed.

The reflected power should be less than 10% of the forward power ($\approx 2:1$ SWR). Higher readings indicate problems with the antenna, feed-line or coaxial connectors.

Record the current transmitter power output level, then set it to an adequate signal level for the directional wattmeter (for the duration of the test.)

Procedure

1. Place a directional wattmeter between the TX antenna connector and the antenna system.
2. Place the transceiver into the Radio Test Mode using the menu sequence below:
(Maintenance/Tools Menu>>Radio Test>>Radio Mode>>Test)
3. Set the transmit power to 29 dBm (900 model), or 23 dBm (3650 model). (This setting does not affect the output level during normal operation—only during Test Mode.)
(Maintenance/Tools Menu>>Radio Test >>Test Mode>>Test>>Test Transmit Power)
4. Key the transmitter.
(Maintenance/Tools Menu>>Radio Test>>Test Mode>>Test>>Test Key>>enabled)

Use the PC's spacebar to key and unkey the transmitter.
(Enable/Disable)

NOTE: The Transmit Key has a 10-minute timer, after which it unkeys the radio. Manually unkey the transmitter by selecting **Test Key>>disabled** on the menu, or temporarily disconnecting the radio's DC power.

5. Measure the forward and reflected power into the antenna system and calculate the SWR and power output level. The output should agree with the programmed value set in the Radio Configuration Menu. (Radio Configuration>>Transmit Power)
6. Turn off Radio Test Mode.
(Maintenance/Tools Menu>>Radio Test>>Test Key>>disabled)

End of procedure.

4.2.2 Antenna Aiming—For Directional Antennas

Introduction

The radio network integrity depends, in a large part, on stable radio signal levels at each end of a data link. In general, signal levels stronger than -80 dBm provide the basis for reliable communication that includes a 15 dB fade margin. As the distance between the Access Point and Remotes increases, the influence of terrain, foliage, and man-made obstructions become more influential, and the use of directional antennas at Remote locations becomes necessary. Directional antennas require fine-tuning of their bearing to optimize the received signal strength. The transceiver has a built-in received signal strength indicator (RSSI) that can tell you when the antenna is in a position that provides the optimum received signal.

RSSI measurements and Wireless Packet Statistics are based on multiple samples over a period of several seconds. The average of these measurements is displayed by the Management System.

The measurement and antenna alignment process usually takes 10 or more minutes at each radio unit.

The path to the Management System menu item is shown in bold text below each step of the procedure.

Procedure

1. Verify the Remote transceiver is associated with an Access Point unit by observing the condition of the LINK LED (**LINK LED = On or Blinking**). This indicates that you have an adequate signal level for the measurements and it is safe to proceed.
2. Record the *Wireless Packets Dropped* and *Received Error* rates.
(**Main Menu>>Performance Information>>Packet Statistics>>Wireless Packet Statistics**)

This information will be used later.

3. Clear the *Wireless Packets Statistics* history.
(**Main Menu>>Performance Information>>Packet Statistics>>Wireless Packet Statistics>>Clear Wireless Stats**)
4. Read the RSSI level at the Remote.
(**Main Menu>>Performance Information>>Internal Radio Status**)

5. Optimize RSSI (less negative is better) by slowly adjusting the direction of the antenna.

Watch the RSSI indication for several seconds after making each adjustment so that the RSSI accurately reflects any change in the link signal strength.

6. View the *Wireless Packets Dropped* and *Received Error* rates at the point of maximum RSSI level. They should be the same or lower than the previous reading.

(**Main Menu>>Performance Information>>Packet Statistics>>Wireless Packet Statistics**)

7. If the RSSI peak results in an increase in the *Wireless Packets Dropped* and *Received Error*, the antenna may be aimed at an undesired signal source. Try a different antenna orientation.

End of procedure.



5 PLANNING A RADIO NETWORK

Contents

5.1	INSTALLATION PLANNING	161
5.1.1	General Requirements	161
5.1.2	Site Selection	162
5.1.3	Terrain and Signal Strength	163
5.1.4	Antenna & Feedline Selection	163
5.1.5	How Much Output Power Can be Used?	167
5.1.6	Conducting a Site Survey	167
5.1.7	A Word About Radio Interference	168
5.1.8	ERP Compliance at 900 MHz	170
5.1.9	ERP Compliance at 3650 MHz	171
5.2	dBm-WATTS-VOLTS CONVERSION CHART	172



5.1 INSTALLATION PLANNING


This section provides tips for selecting an appropriate site, choosing an antenna system, and reducing the chance of harmful interference.

5.1.1 General Requirements

There are three main requirements for installing a transceiver—adequate and stable primary power, a good antenna system, and the correct interface between the transceiver and the data device. [Figure 5-1](#) shows a typical Remote installation.

NOTE: The transceiver’s network port supports 10BaseT and 100BaseT connections. Confirm that your hub/switch is capable of auto-switching data rates.

To prevent excessive Ethernet traffic from degrading performance, place the transceiver in a segment, or behind routers.

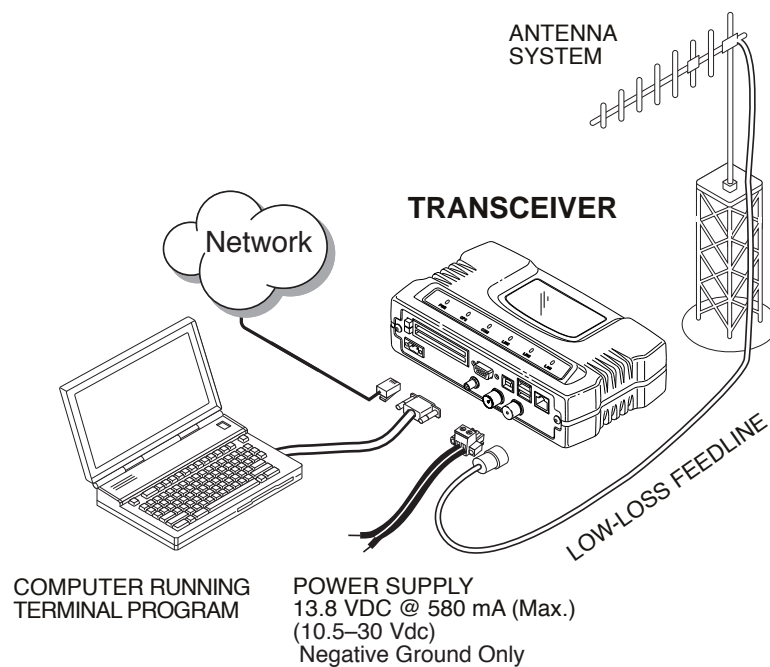

**Figure 5-1. Typical Fixed Remote Installation
With a Directional Antenna**
(Connect user data equipment to any compatible LAN Port)

Unit Dimensions

[Figure 5-2 on Page 162](#) shows the dimensions of the transceiver case and its mounting holes, and [Figure 5-3 on Page 162](#) shows the dimensions for mounting with factory-supplied brackets. If possible, choose a

mounting location that provides easy access to the connectors on the end of the radio and an unobstructed view of the LED status indicators.

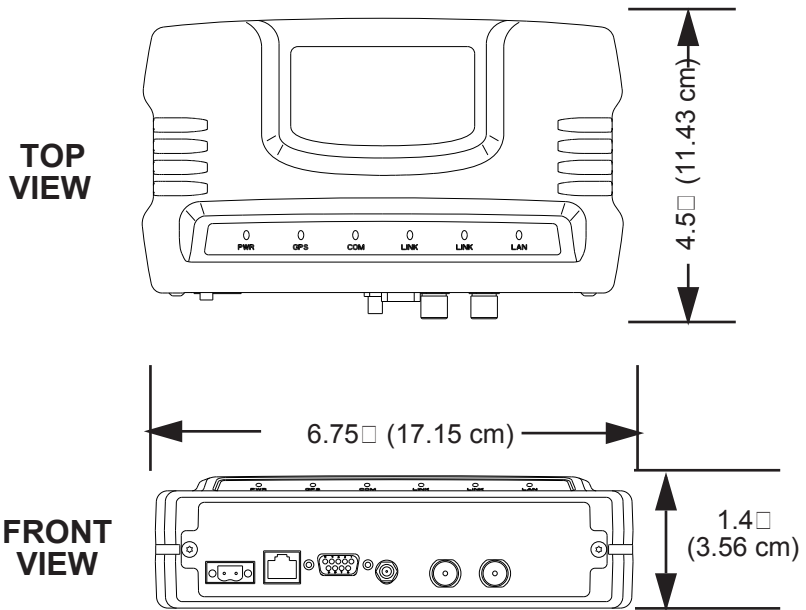


Figure 5-2. Transceiver Dimensions

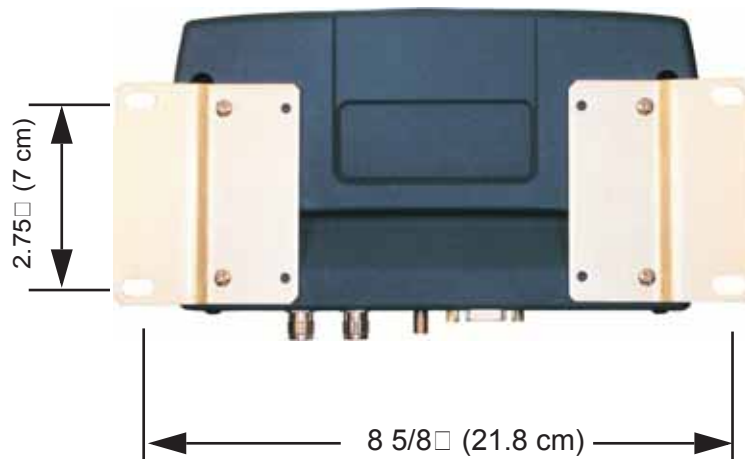


Figure 5-3. Mounting Bracket Dimensions (center to center)

NOTE: To prevent moisture from entering the radio, do not mount the radio with the cable connectors pointing up. Also, dress all cables to prevent moisture from running along the cables and into the radio.

5.1.2 Site Selection

Suitable sites should provide:

- Protection from direct weather exposure

- A source of adequate and stable primary power
- Suitable entrances for antenna, interface, or other required cabling
- An antenna location that provides a transmission path that is as unobstructed as possible in the direction of the associated station(s)

With the exception of the transmission path, you can quickly determine these requirements. Radio signals travel primarily by line-of-sight, and obstructions between the sending and receiving stations will affect system performance. If you are not familiar with the effects of terrain and other obstructions on radio transmission, the discussion below will provide helpful background.

5.1.3 Terrain and Signal Strength

While the license-free bands offers many advantages for data transmission services, signal propagation is attenuated by obstructions such as terrain, foliage, or buildings in the transmission path. A line-of-sight transmission path between the central transceiver and its associated remote site(s) is highly desirable and provides the most reliable communications link.

Much depends on the minimum signal strength that can be tolerated in a given system. Although the exact figure will differ from one system to another, a Received Signal Strength Indication (RSSI) of -80 dBm or stronger will provide acceptable performance in most systems. While the equipment will work at lower-strength signals, signals stronger than -77 dBm provide a *fade margin* of 15 dB to account for variations in signal strength that might occur. You can measure RSSI with a terminal connected to the COM1 port, or with an HTTP browser connected to the LAN (Ethernet) connector. (See “*Antenna Aiming—For Directional Antennas*” on Page 156 for details.)

5.1.4 Antenna & Feedline Selection

NOTE: The transceiver must be installed by trained professional installers, or factory trained technicians.

The following text will help the professional installer in the proper methods of maintaining compliance with regulatory ERP limits.

Antennas

The radio equipment can be installed with a number of antennas. The exact style used depends on the physical size and layout of a system. Contact your factory representative for specific recommendations on antenna types and hardware sources.

In general, an omnidirectional antenna (Figure 5-4) is used at the Access Points and mobile Remote stations. This provides equal signal coverage in all directions.

NOTE: Antenna polarization is important. If the wrong polarization is used, a signal reduction of 20 dB or more will result. Most systems using a gain-type omnidirectional antenna at Access Point stations employ vertical polarization of the signal; therefore, the Remote antenna(s) must also be vertically polarized (elements oriented perpendicular to the horizon).

When required, horizontally polarized omnidirectional antennas are also available. Contact your factory representative for details.

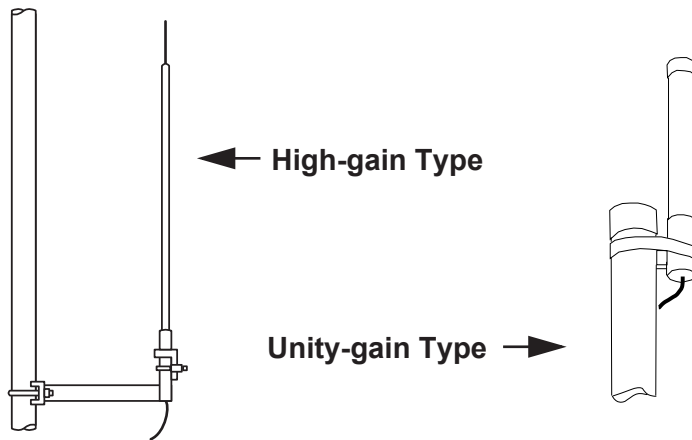


Figure 5-4. Typical Omnidirectional Antennas

At fixed Remote sites, a directional Yagi antenna (Figure 5-5 on Page 164) minimizes interference to and from other users. Antennas are available from a number of manufacturers.

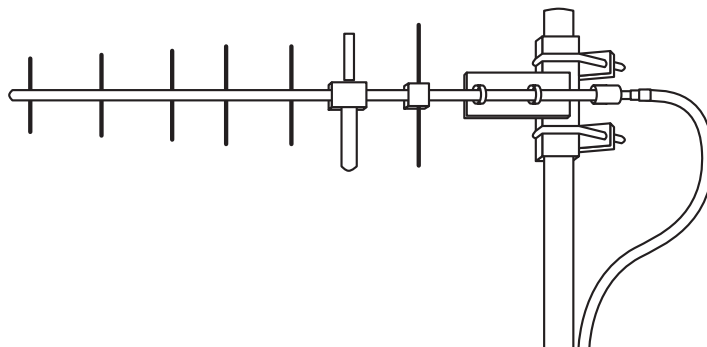


Figure 5-5. Typical Yagi Antenna (mounted to mast)

Diversity Reception (RX2) Antenna Port

Functional on some models. The RX2 antenna port allows connection of a second antenna to the transceiver for space diversity reception.

GPS Antennas

A number of GPS antennas (both active and passive) are available for use with the transceivers. Consult your factory representative for more information.

Feedlines

Carefully consider the choice of feedline used with the antenna. Avoid poor-quality coaxial cables, as they degrade system performance for both transmission and reception. A low-loss cable type such as HeliAx® is recommended that is suitable for the frequency of operation. Keep the cable as short as possible to minimize signal loss.

Table 5-1 lists several types of popular feedlines and indicates the signal losses (in dB) that result when using various lengths of cable at 900 MHz. The choice of cable depends on the required length, cost considerations, and the acceptable amount of signal loss. Table 5-1 lists

Table 5-1. Length vs. Loss in Coaxial Cables at 900 MHz

Cable Type	10 Feet (3.05 m)	50 Feet (15.24 m)	100 Feet (30.48 m)	500 Feet (152.4 m)
RG-214	.76 dB	3.8 dB	7.6 dB	Unacceptable Loss
LMR-400	0.39 dB	1.95 dB	3.90 dB	Unacceptable Loss
1/2 inch HELIAX	0.23 dB	1.15 dB	2.29 dB	11.45 dB
7/8 inch HELIAX	0.13 dB	0.64 dB	1.28 dB	6.40 dB
1-1/4 inch HELIAX	0.10 dB	0.48 dB	0.95 dB	4.75 dB
1-5/8 inch HELIAX	0.08 dB	0.40 dB	0.80 dB	4.00 dB

several types of popular feedlines and indicates the signal losses (in dB) that result when using various lengths of cable at 900 MHz. The choice of cable depends on the required length, cost considerations, and the acceptable amount of signal loss.

Table 5-2. Length vs. Loss in Coaxial Cables at 3600 MHz

Cable Type	10 Feet (3.05 m)	50 Feet (15.24 m)	100 Feet (30.48 m)	500 Feet (152.4 m)
RG-214	3.04 dB	15.2 dB	Unacceptable Loss	Unacceptable Loss
LMR-400	1.56 dB	7.8 dB	15.6 dB	Unacceptable Loss

Table 5-2. Length vs. Loss in Coaxial Cables at 3600 MHz

Cable Type	10 Feet (3.05 m)	50 Feet (15.24 m)	100 Feet (30.48 m)	500 Feet (152.4 m)
1/2 inch HELIAX	0.92 dB	4.6 dB	9.16 dB	Unacceptable Loss
7/8 inch HELIAX	0.52 dB	2.56 dB	5.12 dB	Unacceptable Loss
1-1/4 inch HELIAX	0.40 dB	1.92 dB	3.8 dB	19 dB
1-5/8 inch HELIAX	0.32 dB	1.6 dB	3.2 dB	16 dB

The tables below outline the minimum lengths of RG-214 coaxial cable that must be used with common GE MDS omnidirectional antennas in order to maintain compliance with FCC maximum limit of +36 dBi. If other coaxial cable is used, make the appropriate changes in loss figures.

NOTE: The authority to operate the transceiver in the USA may be void if antennas other than those approved by the FCC are used. Contact your factory representative for additional antenna information.

Table 5-3. Feedline Length vs. Antenna Gain*
(Required for Regulatory Compliance)

Antenna Gain (dBd)	Antenna Gain (dBi)	Minimum Feedline Loss (dB) that must be introduced for compliance	EIRP Level @ Min. Feedline Length	Maxrad Antenna Part No. (For 900 MHz Operation)
Unity (0 dB)	2.15 dBi	No minimum length	+32.15 dBm	Omni #MFB900
3 dBd	5.15 dBi	No minimum length	+35.15 dBm	Omni # MFB900
5 dBd	7.15 dBi	1.2 dB	+35.95 dBm	Omni # MFB900
6 dBd	8.15 dBi	2.2 dB	+35.95 dBm	Yagi # BMOY8903
9 dBd	11.15 dBi	7.15 dB	+35.25 dBm	Yagi # Z941
15.2 dBd	17.4 dBi	12 dB	+35.4 dBm	Andrew DB878G90A-XY

*Refer to [Table 5-4 on Page 170](#) for allowable transceiver power settings for each antenna type.

NOTE: There is no minimum feedline length required when a 6 dBi gain or less antenna is used, as the EIRP will never exceed 36 dBm which is the maximum allowed, per FCC rules. Only the manufacturer or a sub-contracted professional installer can adjust the transceiver's RF output power.

The transceiver's power output is factory set to maintain compliance with the FCC's Digital Transmission System (DTS) Part 15 rules. These rules limit power to a maximum of 8 dBm/3 kHz, thus the transceiver is factory set to +29 dBm (900 model); 23 dBm (3650 model). When calculating maximum transceiver power output, use +29 dBm if the antenna gain is 6 dBi or less (36 dBm ERP). See *How Much Output Power Can be Used?* below for power control of higher gain antennas.

5.1.5 How Much Output Power Can be Used?

The transceiver is normally configured at the factory for a nominal RF power output of +29 dBm (900 model); +23 dBm (3650 model) this is the maximum transmitter output power allowed under FCC rules. The power must be *decreased* from this level if the antenna system gain exceeds 6 dBi. The allowable level is dependent on the antenna gain, feedline loss, and the transmitter output power setting.

NOTE: In some countries, the maximum allowable RF output might be limited to less than the figures referenced here. Be sure to check for and comply with the requirements for your area.

5.1.6 Conducting a Site Survey

If you are in doubt about the suitability of the radio sites in your system, it is best to evaluate them before a permanent installation is underway. You can do this with an on-the-air test (preferred method), or indirectly, using path-study software.

An on-the-air test is preferred because it allows you to see firsthand the factors involved at an installation site, and to directly observe the quality of system operation. Even if a computer path study was conducted earlier, perform this test to verify the predicted results.

Perform the test by first installing a radio and antenna at the proposed Access Point (AP) station site (one-per-system). Then visit the Remote site(s) with another transceiver (programmed as a remote) and a hand-held antenna. (A PC with a network adapter can be connected to each radio in the network to simulate data during this test, using the PING command.)

With the hand-held antenna positioned near the proposed mounting spot, a technician can check for synchronization with the Access Point

station (shown by a lit LINK LED on the front panel), then measure the reported RSSI value. (See “*Antenna Aiming—For Directional Antennas*” on Page 156 for details.) If you cannot obtain adequate signal strength, it might be necessary to mount the station antennas higher, use higher gain antennas, select a different site, or install a repeater station. To prepare the equipment for an on-the-air test, follow the general installation procedures given in this guide and become familiar with the operating instructions found in the *CHAPTER-2 TABLETOP EVALUATION AND TEST SETUP* on Page 21.

5.1.7 A Word About Radio Interference

The transceiver shares the radio-frequency spectrum with other services and users. Completely error-free communications might not be achievable in a given location, and some level of interference should be expected. However, the radio’s flexible design and hopping techniques should allow adequate performance as long as you carefully choose the station location, configuration of radio parameters, and software/protocol techniques.

In general, keep the following points in mind when setting up your communications network:

- Systems installed in rural areas are least likely to encounter interference; those in suburban and urban environments are more likely to be affected by other devices operating in the license-free frequency band and by adjacent licensed services.
- Use a directional antenna at remote sites whenever possible. Although these antennas may be more costly than omnidirectional types, they confine the transmission and reception pattern to a comparatively narrow lobe, minimizing interference to (and from) stations located outside the pattern.
- If interference is suspected from a nearby licensed system (such as a paging transmitter), it might be helpful to use horizontal polarization of all antennas in the network. Because most other services use vertical polarization in this band, you can achieve an additional 20 dB of attenuation to interference by using horizontal polarization. Another approach is to use a bandpass filter to attenuate all signals outside the desired band.
- Multiple Access Point units can co-exist in proximity to each other with no interference. The APs should be configured to operate in TDD Sync Mode, where their transmissions are synchronized to GPS timing. See “*Protected Network Operation using Multiple APs*” on Page 16. For additional isolation, separate directional antennas with as much vertical or horizontal separation as is practical.
- The power output of all radios in a system should be set for the lowest level necessary for reliable communications. This reduces the

chance of causing unnecessary interference to nearby systems and also keeps power consumption to a minimum.

Configuring Mercury 3650 for Shared Spectrum Use (Contention-Based Protocol)

While the Mercury 3650 has been designed to reduce the effects of interferers outside of the RF channel, cases may arrive where interferers may cause undesired operation. In the case of WiMAX interferers, proper configuration of the radio may reduce these effects.

The radio employs a WiMAX contention protocol that effectively reduces the amount of interference the network may cause to other co-located WiMAX networks using the same channel. In addition, proper configuration of the radio will help to reduce the effects of other WiMAX hardware attempting to do the same.

Remote radios receive scheduling information from a central base station (AP). This scheduling information destined for a given remote includes when to transmit, the duration of transmission, and modulation selection. In the event the intended Remote unit is unable to receive or interpret this information from the AP, the Remote will persist in receive mode only.

The radio allows the installer to configure an Approved Access Point list that contains the MAC addresses of desired AP radios in the network. When an Access Point sends scheduling data to the Remote unit, the Remote compares the MAC Address of the AP to this approved MAC address list, and discards the scheduling information if it has originated from a “foreign” network.

In order to maximize the performance of a shared network, the following configuration is recommended:

1. The Mercury 3650 network should be set to operate on the same channel frequency as the network the channel is shared with. Slight offsets in frequency between two collocated systems will cause on-channel interference that is not decodable by either system. Having both systems operate on the same frequency allows the radio to decode WiMAX scheduling information from the interfering AP.
2. Configure the approved AP list using the AP Locations file as specified in the *AP Location Push Config Menu* on Page 59. After the Remote unit has received scheduling information from the interfering network, it will compare the MAC address of this radio to its AP Locations File. When the MAC address does not match, the radio will ignore this information from the interfering AP and continue to wait for valid scheduling information from an AP in the desired network.

5.1.8 ERP Compliance at 900 MHz

To determine the maximum allowable power setting of the radio, perform the following steps:

1. Determine the antenna system gain by subtracting the feedline loss (in dB) from the antenna gain (in dBi). For example, if the antenna gain is 9.5 dBi, and the feedline loss is 1.5 dB, the antenna system gain would be 8 dB. (If the antenna system gain is 6 dB or less, no power adjustment is required.)
2. Subtract the antenna system gain from 36 dBm (the maximum allowable EIRP). The result indicates the maximum transmitter power (in dBm) allowed under the rules. In the example above, this is 28 dBm.
3. Set the transmitter power so that it does not exceed the maximum level determined in Step 2.

(Main Menu>>Radio Configuration>>Transmit Power)

Refer to [Table 5-4](#), which lists several antenna system gains and shows the maximum allowable power setting of the radio. Note that a gain of 6 dB or less entitles you to operate the radio at full power output –30 dBm.

For MDS 3650 units, refer also to the section titled *ERP Compliance at 3650 MHz* below.

Table 5-4. Examples of Antenna System Gain vs. Power Output Setting (900 MHz)

Antenna System Gain (Antenna Gain in dBi* minus Feedline Loss in dB)	Maximum Power Setting (PWR command)	EIRP (in dBm)
Omni 6 (or less)	29	35
Omni 11	25	36
Yagi 11	23	36
Half Parabolic 16	20	36
Panel 17.4**	20	36

* Most antenna manufacturers rate antenna gain in dBd in their literature. To convert to dBi, add 2.15 dB.

** Must use with the appropriate length of feedline cable to reduce transmitter power by at least 2 dB. Feedline loss varies by cable type and length. To determine the loss for common lengths of feedline, see [Table 5-1 on Page 165](#).

5.1.9 ERP Compliance at 3650 MHz

To maintain regulatory compliance for Effective Radiated Power (ERP) of **1-Watt per MHz**, the following table of transmit power settings must

be observed for the listed bandwidths and antenna types approved. Consult the factory for other antenna options of lower gain.

Antenna Gain	Radio Configuration	Radio Power Setpoint (dBm)	Power Density (dBm/MHz)
13 dBi	Omni antenna, 1.75 MHz BW	20	29.3
13 dBi	Omni antenna, 3.5 MHz BW	23	27.7
13 dBi	Omni antenna, 5 MHz BW	23	29.1
13 dBi	Omni antenna, 7 MHz BW	23	27.7
13 dBi	Omni antenna, 10 MHz BW	23	24.7
13 dBi	Omni antenna, 14 MHz BW	23	24.8
18 dBi	Panel antenna, 1.75 MHz BW	14	29.0
18 dBi	Panel antenna, 3.5 MHz BW	17	29.7
18 dBi	Panel antenna, 5 MHz BW	19	29.9
18 dBi	Panel antenna, 7 MHz BW	20	29.8
18 dBi	Panel antenna, 10 MHz BW	23	29.7
18 dBi	Panel antenna, 14 MHz BW	23	29.8

5.2 dBm-WATTS-VOLTS CONVERSION CHART

Table 5-5 is provided as a convenience for determining the equivalent voltage or wattage of an RF power expressed in dBm.

Table 5-5. dBm-Watts-Volts conversion—for 50 ohm systems

dBm	V	Po	dBm	V	Po	dBm	mV	Po	dBm	□V	Po
+53	100.0	200W	0	.225	1.0mW	-49	0.80		-98	2.9	
+50	70.7	100W	-1	.200	.80mW	-50	0.71	.01□W	-99	2.51	
+49	64.0	80W	-2	.180	.64mW	-51	0.64		-100	2.25	.1pW
+48	58.0	64W	-3	.160	.50mW	-52	0.57		-101	2.0	
+47	50.0	50W	-4	.141	.40mW	-53	0.50		-102	1.8	
+46	44.5	40W	-5	.125	.32mW	-54	0.45		-103	1.6	
+45	40.0	32W	-6	.115	.25mW	-55	0.40		-104	1.41	
+44	32.5	25W	-7	.100	.20mW	-56	0.351		-105	1.27	
+43	32.0	20W	-8	.090	.16mW	-57	0.32		-106	1.18	
+42	28.0	16W	-9	.080	.125mW	-58	0.286				
+41	26.2	12.5W	-10	.071	.10mW	-59	0.251				
+40	22.5	10W	-11	.064		-60	0.225	.001□W	-107	1000	
+39	20.0	8W	-12	.058		-61	0.200		-108	900	
+38	18.0	6.4W	-13	.050		-62	0.180		-109	800	
+37	16.0	5W	-14	.045		-63	0.160		-110	710	.01pW
+36	14.1	4W	-15	.040		-64	0.141		-111	640	
+35	12.5	3.2W	-16	.0355					-112	580	
+34	11.5	2.5W				dBm	□V	Po	dBm	nV	Po
+33	10.0	2W	dBm	mV	Po	-65	128		-113	500	
+32	9.0	1.6W	-17	31.5		-66	115		-114	450	
+31	8.0	1.25W	-18	28.5		-67	100		-115	400	
+30	7.10	1.0W	-19	25.1		-68	90		-116	355	
+29	6.40	800mW	-20	22.5	.01mW	-69	80		-117	325	
+28	5.80	640mW	-21	20.0		-70	71	.1nW	-118	285	
+27	5.00	500mW	-22	17.9		-71	65		-119	251	
+26	4.45	400mW	-23	15.9		-72	58		-120	225	.001pW
+25	4.00	320mW	-24	14.1		-73	50		-121	200	
+24	3.55	250mW	-25	12.8		-74	45		-122	180	
+23	3.20	200mW	-26	11.5		-75	40		-123	160	
+22	2.80	160mW	-27	10.0		-76	35		-124	141	
+21	2.52	125mW	-28	8.9		-77	32		-125	128	
+20	2.25	100mW	-29	8.0		-78	29		-126	117	
+19	2.00	80mW	-30	7.1	.001mW	-79	25		-127	100	
+18	1.80	64mW	-31	6.25		-80	22.5	.01nW	-128	90	
+17	1.60	50mW	-32	5.8		-81	20.0		-129	80	.1~W
+16	1.41	40mW	-33	5.0		-82	18.0		-130	71	
+15	1.25	32mW	-34	4.5		-83	16.0		-131	61	
+14	1.15	25mW	-35	4.0		-84	11.1		-132	58	
+13	1.00	20mW	-36	3.5		-85	12.9		-133	50	
+12	.90	16mW	-37	3.2		-86	11.5		-134	45	
+11	.80	12.5mW	-38	2.85		-87	10.0		-135	40	
+10	.71	10mW	-39	2.5		-88	9.0		-136	35	
+9	.64	8mW	-40	2.25	.1□W	-89	8.0		-137	33	
+8	.58	6.4mW	-41	2.0		-90	7.1	.001nW	-138	29	
+7	.500	5mW	-42	1.8		-91	6.1		-139	25	
+6	.445	4mW	-43	1.6		-92	5.75		-140	23	.01~W
+5	.400	3.2mW	-44	1.4		-93	5.0				
+4	.355	2.5mW	-45	1.25		-94	4.5				
+3	.320	2.0mW	-46	1.18		-95	4.0				
+2	.280	1.6mW	-47	1.00		-96	3.51				
+1	.252	1.25mW	-48	0.90		-97	3.2				



6 TECHNICAL REFERENCE

Contents

6.1 DATA INTERFACE CONNECTORS	175
6.1.1 LAN Port	175
6.1.2 COM1 Port	175
6.2 SPECIFICATIONS	176
6.3 NOTES ON SNMP	179
6.3.1 Overview	179



6.1 DATA INTERFACE CONNECTORS

Two types of data interface connectors are provided on the front panel of the transceiver—an RJ-45 LAN port, and a DB-9 serial port (COM1), which uses the RS-232 (EIA-232) signaling standard.



The transceiver meets U.S.A.'s FCC Part 15, Class A limits when used with shielded data cables.

6.1.1 LAN Port

Use the transceiver's LAN port to connect the radio to an Ethernet network. The transceiver provides a data link to an Internet Protocol-based (IP) network via the Access Point station. Each radio in the network must have a unique IP address for the network to function properly.

- To connect a PC directly to the radio's LAN port, an RJ-45 to RJ-45 cross-over cable is required.
- To connect the radio to an Ethernet hub or bridge, use a straight-through cable.

The connector uses the standard Ethernet RJ-45 cables and wiring. For custom-made cables, use the pinout information in [Figure 6-1](#) and [Table 6-1](#).

 


Figure 6-1. LAN Port (RJ-45) Pinout
(Viewed from the outside of the unit)

Table 6-1. LAN Port (IP/Ethernet)

Pin	Functions	Ref.
1	Transmit Data (TX)	High
2	Transmit Data (TX)	Low
3	Receive Data (RX)	High
4	Unused	
5	Unused	
6	Receive Data (RX)	Low
7	Unused	
8	Unused	

6.1.2 COM1 Port

The COM1 serial port is a standard DB-9 female connector. Connect a PC to the transceiver via this port with a DB-9M to DB-9F

“straight-through” cable. These cables are available commercially, or may be constructed using the pinout information in [Table 6-2](#).

Table 6-2. COM1 Port Pinout, DB-9F/RS-232 Interface

Pin	Functions	DCE
1	Unused	
2	Receive Data (RXD)	<--[Out
3	Transmit Data (TXD)	-->[In
4	Unused	
5	Signal Ground (GND)	
6-9	Unused	

6.2 SPECIFICATIONS

General

- Raw Bit Rate: from 600 kbps to 12.7 Mbps
- Frequency Bands: 902-928 MHz ISM band
3.65-3.7 GHz Registered FCC band
- Bandwidths: 900 model—1.75, 3.5 MHz
3650 model—1.75, 3.5, 5, 7 MHz
- Orthogonal Frequency Division Multiplexing (OFDM)
 - 200 Carriers per Channel
- Available Configurations:
 - Access Point: Ethernet, Serial, GPS
 - Remote: Ethernet, Serial, GPS

Radio

- System Gain: 140 dB for 1.75 MHz channel, 137 dB for 3.5 MHz channel
- Carrier Power—AP: -30 to +29 dBm, RM: 0 to +29 dBm (900 models); +23 dBm max. (3650 model)
- RF Output Impedance: 50 Ohms
- Sensitivity and Signal Rate (see [Table 6-3](#)):

Table 6-3. Sensitivity and Signal Rate

Channel BW	1.75 MHz		3.5 MHz		5 MHz		7 MHz	
	SR	AET	SR	AET	SR	AET	SR	AET
MERCURY 3650								
BPSK	-99	-96	-95	-94				
QPSK FEC 1/2	-96	-93	-91	-90				
QPSK FEC 3/4	-93	-90	-88	-87				
16QAM FEC 1/2	-90	-87	-85	-84				
16QAM FEC 3/4	-87	-84	-82	-81				
64QAM FEC 2/3	-84	-81	-79	-78				
MERCURY 900								
BPSK FEC 1/2	-98	-95	N/A	N/A				
QPSK FEC 1/2	-95	-92	N/A	N/A				
QPSK FEC 3/4	-92	-89	N/A	N/A				
16QAM FEC 1/2	-89	-86	N/A	N/A				
16-QAM FEC 3/4	-86	-83	N/A	N/A				
64-QAM FEC 2/3	-83	-80	N/A	N/A				
MERCURY 3650								
BPSK	0.71	0.30	1.41	0.97	2.02	1.30	2.82	1.78
QPSK FEC 1/2	1.41	0.95	2.82	2.09	4.03	2.76	5.65	3.58
QPSK FEC 3/4	2.12	1.51	4.24	3.19	6.05	4.10	8.47	6.01
16QAM FEC 1/2	2.82	2.01	5.65	3.61	8.06	5.72	11.29	7.52
16QAM FEC 3/4	4.24	2.99	8.47	5.52	12.10	7.46	16.94	8.11
64QAM FEC 2/3	5.60	3.84	11.18	6.36	15.97	8.67	22.36	8.86
MERCURY 900*								
BPSK FEC 1/2	0.71	0.30	1.41	0.96	N/A	N/A	N/A	N/A
QPSK FEC 1/2	1.41	0.96	2.82	2.09	N/A	N/A	N/A	N/A
QPSK FEC 3/4	2.12	1.51	4.24	3.20	N/A	N/A	N/A	N/A
16QAM FEC 1/2	2.82	2.01	5.65	3.60	N/A	N/A	N/A	N/A
16-QAM FEC 3/4	4.24	2.99	8.47	5.52	N/A	N/A	N/A	N/A
64-QAM FEC 2/3	5.60	3.84	11.18	6.36	N/A	N/A	N/A	N/A

Note that the transceiver is a half-duplex radio, so maximum user throughput is based on a configured or dynamic duty cycle, which is typically 50/50 indicating that half of the maximum throughput would be available one way. The maximum user throughput is also based on high protocol overhead from TCP/IP applications. For UDP applications, these throughput numbers will increase.

Physical Interface

- Ethernet: 10/100BaseT, RJ-45
- Serial: 1,200 – 115,200 bps
 - COM1: RS-232, DB-9F
- Antennas: TX/RX–TNC connector, GPS—SMA connector
- LED Indicators: PWR, COM1, LINK, LAN

Protocols (Pending—contact factory for details)

- Ethernet: IEEE 802.3, Spanning Tree (Bridging), VLAN, IGMP
- TCP/IP: DHCP, ICMP, UDP, TCP, ARP, Multicast, SNMP, TFTP
- Serial: Encapsulation over IP (tunneling) for serial async multi-drop protocols including MODBUS™, DNP.3, DF1, BSAP

GE MDS Cyber Security Suite, Level 1

- Encryption: AES-128.
- Authentication: 802.1x, RADIUS, EAP/TLS, PKI, PAP, CHAP
- Management: SSL, SSH, HTTPS

Management

- HTTP, HTTPS, TELNET, SSH, local console
- SNMPv1/v2/v3, MIB-II, Enterprise MIB
- SYSLOG
- MDS NETview MS™ compatible

Environmental

- Temperature: -40°C to +70°C (-40°F to +158°F)
- Humidity: 95% at 40°C (104°F) non-condensing

Electrical

- Input Power: 10-30 Vdc
- Current Consumption (nominal):

Mode	Power	13.8 Vdc	24 Vdc
AP Transmit	25 W	1.8 A	1.0 A
AP Receive	8 W	579 mA	333 mA
RM Transmit	25W	1.8 mA	1.0 A
RM Receive	6.5W	471 mA	270 mA

Mechanical

- Case: Die Cast Aluminum
- Dimensions: 5.715 H x 20 W x 12.382 D cm. (2.25 H x 7.875 W x 4.875 D in.)
- Weight: 1kg (2.2 lb.)
- Mounting options: Flat surface mount brackets, DIN rail, 19” rack tray

External GPS PPS Option

Parameter	Minimum	Maximum
Pulse Voltage (logic low)	0 V	1 V
Pulse Voltage (logic high)	1.7 V	10 V
Source Impedance (ohms)	—	200 Ω
Duty Cycle (ton)	0.0001% (1 μ sec)	50% (0.5 sec)
Operating Frequency	0.99999999 Hz (-0.1 ppm error)	1.00000001 Hz (+0.1 ppm error)
Module Clamping Voltage	2.7 V	3.3 V
Module Input Resistance	150 Ω (Vin >2.6 V)	10 k Ω (Vin < 2 V)
Input Hysteresis	7 mV	N/A

Agency Approvals

- FCC Part 15.247 (DTS)
- CSA Class 1 Div. 2, (CSA C22.2-213-M1987 & CSA C22.2-142-M1987) (UL1604 & UL916)
- IC RSS-210 “Issue 7”

NOTE: GE MDS products are manufactured under a quality system certified to ISO 9001. GE MDS reserves the right to make changes to specifications of products described in this manual at any time without notice and without obligation to notify any person of such changes.

6.3 NOTES ON SNMP

6.3.1 Overview

The firmware release described in this manual contains changes to the transceiver’s SNMP Agent, several new MIB variables, and new Agent configuration options. This guide reviews the changes and shows how to properly configure the Agent to take advantage of these new features.

SNMPv3 Support

The updated SNMP Agent now supports SNMP version 3 (SNMPv3). The SNMPv3 protocol introduces Authentication (MD5/SHA-1), Encryption (DES), the USM User Table, and View-Based Access (refer

to RFC2574 for full details). The SNMP Agent has limited SNMPv3 support in the following areas:

- Only MD5 Authentication is supported (no SHA-1). SNMPv3 provides support for MD5 and SHA-1.
- Limited USM User Table Manipulation. The SNMP Agent starts with 5 default accounts. New accounts can be added (SNMPv3 adds new accounts by cloning existing ones), but they will be volatile (will not survive a power-cycle).

New views cannot be configured on the SNMP Agent. Views are inherited for new accounts from the account that was cloned.

The SNMP Agent uses one password pair (Authentication/Privacy) for all accounts. This means that when the passwords change for one user, they change for all users.

SNMPv3 Accounts

The following default accounts are available for the SNMP Agent:

enc_mdadmin—Read/write account using Authentication and Encryption.

auth_mdadmin—Read/write account using Authentication.

enc_mdviewer—Read only account using Authentication and Encryption.

auth_mdviewer—Read only account using Authentication.

def_mdviewer—Read only account with no Authentication or Encryption.

Context Names

The following Context Names are used (refer to RFC2574 for full details):

Admin accounts: **context_a**/Viewer accounts: **context_v**.

All accounts share the same default passwords:

Authentication default password: **MDSAuthPwd**/Privacy default password: **MDSPrivPwd**.

Passwords can be changed either locally (via the console) or from an SNMP Manager, depending on how the Agent is configured. If passwords are configured and managed locally, they are non-volatile and will survive a power-cycle. If passwords are configured from an SNMP manager, they will be reset to whatever has been stored for local management on power-cycle.

This behavior was chosen based on RFC specifications. The SNMP Manager and Agent do not exchange passwords, but actually exchange *keys* based on passwords. If the Manager changes the Agent's password, the Agent does not know the new password. The Agent only knows the new key. In this case, only the Manager knows the new password. This could cause problems if the Manager loses the password. If that happens, the Agent becomes unmanageable. Resetting the Agent's passwords (and therefore keys) to what is stored in flash memory upon power-cycle prevents the serious problem of losing the Agent's passwords.

If passwords are managed locally, they can be changed on the Agent (via the console). Any attempts to change the passwords for the Agent via an SNMP Manager will fail when the Agent is in this mode. Locally defined passwords will survive a power-cycle.

In either case, the SNMP Manager needs to know the initial passwords being used in order to talk to the Agent. If the Agent's passwords are configured via the Manager, they can be changed from the Manager. If the passwords are managed locally, then the Manager must be re-configured with any password changes in order to continue talking to the Agent.

Password-Mode Management Changes

When the password management mode is changed, the active passwords used by the Agent may also change. Some common scenarios are discussed below:

Common Scenarios

- Passwords are currently being handled by the Manager. The assigned passwords are **Microwave** (Auth), and **Rochester** (Priv). Configuration is changed to manage the passwords locally. The passwords stored on the radio were Fairport (Auth), and Churchville (Priv) (if local passwords have *never* been used, then MDSAAuthPwd and MDSPrivPwd are used). These passwords will now be used by the Agent to re-generate keys. The Manager must know these passwords to talk to the Agent.
- Passwords are currently managed locally. The local passwords are **Fairport** (Auth) and **Churchville** (Priv). Configuration is changed to handle the passwords from the Manager. The same passwords will continue to be used, but now the Manager can change them.
- Passwords are currently managed locally. The local passwords are **Fairport** (Auth) and **Churchville** (Priv). Passwords are changed to **Brighton** (Auth) and **Perinton** (Priv). The Agent will immediately generate new keys based on these passwords and start using them. The Manager will have to be re-configured to use these new passwords.

- Passwords are currently managed locally. The local passwords are **Fairport** (Auth) and **Churchville** (Priv). Configuration is changed to handle the passwords from the Manager. The Manager changes the passwords to **Brighton** (Auth) and **Perinton** (Priv). The radio is then rebooted. After a power-cycle, the radio will use the passwords stored in flash memory, which are **Fairport** (Auth) and **Churchville** (Priv). The Manager must be re-configured to use these new passwords.

Table 6-4. SNMP Traps (Sorted by Code)

SNMP Trap	Severity	Description
bootup(34)	CRITICAL	System Bootup
reboot(35)	MAJOR	User Selected Reboot
reprogStarted(36)	INFORM	Reprogramming Started
reprogCompleted(37)	INFORM	Reprogramming Completed
reprogFailed(38)	MAJOR	Reprogramming Failed
telnetLogin(39)	MAJOR	Telnet/SSH User login/logout
httpLogin(40)	MAJOR	HTTP User login/logout
logClear(41)	INFORM	Event Log Cleared
dhcpServer(42)	INFORM	DHCP server enabled/disabled
dhcpClient(43)	INFORM	DHCP client enabled/disabled
dhcpAddr(44)	MINOR	Obtained DHCP address
timeNotSet(45)	INFORM	Date/time not set
timeByUser(46)	INFORM	Date/time changed by user
timeFromServer(47)	INFORM	Date/time from server
consoleLogin(48)	MAJOR	Console user login/logout
httpLockdown(49)	MAJOR	HTTP Access locked down
parmChanged(50)	INFORM	Parameter changed
cfgscript(51)	INFORM	Configuration script generated/received
authKey(52)	MAJOR	Authorization key entered - valid/invalid
authDemo(53)	MAJOR	Demo authorization enabled/expired
maxDemos(54)	CRITICAL	Max demos reset/reached
modemRestart(55)	MAJOR	Modem restarted
internalError(56)	MAJOR	Internal error
gpsRestarted(57)	MAJOR	GPS Restarted
remoteConnection(58)	INFORM	Remote associated/disassociated
imageCopyStarted(59)	INFORM	Firmware image copy started
imageCopyComplete(60)	INFORM	Firmware image copy complete
imageCopyFailed(61)	MAJOR	Firmware image copy failed
connectionStatus(64)	INFORM	Connection status change
connAbort(65)	MAJOR	Connection aborted
authenticating(66)	INFORM	Authenticating to Access Point

Table 6-4. SNMP Traps (Sorted by Code) (Continued)

SNMP Trap	Severity	Description
association(67)	MAJOR	Associated to Access Point established/lost
redundLackRem(72)	MAJOR	Lack of associated remotes exceeded threshold for P21 AP
redundRecvErr(73)	MAJOR	Packet receive errors exceeded threshold for P21 AP
redundForced(74)	MAJOR	P21 AP forced switchover
redundancySwitch(75)	MAJOR	P21 AP auto switchover
radioError(76)	CRITICAL	Radio error
procopen(77)	MAJOR	Proc filesystem access failed
proformat(78)	MAJOR	Unexpected proc filesystem format
csropen(79)	MAJOR	Failed to open CSR device
csrstatus(80)	MAJOR	CSR read failed
csrctrlsignal(81)	MAJOR	CSR write failed
bandwidthMismatch(83)	INFORM	Bandwidth of AP in Locations file does not match this unit
gpsSync(84)	INFORM	GPS synchronized/lost sync
gpsTddSync(85)	INFORM	TDD synchronized/lost sync
tftpClientConn(86)	INFORM	TFTP Connection to Client Opened/Closed
tftpClientError(87)	MAJOR	Error in TFTP Transfer to Client
autoUpgrade(88)	MAJOR	Auto Firmware Upgrade Retry Scheduled/Starting
autoReboot(89)	MAJOR	Auto Firmware Boot Failed/Starting
certVerify(90)	CRITICAL	X.509 certificates loaded/failed
certChainVerify(91)	CRITICAL	Certificate chain verified/invalid
paTemp(92)	MAJOR	PowerAmp temperature Normal/Too hot



7 GLOSSARY OF TERMS AND ABBREVIATIONS

If you are new to wireless IP/Ethernet systems, some of the terms used in this manual might be unfamiliar. The following glossary explains many of these terms and will prove helpful in understanding the operation of your radio network. Some of these terms do not appear in the manual, but are often encountered in the wireless industry, and are therefore provided for completeness.

Access Point (AP)—The transceiver in the network that provides synchronization information to one or more associated Remote units. See “*Network Configuration Menu*” on Page 45.

AGC—Automatic Gain Control

Antenna System Gain—A figure, normally expressed in dB, representing the power increase resulting from the use of a gain-type antenna. System losses (from the feedline and coaxial connectors, for example) are subtracted from this figure to calculate the total antenna system gain.

AP—See *Access Point*

Association—Condition in which the frequency hopping pattern of the Remote is synchronized with the Access Point station, and the Remote is ready to pass traffic.

Authorization Key—Alphanumeric string (code) that is used to enable additional capabilities in the transceiver.

Bit—The smallest unit of digital data, often represented by a one or a zero. Eight bits usually comprise a byte.

Bits-per-second—See *BPS*.

BPDU—Bridge Protocol Data Units

BPS—Bits-per-second (bps). A measure of the information transfer rate of digital data across a communication channel.

Byte—A string of digital data made up of eight data bits.

CSMA/CA—Carrier Sense Multiple Access/Collision Avoidance

CSMA/CD—Carrier Sense Multiple Access/Collision Detection

Cyclic Redundancy Check (CRC)—A technique used to verify data integrity. It is based on an algorithm which generates a value derived

from the number and order of bits in a data string. This value is compared with a locally-generated value and a match indicates that the message is unchanged, and therefore valid.

Data Circuit-terminating Equipment—See *DCE*.

Data Communications Equipment—See *DCE*.

Datagram—A data string consisting of an IP header and the IP message within.

Data Terminal Equipment—See *DTE*.

dBd—Decibels (dipole antenna).

dBi—Decibels referenced to an “ideal” isotropic radiator in free space. Frequently used to express antenna gain.

dBm—Decibels referenced to one milliwatt. An absolute unit used to measure signal power, as in transmitter power output, or received signal strength.

DCE—Data Circuit-terminating Equipment (or Data Communications Equipment). In data communications terminology, this is the “modem” side of a computer-to-modem connection. COM1 Port of the transceiver is set as DCE.

Decibel (dB)—A measure of the ratio between two signal levels. Frequently used to express the gain (or loss) of a system.

Delimiter—A flag that marks the beginning and end of a data packet.

Device Mode—The operating mode/role of a transceiver (Access Point or Remote) in a wireless network.

DHCP (Dynamic Host Configuration Protocol)—An Internet standard that allows a client (i.e. any computer or network device) to obtain an IP address from a server on the network. This allows network administrators to avoid the tedious process of manually configuring and managing IP addresses for a large number of users and devices. When a network device powers on, if it is configured to use DHCP, it will contact a DHCP server on the network and request an IP address.

The DHCP server will provide an address from a pool of addresses allocated by the network administrator. The network device may use this address on a “time lease” basis or indefinitely depending on the policy set by the network administrator. The DHCP server can restrict allocation of IP addresses based on security policies. An Access Point may be configured by the system administrator to act as a DHCP server if one is not available on the wired network.

Digital Signal Processing—See *DSP*.

DSP—Digital Signal Processing. DSP circuitry is responsible for the most critical real-time tasks; primarily modulation, demodulation, and servicing of the data port.

DTE—Data Terminal Equipment. A device that provides data in the form of digital signals at its output. Connects to the DCE device.

Encapsulation—Process in by which, a complete data packet, such as MODBUS™ frame or any other polled asynchronous protocol frame, is placed in the data portion of another protocol frame (in this case IP) to be transported over a network. Typically this action is done at the transmitting end, before being sent as an IP packet to a network. A similar reversed process is applied at the other end of the network extracting the data from the IP envelope, resulting in the original packet in the original protocol.

Endpoint—Data equipment connected to the Ethernet port of the radio.

Equalization—The process of reducing the effects of amplitude, frequency or phase distortion with compensating networks.

Fade Margin—The greatest tolerable reduction in average received signal strength that will be anticipated under most conditions. Provides an allowance for reduced signal strength due to multipath, slight antenna movement or changing atmospheric losses. A fade margin of 15 to 20 dB is usually sufficient in most systems.

Fragmentation—A technique used for breaking a large message down into smaller parts so it can be accommodated by a less capable media.

Frame—A segment of data that adheres to a specific data protocol and contains definite start and end points. It provides a method of synchronizing transmissions.

Frequency Hopping—The spread spectrum technique used by the transceiver, where two or more associated radios change their operating frequencies many times per second using a set pattern. Since the pattern appears to jump around, it is said to “hop” from one frequency to another.

GPS—Global Positioning System. A constellation of orbiting satellites used for navigation and timing data. Although 24 satellites are normally active, a number of spares are also available in case of malfunction. Originally designed for military applications by the U.S. Department of Defense, GPS was released for civilian use in the 1980s. GPS satellites operate in the vicinity of the “L” frequency band (1500 MHz).

Hardware Flow Control—A transceiver feature used to prevent data buffer overruns when handling high-speed data from the connected data

communications device. When the buffer approaches overflow, the radio drops the clear-to-send (CTS) line, that instructs the connected device to delay further transmission until CTS again returns to the high state.

Host Computer—The computer installed at the master station site, that controls the collection of data from one or more remote sites.

HTTP—Hypertext Transfer Protocol

ICMP—Internet Control Message Protocol

IGMP (Internet Gateway Management Protocol)—Ethernet level protocol used by routers and similar devices to manage the distribution of multicast addresses in a network.

IEEE—Institute of Electrical and Electronic Engineers

IEEE 802.1Q—A standard for Ethernet framing which adds a four-byte tag after the Ethernet header. The four-byte tag contains a VLAN ID and a IEEE 802.1P priority value.

IEEE 802.1X—A standard for performing authentication and port blocking. The 802.1X port/device denies access to the network until the client device has authenticated itself.

Image (File)—Data file that contains the operating system and other essential resources for the basic operation of the radio's CPU.

LAN—Local Area Network

Latency—The delay (usually expressed in milliseconds) between when data is applied at the transmit port at one radio, until it appears at the receive port at the other radio.

MAC—Media Access Controller

MD5—A highly secure data encoding scheme. MD5 is a one-way hash algorithm that takes any length of data and produces a 128 bit “fingerprint.” This fingerprint is “non-reversible,” it is computationally infeasible to determine the file based on the fingerprint. For more details review “RFC 1321” available on the Internet.

MIB—Management Information Base

Microcontroller Unit—See *MCU*.

Mobility—Refers to a station that moves about while maintaining active connections with the network. Mobility generally implies physical motion. The movement of the station is not limited to a specific network and IP subnet. In order for a station to be mobile it must establish

and tear down connections with various access points as it moves through the access points' territory.

Mode—*See Device Mode.*

MTBF—Mean-Time Between Failures

Multiple Address System (MAS)—*See Point-Multipoint System.*

NMEA—National Marine Electronics Association. National body that established a protocol for interfacing GPS data between electronic equipment.

Network Name—User-selectable alphanumeric string that is used to identify a group of radio units that form a communications network. The Access Point and all Remotes within a given system should have the same network address.

Network-Wide Diagnostics—An advanced method of controlling and interrogating GE MDS radios in a radio network.

NTP—Network Time Protocol

Packet—The basic unit of data carried on a link layer. On an IP network, this refers to an entire IP datagram or a fragment thereof.

PING—Packet Internet Groper. Diagnostic message generally used to test reachability of a network device, either over a wired or wireless network.

PKI—Private Key Infrastructure. A set of policies and technologies needed to create, store, and distribute Public Key Certificates used to protect the security of network communications.

Point-to-Multipoint System—A radio communications network or system designed with a central control station that exchanges data with a number of remote locations equipped with terminal equipment.

Poll—A request for data issued from the host computer (or master PLC) to a remote device.

Portability—A station is considered connected when it has successfully authenticated and associated with an access point. A station is considered authenticated when it has agreed with the access point on the type of encryption that will be used for data packets traveling between them. The process of association causes a station to be bound to an access point and allows it to receive and transmit packets to and from the access point. In order for a station to be associated it must first authenticate with the access point. The authentication and association processes occur automatically without user intervention.

Portability refers to the ability of a station to connect to an access point from multiple locations without the need to reconfigure the network settings. For example, a remote transceiver that is connected to an access point may be turned off, moved to new site, turned back on, and, assuming the right information is entered, can immediately reconnect to the access point without user intervention.

PLC—Programmable Logic Controller. A dedicated microprocessor configured for a specific application with discrete inputs and outputs. It can serve as a host or as an RTU.

PuTTY—A free implementation of Telnet and SSH for Win32 and Unix platforms. It is written and maintained primarily by Simon Tatham. Refer to <http://www.pobox.com/~anakin/> for more information.

RADIUS—Remote Authentication Dial In User Service. An authentication, authorization, and accounting protocol used to secure remote access to a device or network.

Remote—A transceiver in a network that communicates with an associated Access Point.

Remote Terminal Unit—See *RTU*.

RFI—Radio Frequency Interference

Roaming—A station's ability to automatically switch its wireless connection between various access points (APs) as the need arises. A station may roam from one AP to another because the signal strength or quality of the current AP has degraded below what another AP can provide. Roaming may also be employed in conjunction with Portability where the station has been moved beyond the range of the original AP to which it was connected. As the station comes in range of a new AP, it will switch its connection to the stronger signal. Roaming refers to a station's logical, not necessarily physical, move between access points within a specific network and IP subnet.

RSSI—Received Signal Strength Indicator

RTU—Remote Terminal Unit. A data collection device installed at a remote radio site.

SCADA—Supervisory Control And Data Acquisition. An overall term for the functions commonly provided through an MAS radio system.

SNMP—Simple Network Management Protocol

SNR—Signal-to-Noise Ratio. A measurement of the desired signal to ambient noise levels. This measurement provides a relative indication of signal quality. Because this is a relative number, higher signal-to-noise ratios indicate improved performance.

SNTP—Simple Network Time Protocol

SSL—Secure Socket Layer

SSH—Secure Shell

STP—Spanning Tree Protocol

Standing-Wave Ratio—See *SWR*.

SWR—Standing-Wave Ratio. A parameter related to the ratio between forward transmitter power and the reflected power from the antenna system. As a general guideline, reflected power should not exceed 10% of the forward power ($\approx 2:1$ SWR).

TCP—Transmission Control Protocol

TFTP—Trivial File Transfer Protocol

Trap Manager—Software that collects SNMP traps for display or logging of events.

UDP—User Datagram Protocol

UTP—Unshielded Twisted Pair

VLAN—Virtual Local Area Network. A network configuration employing IEEE 802.1Q tagging, which allows multiple groups of devices to share the same physical medium while on separate broadcast domains.



Index

Numerics

100BaseT 55, 161
10BaseT 55, 161
16QAM 74
64QAM 74
802.11b 12

A

Access Point (AP), defined 183
accessories 19
Active Scanning, defined 183
adapter
 TNC Male-to-N Female 19
Adaptive
 Modulation 72
 Split 73
Add
 Associated Remotes 96
 Remote 96
Address to Ping 134
Advanced
 Configuration 65
 Control 69
AES encryption 4
agency approvals 178
alarm conditions 152
 correcting 153
Alarmed 150
alarms 151
Altitude 115
antenna
 900 MHz 5
 aiming 156
 cross-polarization 15
 directional 5, 168
 for repeater stations 15
 GPS 5, 165
 receiving 19
 minimizing interference 15
 Minimum Feedline Length versus Antenna Gain 166
 omni-directional 5, 14, 19, 164
 polarization 164
 selection 163
 SWR check 155
 system gain
 defined 183
 vs. power output setting 170
 vertical separation 15
 Yagi 14, 19, 164
AP
 current name 143
 Location Info Config 46
 locations 59—62
application
 IP-to-Serial 81
 Mixed-Modes 86
 Point-to-Multipoint Serial-to-Serial 83
 Point-to-Point Serial-to-Serial 82
 Serial Port 86
approvals
 agency 178

Approved Remotes 95
ARQ 73
 Block Lifetime 73
 Block Size 73
 Receiver Delay 73
 Transmitter Delay 73
 Window Size 73
Associated 150
 Remotes 43, 117
association
 defined 183
 process 116
attenuation 24
Auth Server
 Address 98
 Port 98
 Shared Secret 98
Auth Traps Status 59
Authenticating 150
authentication
 device 96
 user 97
Authorization
 Codes 123, 135
 Key 135
 defined 183
Authorized Features 135
Auto Firmware Upgrade 124
Automatic Repeat Request 73
Auto-Upgrade/Remote-Reboot 137
Average
 RSSI 121
 SNR 121

B

Backhaul
 for serial radio networks 11
 Network 11
bandpass filter 168
baud rate 78, 81
 console 75
 serial data 75
Begin Wizard 77
Bit, defined 183
Bits-per-second (bps), defined 183
BPDU 56
 defined 183
BPS, defined 183
BPSK 74
Bridge
 Configuration 46
 Forward Delay 57
 Hello Time 56
 Priority 56
 Protocol Data Unit 56
Bridge Status 110
Buffer Size 78, 79, 80, 81
BW 61
Byte Format 78
byte format 79, 81
bytes
 defined 183
 received 114
 sent 114

C

- cable
 - crossover 36, 38, 175
 - EIA-232 Shielded Data 19
 - Ethernet crossover 14, 25, 39
 - Ethernet RJ-45 Crossover 19
 - Ethernet RJ-45 Straight-thru 19
 - feedlines 165
 - serial communications 25, 37
 - straight-through 38, 39, 175
- certificate
 - files 96
 - type 100
- Certificate Filename 100
- Change
 - Admin Password 94
 - Guest Password 94
- channel
 - selection 69
 - single frequency 68
 - type 72
- CHANNELS 61
- clear
 - Ethernet statistics 114
 - Event Log 112
 - MDS wireless statistics 114
- Collocating Multiple Radio Networks 16
- Commit Changes and Exit Wizard 78, 79, 80, 81
- communication
 - peer-to-peer 10
- Compression 144
- Computer
 - host, defined 186
- Config
 - filename 132
- configuration 25, 80
 - advanced 65
 - defaults 25
 - DHCP server 50
 - editing files 133
 - Ethernet Port 55
 - file 25, 147
 - IP address 53
 - network 45
 - P23 8
 - protected network 8
 - radio parameters 63—87
 - RADIUS 98
 - redundant 8
 - script 123, 130
 - SNMP Agent 57
 - TCP Mode 80
 - UDP mode 77
- Connecting 150
- Connection Status 43, 118, 120, 142
- connectionware 144
- connector
 - descriptions 175
 - Ethernet 10
- console baud rate 75, 108
- Contact 109
- context names 179
- Corrected FEC Count 122, 143
- cost of deployment 12
- Count 134
- CRC (Cyclic Redundancy Check), defined 183

- CSMA
 - CA, defined 183
 - CD, defined 183
- Current Alarms 112
- Current AP 69
 - Eth Address 118
 - IP Address 118
 - Name 118, 120, 143
- Current IP
 - Address 42, 50, 53
 - Gateway 50, 53
 - Netmask 50, 53
- Cyclic Prefix 72

D

- data
 - baud rate 80
 - buffering 76
 - compression 72
 - encryption 95
 - VLAN ID 49
 - VLAN Subnet Config 49
- Datagram, defined 184
- Date 108
 - Format 108
- dB, defined 184
- dBd, defined 184
- dBi, defined 184
- dBm
 - defined 184
 - watts-volts conversion 172
- DCE, defined 184
- Default Route IF 49
- defaults
 - resetting 136
- Delete
 - All Remotes 96
 - Remote 96
- Delimiter, defined 184
- deployment costs 12
- Description 109
- Device
 - Auth Mode 95
 - Authentication 96
 - Information 45
 - Menu 108**
 - Mode 42
 - defined 184**
 - Name 42, 109, 134
 - Security Menu 92
 - Status 42, 117, 150
 - messages 150**
- DHCP 53
 - defined 184
 - DNS address 52
 - ending address 52
 - Netmask 52
 - Server 49
 - Config 49**
 - Configuration 46, 47**
 - Status 52**
 - starting address 52
 - WINS address 52

Diagnostic Tools 151
 dimensions 161
 DIN Rail Mounting Bracket 20
 DKEY command 155
 Downlink 143
 Percentage 73
 DSP (Digital Signal Processing), defined 185
 DTE
 defined 185
 DUR 61

E

EIA-232 13
 Embedded Management System 25
 Enable Filtering 56
 encapsulation
 defined 185
 serial 75
 transparent 75
 encryption 5
 AES 4
 Phrase 95
 Endpoint
 defined 185
 Equalization, defined 185
 Ethernet
 filtering configuration 55
 Port Config 46
 port enable 55
 port follows association 55
 port phy rate 55
 event
 Alarms 152
 Critical 152
 Informational 152
 Major 152
 Minor 152
 Temporary Informational 152
 Event Log 110, 113, 150, 151, 152, 153
 clear 112
 filename 112
 host address 112
 Menu 112
 send 112
 view 112
 events 151

F

factory defaults
 resetting 136
 Fade Margin 185
 FEC 72
 count
 corrected 122, 143
 total 122, 143
 uncorrected 122, 143
 Total 143
 feedline
 selection 163, 165
 file
 certificate 96
 MIB 33
 Filename 126
 filtering

 enable 56
 firmware
 automatic upgrade 124
 current 127
 filename 129
 for Upgrade 137
 installing 128
 upgrade 129, 137
 version 43, 124
 Flow Control
 hardware, defined 185
 Force
 Switchover 102
 Fragmentation
 defined 185
 frame
 defined 185
 duration 68
 Free Run 24, 27, 29
 frequency
 control 65
 hopping, defined 185
 mode 26, 67
 offset
 RX 143
 TX 143
 fuse 19

G

gain
 antenna, defined 183
 gateway
 current IP 53
 Glossary 183—189
 GPS
 antenna 165
 Configuration 45
 defined 185
 external GPS PPS option 9, 178
 Firmware Version 115
 information 115
 latitude 61
 longitude 61
 Precise Positioning Service 115
 pseudo-random noise 115
 receiver 42
 satellite fix 62
 Serial Number 115
 Status 110
 Menu 115
 Streaming Configuration 106
 time of day 62
 timing signals 42
 to Console Baud Rate 106
 UDP Server IP Address 106
 UDP Server UDP Port 106
 GROUP 61

H

hand-off 70
 Signal and Distance 70
 Signal, Distance, and Bearing 70
 Strict Connection 70
 Strict Distance 70

- Strict Signal 70
- Hardware
 - Event Triggers 102, 104
 - flow control, defined 185
 - Version 43
- hop
 - pattern 68, 144
 - pattern offset 68
- Hopping
 - frequency, defined 185
- Host
 - computer 85
 - computer, defined 186
- HTTP
 - Auth Mode 93
 - defined 186
 - Mode 93
- HyperTerminal 36, 37
- Hysteresis Margin 72, 73

I

- IANA 76
- ICMP
 - defined 186
- IEEE
 - 802.1Q 48, 49, 186
 - 802.1X 186
 - defined 186
- IEEE 802.1x
 - Device Authentication 4, 51, 96
- IETF standard RFC1213 57
- IGMP 76
 - defined 186
- Image
 - Copy 127
 - file, defined 186
 - Verify 127
- iNET II, differences of 156
- Init/Hardware Error 104
- Installation
 - antenna & feedline 163
 - feedline selection 165
 - general information 5
 - mobile 9
 - planning 161
 - requirements 161
 - site selection 162
 - site survey 167
- Interference 168
- inter-frame packet delay 80
- Internal Radio Status 110
 - Menu 119
- Internet
 - Assigned Numbers Authority 76
 - Control Message Protocol, defined 186
- Inter-Packet Delay 78, 79, 81
- IP 12, 50
 - Address 26, 42, 53, 133
 - Configuration** 47
 - Mode** 49, 50, 53
 - Configuration 46
 - current
 - address** 50, 53
 - gateway** 50

- netmask** 50
- gateway 53, 133
- netmask 53
- Protocol 78, 79
- static
 - address** 49
 - netmask** 49
- tunneling 75

K

- KEY
 - command 155
 - transmitter, for antenna SWR check 155

L

- Lack of Associated Remotes Exceeded Threshold 103, 104
 - Menu 105
- Lack of Remotes for 105
- LAN
 - defined 186
 - wireless 10, 12
- LAT 61
- Latency, defined 186
- Latitude 115
- LED
 - COM1 30
 - LAN 29, 38, 39, 148
 - LINK 29, 30, 148, 157, 167
 - PWR 29, 30, 113, 148, 152, 153
 - use during troubleshooting 147
- Local
 - Area Network, defined 186
 - Console 36
 - session** 37
- Location 109, 134
- logged events 153
- LONG 61
- Longitude 115
- Lost Carrier Detected 114, 151

M

- MAC 61
 - ADDR 143
- Main Menu 43
- Maintenance/Tools 45
 - Menu 122
- Manage Certificates 92
- Management
 - VLAN ID 49
 - VLAN Mode 49
 - VLAN Subnet Config 49
- Management System 25, 74, 129
 - as a troubleshooting tool 148
 - user interfaces 33
- manuals
 - Reference Manual 3
 - Start-Up Guide 3
- margin
 - hysteresis 73
 - protection 73
- Max
 - Modulation 72
 - Transmit Power 65
- Max Remotes 95

Maximum Receive Errors 105
MD5, defined 186
MDS Security Suite 17
measurements
 radio 155
Media Access Controller, defined 186
MIB
 defined 186
 files 33, 57
 version II 57
mobile 9
Mobility
 defined 186
MODBUS 87
 ASCII 89
 RTU 89
Modbus
 TCP Server 87
Mode 61, 77
 Device, defined 184
 mixed 85
Model 108
modulation protection 27
MTBF, defined 187
multicast addressing 76

N

NAME 61
NEMA 12
netmask
 current IP 53
network
 Administrator 9
 Configuration 44
 coverage 144
 design 14
 antennas 15
 collocating multiple radio networks 16
 name 15
 repeaters 14
 using multiple Access Points 16
 Using the AP as a Store-and-Forward
 Packet Repeater 15
 Using two transceivers to form a repeat-
 er station 14
Event Triggers 102, 103
Interface
 Config 46
 Error 103
LAN 10
 name 17, 23, 26, 64, 144
 defined 187
 tabletop 23
 Time Protocol (NTP), defined 187
 WAN 10
 -wide diagnostics 187
NTP (Network Time Protocol), defined 187
Number of Satellites 115

O

OFDM 4

OFFSET 61
optimizing
 radio performance 139
Orthogonal Frequency Division Multiplexing 4
Outgoing Connection's Inactivity Timeout 80

P

P23 8
Packet
 defined 187
 Receive Errors Exceeded Threshold 103, 105
 Menu 105
 Size 134
 Statistics 110, 113, 151
packets
 dropped 114, 151
 received 114
 sent 114
password
 admin 94
 guest 94
Pattern Offset 144
PC
 connection to transceiver 25
 host 85
peer-to-peer communications 10
Performance
 Information 45
 Trend 110
PING 23, 30, 122, 167
 address 134
 defined 187
 utility 123
PKI 187
PLC 13
 defined 188
point-to-multipoint 16
 defined 187
Point-to-Point
 LAN Extension 11
 Link 11
Poll, defined 187
port
 access 48, 49
 COM1 13, 25, 26, 27, 28, 33, 36, 38, 44, 74, 82, 87, 129,
 163, 175
 COM2 26, 82
 Ethernet 23, 48, 49
 GPS antenna 27, 29
 IP 82
 LAN 25, 26, 27, 28, 33, 36, 38, 39, 53, 74, 129, 163, 175
 PWR 27, 28
 RX2 27, 29, 165
 serial 12
 trunk 49
 TX/RX1 antenna 27, 29
Portability, defined 187
power
 connector 24
 how much can be used 167
 primary 24
 transmitter power output 155
PPS 115
Precise Positioning Service 115
PRN 115

Programmable Logic Controller 13

Protection Margin 72, 73

protocol

DHCP 53

HTTP 33

HTTPS 33

ICMP 48

defined 186

IP 12, 26, 50, 74

SNMP 33, 48, 50, 57, 178

defined 188

SNTP 46, 189

SSH 33, 36

STP, defined 189

Syslog 112

TCP 75, 80, 81, 85

defined 189

Telnet 33, 36, 38, 48

TFTP 48, 128

defined 189

UDP 75, 76, 81, 82, 85

defined 189

Pseudo-Random Noise 115

PuTTY usage 41

defined 188

Q

QoS 4

QPSK 74

Quality of Service 4

R

Radio

Configuration 44

Details 121

Event Triggers 102, 103

Frequency Interference 17

interference 168

Mode 138

performance optimization 139

Remote, defined 188

Test 124

RADIUS 188

configuration 92, 98

User Auth Mode 98

range, transmission 12

ranging 150

Read Community String 58

reboot

Device 127

on upgrade 137

Remotes 137

receive

errors 114, 151

power 65

Received Signal Strength Indicator 24, 163

defined 188

Redundancy

Configuration 45, 102

Options 102, 104

Using multiple Access Points 16

Remote

add 96

associated 96

approved 95

Database 117

delete 96

all 96

Max 6

Performance Database 117

radio, defined 188

Standard 6

Terminal Unit 13

defined 188

view approved 96

Repeater 14

antennas 15

Network Name 15

Using the AP as a Store-and-Forward Packet Repeater 15

Using two transceivers to form a repeater station 14

Reprogramming 123

Menu 125

Reset to Factory Defaults 123, 136

Retries 151

Retrieve

Certificate 100

File 127, 133

Retry errors 151

RF

bandwidth 26, 68

Output Power 26

power output level 24

RFI 17

defined 188

Roaming, defined 188

RSSI 24, 121, 142, 143, 156, 163

average 121

defined 188

RTU 13, 82, 86

defined 188

RX

Frequency Offset 122, 143

IP Port 78

S

satellite

fix status 43, 115

number of 115

SCADA 12, 13, 76

defined 188

Scanning 150

script

configuration 123

security

Configuration 45

Menu 91

device level 96

general information 5

monitoring 13

password 25

risk management 18

suite 17

wireless access 96

Send

Event Log 112

file 133

GPS via UDP 106

- Serial
 - Configuration Wizard 76
 - data baud rate 75
 - encapsulation 75
 - Number 43, 108
 - Port
 - Configuration 44**
 - radio networks, backhaul 11
 - server
 - status 52
 - time 113
 - signal
 - strength 163
 - to-noise ratio 115
 - defined 188**
 - Simple Network
 - Management Protocol, defined 188
 - Time Protocol 62
 - defined 189**
 - Single
 - channel operation 24
 - Frequency Channel 26, 68
 - SINGLE_CHAN 62
 - Site selection 162
 - SNMP 33, 50
 - Agent Config 46
 - defined 188
 - Mode 58, 59
 - traps 181
 - usage 178
 - V3 Passwords 59
 - SNMPv3 178
 - accounts 179
 - SNR 72, 115, 121, 143
 - average 121
 - defined 188
 - max 74
 - min 74
 - range 73
 - SNTP
 - defined 189
 - Server 46
 - configuration 62**
 - Spanning Tree Protocol, defined 189
 - Spectrum Analyzer Mode 139
 - spread-spectrum transmission 5
 - SSH 36, 97
 - Access 93
 - defined 189
 - SSL, defined 189
 - Standing Wave Ratio 189
 - Starting
 - Information Screen 38, 44
 - Static IP
 - Address 49, 50, 53
 - Gateway 54
 - Netmask 49, 50, 53
 - Status 42, 77, 78, 80, 81
 - alarmed 150
 - associated 150
 - authenticating 150
 - connecting 150
 - scanning 150
 - STP, defined 189
 - Stream GPS to Console 106
 - subnet 53
 - SWR 155, 189
 - defined 189
 - performance optimization 155
 - Syslog Server Address 112
 - system gain, antenna (defined) 183
- T**
- tabletop network 23
 - TCP 75, 85
 - client 75
 - defined 189
 - server 75
 - TDD
 - Sync Mode 15, 69, 144
 - TDD Sync 26
 - Telnet 36, 74, 82, 97
 - Access 93
 - session 38
 - Utility 124
 - Test
 - Burst Percentage 138
 - Channel 138
 - Key 138
 - RF Bandwidth 138
 - Status 138
 - Transmit Power 138
 - TFTP
 - Block Size 101
 - defined 189
 - Host Address 60, 100, 126, 129, 132, 133
 - Timeout 101
 - Time 108
 - Connected 118
 - Division Duplex 69
 - server 113
 - Total FEC Count 122, 143
 - transceiver
 - models 6
 - Transfer Options 100, 112
 - Transmission
 - Control Protocol, defined 189
 - range 12
 - transmit
 - max power 65
 - power 64, 121, 142
 - transparent encapsulation 75
 - Trap
 - Community String 58
 - Manager 59
 - defined 189**
 - Version 59
 - triggers
 - hardware event 104
 - radio event 103
 - Troubleshooting 147—155
 - Using the Embedded Management System 148
 - TX
 - Frequency Offset 121, 143
 - IP
 - Address 78**
 - Port 78**

U

- UDP 75, 82, 85
 - defined 189
 - mode 77
 - multicast 76
 - Point-to-Point 78
- Uncorrected FEC Count 122, 143
- Unit Password 26
- upgrade
 - firmware 137
- Uplink 143
- Uptime 43, 108
- User
 - Auth Fallback 93
 - Auth Method 93
 - Authentication 97
 - Datagram Protocol, defined 189
 - Passwords 93
- Menu** 94
- User Auth Mode 98
- UTC Time Offset 109
- UTP, defined 189

V

- V3
 - Authentication Password 58
- View
 - Approved Remotes 96
 - Current Settings 77
 - Event Log 112
- Menu** 113
- VLAN 48, 189
 - data 48, 49
 - Ethport Mode 49
 - ID 49
 - management 48, 49
 - Status 46, 47, 49
- Voice over IP 4, 13
- VoIP 4, 13
- volts-dBm-watts conversion 172

W

- watts-dBm-volts conversion 172
- Web browser 36, 74
 - session 39
- Wireless
 - LAN 10
 - Network Status 110
- Menu** 116
- Security 92
 - Menu** 94
- wizard
 - serial configuration 76
- Write community String 58

Y

- Yagi antenna 164

IN CASE OF DIFFICULTY...

GE MDS products are designed for long life and trouble-free operation. However, this equipment, as with all electronic equipment, may have an occasional component failure. The following information will assist you in the event that servicing becomes necessary.

TECHNICAL ASSISTANCE

Technical assistance for GE MDS products is available from our Technical Support Department during business hours (8:00 A.M.—5:30 P.M. Eastern Time). When calling, please give the complete model number of the radio, along with a description of the trouble/symptom(s) that you are experiencing. In many cases, problems can be resolved over the telephone, without the need for returning the unit to the factory. Please use one of the following means for product assistance:

Phone: 585 241-5510

E-Mail: TechSupport@GEmds.com

FAX: 585 242-8369

Web: www.GEmds.com

FACTORY SERVICE

Component level repair of this equipment is not recommended in the field. Many components are installed using surface mount technology, which requires specialized training and equipment for proper servicing. For this reason, the equipment should be returned to the factory for any PC board repairs. The factory is best equipped to diagnose, repair and align your radio to its proper operating specifications.

If return of the equipment is necessary, you must obtain a Service Request Order (SRO) number. This number helps expedite the repair so that the equipment can be repaired and returned to you as quickly as possible. Please be sure to include the SRO number on the outside of the shipping box, and on any correspondence relating to the repair. No equipment will be accepted for repair without an SRO number.

SRO numbers are issued online at www.GEmds.com/support/product/sro/. Your number will be issued immediately after the required information is entered. Please be sure to have the model number(s), serial number(s), detailed reason for return, "ship to" address, "bill to" address, and contact name, phone number, and fax number available when requesting an SRO number. A purchase order number or pre-payment will be required for any units that are out of warranty, or for product conversion.

If you prefer, you may contact our Product Services department to obtain an SRO number:

Phone Number: 585-241-5540

Fax Number: 585-242-8400

E-mail Address: productservices@GEmds.com

The radio must be properly packed for return to the factory. The original shipping container and packaging materials should be used whenever possible. All factory returns should be addressed to:

GE MDS, LLC
Product Services Department
(SRO No. XXXX)
175 Science Parkway
Rochester, NY 14620 USA

When repairs have been completed, the equipment will be returned to you by the same shipping method used to send it to the factory. Please specify if you wish to make different shipping arrangements. To inquire about an in-process repair, you may contact our Product Services Group using the telephone, Fax, or E-mail information given above.



GE MDS

industrial wireless networks

GE MDS, LLC
175 Science Parkway
Rochester, NY 14620
General Business: +1 585 242-9600
FAX: +1 585 242-9620
Web: www.GEmds.com

