


7941 Multimedia Keyboard Block diagram

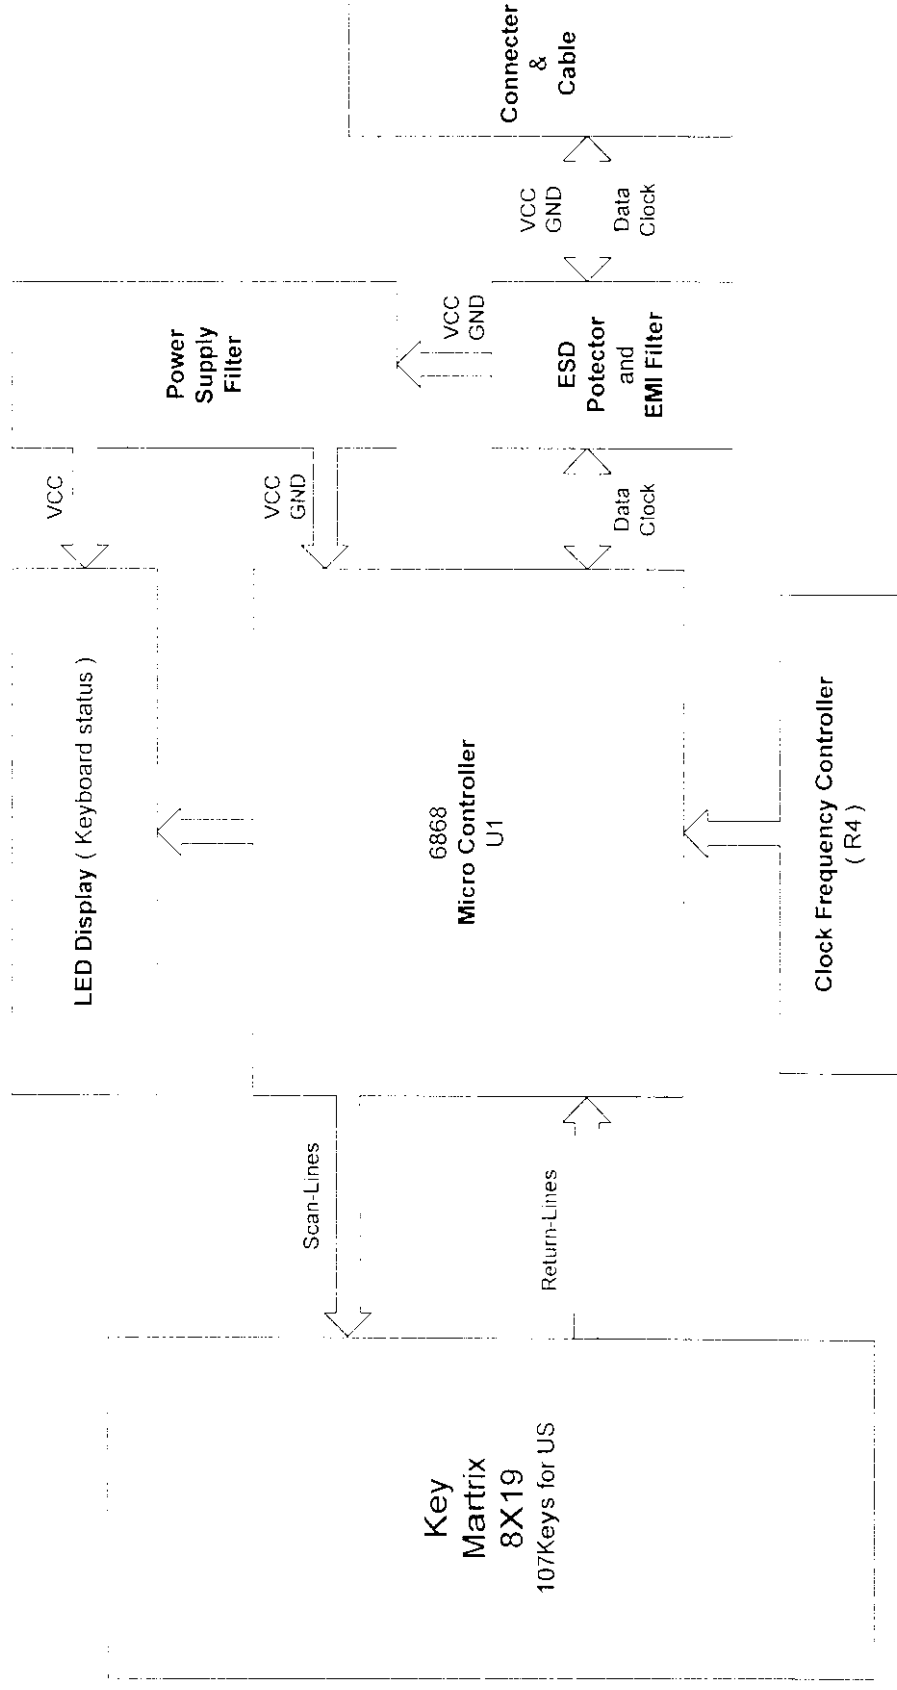

C-7941-UMC

S0	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	S13	S14	S15	S16	S17	S18
139 Game	121 F10	136 Vol DN	137 Vol UP	135 Mute	134 Win	133 www	132 Menu / ?	45 102 KEY	131 Close	142 FF	77 Left	141 FB	67 Japan	65 Japan	130 Play	128 Next	129 Prev	138 ZZZ
35 G	36 H	37 J	33 D	32 S	47 X	76 Del	46 Z	81 End	86 Page DN	140 Stop			60 Alt Left		92 4	97 5	68 Erase Ease	107 Brazil
8 & 7	12 -	123 F12	124 Print Screen	13 + =	15 Back Space	115 F4	116 F5	80 Home	85 Page UP	56 Japan		78 Right	14 Japan	66 Japan	91 7 Home	96 8 ↑	82 F2	113
9 * 8	7 ^ 6	6 % 5	5 \$ 4	4 # 3	3 @ 2	125 Scroll Lock	114 F3	1 ~ ,	126 Pause					58 Ctrl Left	89 →	84 ↓	79 ←	110 Esc
25 O	24 I	26 P	122 F11	27 {	31 A	75 Insert	28 }	42 \ (UK)	43 Enter	57 Shift Right				143 Power	105 -	106 +	83 ↑	112 F1
10 (9	119 F8	120 F9	38 K	39 L	40 ;	41 ,	52 M	51 N	29 \				62 Alt Right	144 Sleep	100 *	95 /	90 Num Lock	101 9 Pg Up
11) 0	34 F	118 F7	117 F6	50 B	49 V	53 < .	54 > /	55 ?	61 Space Bar					64 Ctrl Right	103 3 Pg Dn	98 2 ↓	93 1 End	102 6 →
23 U	22 Y	21 T	20 R	19 E	18 W	17 Q	48 C	16 Tab	30 Caps Lock	44 Shift Left				145 Wake up	99 0 Ins	104 Del	108 Enter (Pad)	2 !