

Tune up Procedure

There is no tune up procedure just the initial start up:

Initial Startup

Table 3-4 Initial Statup Procedure

Step	Action
1	Turn the main power on
2	Check the Yellow LED on the power supply unit. It must be a steady on
3	Check the four CU PCBA LEDs. Refer to the CU PCBA section in Chapter 2 for the correct power up indications
4	Check the three ALI PCBA LEDs or the corresponding LEDs on the RCI PCBA. Refer to the ALI or RCI PCBA section in Chapter 2 for the correct power up indications. The LEDs follow the alarm relays.