


High Definition Wireless Camcorder

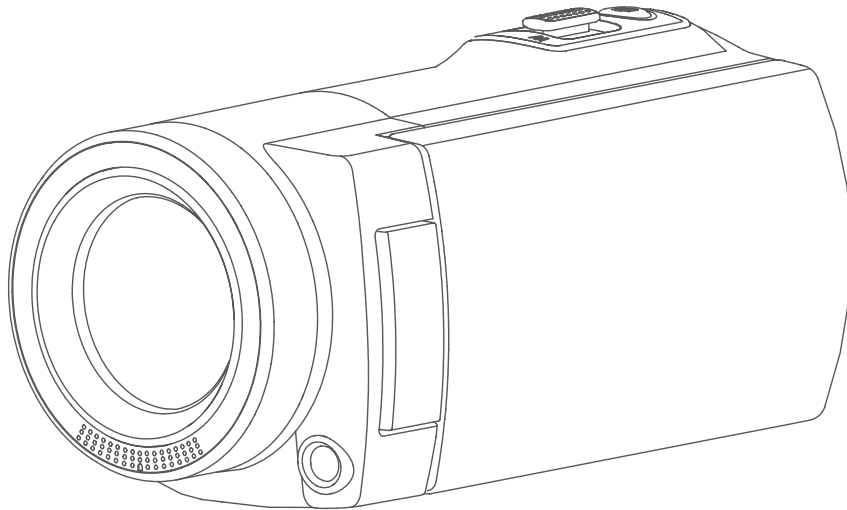

User's Manual

Read This Before Using the Video Camera

SAFETY INSTRUCTIONS

- Do not drop, puncture or disassemble the device.
- Use the device with good care. Rough handling may damage the internal components.
- Do not expose the device to high temperature. Avoid contact with water.
- Please notice that the body of this device may become warmer after operating over a period of time.
- Test it with a proper operation before using the device.
- Use accessories supplied by the manufacturer only.
- Use the type of battery that came with your device only.
- Remove the battery if the device is not going to be used for a long period of time.

Product Information

- Designs and specifications of the device are subject to change without notice. This includes primary product specifications, software, and this user's manual.
- This User's Manual is a general guide for reference.
- The illustrations in this manual may not be the same as the actual design of your device, including what you see.

Contents

Read This Before Using the Video Camera	2
Section 1 Getting to Know Your Video Camera.....	4
Section 2 Getting Started.....	7
Section 3 Enjoying the Record Mode	10
Section 4 Enjoying the Playback Mode	22
Section 5 Setting Your Video Camera	27
Section 6 Wireless to PC WiVideo Suite	31
Section 7 Wireless to Mobile WiVideo App	35
Section 8 Wireless to Cloud-Ustream.....	39
Section 9 Viewing Photo and Video on TV.....	43
Section 10 Viewing Photo and Video on PC	44
Section 11 Specifications and System Requirements	45
Section 12 Troubleshooting	47
Section 13 FCC Regulations and SAR Information.....	48

Section 1

Getting to Know Your Video Camera

Overview

- ◆ This video camera equipped with a 5 Mega Pixel sensor can take H.264 format videos. The H.264 technology allows for extended video recording with less memory. High quality images up to 16 mega-pixels can also be delivered smoothly. With a color LCD monitor, you can view and examine the video and photo easily.
- ◆ The 3" LCD touch panel is an ideal platform for you to operate your device. The menu options are accessible with your fingertip. With the touch panel, you can select the options directly and quickly.
- ◆ The video camera also features video recording at an HD resolution of 1920x1080. You may connect it to an HDTV via an HDMI cable, and playback the recorded high-definition videos on the wide screen HDTV easily.
- ◆ Moreover, the camera is equipped with wireless module and the exclusive application. You can broadcast live streaming of the camera on Ustream website via wireless. Your family and friends can watch the live video streaming of the camera from their smart phones, tables, or computers.
- ◆ A 10X optical zoom helps you to control over the video and photo you take. The varied effect options, such as Pre-Record, Time Lapse, and Slow Motion, bring you more fun while recording.
- ◆ The built-in memory allows you to take photos and record videos without a memory card. The memory card slot allows users to increase the storage capacity.
- ◆ The mount thread on the front edge of the lens allows the mounting of screw-on lens/filter for advanced recording, such as, an auxiliary wide-angle lens for providing better wide-angle scene, a macro lens for capturing close-up photo, or other special effects filters for special purposes.
- ◆ Moreover, the device has an advanced uploading feature. With the exclusive built-in **Internet Direct** application, you can upload the videos captured by the device to the web site more effortlessly .



Note


- *A part of the built-in memory is used for the camera's Firmware code and software.*
- *Install the bundled ArcSoft MediaImpression application for viewing the videos correctly on the computer.*
- *In order to work wireless correctly, ensure the bundled WiVideo program (for Windows[®] only) is installed and the wireless LAN module of your computer is activated.*

Standard Accessories


Unpack the package and ensure a list of standard accessories below are included:

- Mini USB Cable
- HDMI Cable
- Adaptor
- Lithium-ion Rechargeable Battery
- Quick Guide
- CD-ROM (Software, User's Manual)
- Cloth Bag
- Lens Cover Set (Lens cover and Strap)


Front View

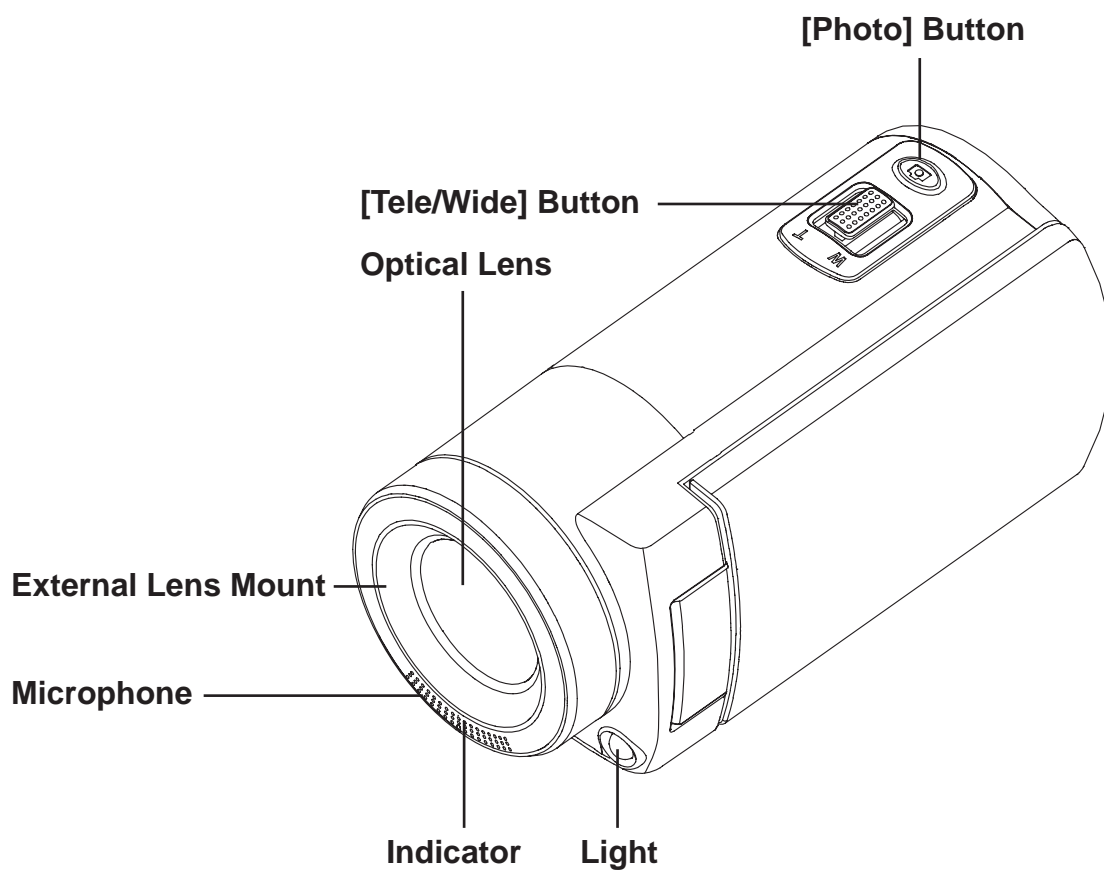

Bottom View

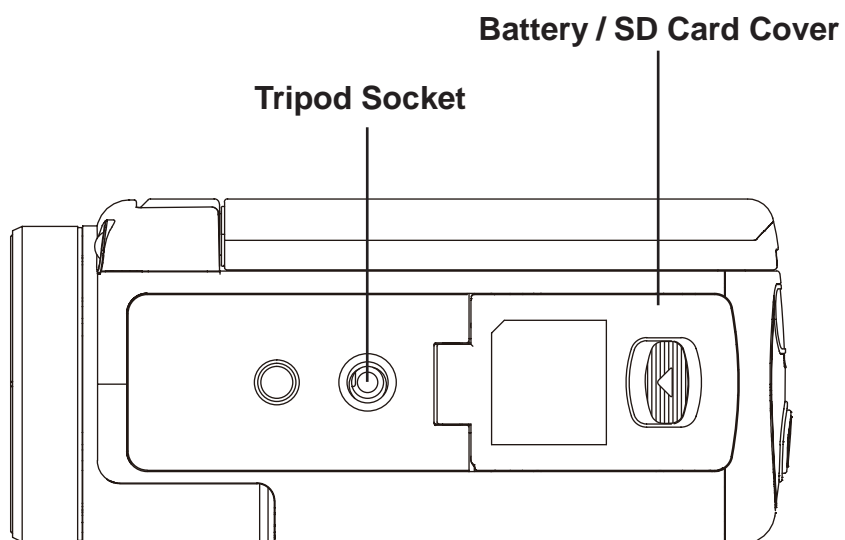

Side/Rear View

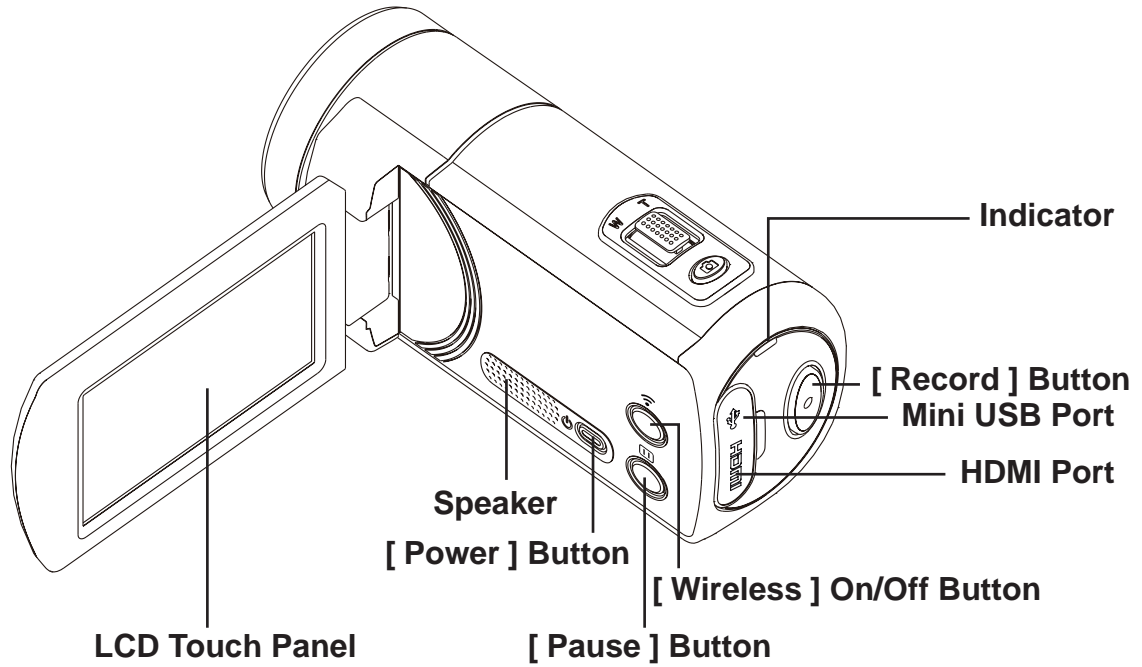

Section 2

Getting Started

Loading the Battery


Before using the device, you must load the supplied Lithium-ion rechargeable battery.

1. Slide the latch and open the battery cover.
2. Insert the battery correspondingly to the correct polarity marks (+ or -).
3. Close the battery cover firmly.



Note

- Different battery types and surrounding temperatures may affect the battery performance.
- Never expose the battery to a heating equipment (e.g., microwave oven) and attempt to dispose of a battery by burning or by throwing it into a fire. Heat can cause the battery to explode and/or release caustic liquid, which both may possibly cause serious injuries.
- Turn the power off and stop using the battery if you observe the condition of excessive heat from the battery.

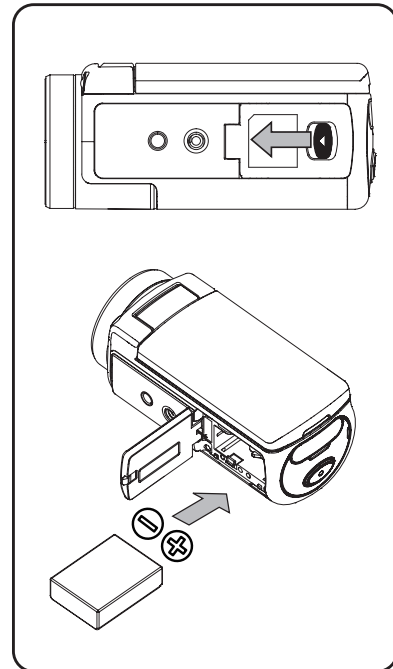



Charge your battery

Please charge the battery fully before its first use. You must use the AC charger or the USB cable provided. A blinking light will indicate active charging and a solid light indicates that charging is complete. In adapter charging mode, the full charging time is about 4- 5 hours and the light will turn off automatically after 3~5 minutes. (Actual charging time may vary. It depends on the battery condition.)



Note


- Never charge the battery with a way other than as instructed. Otherwise, a fire or any explosion resulting in any serious injury is possible.
- Use the AC adapter provided only with the indicated power supply voltage.
- Use any other power supply voltage might cause electric shock.
- Be sure that the power outlet that the adapter you plug in is easily accessible. When you need to disconnect power from the device, be sure to unplug the power cord from the electrical outlet.
- If wireless connection is activated, the device will keep running until the power runs off.

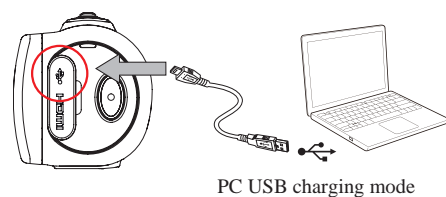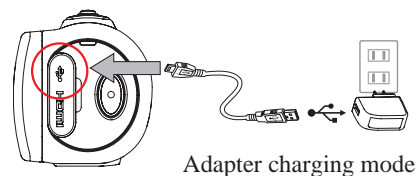

Inserting and Removing SD Card (Optional)


The video camera comes with an internal memory which allows you to store photos and videos. You can expand the memory capacity by using an optional SD memory card.

1. Insert the memory card into the slot until it locks in place. Please refer to the figure.
2. To remove an installed SD card, press the card inwards to release it.
3. When the card pops out, gently remove it from its slot.
4. Recommended memory capacity: 1GB or above.

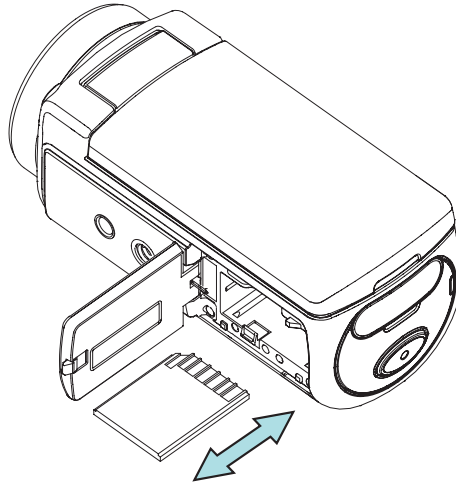

Note

- When a memory card is placed, videos/photos are kept in the card rather than in the built-in memory.
- Protecting Data on SD Card: SD Card is read-only when it is locked. No photos or videos can be recorded when the SD card is locked. Make sure the lock is on the writeable position before recording any media.

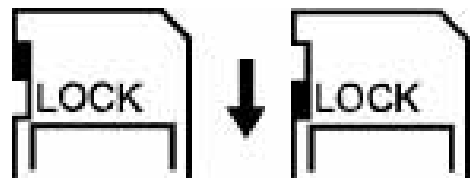






Turning the Video Camera On




- To turn on the device:
 - Flip out the LCD panel; the device will turn on automatically.
 - Or press the [Power Button] for one second to turn it on.
 - After idling for 3 minutes, the device will turn off automatically.


Configuring the Initial Date and Time Setup

- The time setting screen appears to allow you to set up date and time:

Operation	Display Screen
<ol style="list-style-type: none"> Touch Year, Month, Day, Hour, Minute, and AM/PM to set. Adjust the numeric value by touching  /  Touch the OK icon () to validate the setting. Touch the Exit icon () to exit. 	


Getting Started

- To record a video: Press the [Video Button ] to record video. To stop recording, press it again.
- To pause recording: Press the [Pause Button ] to pause recording. To continue the recording, press it again.
- To take a photo: Press the [Photo Button ] halfway down until the focusing frame turns from white to green. Then, press it fully down to take photo.

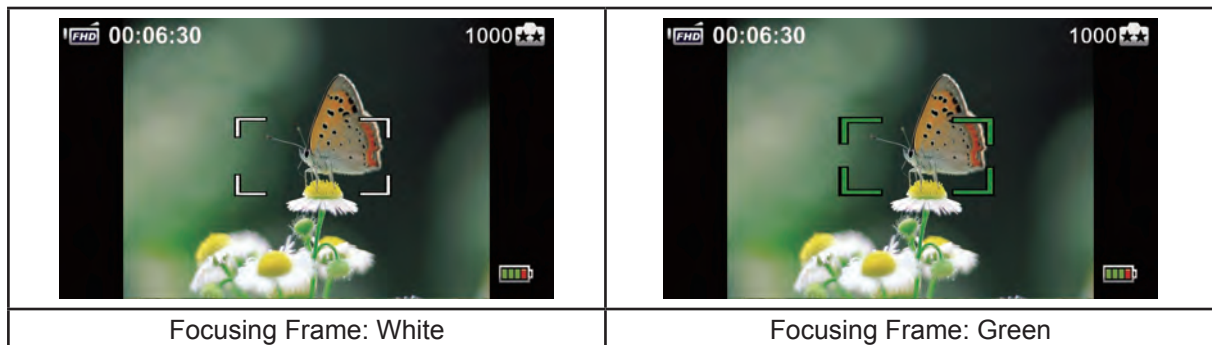

- To view stored videos and photos: Touch  on the screen to switch to the Playback


 

 
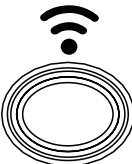
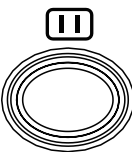




Turning the Video Camera Off

- To turn off the device: You can either press the [Power Button ] for one second, or you can place the LCD panel back to its original position.

Section 3

Enjoying the Record Mode










Button Function





















	<p>Power</p> <ul style="list-style-type: none"> · Flip out the LCD panel or press the [Power] button. · After idling for 3 minutes, the device will turn off automatically.
	<p>Record</p> <ul style="list-style-type: none"> · Press to take video. · Press again to stop.
	<p>Photo</p> <ul style="list-style-type: none"> · Press to take photo.
	<p>Tele/Wide</p> <ul style="list-style-type: none"> · T : Zoom in. · W : Zoom out.
	<p>Wireless</p> <ul style="list-style-type: none"> · Touch to enable/disable wireless · Use wireless to link with PC/Mobile/Cloud.
	<p>Pause</p> <ul style="list-style-type: none"> · Press to pause recording. · Press again to continue.
	<p>Video/Photo</p> <ul style="list-style-type: none"> · Touch to switch between Video and Photo. · The default is in Video mode.
	<p>Menu</p> <ul style="list-style-type: none"> · Touch to turn the option menu on. · Scroll left/right or touch  to change among three menu pages (Video/Photo/Setting).
	<p>Playback</p> <ul style="list-style-type: none"> · Touch to go to the Playback Mode. · View or delete the recorded files.










LCD Monitor Information

The indicators shown below may display on LCD:



(1)	Video Resolution	
		Full HD (1080p 30 fps)
		HD (720p 60 fps)
		HD (720p 30 fps)
		VGA (640×480)
		Slow Motion (Record video at QVGA resolution.)
	Photo Resolution	
		16MP
		5MP
	3MP	
(2)	00:06:30	Recording time that remains to be taken at the current resolution
	1000	Number of images that remains to be taken at the current resolution
(3)		Date Printing (Photo Recording Only)

(4)	Scene	
		Skin
		Night
		Backlight
		Black/White
		Classic
		Negative
(5)	White Balance	
		Daylight
		Fluorescent
		Tungsten
(6)		Face Tracking On (Photo Only)
(7)		Video Stabilization
(8)		Time Lapse (Video Recording Only)
(9)		Digital Light On
		Light On
(10)		SD Card Inserted
(11)		Zoom meter: 1x~50X (10X Optical zoom and 5x Digital zoom)
		Motion Detect (Video Recording Only)
(12)		Self-timer enabled
(13)		Wireless Signal Strength
		Wireless to PC/Mobile/Cloud on





(14)		Battery: full power
		Battery: high power
		Battery: medium power
		Battery: low power
		Battery: no power
		DC power mode
On-screen touchable function icon		
(15)		Playback Mode On
(16)		Menu On
(17)		Switch between [Video Mode] and [Photo Mode]







Note

- Tap on the screen to close the touchable function bar. Tap again to show the bar.
- The functions of Time Lapse, and Slow Motion cannot be used simultaneously. (Once Time Lapse turns on, the function of Slow Motion will be switched off; or vice versa.)
- The functions of Motion Detect, Slow Motion, and Time Lapse cannot be used simultaneously. (Once Motion Detect turns on, the functions of Slow Motion and Time Lapse will be switched off.)
- The functions of Motion Detect and Zooming cannot be used simultaneously.
- The functions of Motion Detect, Time Lapse, Slow Motion, and Pause cannot be used simultaneously.
- In AC charging mode, you can turn on the device and it will become DC power mode. In DC power mode, the device is charged by less electric current.
- The wireless signal strength indicates the connection strength between the access point and your camera. Some access points do not allow you to connect to the network. Some networks require the authentication from the network service provider (NSP) .Please follow the instruction on the screen or contact with the network service provider.

Video Recording

- Press the [Video Button ] to start recording. When a video is being recorded, a time indicator will display on the LCD monitor ( 00:06:30). To stop recording, press it again.
- To pause recording, press the [Pause Button ]. To continue the recording, press it again.
- Touch  on the screen to view the recorded video
- Four resolution settings are available:

Video Quality	
	Full HD (1080p 30 fps)
	HD (720p 60 fps)
	HD (720p 30 fps)
	VGA (640×480)



Note

- The image resolution captured during video recording is the same as the video resolution.
- When the function of Slow Motion is activated, the video resolution is QVGA and the view angle becomes smaller.

Photo Capturing








- Press the [Photo Button ] halfway down until the focusing frame turns from white to green. Then, press it fully down to take photo.
- Touch  on the screen to view the photo.
- Three resolution settings are available:


Image Quality	
	16 Mega Pixels
	5 Mega Pixels
	3 Mega Pixels

Using Zoom Function

- The zoom magnifies images when recording videos or taking photos.
 1. To zoom in/out, press the Tele/Wide Button  . The device zooms in by optical zoom first. When the optical zoom factor is at maximum, zooming stops temporarily. Press and hold the [Tele Button] (T) again when you want to zoom in beyond the optical zoom range. The digital zoom is activated and zooming continues.
 2. It can be set from 1X to 50X (10X Optical zoom and 5x Digital zoom).

Using Wireless Connection

- To Connect between the device and PC/Mobile/Cloud wirelessly.
- To start the connection of wireless.
- Press the [Wireless ].
- There are three connection types to select: Wireless to Mobile/Wireless to PC/Wireless to Cloud.

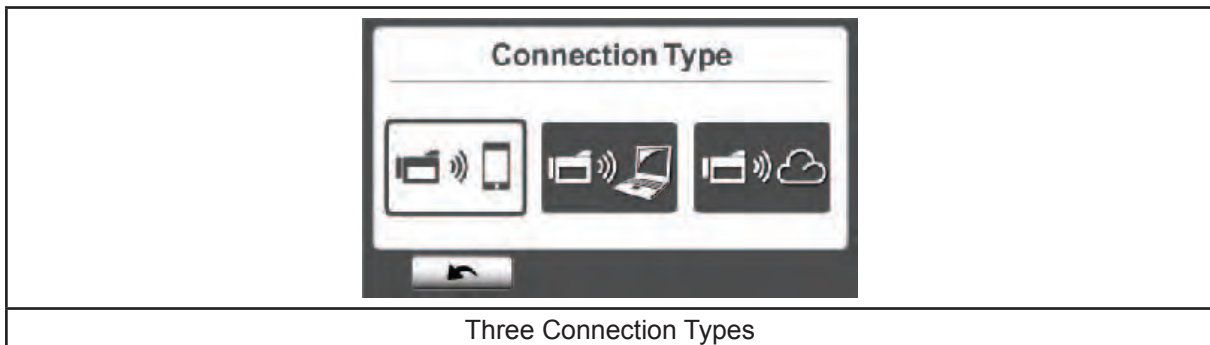






Note

- For details, please refer to section 6, 7, and 8.

Options for Record Menu




Menu Flow

1. Touch  on the screen to open the Menu.
2. Scroll left / right or touch  on the menu screen to change among the pages.

		
Video	Photo	Setting*
<ul style="list-style-type: none"> • Video Resolution • Light • Scene • White Balance • Video Stabilization • Motion Detect • Slow Motion • Time Lapse 	<ul style="list-style-type: none"> • Photo Resolution • Face Tracking • Date Printing • ISO • Self-Timer 	<ul style="list-style-type: none"> • Wireless Connection Type • Wireless ID • Menu Sound • TV System • Language • Time Setting • Format • Default Setting

* Please refer to Section 5 for the details of [Setting].




Video Menu

Operation	Display Screen
<ol style="list-style-type: none"> 1. Touch  on the screen to open the Menu. The menu will show on the screen. 2. The first page contains 8 options-- Resolution, Light, Scene, White Balance, Video Stabilization, Motion Detect, Slow Motion, and Time Lapse--for you to adjust the device settings. 3. Touch the Exit icon () to exit. 	

Video Resolution

Four resolution settings are available.

- **Full HD (1080p 30):**Record videos at 1920×1080p 30 fps resolution.
- **HD+ (720p 60):**Record videos at 1280×720p 60 fps resolution.
- **HD (720p 30):**Record videos at 1280×720p 30 fps resolution.
- **VGA (640×480):** Record videos at 640×480p 30 fps resolution.

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Video menu, touch the [Resolution] icon on the screen. 2. Touch to select the desired option. 3. Touch the OK icon () to validate the setting. 4. Touch the Return icon () to return. 	






Note


- *The remaining time will be varied based on the option you have.*

Light

Three light settings are available.

- **Light ON:** The light will be turned on.
- **Digital Light:** To extend the dynamic range for backlight and the high contrast sense so that the objects will be brighter and clearer.
- **Light OFF:** The light is turned off.




Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Video menu, touch the [Light] icon on the screen. 2. Touch to select the desired option. 3. Touch the OK icon () to validate the setting. 4. Touch the Return icon () to return. 	

	
Without Digital Light	Digital Light ON

Scene

You can select the mode according to the scene condition.

- **Auto:** Shoot without any special effect on the image.
- **Skin:** Shoot with an effect that makes skin tones more natural.
- **Night:** Use Night Mode for night scenes or under dull conditions.
- **Backlight:** You can take shots when the bright light is behind the subject.
- **Black/White:** The image is converted to black-and-white.
- **Classic:** The image is converted to a sepia look.
- **Negative:** The image is converted to the negative of the normal.

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Video menu, touch the [Scene] icon on the screen. 2. Touch to select the desired option. 3. Touch the OK icon () to validate the setting. 4. Touch the Return icon () to return. 	






Note

- To avoid blurry image, place the device on a flat, steady surface, or use a tripod in the Night Mode.

White Balance





The device adjusts the color balance of images automatically. Three manual white balance settings are available.



- **Auto:** The device automatically adjusts white balance.
- **Daylight:** Under outdoor condition.
- **Fluorescent:** Under fluorescent condition.
- **Tungsten:** Under tungsten light condition.

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Video menu, touch the [White Balance] icon on the screen. 2. Touch to select the desired option. 3. Touch the OK icon () to validate the setting. 4. Touch the Return icon () to return. 	

Video Stabilization





Record with an effect to eliminate any shake and increase the digital image stability.

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Video menu, touch the [Video Stabilization] icon on the screen. 2. Touch to select [On] () or [Off] (). 3. Touch the Return icon () to return. 	

	
Without Stabilization	Stabilization ON

Motion Detect





Record videos automatically when the device detects a movement.

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Video menu, touch the [Motion Detect] icon on the screen. 2. Touch to select [On] () or [Off] (). 3. Touch the Return icon () to return. 4. The device will start to record a video automatically if it detects a movement. It will stop recording once it detects no movement. 	



Slow Motion

Record videos with slow motion effect. When playing the video, the playback time will be longer than the actual recording time. Some occasions you can use this effect, such as the skill demonstration of athletic activities of all kinds, or a key moment in an athletic game.

Operation	Display Screen
<ol style="list-style-type: none"> In the Video menu, touch the [Slow Motion] icon on the screen. Touch to select [On] () or [Off] (). Touch the Return icon () to return. 	



Note




- When Slow Motion function is activated, audio will not be recorded and digital zoom will become disabled.
- The view angle may become smaller when the Slow Motion is activated.
- When Slow Motion function is activated, the video resolution is QVGA.



Time Lapse

Record still images at specific intervals you can set a play as one video file. This effect is good for recording cloudscapes, seed germinating and flowers opening.

- **Off:** Disable Time Lapse.
- **1 Second.:** Record one frame per second.
- **3 Seconds:** Record one frame every 3 seconds.
- **5 Seconds:** Record one frame every 5 seconds.

Operation	Display Screen
<ol style="list-style-type: none"> In the Video menu, touch the [Time Lapse] icon on the screen. Touch to select the desired option. Touch the OK icon () to validate the setting. Touch the Return icon () to return. 	



Note

- Pause function can not be used when Time Lapse function is activated.

Photo Menu







Operation	Display Screen
<ol style="list-style-type: none"> 1. Touch  on the screen to open the Menu. The menu will show on the screen. 2. Swipe on the menu screen to change the page. 3. The second page contains 5 options-- Resolution, Face Tracking, Date Printing, ISO, and Self-Timer--for you to adjust the device settings. 4. Touch the Exit icon () to exit. 	

Photo Resolution






Three resolution settings are available.

- **16MP**:Shoot photo at 4608×3456, 16MP quality.
- **5MP**:Shoot photo at 2592×1944, 5MP quality.
- **3MP**:Shoot photo at 2048×1536, 3MP quality.

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Photo menu, touch the [Resolution] icon on the screen. 2. Touch to select the desired option. 3. Touch the OK icon () to validate the setting. 4. Touch the Return icon () to return. 	

Face Tracking

The camera can detect human face(s) and focus on the face(s) automatically. This function can work with photo capturing only. It is wonderful to capture beautiful portraits in backlight situations.






Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Photo menu, touch the [Face Tracking] icon on the screen. 2. Touch to select [On] () or [Off] (). 3. Touch the Return icon () to return. 	
	

Note

- When Face Tracking is activated, the focus frame (s) will aim at the human face (s). Also, the frame (s) will display on the LCD before the [Record] button is pressed.

Date Printing

Imprint the date and time on the photo.

Operation	Display Screen
<ol style="list-style-type: none"> In the Photo menu, touch the [Date Printing] icon on the screen. Touch to select [On] () or [Off] (). Touch the Return icon () to return. 	
<ol style="list-style-type: none"> Once a photo is taken, the date will display at the right down corner of the photo when you activate this function. 	






Note

- Date Printing function can not be used in Record Mode.



ISO

The camera adjusts the ISO sensitivity of its images automatically. Two manual ISO sensitivity settings are available (800/1600). The larger the number is, the higher the ISO sensitivity will be. Select the lower setting to shoot a smoother image. Select the higher setting to shoot a photo in a dull environment, or to shoot a moving subject at a high speed.

Operation	Display Screen
<ol style="list-style-type: none"> In the Photo menu, touch the [ISO] icon on the screen. Touch to select the desired option. Touch the OK icon () to validate the setting. Touch the Return icon () to return. 	







Note

- The image may become blurred when you select a larger number.



Self-Timer

The self-timer allows you to take photos with a ten-second time of delay. The LED light at the front of the device will also blink. The blinking speed will increase right before the photo is taken.






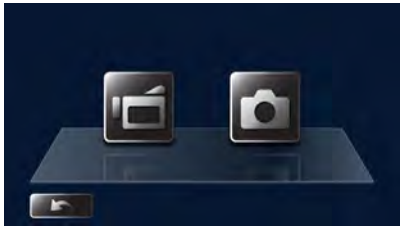
Operation	Display Screen
<ol style="list-style-type: none"> In the Photo menu, touch the [Self-Timer] icon on the screen. Touch to select [On] () or [Off] (). Touch the Return icon () to return. 	

Section 4

Enjoying the Playback Mode

 

 

 
Operations for Playback Mode

The Playback Mode is to view or manage videos/photos from the built-in memory or in an SD Card.

Operation	Display Screen
1. Touch  on the screen to switch to the Playback mode.	
2. Touch  to go to the Video Playback Mode. 3. Touch  to go to the Photo Playback Mode 4. Touch  to go back to the Record Mode.	


Button Function

The Buttons have the following functions in Playback Mode.


	Video Button: 1. Press to go the Playback Mode Main Menu.
	Photo Button: 1. Press to go the Playback Mode Main Menu.
	[T] Tele Button: 1. Volume increases. 2. Zoom in the photo [W] Wide Button 1. Volume decreases. 2. Zoom out the photo
	Power Button: 1. Press one second to turn the device on or off.
	Wireless Button: Wireless On/Off

LCD Monitor Information

Indicators on LCD screen are shown as below in two Playback Modes:

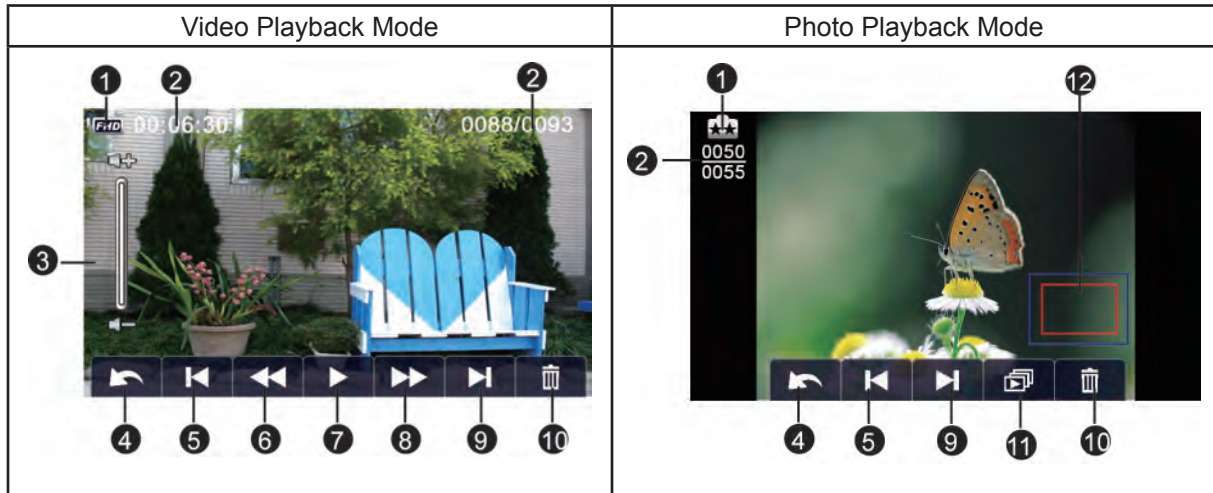

(1)	Video Resolution	
		Full HD (1080p 30 fps)
		HD (720p 60 fps)
		HD (720p 30 fps)
		VGA (640x480)
		Slow Motion (QVGA)
	Photo Resolution	
		16MP
		5MP
	3MP	
(2)	00:06:30	Video playback timer.
	0088/0093	Current number/ Total number of photos/videos.
	<u>0050</u> 0055	
(3)		Volume
(4)		Return
		Video stop
(5)		Previous video/photo








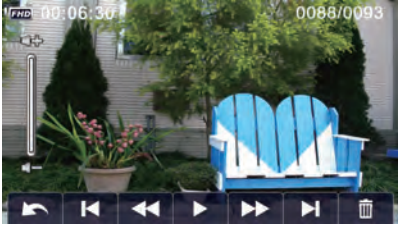
(6)		Video rewind
(7)		Video play
		Video pause
(8)		Video forward
(9)		Next video/photo
(10)		Delete
(11)		Slide show
		Slide show stop
(12)		Magnification Indicator



Note

- The  (icon) will be shown only if  is selected in photo Playback Mode.

Video Playback


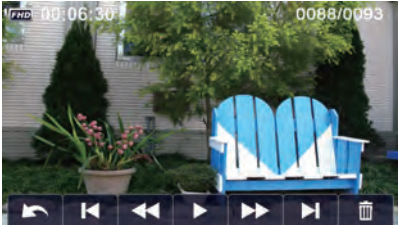
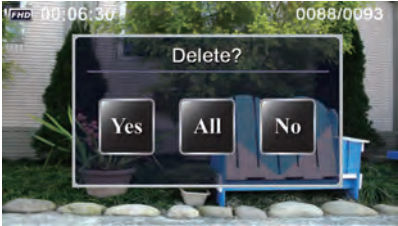
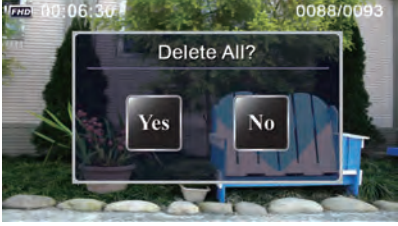
Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Video Playback mode, touch  to play or pause the video. 2. Scroll to right or touch  to go back; scroll to left or touch  to proceed to the next. 3. While playing video, touch  /  to rewind/forward. 4. Touch  to adjust the volume 5. Touch  to exit. 	



Note

- When the LCD is idle for a few seconds, the playback function icons will disappear automatically. Tap on the screen again to request for the function bar.

Delete Videos








Operation	Display Screen
<ol style="list-style-type: none"> 1. Touch  to go to the Delete option screen. 	
<ol style="list-style-type: none"> 2. Touch [Yes] to delete the current video or [No] to cancel the operation and then exit; touch [All (Delete All)] to delete all videos. 3. Once [All] is selected, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation. 	 



Note

- If a memory card is applied, you may delete those videos stored from the card only.
- Videos on a written-protected memory card cannot be deleted.

Photo Playback

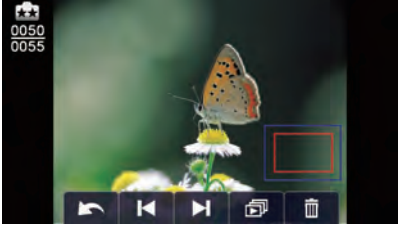
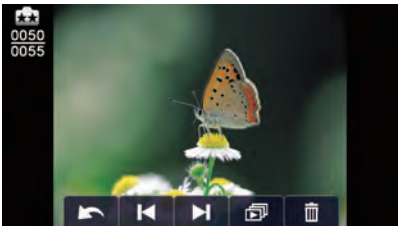
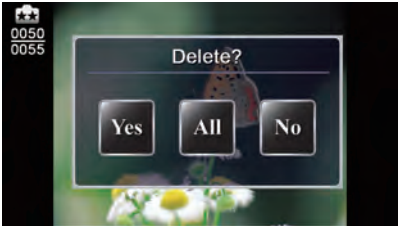
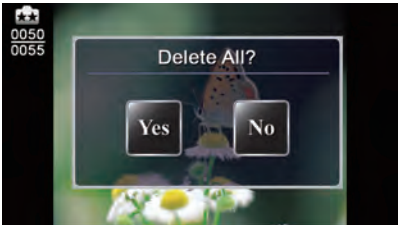
Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Photo Playback mode, scroll to right or touch  to go back; scroll to left or touch  to proceed to the next. 2. When the photo is selected, push forwards to the [T]  (Tele Button) to magnify. (The magnification Indicator appears on the screen) 3. To navigate the magnified photo, press on the screen and move to any direction requested with one fingertip. 4. Push forwards to the [W] (Wide Button) to zoom out or exit the magnification mode. 5. Touch  /  to start or stop the slide show. 6. Touch  to exit. 	



Note

- When the LCD is idle for a few seconds, the playback function icons will disappear automatically. Tap on the screen again to request for the function bar.

Delete Photo

Operation	Display Screen
<ol style="list-style-type: none"> 1. Touch  to go to the Delete option screen. 	
<ol style="list-style-type: none"> 2. Touch [Yes] to delete the current photo or [No] to cancel the operation and to exit; touch [All (Delete All)] to delete all photos. 3. Once [All] is selected, a confirmation screen will appear; touch [Yes] to execute the operation and [No] to cancel the operation. 	 






Note

- If a memory card is applied, you may delete those photos stored the card only.
- Photos on a written-protected memory card cannot be deleted.

Section 5

Setting Your Video Camera


Setting Menu

Operation	Display Screen
<ol style="list-style-type: none"> 1. Touch  on the screen to open the Menu. The menu will show on the screen. 2. Scroll on the menu screen to change the page. 3. The [Setting] page contains 8 options for configuring your device setup. They are Wireless Connection, Wireless ID, Menu Sound (operation sound), TV System, Language, Time Setting, Format, and Default Setting. 4. Touch the Exit icon () to exit. 	



Wireless Connection

You can select the function to set up or watch live video via wireless connection.

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Setting menu, touch the [Wireless Connection] icon on the screen. 2. Three connection types are provided. 3. Choose among (1) Wireless to Mobile (2) Wireless to PC (3) Wireless to Cloud for connection. 	





Note

- For details, please refer to section 6,7, and 8.



Wireless ID





Edit [Wireless ID & Password] on [Wireless to Mobile] / [Wireless to PC]

Operation	Display Screen
<ol style="list-style-type: none"> 1. In the Setting menu, touch the [Wireless ID] icon on the screen. 2. Touch to enter [Wireless ID] and [Password] 3. Touch the Return icon () to return. 	



Menu Sound

Enable or disable the sound effect of the operation sound.




Operation	Display Screen
<ol style="list-style-type: none"> In the Setting menu, touch the [Menu Sound] icon on the screen. Touch to select [On] () or [Off] (). Touch the Return icon () to return. 	



TV System




Select the appropriate TV standard in your area – either NTSC or PAL, Any wrong TV system setting may cause image flickers.

- **NTSC**(60Hz):USA, Canada, Japan, South Korea and Taiwan, etc.
- **PAL**(50Hz):UK, Europe, China, Australia, Singapore and Hong Kong, etc.






Operation	Display Screen
<ol style="list-style-type: none"> In the Setting menu, touch the [TV] icon on the screen. Touch to select [PAL] or [NTSC]. Touch the OK icon () to validate the setting. Touch the Return icon () to return. 	

Language

Use this option to select a language of the user's interface.








Operation	Display Screen
<ol style="list-style-type: none"> In the Setting menu, touch the [Language] icon on the screen. Touch to select the desired option. Touch the OK icon () to validate the setting. Touch the Return icon () to return. 	

Time Setting

Operation	Display Screen
<ol style="list-style-type: none"> In the Setting menu, touch the [Time Setting] icon on the screen to enter the time setting screen. Touch Year, Month, Day, Hour, Minute, and AM/PM to set. Adjust the numeric value by touching  / . Touch the OK icon () to validate the setting. Touch the Exit icon () to exit. 	

Format

- **Yes:** Format the built-in memory (When no SD card is installed)/ or an SD card you installed.
- **No:** Do not format the built-in memory (When no SD card is installed) / or an SD card you installed.

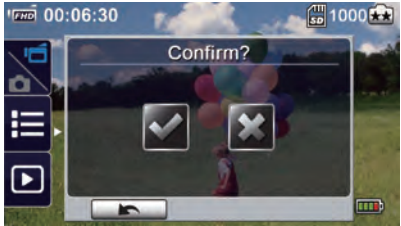Operation	Display Screen
<ol style="list-style-type: none"> In the Setting menu, touch the [Format] icon on the screen. Touch to select [Yes] or [No] ( ). (Touch [Yes]  to enter the confirmation screen.) 	
<ol style="list-style-type: none"> Touch the  icon to execute the operation and the  icon to cancel the operation. 	






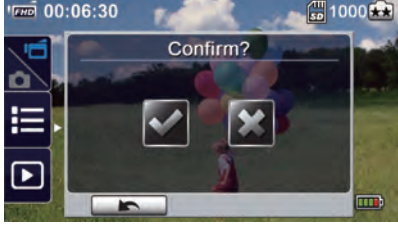


Note

- All the data will be erased if the SD card is formatted. Make sure a copy of the data has been made.

Default Setting

Restore the default setting.

Operation	Display Screen
1. In the Setting menu, touch the [Default Setting] icon on the screen. 2. Touch to select [Yes] or [No] (). (Touch [Yes]  to enter the confirmation screen.)	
3. Touch the  icon to execute the operation and the  icon to cancel the operation.	

The default settings of this device are listed as below.

Setting	Default Setting
Resolution	FHD (1080p 30) for Video 5MP for Photo
Light	Off
Scene	Auto
White Balance	Auto
Video Stabilization	Off
Motion Detection	Off
Slow Motion	Off
Time Lapse	Off
Self-Timer	Off
Face Tracking	Off
Date Printing	Off
ISO	Auto
Menu Sound	On
Password of Wireless ID	0000
TV System	Shipping area accordingly
Language	Shipping area accordingly
Volume	Level 3

Section 6

Wireless to PC WiVideo Suite

Advanced Operation on Your Computer - WiVideo

The camera can connect to your computer via wireless or USB. Once you launch the [WiVideo] application (for Windows® systems only) on your computer, it will search for your camera and connect to it. Then, you can operate more functions on your computer. There are several functions as below:

 

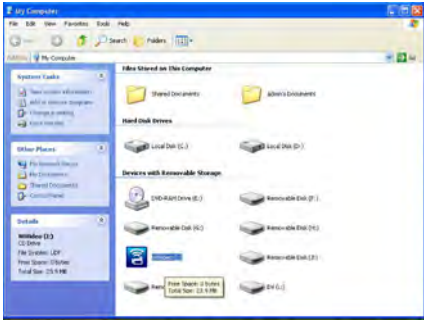
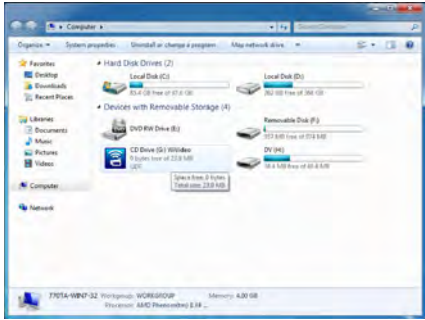
- Transfer the files from the camera. (wireless/USB connection)
- Watch live streaming video from the camera on your computer. (wireless connection)
- Use the camera as a wireless webcam for online video chatting. (wireless connection)
- Set up social network account and save info to camera. (USB connection)
- Configure and synchronize wireless profiles on camera. (USB connection)


Install [WiVideo] on your computer


To connect to the camera and launch [WiVideo] application via wireless correctly, you have to install this program firstly. It is a perfect platform for you to watch live streaming video from your camera and use the camera as a webcam for your online video chatting.

Follow the steps below to install the [PC WiVideo Suite] on the computer.


1. Connect the camera to your computer by using the supplied USB cable.
2. After making a USB connection, the program installs automatically, or the AutoRuns/AutoPlay window appears. (It may be different based on OS recognition.) If the AutoPlay window does not appear. Please click [My Computer] → [PC WiVideo Suite] to execute the installation of this program.

Windows XP	Win7
 <p style="text-align: center;">(Install automatically)</p>	 <p style="text-align: center;">(AutoPlay window)</p>
 <p style="text-align: center;">(Path to WiVideo.exe)</p>	 <p style="text-align: center;">(Path to WiVideo.exe)</p>

3. Follow the on-screen instructions to complete the installation.
4. The shortcut of WiVideo () shows on the desktop. (Or you can find the application at [Start] → [All Program].)
5. The main screen appears automatically on the desktop.

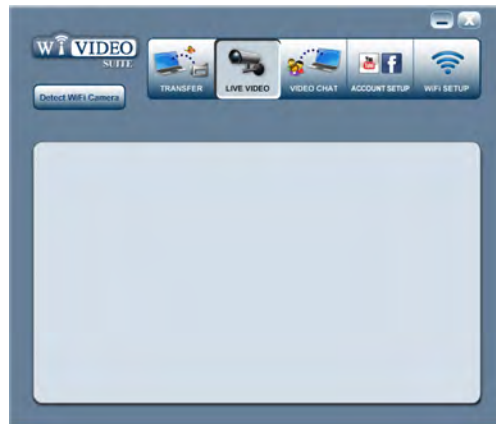



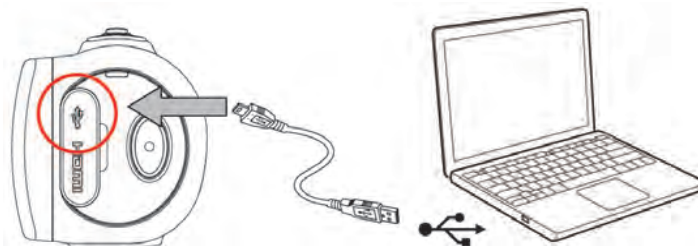

6. When the installation is completed, you can unplug the USB cable.




Note


- WiVideo program will install the H.264 Codec (ffdshow-a free software under GPL license) for viewing the videos correctly.
- To install correctly, you have to log out /quit from the Instant Message (IM) application before the installation.
- WiVideo is for Windows[®] systems only.
- When language on screen is not legible, refer to trouble-shooting section.

Using WiVideo via Wireless Connection

Operation	Screen
<p><u>On your camera:</u></p> <ol style="list-style-type: none"> 1. Press Wireless Button  and select [Wireless to PC] () to connect. (The default password is 0000. Wireless ID and password can be edited from Wireless ID () on Setting menu.) 	

On your computer:

2. Double click the [WiVideo] shortcut  on the desktop. (make sure the [WiVideo] application is installed in your computer in advance.)
3. Click [Detect Wireless Camera] button to search for your camera.





*One task window may pop out and ask you to select your camera when there are two or more wireless cameras in the same wireless network range.
4. Check [Wireless ID] and input [Password] shown on your camera on the WiVideo task window. Then, click [OK]
5. Once the connection is established, the signal of Wireless to PC  will show on top of the screen.
6. Then, Wireless to PC WiVideo Suite connection mode is completed.



Note


Turn PC wireless function on before use.

The WiVideo application serves 3 options with connection via wireless:


Function	Description
TRANSFER/ DELETE	You can remote control the videos and photos stored in your camera. You can transfer or delete the files in your computer.
LIVE VIDEO	Watch live streaming on your computer via your camera. You can select the video resolution.
VIDEO CHAT	Use your camera as a wireless webcam for online video chatting (You have to select this device as your webcam on the video/audio setting first.)* <div style="border: 1px solid black; padding: 5px; margin: 5px 0;"> <p>*You have to select [WiVideo Camera] as your webcam/microphone for the online video chatting.</p> </div> <div style="text-align: center; margin-top: 10px;">  <p>(e.g. Skype)   Microphone:WiVideo Camera  Webcam:WiVideo Camera</p> </div>




Note




- For the wireless connectivity working correctly, make sure the bundled WiVideo (for Windows® based systems only) is installed and the wireless LAN module of your computer is activated.
- Make sure your computer connects with your access point (AP) correctly and your camera is in the same range of the WLAN.
- For the much more stable video streaming when using LIVE VIDEO or VIDEO CHAT, please make sure the wireless signal strength shows 2 bars () or above on the camera.
- To boost the wireless signal strength, you can move the camera closer to your computer.
- If the camera is far from your computer or the AP device, it may take longer to connect to the network. (The signal and the radio frequency may be interfered.)
- To prevent the camera from turning off accidentally, please be sure the battery is fully charged.

Using WiVideo via USB Connection

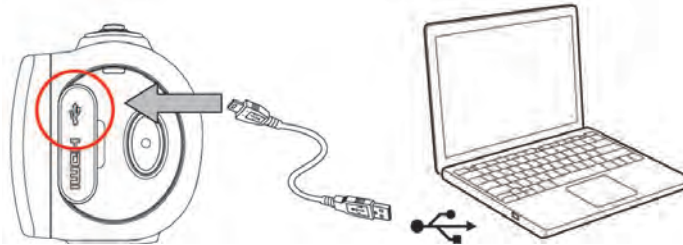1. Connect the camera to your computer by using the supplied USB cable.
2. After making a USB connection, the main screen will appear. Or please click [WiVideo PC Suite] shortcut  on the desktop to execute the application. Or you can find it at [Start]→[All Program].

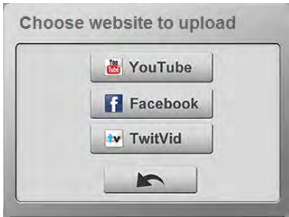

The WiVideo application serves 2 functions via USB:

Function	Description
TRANSFER	<p>You can access the videos and photos in your camera and upload the files to the social networks.</p> <p>Upload</p> <ol style="list-style-type: none"> 1. Select the videos/photos on the thumbnail screen. 2. Click on [Upload]. 3. The website options appears. 4. Select the website and check the Username/Email and password of the specific social website in the fields. 5. Click on [SET] to upload. <div style="display: flex; justify-content: space-around;">   </div>
SETUP	<p>Account Setup</p> <p>Set up your social network account information and save them to your camera.</p> <p>Wireless Setup</p> <p>Configure and synchronize your wireless profile to your camera.</p> <p>Name your camera and create your security password.</p> 



Note

- LIVE VIDEO and VIDEO CHAT are not available via USB connection.
- Some social websites may not be allowed to access in certain regions or networks.
- Your computer must have internet access to upload files to the website.
- If you do not have a account, please sign up on the website first.
- The social network is subject to update without notice. (e.g. password validation, create a channel) Please visit the website first to update your account setting.

Section 7

Wireless to Mobile WiVideo App

Advanced Operation on Your Mobile - WiVideo


Use your mobile as a remote control to take photo/videos from camera wirelessly. It makes the camera become a handy accessory to go with your mobile, which allows you to record any scene, any time and any where. There are several functions as below:


- Use your mobile as a remote control to take photos/videos from your camera wirelessly.
- Zoom in/out the lens on the camera via your mobile.

Install [WiVideo] on Your Mobile

To connect to the camera, you have to install [WiVideo] application program firstly. There are **two systems** to install [Mobile WiVideo App] onto your mobile. It depends on which system your mobile is applied to. For Android system, please download this App from Google Play; for iOS system (iPhone/iPad), please refer to Apple APP Store for installation.

Follow the steps below to install [Mobile WiVideo App] on your mobile.



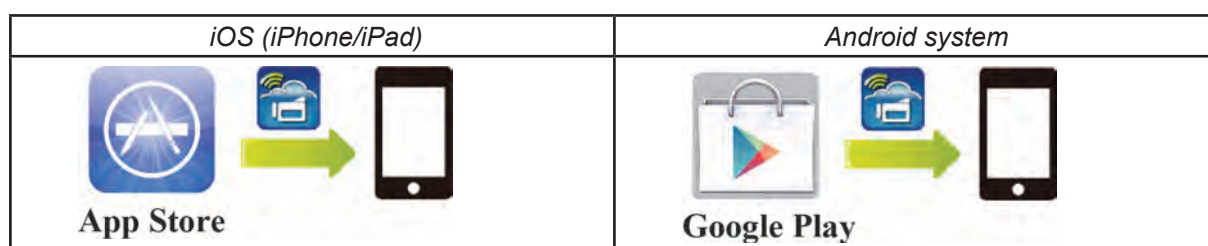


 



1. Download WiVideo App from Google Play (OS: Android2.2 or higher) or Apple APP Store (OS: iOS4 or higher) onto your mobile.
2. Follow the on-screen instructions to complete the installation.
3. The shortcut of WiVideo () is shown on the screen.




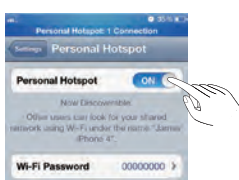



iOS system (iPhone/iPad): Direct/Hotspot/AP Modes

There are three modes of wireless connections to your mobile from the camera if you are a iPhone/iPad user. Under different environments and circumstances, you may use the one that is most effective to connect at the time.






(1) iOS: Using [Direct Mode] without wireless mobile service

Operation	Schema	Illustration
<p><u>On your camera:</u></p> <ol style="list-style-type: none"> 1. Press wireless Button  and select [Wireless to Mobile] () to connect. 2. Select [Direct Mode] on the [Wireless Access Point] list. 3. If the [Direct Mode] is connected, a signal icon will show (). 4. Tap the connection mode and a screen will show with [Wireless ID] and [Password] for three seconds. 		
<p><u>On your mobile:</u></p> <ol style="list-style-type: none"> 1. Go to [Settings] and then go to [Wireless] function. 2. Select the same [Wireless ID] shown on your camera to connect. 3. Once the icon [] shows, the Direct Mode connection is activated. 4. Press WiVideo icon [] to activate Mobil WiVideo App. <p>Note: It will take a while for [] to show up in order to connect.</p>		

(2) iOS: Using [Hotspot Mode] with wireless service mobile

Operation	Schema	Illustration
<p><u>On your mobile:</u></p> <ol style="list-style-type: none"> 1. Go to [Settings] on your mobile and then go to [Wireless] function. 2. Select [Personal Hotspot] function on your mobile. 3. Tap [On] to enable [Personal Hotspot]. 4. Once activate [Personal Hotspot], you may share wireless to your camera for connection. 		
<p><u>On your camera:</u></p> <ol style="list-style-type: none"> 1. Press wireless Button () and select [Wireless to Mobile] () to scan available Wireless Access Point (AP). 2. Select the same Hotspot from your mobile on the available AP list. 3. Connect your camera to this Hotspot. 		



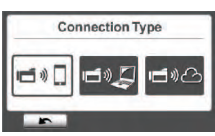


(3) iOS: Using [AP Mode] with Wireless Access Point

Operation	Schema	Illustration
<p><u>On your mobile:</u></p> <ol style="list-style-type: none"> 1. Go to [Settings] on your mobile and then go to [Wireless] function. 2. Enable wireless function from [Wi-Fi Networks]. 3. Select one AP available to you. 		
<p><u>On your camera:</u></p> <ol style="list-style-type: none"> 1. Press wireless Button () and select [Wireless to Mobile] () to scan available Wireless Access Point (AP). 2. Select the same AP chosen from your mobile. 3. Connect your camera to this AP. 		





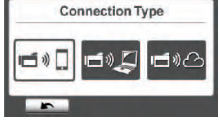
Android System: Hotspot / AP Modes

There are two modes of wireless connections to your mobile from the camera if you are a phone user with an Android system. Under different environments and circumstances, you may use the one that is most effective to connect at the time.

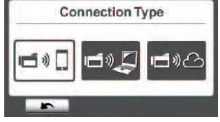
(1) Android: Using [Hotpost Mode] with wireless mobile service

Operation	Schema	Illustration
<p><u>On your mobile:</u></p> <ol style="list-style-type: none"> 1.Go to [Settings] and then go to [Wireless & network] function. 2.Enable Hotspot and/or AP function. 3.Once activate Hotspot, you may share wireless to your camera for connection. 		
<p><u>On your camera:</u></p> <ol style="list-style-type: none"> 1. Press Wireless Button () and select [Wireless to Mobile] () to scan available AP. 2. Select the same Hotspot from your mobile on the available [Wireless Access Point] list. 3. Connect your camera to this Hotspot. <p>Note: Operation may vary, please refer to each individual model.</p>		

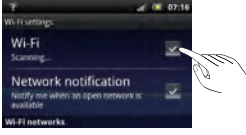(2) Android: Using [AP Mode] with Wireless Access Point





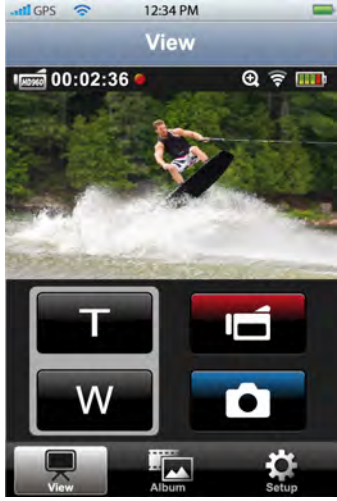


Operation	Schema	Illustration
<p><u>On your mobile:</u></p> <ol style="list-style-type: none"> 1. Go to [Settings] and then go to [Wireless & network] function. 2. Enable wireless function from [Wireless settings]. 3. Select one AP available to you. 		
<p><u>On your camera:</u></p> <ol style="list-style-type: none"> 1. Press Wireless Button () and select [Wireless to Mobile] () to scan available AP. 2. Select the same AP chosen from your mobile. 3. Connect your camera to this AP. 		

Using WiVideo via Wireless Connection

Operation	Screen
<p><u>Remote Control Your Camera (from Mobile):</u></p> <ol style="list-style-type: none"> 1. Press [Mobile WiVideo App] icon on your mobile. 2. Detect the available cameras automatically from your mobile. 3. Enter the password (The default is 0000 and it can be edited via [SETUP] from WiVideo APP.) or via [Settings] from the camera. 4. Enjoy playing your camera via your mobile. 	

Mobile WiVideo Suite Function

Through your mobile, you may remote control your camera wirelessly. Here is a list of icons shown on your mobile to illustrate their functions.

	<p>Tele(T)</p> <ul style="list-style-type: none"> • Zoom in
	<p>Wide(W)</p> <ul style="list-style-type: none"> • Zoom out
	<p>Video</p> <ul style="list-style-type: none"> • Press to take/stop video
	<p>Photo</p> <ul style="list-style-type: none"> • Press to take photo
	<p>View</p> <ul style="list-style-type: none"> • Watch live view on camera
	<p>Album</p> <ul style="list-style-type: none"> • Playback/Delete files on camera
	<p>Setup</p> <ul style="list-style-type: none"> • Manage settings on camera


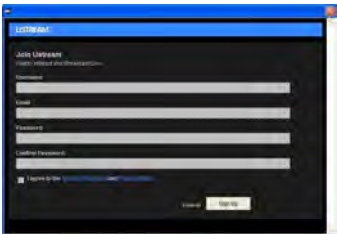


Section 8

Wireless to Cloud-Ustream

Sign up and Store Ustream Account to Camera


Ustream enables you to free broadcast the live video of your camera. People can watch your broadcasting on their iPhone, iPad, iPod touch, Android phones/tablets, or PC on Ustream website/ APP anytime, anywhere. WiVideo program can guide you to setup Ustream automatically.

Before you start using Ustream, you need to register an account at Ustream website (www.ustream.tv).

Operation	Screen
<p><u>(1) Create an account</u> (skip this if a Ustream account is ready)</p> <ol style="list-style-type: none"> 1. Go to PC WiVideo Suite [Account Setup] and create a new account for Ustream. 2. Click [Create A New Account] and then fill up the information requested step by step. 3. Then click [Sign Up]. <p> Note</p> <ul style="list-style-type: none"> • Remember to plug the USB cable between PC and your camera for connection. • The screen will go back to WiVideo settings once sign up successfully. • Make sure to insert date and time on [Time Setting] in advance for live video via Ustream correspondingly. <p><u>(2) Save/Remove an account info to/from your camera.</u> Enter Username/Password and click Store/Remove.</p> <p><u>(3) Select one channel</u></p> <p>PC WiVideo Suite has one default channel. You could create more channels on Ustream website.</p> <ul style="list-style-type: none"> • Select one channel for Ustream video broadcasting. • For privacy, it is optional to enter password for the selected channel. <p> Note</p> <ul style="list-style-type: none"> • Mobile device Ustream App cannot access private channel. • For private channel usage, refer to Ustream website for detail information. • Ustream will remain on even LCD panel is closed. 	<ol style="list-style-type: none"> 1.  2.  <p></p> <p></p>



Prepare AP / Mobile Hotspot for Ustream broadcasting

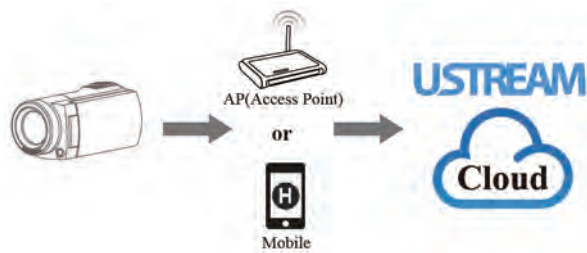Ensure you have a working AP (Access Point) / Mobile Hotspot device to get ready to start broadcasting.



Broadcast live video on Ustream



Start Live Video Streaming from Camera

1. Press [Wireless' ] button on the camera
2. Select [Wireless to Cloud]() from [Connection Type].
3. Log in your Ustream account
4. Enter your username and password.
5. The camera lists available Access Point.
6. Select one for wireless connection.
7. The camera connects to Ustream server and starts video streaming.



Note

- Once the username and password of Ustream account insert, it will show next time automatically.
- If you do not see anything, please enter username/ password with keypad.

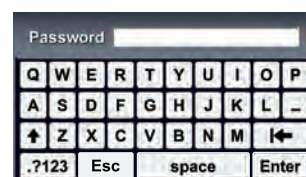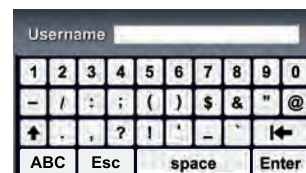

Watch Live Video from Mobile


1. Install Ustream App from Google Play or Apple Store.
2. Launch App and enter the username/channel
3. Click Ustream App
4. Search your account.
5. The mobile connects to Ustream server and view video streaming from camera.
6. When the connection is established, the signal strength will show on the top of the screen.
7. To cancel streaming, touch the [Return] icon to terminate streaming.



Watch Live Video from PC

1. Go to Ustream website and enter the username/channel
2. The video streaming will be broadcasted on the Ustream website.
3. People who has your account, they can visit Ustream website and watch the live video streaming from camera through computers.


www.ustream.tv

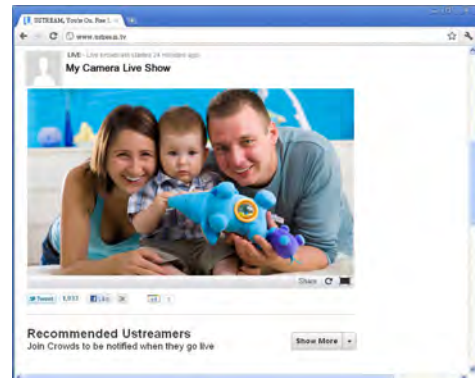


The camera lists available Access Points. Please select one for wireless connection.

Icon	Description
	Currently connecting AP
	Secured network: Requires the password to access the AP.
	Signal strength
	Up Down cursor: Change the pages.
	AP Profile information: Check the status or you can remove its profile.

1. Select the desired AP(Network) to connect to.
2. If the selected AP requires the password authentication, you will enter the keypad screen.
3. Enter the password and touch the [Enter] icon to confirm it.
4. Or touch the [Return] icon to exit.

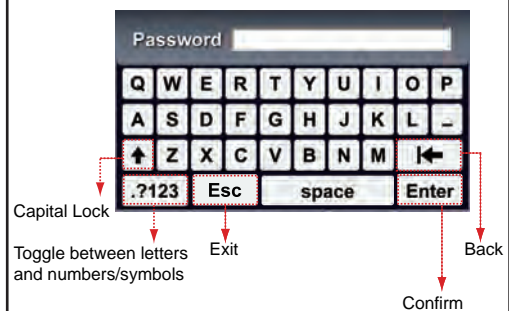

1. The screen shown the icon [Connecting Failed] () indicates the camera does not connect to the network correctly.



Note


- The possible reasons for “Connecting Failed” could be (1) wrong password ; (2) you are not in the wireless network area of the AP. (3) the camera does not support the type of encryption used on the AP. This model only supports WEP/WPA/WPA2 personal type of encryption, but not up to enterprise level (4) your network requires PPPoE account/password information.
- This camera only supports the AP(SSID) named in English/number/symbols (ASCII characters).
- You can only enter text in English, regardless of the OSD language.
- Some AP routers do not allow you to connect to the network (e.g. firewall).
- You may be charged by the network service provider.
- Please stay away from any electronic equipment since the radio frequency signals may interfere connecting.
- When streaming on Ustream, the record/ zoom functions are disabled.
- The camera cannot connect to the network while it is connected to an HDTV via the cable, or vice versa.
- It may take time to scan and connect to the AP/network or to upload. The stream speed is affected by the Internet connection speed or other factors.
- Please be sure the battery is fully charged before connecting to the network. It may take time to upload.
- If you do not have an account, please sign up on the website first.
- The social website update is the subject to change without notice. (e.g. password validation, create a channel) Please visit the website first to update your account setting.
- Ustream may not be allowed to access in certain regions or networks.
- Please avoid transferring the confidential files and setting your personal account information on the open networks or in public areas . The data transferred via wireless could be leaked.

Section 9

Viewing Photos and Videos on TV

Connecting to a High-Definition 16:9(Wide) TV

1. Connect the HDMI cable to your device's HDMI Out port.
2. Connect the other end of the cable to a television.
3. Set the video input source of your TV to "HDMI."
4. The steps for viewing stored videos and photos on HDTV are exactly the same as for viewing them on the LCD screen.

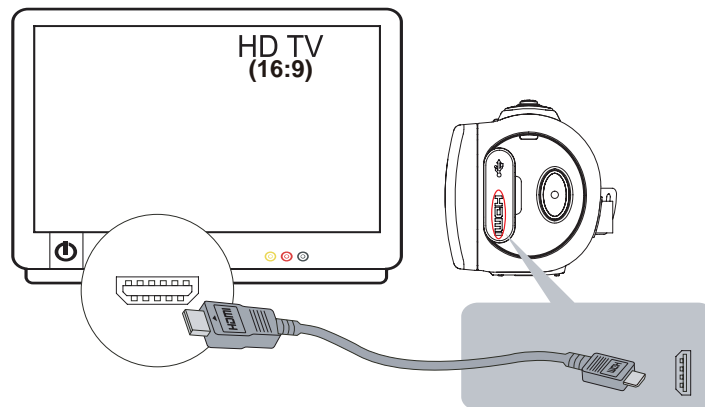


Note

- Some functions may not be accessible when the device is connected to an HDTV.

Connecting to a 4:3 TV

1. Connect the AV cable (sold separately) to your device's Mini USB2.0 port.
2. Connect the other end of the cable to a television.
3. The steps for viewing stored videos and photos on a TV are exactly the same as for viewing them on the LCD screen.

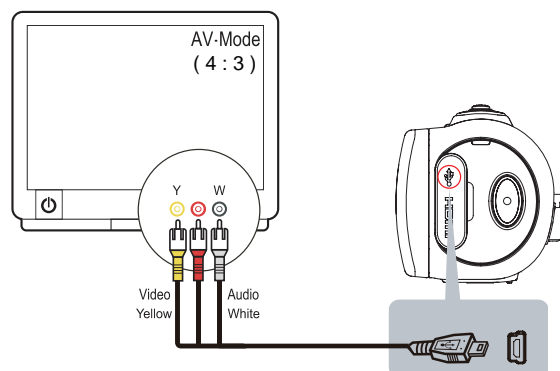

Note

- Some functions may not be accessible when the device is connected to a TV / HDTV.
- Some icons on the LCD screen do not display when the camera is connected to an HDTV.
- Video/photo taking is not applied while HDMI cable is on.
- Wireless function would not be applied while HDMI cable is used with TV.

Section 10

Viewing Photos and Videos on PC

Transferring Photos or Videos to a Computer

You can transfer photos or videos stored on your device to a computer and send them in e-mails to friends or post them on the web sites.

To do this you should:

1. Connect the computer and device with the supplied mini USB 2.0 cable.
2. To access photos and videos on your SD card: Videos and photos can be found on your computer at My Computer\SD\DCIM\100MEDIA (path will vary depending on name of SD card).
3. To access photos and videos in the device's internal memory: Videos and photos can be found on your computer at My Computer\DV\DCIM\100MEDIA
4. Under this folder, you can view, delete, move, or copy any video/photo you want.

Section 11

Specifications and System Requirements

Specification	
Image sensor	5 Mega pixel CMOS sensor
Operation modes	Video record, Photo record
Lens Type	10X Optical zoom
Lens	Auto Focus Lens (F2.8)
Focus range	Normal Mode Wide: 1cm ~ Infinity
	Tele: 80cm ~ Infinity
Zoom	1X~50X (10X Optical zoom and 5X Digital zoom)
Shutter	Electronic
LCD monitor	3 inches touch LCD (16:9)
External Lens/Filter mount	Ø 37mm
Storage media	Built-in 128MB memory (partial memory is used for firmware code and software); SD/SDHC/SDXC card slot support (up to 64 GB)
Photo resolution	16MP: 4608×3456 (16M pixels) (Interpolated) 5MP: 2592×1944 (5M pixels) 3MP: 2048×1536 (3M pixels)
Video resolution	Full HD (1080p 30): 1920×1080(30fps) HD+ (720p 60): 1280×720(60fps) HD (720p 30): 1280×720(30fps) VGA (640×480): 640×480(30fps)
White balance	Auto/Manual (Daylight, Fluorescent, Tungsten)
Self-timer	10 seconds delay
Light	Light On/ Digital Light / Light Off
File format	Photo: JPG Video: MP4 (H.264)
Image play	Single image/Slideshow
PC interface	Mini USB 2.0 port
TV out	HDMI
Battery	Lithium-ion rechargeable battery
Dimension	121mm (L) × 59mm (H) × 54mm (W)
Weight	247 g (without battery)

System requirements

- Microsoft Windows XP/Vista/7
- Intel /AMD Dual-Core CPU or above
- 1GB System memory and free
- 2GB System hard disk space
- Available USB 1.1/2.0 port or above



Note

- *The LCD screen is manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, some tiny black and/or bright dots (white, red, blue or green) may appear on the LCD screen. These dots are a normal result of the manufacturing process, and do not affect the recording.*

Section 12

Troubleshooting

Troubleshooting

If the camera fails to function as expected, check the list of the common problems below.

Problem/Situation	Remediation/Solution
Cannot turn on the camera. The power turns off suddenly.	• Power is off. Press the [Power Button] to turn on.
	• Battery pack is weak or depleted. Recharge the battery pack.
Camera cannot be turned on after plugging power adapter.	• Please make sure that you use the supplied power adapter and connect it to the power outlet correctly.
The files on the memory card do not display smoothly when the LCD shows the “!” marking.	• “!” means the SD card is low speed or contains corrupted files. To solve this, format the SD card using the camera instead of a computer. (Please refer to the detailed Format instruction in Section 5).
	• The card has some problems and can not be recognized. Change the card with another one.
	• Or please change the SD card to a high speed one.
Cannot take video/photo.	• Memory is full. Delete some unnecessary videos/photos or insert a new SD card.
	• Power is off. Press the [Power Button] to turn on.
The camera is frozen.	• Please remove the battery/unplug the adapter. Then, insert the battery/plug the adapter and turn on the camera again.
The date imprinted on the photo is incorrect	• Set the date and time in the [Setting] menu.
Why do some of my indoor photos look blurry and dark?	• Poor lighting. Take photo in better lighting.
	• The camera extends photo exposure time under low light/indoor condition. Keep the camera (and the target subject) steady for several seconds when taking photos.
	• Place the camera on a flat and steady surface, or use a tripod when take photo.
The color of the video/photo is not natural.	• Select the proper white balance option to match the light source.
When the camera is connected to the PC via USB cable, many Autoplay windows may pop out. They indicate the disks of the camera.	<ul style="list-style-type: none"> • [DV] indicates the internal memory of the camera. • [Removable Disk] indicates the external memory (memory card installed in the camera). • The disk [DVAP] shows the built-in Internet Direct application is saved at this disk. Please DO NOT format this disk or delete the application inside; otherwise, the Internet Direct application can not function.
Language on screen is not legible.	• When the language shown on the screen is not legible, please refer to FAQ at websites from each original computer manufacturer.

Section 13

FCC Regulations and SAR Information

FCC Regulations

15.19(a)(3):

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

15.105(b):

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The highest SAR value for the device as reported to the FCC is 0.226 W/kg when placed next to the body.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: E8HDCB229C100.

This device is compliance with SAR for general population /uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.