



i

- For some All-in-One PCs, the USB Receiver is already installed in the PC.
- If the Caps Lock indicator is not shown on your Windows screen or the Eject shortcut key is not functioning, please download and install the software from www.support.dell.com/KM713

