

**User Manual**

**Wireless Touchpad**

# Setup: Wireless Touchpad

---


## System Requirements


The following is a list of system requirements:

- One USB port (for the USB Receiver)
  - Microsoft Windows 8.
- 

## Contents of the Box




 **Note:** NOTE: The USB receiver may be pre-installed on your computer.

 **Note:** Insert documents vary according to shipping country's requirements.


---

## Setting Up

### Step 1: Setting up the Wireless Touchpad

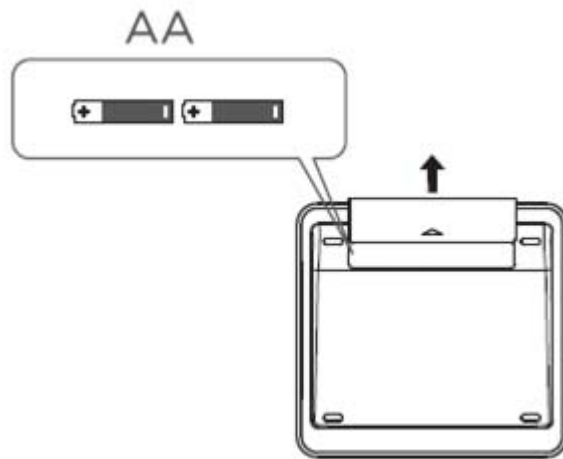


### Step 2: Connect the USB Receiver to Computer

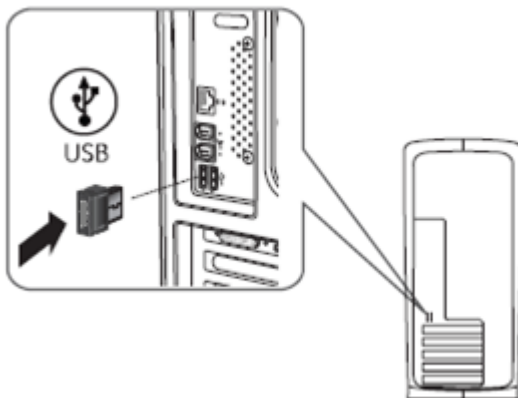

If your keyboard and mouse are NOT working, please refer to Troubleshooting page

## Features: Wireless Touchpad

### Front View

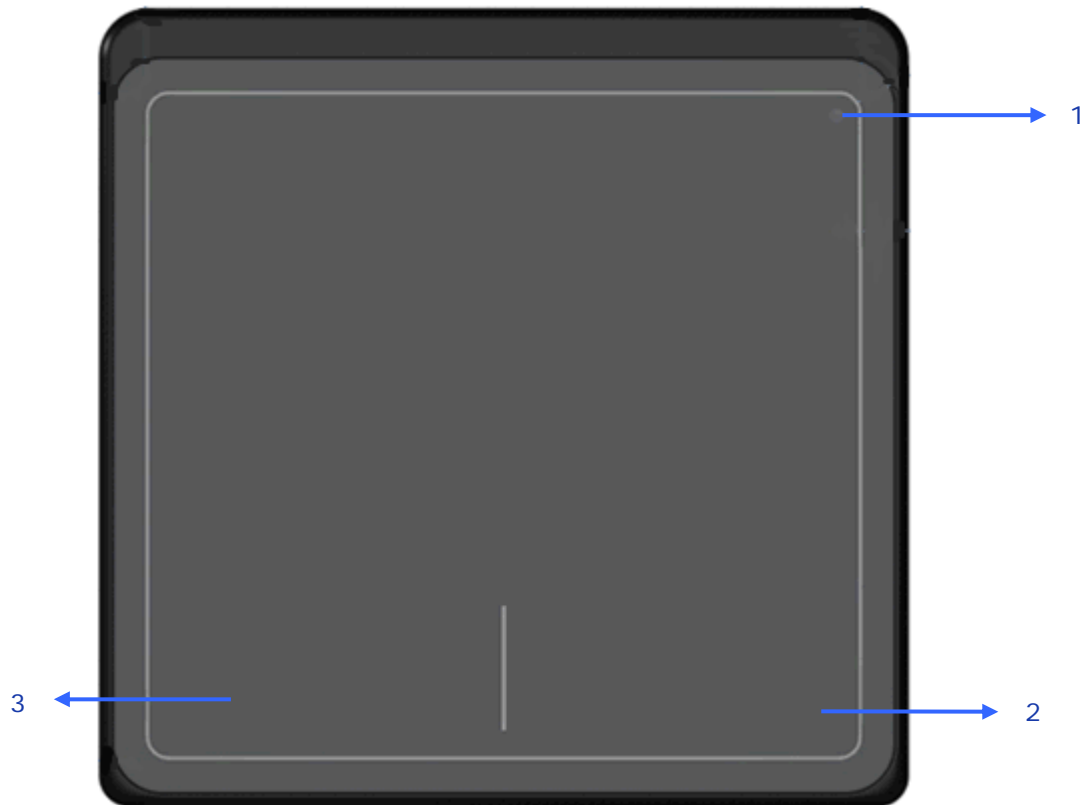

1 LED Indicator      Indicates the status of Power on and when battery is low.

White (solid) – Fade on = 1 sec.

On = 10 sec.

Fade off = 1 sec.

Amber (flashing) – Battery charge is < 15% power.

2 Right Click

3 Left Click










## Back View







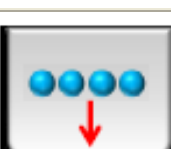

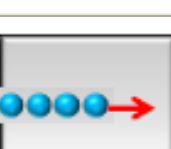



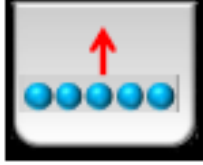
1. Power switch
2. Battery compartment

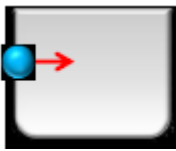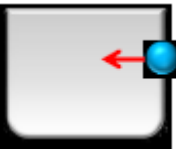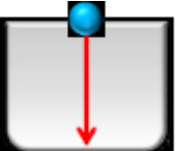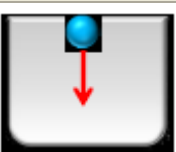


## Gesture Functions

	<p><b>Cursor Moving</b>, Left/Right/Up/Down</p>
	<p><b>Tap</b>, Open the App, the function as the mouse left button. Support single and double click.</p>
	<p><b>Left Edge swipe</b>, Reveal all the open App, left edge to right side.</p>
	<p><b>Right Edge swipe</b>, Reveal start charm</p>
	<p><b>Top Edge swipe</b>, Close open App, from top edge to down side</p>
	<p><b>Top Edge swipe</b>, Reveal App Menu</p>
	<p><b>Slide</b>, left/right, App move as same as the finger move.</p>
	<p><b>Zoom in</b>, Zoom out picture/Metro surface/Page and so on.</p>
	<p><b>Zoom out</b>, Zoom out picture/Metro surface/Page and so on.</p>

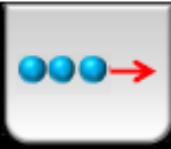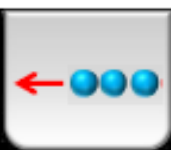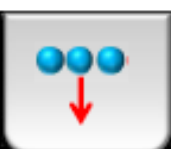	<p><b>Rotate,</b> All the supported rotated App, support 90°rotate.</p>
	<p><b>2-finger tap,</b> reveal App menu</p>
	<p><b>Page Forward</b></p>
	<p><b>Page Backward</b></p>
	<p><b>Page Down</b></p>
	<p><b>Page Up</b></p>
	<p><b>Display Desktop</b></p>
	<p><b>Display Metro surface</b></p>
	<p><b>Lock the screen</b></p>
	<p><b>Volume Down</b></p>



**Volume Up**

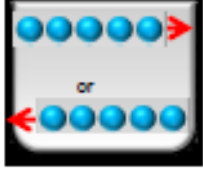

**Mute On/Off**



# Specifications: Wireless Touchpad

## Electrical

Operating Voltage	2.0 V to 3.2 V
Battery life	3 months and above
Battery require	2*AA Alkaline

## Physical Characteristics

Height	23( $\pm$ 0.4) mm
Length	130( $\pm$ 0.5) mm
Width	128( $\pm$ 0.5).mm
Weight	205gw with batteries

## Environmental

Operating temperature	0 °C to 40 °C
Storage temperature	-40 °C to 65 °C
Operating humidity	90% maximum Relative Humidity, non condensing
Storage humidity	95% maximum Relative Humidity, non condensing

## 2.4 GHz Wireless

Radio transmission	Bi-directional, Enhanced Shock Burst™
Range	10M without signal disturbance and no direction limit

# Troubleshooting: Wireless Touchpad

---

If you have problems with your Touchpad:

- Check if the batteries are inserted in the correct orientation.
- Check if the Touchpad's power switch is set to on.
- Remove and reinstall the batteries. The power status light fades on (solid white) for about 1 second and on 10 seconds and then fades off 1 second.
- Remove and insert the USB receiver again.
- Restart your computer.

Insert the USB receiver into another USB port on your computer.

## **FEDERAL COMMUNICATIONS COMMISSION (FCC) STATEMENT**

This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to Part 15 the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

### **CAUTION:**

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

### **Industry Canada Statement:**

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

### **IMPORTANT BATTERY INFORMATION**

- Keep batteries out of reach of children.
- Insert the batteries in the proper direction as indicated by the positive (+) and negative (-) markings in the battery chamber.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or proper disposal of them in accordance with Local and National Disposal Regulations.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with the battery manufacture's instructions and Local and National Disposal Regulations. Before inserting new batteries, thoroughly clean the compartment with a damp paper towel, or follow the battery manufacture's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.
- Remove the batteries if your device is to be stored for an extended period of time without being used.

### **PRODUCT DISPOSAL INFORMATION**

Dispose of this product in accordance with Local and National Disposal Regulations.