



Intermec

Navigation and function keys: Power (top left), Home (top center), Back (top right), and a blue function key (top right).

Q	W	E	R	T	Y	U	I	O	P	System	Home
A	S	D	F	G	H	J	K	L	;	'	Enter
Z	X	C	V	B	N	M	2	3	6	9	0
1	4	5	8	7	0	.	1	2	3	4	5
6	7	8	9	0	.	1	2	3	4	5	6

Bottom row: Power (bottom left), Home (bottom center), Back (bottom right), and a blue function key (bottom right).









CAUTION
CLASS 2 LASER PRODUCT
DO NOT OPEN DO NOT
STARE INTO BEAM
CLASS 2 LASER PRODUCT
E6-10252-1-0001
LASER NOTE - DO NOT STARE INTO BEAM
CLASS 2 LASER PRODUCT (MAX. SP. 500mW)



Intermec Technologies Corp.
Everett, WA 98203

BUSINESS DEV UNIT - NOT FOR SALE
This device has not been authorized for sale required by the
rules of the Federal Communications Commission. This
device is not for sale, and may not be, offered for sale, or lease,
or sold or leased, until authorization is obtained.

PP- Coz - P4-B2-001
B2-LAN-qwerty



CAUTION
CLASS 2 LASER LIGHT
WHEN OPERATED IN
"STARE" MODE. DO NOT
STARE INTO BEAM.
CLASS 2 LASER PRODUCT. Part No. 80074

LASER LIGHT - DO NOT STARE INTO BEAM
CLASS 2 LASER PRODUCT. Part No. 80074

Intermec Technologies Corp.
Everett, WA 98203

BUSINESS DEV UNIT - NOT FOR SALE

This device has not been authorized as required by the rules of the Federal Communications Commission. This device is not, and may not be, offered for sale or lease, or sold or leased, until authorization is obtained.

PP: Coz - P4 - B2 - 001
B2 - LAN - qwerty

WLAN2

SN: P0314 027525
AT: 00 0100 00111 00000000000000000000
EN: 02470000000000000000000000000000
FL: 10000000000000000000000000000000

