
## IM11 FCC, Canada label and placement

Label is located on the back of the module, side without antenna connectors, to accommodate heat sinking for high duty cycle operation.

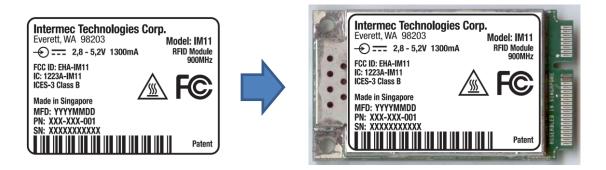

(mm)

