

TRANSMITTER "2 BUTTON" OPERATION

Programmable feature #22 changes the configuration of how the transmitter operates the system. In the factory default setting of "1 Button Operation", a single transmitter button alternates Arming and Disarming the system with every press of the button. When this feature is programmed to the "2 Button Operation" setting, one of the transmitter's buttons will only Arm the system, and a second button will only disarm the system. An optional transmitter with four buttons is available; an order form is found on page 36.

To Arm the System:

3 Button Transmitter

Press & Release the Large Upper Button



OR



THE SIREN CHIRPS TWICE TO CONFIRM ARMING



THE DOORS WILL LOCK*

Press & Release the "Arm/Lock" Button ()

Optional 4 Button Transmitter

To Disarm the System:

3 Button Transmitter

Press & Release the Small Center Button




OR



THE SIREN WILL CHIRP ONCE TO CONFIRM DISARMING



THE DOORS WILL UNLOCK*

Press & Release the "Disarm/Unlock" Button ()

Optional 4 Button Transmitter

* An optional doorlock interface must be installed

To Activate "Enhanced Panic":

3 Button Transmitter

Press & Hold for 3 Seconds the Large Upper Button
OR the Small Center Button



Hold 3 seconds

OR

OR



Hold 3 seconds



THE SIREN SOUNDS



THE PARKING LIGHTS WILL FLASH

THE DOORS WILL LOCK LOCK OR UNLOCK*

"Enhanced Panic" allows you to activate Remote Panic from either the Arming button or Disarming button; the former locks the doors and the latter unlocks the doors when Remote Panic is activated.

Press & Hold for 3 Seconds the "Arm/Lock" Button ()
OR the "Disarm/Unlock" Button ()

Optional 4 Button Transmitter

To Deactivate Panic:

Press & Release either button

To Silently Arm and Disarm the System:

3 Button Transmitter

Press & Release the Small Lower Button Twice



2X

OR



 
2X

THE PARKING LIGHTS WILL FLASH TWICE



THE DOORS WILL LOCK*

Silent Arming and Silent Disarming are both operated by double-pressing the same transmitter button.

Press & Release the "Auxiliary Output" Button () Twice


Optional 4 Button Transmitter

* An optional doorlock interface must be installed

To Activate Auxiliary Output:

3 Button Transmitter

Press & Hold for 3 Seconds the Small Lower Button

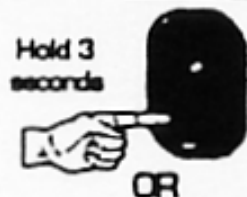

IF ARMED, THE SYSTEM
WILL DISARM, WITH
3 SIREN CHIRPS
AND 1 LIGHT
FLASH

IF THE SYSTEM IS NOT ARMED,
CONFIRMATION IS 1 SIREN CHIRP
AND 1 LIGHT FLASH



TYPICALLY USED
FOR OPTIONAL
TRUNK
RELEASE

THE DOORS WILL UNLOCK*

Press & Hold for 3 Seconds the "Auxiliary Output" Button (II)

Optional 4 Button Transmitter

To Activate Optional Sensor Remote Bypass:

3 Button Transmitter

Press & Release the Large Upper Button to Arm, then Press & Release the Small Lower Button



1



2

OR



1



2

THE SIREN WILL CHIRP TWICE TO
CONFIRM ARMING
THE SIREN THEN CHIRPS ONCE
TO CONFIRM SENSOR BYPASS

THE PARKING LIGHTS
WILL FLASH TWICE
TO CONFIRM
ARMING



THE DOORS WILL LOCK
UPON ARMING*

Press & Release the "Arm/Lock" Button (I) to Arm, then Press & Release the "Auxiliary Output" Button (II)

Optional 4 Button Transmitter

* An optional doorlock interface must be installed

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment

FCC ID :ELV119S

This device complies with FCC Rules Part 15 Operation is subject to the following two conditions (1) This device may not cause harmful interference and (2) this device must accept any interference that may be received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.