


Remote Transmitter Operations

Pressing and releasing the “**arm/lock**” button arms the security system and locks the doors. Pressing and holding this button for three seconds will first arm, and then activate the Panic feature, locking the doors.

Pressing the “**channel 2**” button for two seconds can be used to activate an output for an optional function such as trunk release.

Pressing and releasing this button twice arms or disarms the system without the confirmation chirps.

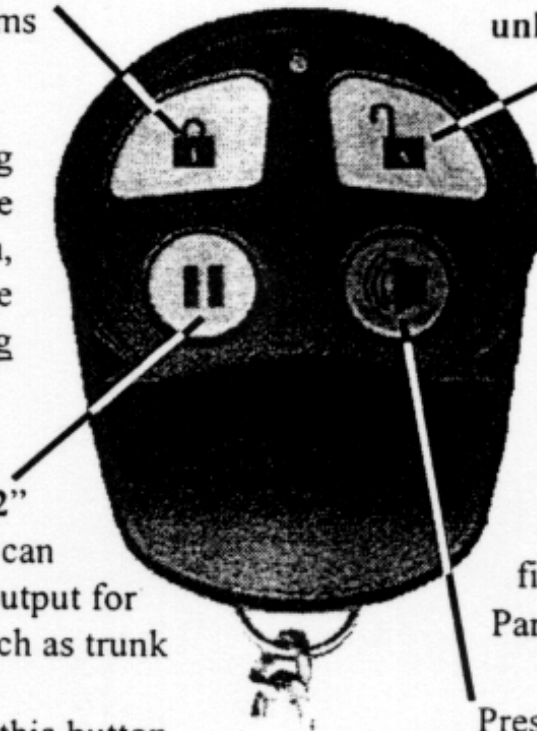

Pressing and releasing the “**disarm/ unlock**” button disarms the system and unlocks the doors unless the system is activated. The unlock operation may be configured so that pressing this button once disarms the system and unlocks only the driver's door, and pressing a second time unlocks all of the doors.

Pressing and holding this button for three seconds will first disarm, and then activate the Panic feature, unlocking the doors.

Pressing the “**panic**” button for three seconds will activate the Panic feature, but without locking or unlocking the doors.

Transmitter part number: #143-03

The Red LED Status Light: Informs you of the different conditions the security system can be in and also serves as a visual deterrent to break-ins and theft.

The Valet Switch: In “every day” operation, the Valet Switch is used to place the system into “Valet Mode”. Valet Mode can be used to turn off automatic functions, such as Last Door Arming or Automatic Rearming, and also prevents arming the system via remote transmitter. The Valet Switch is also used, with the ignition key, to disarm the security system in the event the transmitter becomes inoperable, and this switch is also used in the procedure for programming features and programming transmitters.

Arming The System Using The Transmitter

Arming The Security System Using The Transmitter: The security system can always be armed from the transmitter, provided the ignition key is “off” and the system is not in the Valet Mode. To arm the system, after you exit the vehicle and close all of the doors, simply **press and release the “arm/lock” button once**. The parking and interior lights will flash once, the siren will chirp once and the LED Status Light will begin to flash, confirming that the system is armed. In addition, the doors will lock and the starter interrupt will engage to prevent any attempt to start the vehicle. Your security system is now fully armed, and is ready to respond if an intrusion attempt is detected.

Please note that the Excalibur’s separate “**arm/lock**” and “**disarm/unlock**” button design allows repetitive operation- if already armed, pressing the “**arm/lock**” button will simply rearm the system, and vice versa when pressing the “**disarm/unlock**” button.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user’s authority to operate the equipment
