



TRANSMITTER PROGRAMMING GUIDE Model : PRO-OE2C4S

The transmitters included with the system have been pre-programmed at the factory, with each button pre-assigned to control a specific function of the system. Although the system in the vehicle has a 2 channel RECEIVER, the transmitters included with the system are capable of transmitting 3 distinct codes. This allows you to program each transmitter to more than one vehicle in two car family. Refer to the chart below for access to each of the transmitter channels, and for the standard factory button assignments.

TRANSMITTER		SYSTEM RECEIVER	
CHANNEL	BUTTONS	CHANNEL	FUNCTION
1		1	*Remote Door Lock & Unlock Push And Hold 3 Seconds For Car Finder
2		2	Push 2 Times To Start/Stop



- * Remote Emergency Panic is available only on certain models.
- * Door Lock/Unlock may require additional components in certain vehicles.
- ** Not available on all systems, some of the more common accessories for these additional channels are;

AS 9153
AS 9256

Remote window roll up
Remote trunk release relay

Released 9-06-01.

PROGRAMMING THE TRANSMITTERS

It is important to remember that during programming, each individual step of the procedure must be executed within 15 seconds of the previous step. When the 15 second time limit is allowed to expire, the system will automatically terminate the programming mode. This is indicated by a long chirp from the siren.

Additionally, the system will store codes from up to four different transmitters. If a 5th transmitter is programmed to any receiver channel, then the first transmitter programmed to that channel will be erased from the system's memory.

 
To program new or additional transmitters,

1. Enter the vehicle and turn the ignition key to the " on " position.
2. Move the program valet switch on - off - on - off - on - then off.
3. Press and hold the lock/unlock transmitter button until the parking lights flash, indicating the signal has been stored into memory.
4. If you have additional transmitters (up to a total of 4) that need to be programmed, repeat step 3 for each transmitter.
5. Flip the valet switch on then off, or turn the ignition switch off to exit the program mode.

BATTERY REPLACEMENT:

The transmitter incorporates a small LED built into the case. This LED can be used to indicate battery condition. You will notice a decrease in transmitter range as the battery condition deteriorates. Transmitter battery replacement is recommended at least every 10 to 12 months, depending upon how frequently the transmitter is used. To replace the battery...

1. Remove the transmitter cover by removing the small screw from the back of the transmitter case.
2. Carefully unsnap the top cover of the transmitter from the bottom cover.
3. Remove the discharged battery, making note of the orientation of the + and - contacts, and dispose of properly. Install the new (type GP27A) battery, taking care to orient the + and - contacts properly.
4. Replace the transmitter cover, taking care not to damage the LED or switches on the circuit board. Reinstall the case screw.



CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment