

11-0007

Plus CA-RC7 Remote control Transmitters

The LCD screen on the 2-way remote sends remote status. It enables a user to check for any status of the 58092-312 around the clock surveillance of your vehicle, as well as displaying the present status of the system.



LCD Remote Icons

	Door Lock Vehicles Doors are Locked		Shock Sensor Shock Sensor Triggered (A to G)
	Door Unlock Vehicles Doors are Unlocked		Power Save Mode Saves The Battery Power when Transmitter is not in Use
	Armed Mode Security System is Armed		Vibrate Mode Vibrates when Security System is armed
	Valet Mode Security System is in Valet Mode		Low Battery Replace the Transmitter Battery
	Remote Transmission Transmitter 3 Signal		Ignition Trigger On Ignition Switch (A to B)
	In-Range Indicator You are within Remote Control Range		Driver Paging / Lost and Found Someone is Paging you from the Vehicle
	Door Triggered Doors are Opened (A to B)		System Triggered Alerts that the System has been Triggered
	Trunk/hood Triggered Trunk/hood are Opened (A to B)		
	Second Vehicle Communication Communication with a Second Vehicle's Security System		

WZNY

Plus 5809 Remote Control Transmitters

Transmitter Buttons	System Function	Remark
	Lock Door & Alarm System	
	Arm and Disarm the 2-Stage Shock Sensor	Press Twice within 3 Seconds
	Arms System with Hidden Alarm Function	Press within 3 Seconds For 1-Way Transmitter Press * - G
	Start Arming/Disarming	Ignition in "OFF" Position
	Active Arm/Car Alarm Mode	Ignition in "ON" Position, Press and Hold for 2 Seconds
	Unlock Doors & Disarm System	
	Two Stage Disarm Shock and Disarm System	Press Times within 3 Seconds
	Mute Beep - Control 2	Press and Hold for 2 Seconds For 1-Way Transmitter Press *
	Re-arm Arming System	While the System is "Disarmed" For 1-Way Transmitter Press * *
	Channel 3 Tone/ Central Output	For 1-Way Transmitter Press *
	Car Location	For 1-Way Transmitter Press
	Panic Function	Press and Hold for 3 Seconds For 1-Way Transmitter Press for 3 Seconds