

# User Manual

## Plus CATXSS

## Remote Control Transmitters

### Outline:



#### 1. Doors Lock

Press button .the vehicle doors are locked.

#### 2. Doors Unlock

Press button .the vehicle doors are unlocked.

#### **SHUTING DOWN THE REMOTE START:**

To shut down the remote start feature form the transmitter press and release the transmitter button 2 times within 2 seconds.

#### **TRANSMITTER PROGRAMMING:**

If the need arises for programming of additional or replacement transmitters, simply follow the 4 steps outlined below:

1. Turn the ignition to the ON position
2. Press and release the programming button 3 times
3. Press and hold, for 3 seconds, the button of the transmitter you wish to add until the parking light flashes indicating the transmitter has been

**FCC Caution** :To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.