

# Using Your Remote Control

## **Arming the Security System**

To arm the system, exit the vehicle, close all doors, then press the LOCK button on the remote control. The system will sound 2 times and the parking lights will flash 2 times, indicating the system is armed, has locked the doors (if equipped and connected) and activated the starter disable feature. The status indicator (blue warning light on the dash) will blink steadily, once per second. To arm the system silently, press and hold the LOCK button for 1 second. The parking lights will flash 2 times, indicating the system is armed, has locked the doors (if equipped and connected) and activated the starter disable feature. The status indicator (blue warning light on the dash) will blink steadily, once per second.

## **Pre-arm Mode**

If the system sounds 1 time and the parking lights flash only 1 time, this indicates that the vehicle's interior light is on or an entrance is left open. Check to see that all doors hood and trunk are closed properly. Once all entrances are secured (and the interior light is off), this system will sound/flash again. The system is now fully armed. (If the entrance is not secured within 4 minutes, the system will arm and ignore the unsecured entrance until it is closed.)

## **Disarming the Security System**

To disarm the system press the UNLOCK button. The system will sound and the parking lights will flash once, and the doors will unlock (if equipped and connected). To disarm the system silently, press and hold the UNLOCK button for 1 second. The parking lights will flash, indicating the system is disarmed and has unlocked the doors (if equipped and connected).

## **Disabling/Enabling Confirmation Chirps**

1. Turn the ignition key ON then OFF.
2. Within 10 seconds push and release the valet/override button 3 times.
3. The system will sound 2 times to disable confirmation chirps or 1 time to enable confirmation chirps.

## **Attempted Intrusion Identification**

This system will inform you if an intrusion attempt has occurred while you were away from the vehicle. If an intrusion attempt occurred, the system will sound 4 times and the parking lights will flash 3 times when disarming the system. Enter the vehicle and observe the dash mounted status LED to identify which zone was triggered.

1. Shock Sensor - 1 flash, pause 1 flash, etc.
2. Hood or Trunk Pin switch - 2 flashes, pause 2 flashes, etc.
3. Door Entry - 3 flashes, pause 3 flashes, etc.

The intrusion warning indicators are stored in the system's memory and will be erased when the ignition key is turned on.

## **Two Stage Door Unlock (Optional)**

If this feature is enabled on your system, pressing the UNLOCK button one time on the remote control will unlock only the driver's door. Press UNLOCK again to unlock the remaining doors.

## **Activating the Trunk Release Feature (Optional)**

If this feature is enabled on your system, pressing and holding the TRUNK button on the remote control for 2 seconds will open the vehicle's trunk or hatch.

\*Throughout this manual, 'press' refers to pressing for less than 1 second, 'press and hold' refers to pressing for more than 2 seconds.

## Using Your Remote Control, continued

### **Turning on the Vehicle's Headlights (Optional)**

If this feature is enabled on your system, pressing and holding the LOCK button on the remote control for 3 seconds will turn on the vehicle's headlights for 30 seconds.

### **Activating Optional AUX 1 (Optional)**

If this feature is enabled on your system, press and release the OPT button on the remote control to activate an optional feature. This feature can be programmed for a wide range of functions like power window or sunroof automation, please consult your installing dealer to determine functionality of your system.

### **Activating Optional AUX 2 (Optional)**

If this feature is enabled on your system, pressing and holding the KEY button on the remote control for 2 seconds will activate an optional feature. This feature can be programmed for a wide range of functions like power window or sunroof automation, please consult your installing dealer to determine functionality of your system.

### **Activating Optional AUX 3 (Optional)**

If this feature is enabled on your system, pressing and holding the LOCK button and the Trunk button on the remote control simultaneously for 2 seconds will activate an optional feature. This feature can be programmed for a wide range of functions like power window or sunroof automation, please consult your installing dealer to determine functionality of your system.

### **Activating Optional AUX 4 (Optional)**

If this feature is enabled on your system, pressing and holding the UNLOCK button and the TRUNK button on the remote control simultaneously for 2 seconds will activate an optional feature. This feature can be programmed for a wide range of functions like power window or sunroof automation, please consult your installing dealer to determine functionality of your system.

### **Using the Progressive Car Finder Feature**

Press the LOCK button and the UNLOCK button on the remote control to locate your vehicle. The system will sound 5 times at low volume increasing in volume each of 3 times the button is pressed.

### **Using the Personal Protection Alarm (Panic)**

Press and hold the LOCK button and the UNLOCK button on the remote control for 2 seconds to activate the personal protection alarm. The system will sound for 30 seconds. Pressing any button on the remote control will turn the personal protection alarm off.

## **Using Valet Mode**

### **To engage valet mode:**

1. Turn the ignition key to the ON position.
2. Press and hold the emergency override button.
3. The blue dashboard mounted LED will light solid indicating that the system is in valet mode.

When valet mode is activated the dash mounted status LED will light solid, and all security functions will be disabled.

### **To disengage valet mode:**

1. Turn the ignition key to the ON position.
2. Press and release the emergency override button.
3. The blue dashboard mounted LED will turn off indicating that the system has exited valet mode.

### **FCC COMPLIANCE**

This device complies with Part 15 of the FCC rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including any interference that may cause undesired operation.

#### **Warning!**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**IMPORTANT NOTE:** To comply with the FCC RF exposure compliance requirements, no change to the  antenna or the device is permitted. Any change to the antenna or the device could result in the device  exceeding the RF exposure requirements and void user's authority to operate the device.