


CODE ALARM

VEHICLE SECURITY SYSTEMS

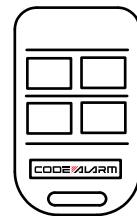

Transmitter Programming

PT7C - -

Remote Programming for most Code Alarm systems post 1993

- Open the drivers door.
- Turn the ignition key ON (turn key all the way forward without starting vehicle).
- Press and Hold the programming/override button (located under dash). In Approximately 20 seconds the system will start to cycle the door locks and siren (If equipped) 3 times to indicate the system has entered the transmitter learn mode (Do not release the programming/override button).
- Press the #1 button on the unprogrammed transmitter. The system will respond by cycling the door locks and the siren (if equipped) one time to indicate the transmitter has been learned.
- All other transmitters (up to four) also need to be programmed at this time.
- Programming is now complete, let go of the programming/override button and turn ignition off to exit learn mode.

Remote Programming for all Code Entry pieces (Z-7,Y-5, and Y-7)

- Obtain the TWO or FOUR digit code off the module. The Code will be located in the following locations:
 - Placed on a sticker on the back side of the module labeled "Code ="
 - Located on the portion of the circuit board beneath the spade connectors, their will be two rows of 1-5. Which ever number is shaded in BLUE in each row is the CODE number for that module.
- Make sure the system is disarmed and the ignition is off.
- Without starting the vehicle, turn the ignition ON, OFF, then ON at ½ second intervals.
- After two seconds the status indicator will begin flashing for Code Entry.
- Allow the status indicator to flash the corresponding number of times as the first number in the code, turn the ignition OFF. The first number has been entered.
- Turn ignition back to the ON position. The status will again begin flashing. Repeat the previous step this time using the second digit of the Code.
- Repeat previous steps if unit is equipped with four digit code (Z-7).
- If correct code has been entered, the siren will chirp twice indicating entry into Transmitter programming mode.
- Wait 5 seconds and then press button #1 on the unprogrammed transmitter.
- All other transmitters (up to four) also need to be programmed at this time.
- Programming is now complete, to exit programming mode turn the vehicle ignition on then off.

Remote Programming for all Code Alarm systems prior to 1993

- Enter the vehicle and close all doors
- Wait until dome light has shut off.
- Perform the following three steps (all within 5 Seconds):
 - Turn ignition key ON (turn key all the way forward without starting vehicle).
 - Using the vehicles dimmer switch turn the dome lights ON, OFF,ON ,OFF, ON, OFF (a total of three times).
 - Turn ignition OFF
- The door locks (if equipped) and siren (if equipped) will cycle 3 times to indicate the module has entered transmitter learn mode. If the system did not cycle 3 times repeat the above step by using the drivers door pin switch.
- Press button #1 on the unprogrammed transmitter.
- All other transmitter (up to four) also need to be programmed at this time
- Programming is now complete turn ignition off to exit transmitter learn mode.

FCC:

This device complies with FCC Rules Part 15 Operation is subject to the following two conditions

(1) This device may not cause harmful interference and

(2) This device must accept any interference that may be received, including interference that may cause undesired operation.

NOTE:The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment.

Such modifications could void the user's authority to operate the equipment.

Industry Canada:

This device complies with Industry Canada licence exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device."

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivant es :

(1) l'appareil n' doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

FCC ID : ELVATKB

This device complies with FCC Rules Part 15 Operation is subject to the following two conditions (1) This device may not cause harmful interference and (2) this device must accept any interference that may be received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.