





Model W1WT

Transmitter Programming Guide

These transmitters makes use of icons (symbols) to identify the reaction your security system/keyless entry/and or remote start system, where applicable, will have when any icon (button) is pressed. These icons are programmed at time of installation to meet the needs of the individual and to complement the vehicle that the system is installed in. To replace a transmitter or add transmitters, please follow the programming instructions listed on the pages of this manual.

BUTTON	RECEIVER CHANNEL	SYSTEM FUNCTION
	1	Lock And Arm Alarm, also initiate and terminates *Panic
	2	Unlock And Disarm, also initiates and terminates *Panic. Programmable to unlock drivers door and or all doors.
	3	Pulsed or switched output to control Remote Trunk Release or optional device connected to channel 3.
	3	When pressed and release two times, will provide pulsed output or activate the Remote Start option when installed.
A	4	When so equipped, this button can be used to operate an optional device connected to channel 4.
	5	When so equipped, any combination of buttons can be used to operate an optional device which may be connected to channel 5.

* Where So Equipped

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Per FCC 15.21, you are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user ' s authority to operate the equipment.

TRANSMITTER FUNCTION SELECTION	BUTTON	ICON	TONE/VIBRATE
TIMING ADJUST MODE (HRS)	(F) PRESS FOR 5 SECONDS	AM PM 18:88	2 BEEP TONES
TIMING ADJUST MODE (MINS)	(F) 1 X	AM PM 18:88	
ALARM CLOCK ADJUST MODE (HRS)	(F) 2 X	AM PM 18:88	
ALARM CLOCK ADJUST MODE (MINS)	(F) 3 X	AM PM 18:88	
ALARM CLOCK & POWER UP MUSIC SELECT	(F) 4 X	8	5 SELECTIONS PRESS KEY BUTTON OR OPTION BUTTON TO SELECT
ALARM CLOCK ADJUST MODE ON/OFF	(F) 5 X	ON/OFF	
TIMING COUNT DOWN ADJUST MODE (HRS)	(F) 6 X	18:88	
TIMING COUNT DOWN ADJUST MODE (MINS)	(F) 7 X	18:88	
TIMING COUNT DOWN END MELODY SELECTION	(F) 8 X	8	5 SELECTIONS PRESS KEY BUTTON OR OPTION BUTTON TO SELECT
TIMING COUNT DOWN MODE SELECT ON/OFF	(F) 9 X	ON/OFF	
REMOTE START ON MELODY SELECT 2	(F) 10 X	5 8	5 SELECTIONS PRESS KEY BUTTON OR OPTION BUTTON TO SELECT

TRANSMITTER FUNCTION OPERATION	BUTTON	ICON	TONE/VIBRATE
10 MIN PARKING COUNT DOWN TIMER	(F) + Option 1 X	0:10	MELODY
20 MIN PARKING COUNT DOWN TIMER	(F) + Option 2 X	0:20	MELODY
30 MIN PARKING COUNT DOWN TIMER	(F) + Option 3 X	0:30	MELODY
60 MIN PARKING COUNT DOWN TIMER	(F) + Option 4 X	1:00	MELODY
90 MIN PARKING COUNT DOWN TIMER	(F) + Option 5 X	1:30	MELODY
120 MIN PARKING COUNT DOWN TIMER	(F) + Option 6 X	2:00	MELODY
PARKING COUNT DOWN TIMER OFF MODE	(F) + Option 7 X	0:00	MELODY
BACKLIGHT DISPLAY FOR 10 SECONDS	(F) 1 X		ILLUMINATES DISPLAY
VIBRATE/TONE SELECT	(F) + (vibe icon) 1 X	{vibe icon}	VIBRATE 4 TIMES OR BEEP 1 X
ALARM CLOCK MODE SELECT ON/OFF	(F) + (alarm icon) 1 X	AM PM 18:88	MELODY
FAHRENHEIT/CELSIUS SELECT	(F) + (temp icon) + OPTION 1 X	F or C	MELODY
POWER SAVE MODE	(F) + (power icon) 1 X	SAVE + -	MELODY

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions.
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

Per FCC 15.21, you are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.