ENGLISH

Off

Off

Bluetooth light status

Power light status Blinking white

Blinking amber

1 short press

1 long press

Bluetooth press type


DO NOT PRINT









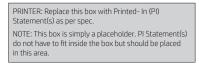

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

current channel status.

for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth device paired and connected.

The battery is low. Replace the battery.

Press to switch between channels and show the

Press and hold for 3 seconds to enter pairing mode

Description

Bluetooth off

Power on

Power off

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.
· · · · · · · · · · · · · · · · · · ·	

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

BULGARIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Description
Bluetooth device paired and connected.
Bluetooth off
Power on
Power off
The battery is low. Replace the battery.
Press to switch between channels and show the current channel status.
Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

To download the bluetooth during oser daide, go to http://www.np.com/support.		
Bluetooth light status	Description	
On	Bluetooth device paired and connected.	
Off	Bluetooth off	
Power light status		
Blinking white	Power on	
Off	Power off	
Blinking amber	The battery is low. Replace the battery.	
Bluetooth press type		
1 short press	Press to switch between channels and show the current channel status.	
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.	
·	· · · · · · · · · · · · · · · · · · ·	

To download the Bluetooth Pairing User Guide, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the Bluetooth Pairing User Guide, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mod for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

CROATIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the Bluetooth Pairing User Guide, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

IBERIAN PORTUGUESE

To download the Bluetooth Pairing User Guide, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.





Color Side 1: | Flat size:

5 x 4.25 in. (127 x 107.95 mm)

20 x 17 in. (508 x 431.8 mm) 4-panel



DO NOT PRINT

BRAZILIAN PORTUGUESE

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the Bluetooth Pairing User Guide, go to http://www.hp.com/support.

Description
Bluetooth device paired and connected.
Bluetooth off
Power on
Power off
The battery is low. Replace the battery.
Press to switch between channels and show the current channel status.
Press and hold for 3 seconds to enter pairing mode for the current channel.

RUSSIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

SLOVAK

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

SLOVENIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.
Blinking amber Bluetooth press type 1 short press	The battery is low. Replace the battery. Press to switch between channels and show the current channel status. Press and hold for 3 seconds to enter pairing mo

SERBIAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mod for the current channel.

SWEDISH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mod for the current channel.

TURKISH

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mod for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

KOREAN

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

To download the *Bluetooth Pairing User Guide*, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.

CHINESE TRADITIONAL

To download the Bluetooth Pairing User Guide, go to http://www.hp.com/support.

Bluetooth light status	Description
On	Bluetooth device paired and connected.
Off	Bluetooth off
Power light status	
Blinking white	Power on
Off	Power off
Blinking amber	The battery is low. Replace the battery.
Bluetooth press type	
1 short press	Press to switch between channels and show the current channel status.
1 long press	Press and hold for 3 seconds to enter pairing mode for the current channel.



- EN For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- AR For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- ID For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- BG For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- CS For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- DA For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to
- www.hp.com/go/regulatory. DE For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to
- www.hp.com/go/regulatory. ES For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to
- www.hp.com/go/regulatory. EL For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- FR For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- HR For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- IT For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory. KK For regulatory, certification, and environmental
- information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- LV For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- LT For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to
- www.hp.com/go/regulatory. **HU** For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.

- NL For regulatory, certification, and environmental $information, including \ Restriction \ of \ Hazardous$ Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- NO For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.PL For regulatory, certification, and environmental
- information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- PT For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- BR For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- RO For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- **RU** For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- SK For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- SL For regulatory, certification, and environmental information, including Restriction of Hazardous
- Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory. FI For regulatory, certification, and environmental information, including Restriction of Hazardous
- Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory. SR For regulatory, certification, and environmental
- information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- SV For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- TH For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
- TR For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
 - UK For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
 - JA For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory. KO For regulatory, certification, and environmental
 - information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory. CN For regulatory, certification, and environmental
 - information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.
 - TW For regulatory, certification, and environmental information, including Restriction of Hazardous Substances (RoHS), scan the QR code, or go to www.hp.com/go/regulatory.

RMN/型號/型号: TPA-P006K

© Copyright 2022 HP Development Company, L.P.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construe as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein. First Edition: August 2022