

 
Model: 625 Series  
**PARTY MIXER**

**Important Message to Customers**  
Thank you for purchasing one of our top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.  
**Keep these instructions for future reference as they contain important information.**

Installing The Batteries


**ATTENTION:** Batteries should only be installed by an adult. The unit comes with batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries. To replace the batteries at home, follow these instructions:

- Use a Philips screwdriver to open the battery compartment door.
- Install 3 "AA" size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
- Close the battery compartment door and tighten the battery door screw. Don't over tighten.

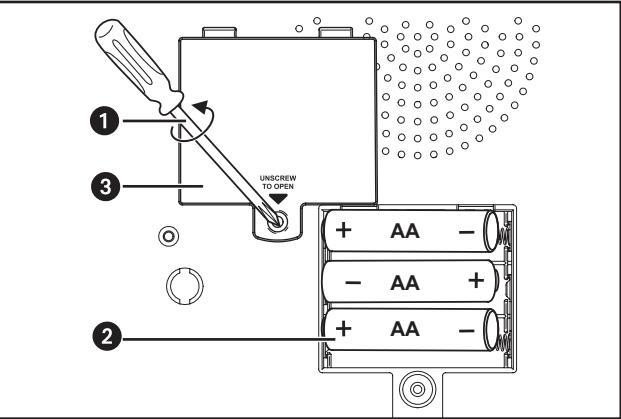


- Battery Use Cautions and Tips for Safety & Best Performance**
- Only use the recommended/supplied batteries or equivalent.
  - Rechargeable batteries are to be removed from the toy before being charged.
  - The supply terminals are not to be short-circuited.
  - Use alkaline batteries for longer life.
  - Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
  - Insert batteries with proper polarity (+/-) as indicated.
  - Remove exhausted batteries from product.
  - Recharge rechargeable batteries under adult supervision.
  - Do not attempt to recharge non-rechargeable batteries.
  - Do not open batteries or heat them beyond normal ambient temperatures.
  - To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
  - Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
  - Store in cool, dry, ventilated area away from hazardous or combustible material.
  - Do not dispose of batteries in the household trash or fire.
  - Follow applicable laws and local regulations for the disposal and transportation of batteries.
  - Rechargeable batteries are to be removed from the toy before being charged.
  - The supply terminals are not to be short-circuited.
  - Do not dispose of batteries in fire; batteries may leak or explode.
  - Batteries should be replaced by an adult.
  - Remove all packaging before giving to your child.


**Top View**

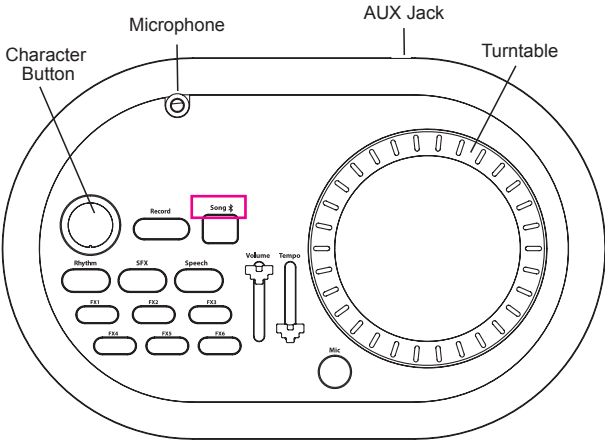 

**Party Mixer Modes**  
There are three modes of play: Rhythm, SFX, and Speech. Press a mode button to start making music! When a mode is active, the respective button will stay lit.




 **Sound Banks**  
Activate a sound bank by pressing FX Buttons 1-6. Try them all as you edit and mix your very own music!



- **Character Button:** Press to activate BeatDrop!
- **Song Button:** Press to play built-in music!
- **FX Buttons:** Press and hold for 2 seconds to loop when in SFX Mode! Press and continue to hold to loop when in Speech Mode!
- **Tempo Switch:** Slide up and down to change the tempo!
- **Turntable:** Spin to trigger 'DJ record scratch' SFX!
- **Mic Button:** Press and hold while you sing into the microphone!

 This unit ships in Demo Mode for in-store demonstration purposes. Slide the ON/OFF/DEMO Switch to the ON position to begin.



Features

- **Drop the Beat:** Press to drop the beat!
- **Recordings Button:** Press to activate BeatDrop!
- **Song / BT Button:** Press to play built-in music!
- **Rhythm Button:** Press to play built-in music!
- **SFX Buttons:** Press and hold for 2 seconds to loop when in SFX Mode! Press and continue to hold to loop when in Speech Mode!
- **Volume Switch:** Slide up and down to control volume!
- **Tempo Switch:** Slide up and down to change the tempo of the music and rhythms that are playing!
- **Turntable:** Spin to trigger 'DJ record scratch' SFX!
- **Mic Button:** Press and hold while you sing into the microphone!

Song Button

1. Press the song button to play song. Allow song to play over any currently playing loops.
2. Allow any SFX or Speech Button audio to play over song.
3. Press Song Button while song audio is playing to interrupt song. If Song Button is pressed again, go to the NEXT song file.
4. When the end of the Song Table is reached, start from the beginning when the Song Button is pressed.
5. When song finishes, if no button is pressed, begin timeout countdown timer.

Bluetooth Connection Operation

- The first time you power on the TR-625 it will enter BT pairing mode.
- Select 'eKids TR625' on your device to pair.
  - To manually pair BT change to BT mode and press and hold the Play button for 2 seconds.

Recording Audio

- To Record And Store Up To One Minute of Audio:
1. Press and hold Record Button until the button flashes.
  2. Any audio playing from the AUX jack, microphone, or built-in sounds will record.
  3. Press and hold the Mic Button while you sing to record your voice.
  4. Press Record Button again to stop recording. Press again to playback audio.

**Note:** The Record Button will stay lit when a recording is stored. Any new recording you make will overwrite the previously stored audio. Press and hold the Record Button for 5 seconds to erase the current recording.

Maintenance

It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

Questions or Comments

- For questions or comments regarding this or other eKids products, please visit our website: [www.ekids.com](http://www.ekids.com)
- If problems persist, please do not attempt to repair unit; see warranty for factory service.**

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
CAN ICES-3 (B)/NMB-3(B)

Limited One-Year Warranty

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at [ekids.com/support](http://ekids.com/support) to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

**Disclaimer of Warranty**  
NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids products.