



Model: B60 Series

Bluetooth
 WIRELESS
 HEADPHONES



 
**CHARGE
 BEFORE
 USE**

Introduction

Your new Bluetooth stereo headphones are designed to link with your Bluetooth enabled smartphone or music player to allow you to wirelessly listen to music and answer phone calls within the normal 10 meter (33 feet) Bluetooth operating range.

Please review this manual carefully to make sure you are getting the maximum benefit from all of the features of your new headphones, and keep this manual for future reference.

What's Included

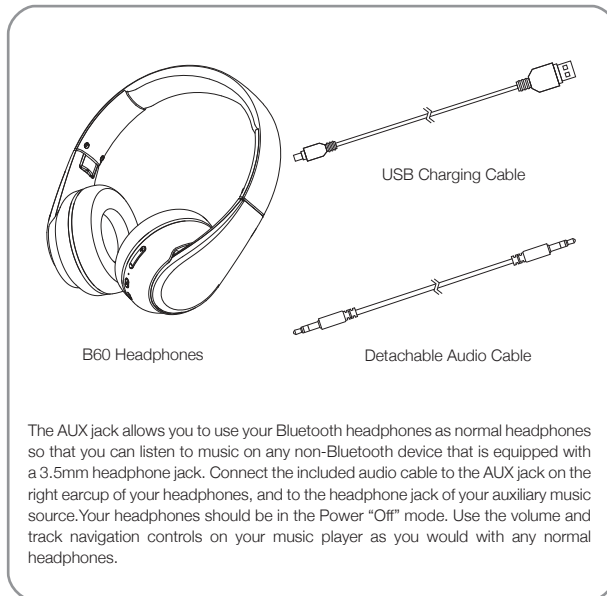


The AUX jack allows you to use your Bluetooth headphones as normal headphones so that you can listen to music on any non-Bluetooth device that is equipped with a 3.5mm headphone jack. Connect the included audio cable to the AUX jack on the right earcup of your headphones, and to the headphone jack of your auxiliary music source. Your headphones should be in the Power "Off" mode. Use the volume and track navigation controls on your music player as you would with any normal headphones.

PREPARATION FOR USE

1. Controls and Indicators

1	+ Button (Volume Up / Skip Forward)
2	- Button (Volume Down / Skip Back)
3	Power/Pairing/Charging LED Indicators
4	Power/Play/Pause Button
5	USB Charging Port
6	AUX Jack
7	Microphone

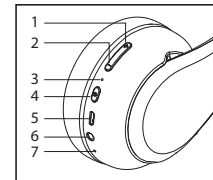 

2. Charging Your Headphones

 
Your Bluetooth headphones operate on a built-in rechargeable battery. Although the battery was fully charged when it left our factory, the battery can lose power even during periods of non-use. Make sure to charge the battery before using the headphones for the first time.

To charge the battery connect the larger plug of the included USB charging cable to the powered USB port of a computer or a USB/AC adapter, and then connect the smaller plug to the USB charging port on the side of the right ear cup.

The Charging Indicator will glow red while the headphones are charging. The indicator will turn off when the headphones are fully charged and ready to use.

When fully charged the battery should provide up to 24 hours of talk time or music playing time at a normal listening level. If operated at maximum volume the music playing time will be reduced.

NOTE: While charging, the headphone power will turn off to conserve battery power and minimize charging time.

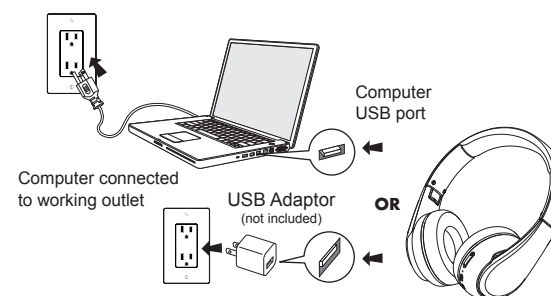

OPERATING INSTRUCTIONS

1. First Time Power On: Auto Pairing

The first time you power on the headphones, **PRESS and HOLD** the **Power/Play/Pause Button** on the right earcup for about 3 seconds until the LED flashes. *The first time the headphones are powered on they will enter auto-pairing mode, indicated by flashing red and blue LEDs.*

- Make sure Bluetooth is enabled on your device (check in Settings or Options).
- "ekids B60" will appear on your device's Bluetooth menu.
- Select "ekids B60" to complete pairing. **NOTE:** If your Bluetooth device asks for a Password or a PIN to complete the pairing process, enter "0000" on the keypad of your device. You are now ready to begin streaming music wirelessly from your Bluetooth device to your Bluetooth headphones.

2. Standard Power On: Auto-Linking Mode

After the first time, whenever you power on the headphones, the blue LED will flash slowly indicating that your headphones are in Auto-Linking Mode (trying to re-link to a previously paired device) that is within the normal pairing range of about 33-feet. If your headphones do not find a previously paired device that is in range, the LEDs will start flashing red and blue (for new device pairing) and then the power will shut off in 3 minutes if no device is connected (to save the battery life).

3. Manually Pairing Your Headphones With Your Bluetooth Device

NOTE: Your headphones must be "Off" to begin the manual pairing process. With the headphones in "Off" mode, **PRESS and HOLD** the **Power/Play/Pause Button** on the right earcup for about 7 seconds, the LEDs will flash red and blue. Release the **Power/Play/Pause Button**. Follow the a-c pairing instructions in Step 1 above to complete pairing.

4. Power Off

To turn the headphones "Off" at any time, **PRESS and HOLD** the **Power/Play/Pause Button** on the right earcup for about 5 seconds. The LED will turn red and then the power shuts off. The headphones will shut off automatically if no music plays for 60 minutes.

5. Using Your Bluetooth Headphones

The following chart explains the basic functions and operations of your Bluetooth headphones.

Function	Action Required
Turn headphones On	When headphones are "Off", <i>press and hold</i> the Power/Play/Pause Button for 3 seconds until the LED indicator flashes blue.
Enter Pairing Mode	When headphones are "Off", <i>press and hold</i> the Power/Play/Pause Button for 7 seconds until the LED indicator alternately flashes red and blue.
Pairing	Make sure your Bluetooth device is "On" and discoverable. When "ekids B60" appears on your device's menu, select it to complete pairing.
Play / Pause	Short press the Power/Play/Pause Button to start playback. Short press to pause playback. Short press to resume playback.
Skip to next track	Press the + button twice during playback.
Skip to beginning of current track	Press the - button twice during track playing after 5 seconds.
Skip to beginning of previous track	Press the - button twice in the track playing the beginning 5 seconds.
Increase volume	Press the + button during playback (hold for rapid setting).
Decrease volume	Press the - button during playback (hold for rapid setting).
Answer an incoming phone call	Short press the Power/Play/Pause Button when you hear the incoming ring sound. NOTE: Music will automatically pause when you are answering a call and resume when you end the call.
End a call	Short press the Power/Play/Pause Button to end the call and 'hang up'.
Transfer a call between the phone and the headphones	While the call is in progress, <i>press and hold</i> the Power/Play/Pause Button for 2 seconds.
Last number redial	When no call is in progress, double press Power/Play/Pause button to redial the last number.
Siri/Google Assistant	<i>Press and hold</i> the Power/Play/Pause button for 2-3 seconds.
Reset Bluetooth/Clear all paired devices	<i>Press and hold</i> the + for 5 seconds during pairing mode.
Turn headphones Off	<i>Press and hold</i> Power/Play/Pause button for 5 seconds until the LED indicator turns red and then shuts off. Headphones will shut off automatically if no music plays for 60 minutes.

FCC/IC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:
 FCC ID: EMOB60A
 IC: 986B-B60A
 HVIN: B60a

(1) This device may not cause harmful interference, and
 (2) this device must accept any interference received, including interference that may cause undesired operation.

• Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
 • NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
 1. This device may not cause interference.
 2. This device must accept any interference, including interference that may cause undesired operation of the device.
 CAN ICES-3 (B)/NMB-3(B)

Limited One-Year Warranty Information

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage. Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

Distributed by eKids, LLC
 For questions or comments please call our toll-free number:
1-888-TOP-TOYS
 Also visit our website: www.ekids.com
 1299 Main Street Rahway, NJ 07065