

HW4

Staff Quick Start Guide

 
Included

- HW4 system
- Universal AC adaptor




Set Up

Connect the universal voltage AC adaptor to the DC jack on the bottom panel of the unit and plug into a wall outlet that is not controlled by a light switch and is within easy reach of the unit.

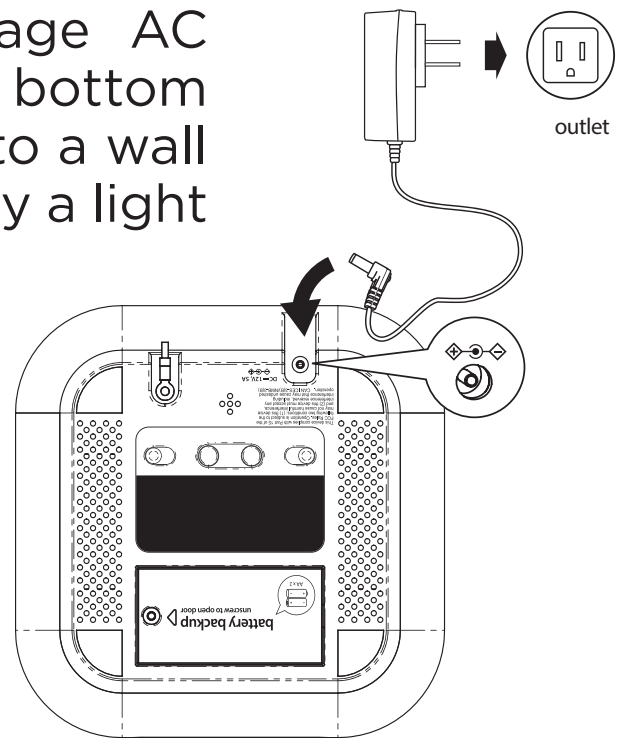


Charging Devices

 Connect USB cable (not included) to USB port and the other end to your device to charge.

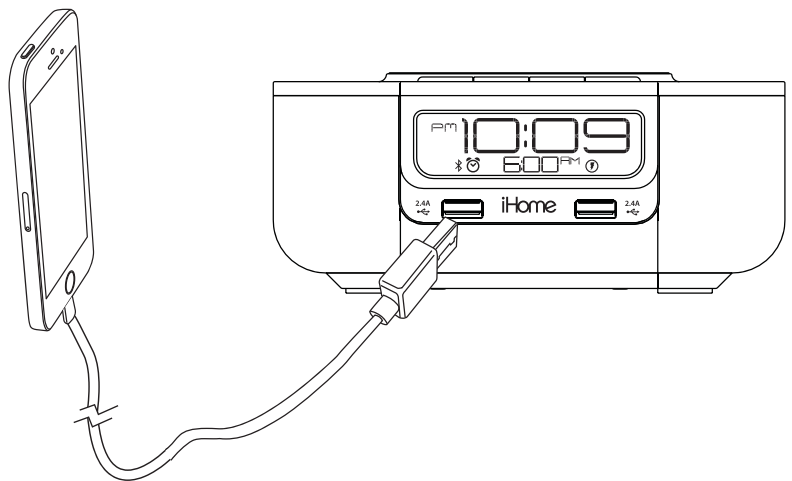

Bluetooth Pairing

 
Press and hold the Bluetooth Button  on the top of the unit. The unit displays 'PAIR' while in pairing mode. Select "iHome HW4" on your device's Bluetooth menu. The unit will display 'BT' when a device is connected.

Setting the Time Zone and Clock (Factory Preset Clock)


The first time you connect your new preset clock to the AC outlet, the unit will automatically show the correct Eastern Standard time, which is the default setting. If you are not in the Eastern time zone, you must change the default setting to match your time zone (see *Time Zone Setting* below). Once the correct time zone is set, if the time displayed is not correct, follow steps under *Manual Clock Setting* to set the correct hour, minute, year and date.

Time Zone Setting


Press and hold the **time zone button** located on the bottom of the unit. The default EASTERN time zone will flash in the bottom of the display.

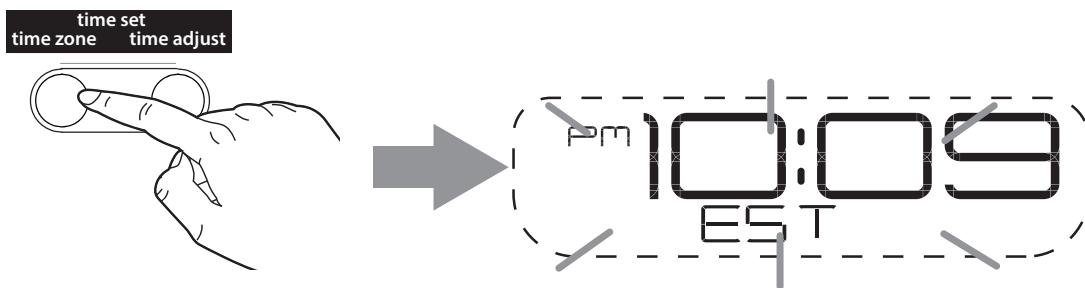

 
Press and release the **-** or **+** **button** as needed until your time zone is displayed. The time display will also change according to zone selected.

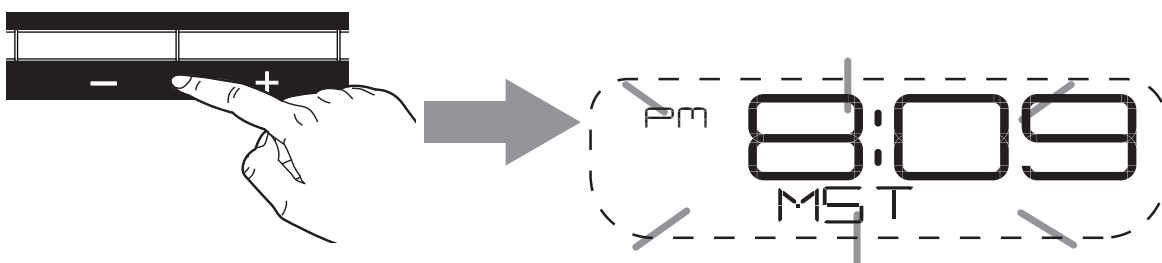

 Press and release the **time zone button** to confirm time zone setting.

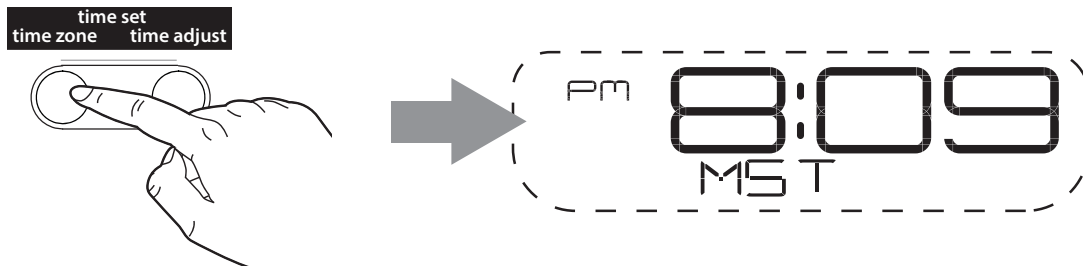


Daylight Saving Time

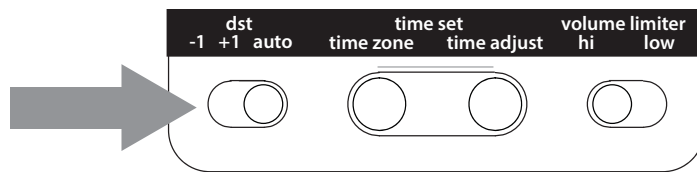 

The unit ships with the Daylight Saving Time (DST) switch located on the bottom of the unit in Auto position, and will automatically adjust when the time changes in March and November. To switch manually, slide switch to +1 to add an hour or to -1 to subtract an hour.

 Volume Limiter



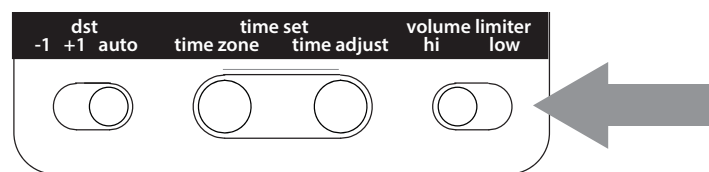


The unit ships with the Volume Limit switch in HI position, and the maximum volume output will be at 100%. For smaller rooms, slide the switch to the LO position to limit/lower the maximum volume by 25%.



Manual Clock Setting

Press and hold the **time adjust button** on the bottom of the unit to enter clock setting mode. The time will flash and SET will appear on the display.

   time set
time zone time adjust

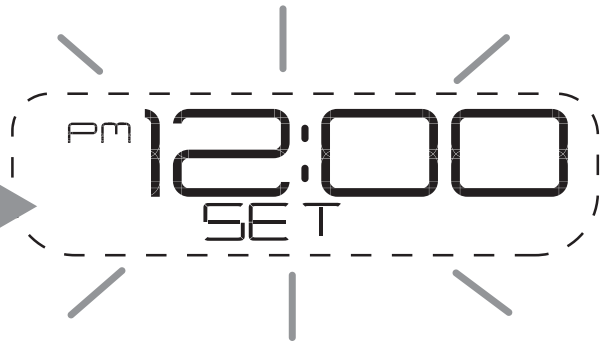
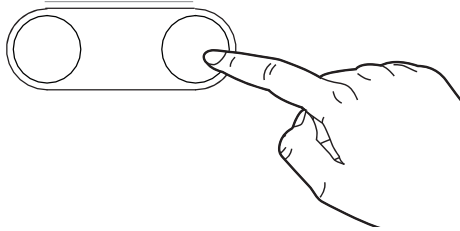


  Press the **-** or **+** button to adjust time (hold for rapid adjust). Make sure to set the correct AM or PM time. The PM symbol will appear on the clock display. There is no AM symbol.

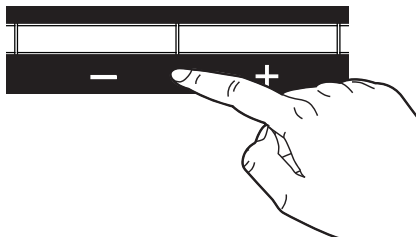


Press the **time set button** to confirm time. The year will flash.

  
time set
time zone time adjust

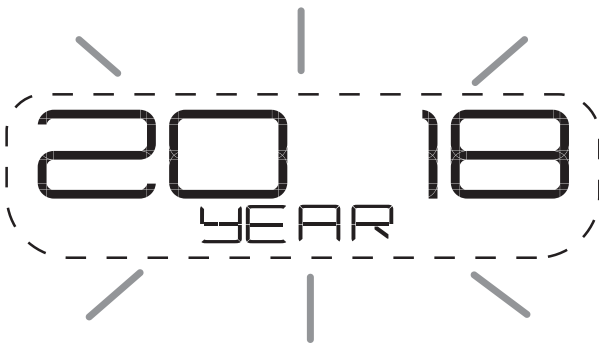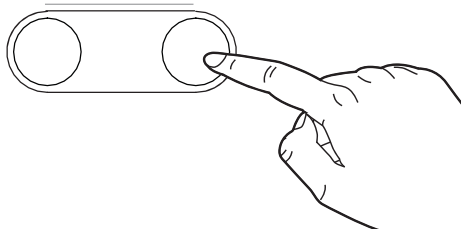

 
Press the **-** or **+** button to set the year.

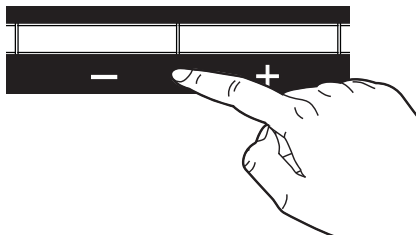

 
Press the **time adjust button** to confirm year. The date will flash.

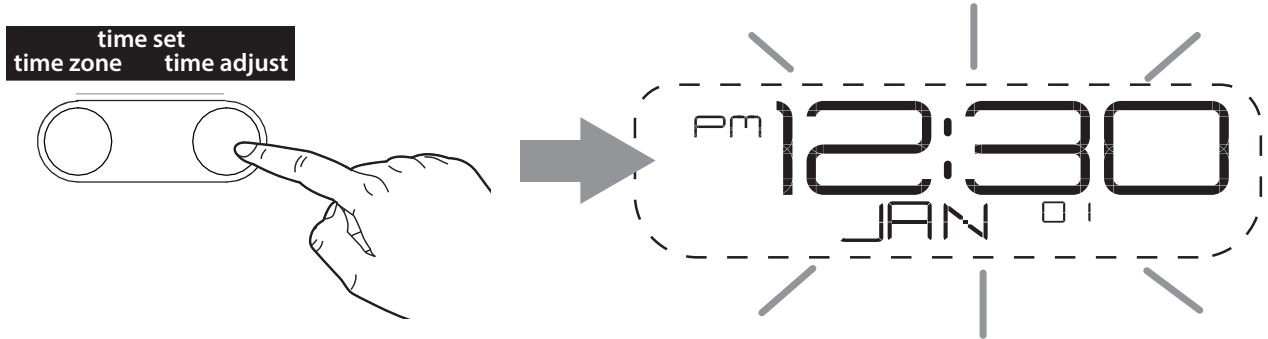

 Press the **-** or **+** **button** to set the date (hold for rapid adjust).

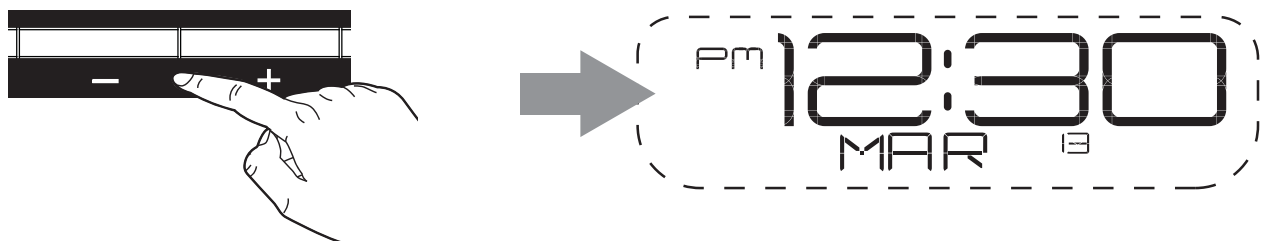

 
Press the **time adjust button**. 2 beeps will confirm
Clock Setting is complete.

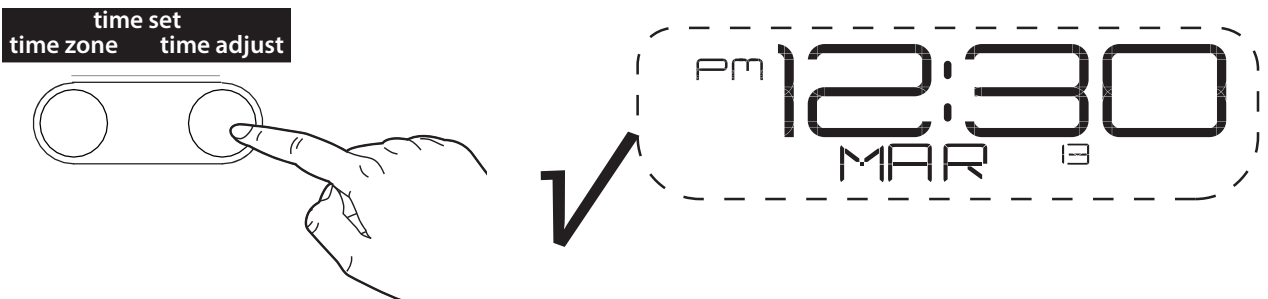


Note: Make sure that the Year, Month, and Date settings are correct so that the Auto Daylight Savings Time adjustments will occur on time.

TIP: Press the Alarm On/Off Button when display is flashing during clock setting to toggle between 12 hour and 24 hour display modes.

When Low Battery Icon flashes on the bottom right of the display, replace backup batteries with 2 fresh AA batteries. Keep unit connected to AC power when replacing batteries or you will lose settings. Make sure to match polarity (+/-) on batteries as shown below.

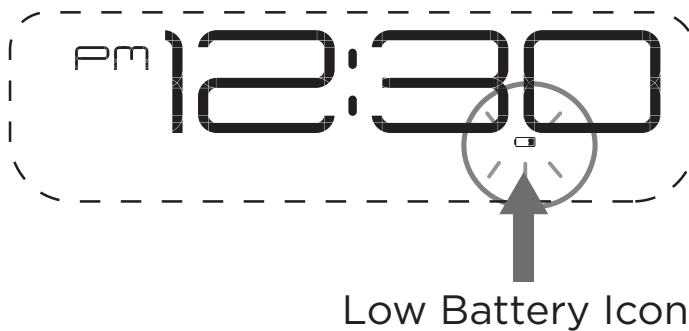 

Battery backup installation

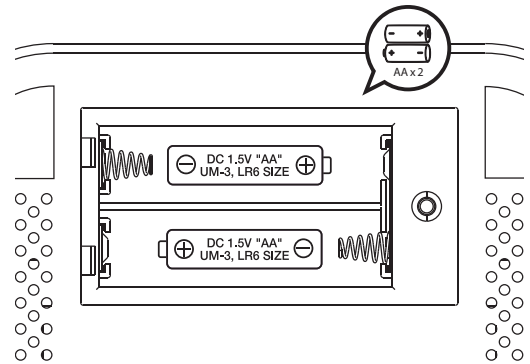 


Battery Cautions and Tips

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

Secure the attached Security Tether to a wall or other permanent surface.

 CAUTION: DO NOT attach to an AC outlet or cause it to become entangled with anything that can create a hazardous situation.

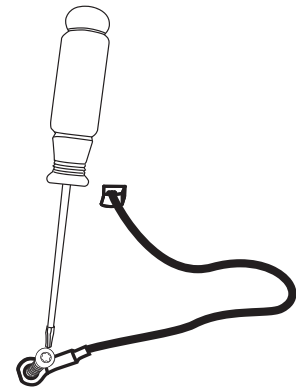

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Clean your unit with a soft, damp cloth. Strong cleaning agents, such as thinner or similar materials can damage the surface of the unit.

Tips For Guests

• Using the wireless charger:

Place Qi compatible device in the middle of marked charging target circle, with the front facing you.

Check the wireless charging indicator icon on the right of the display:



- Rapid blinking icon - Device is not charging. Reposition device.
- Slow blinking icon - Device is charging properly.
- Solid icon - Device is charged (some devices do not support this feature).
- No icon - Not in charging mode (no device on unit)
- Thick or metal device cases can interfere with wireless charging. Removing such a case may improve wireless charging.
- Wireless charging uses a magnetic field. Avoid placing any metal object and personal items with magnetic stripes, such as credit cards, bank cards, key cards, metal or magnetic phone cases, etc., near the wireless charging area to prevent damage.

Note: This unit is compatible with the Qi wireless charging standard. PMA wireless charging is not supported.

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. Ventilation – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. Heat – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. Power Sources – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came with the unit.
5. Power-Cable Protection – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. Cleaning – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
7. Objects and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. Attachments – Do not use attachments not recommended by the product manufacturer.
9. Lightning and Power Surge Protection – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. Overloading – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. Damage Requiring Service – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. Periods of Nonuse – If the unit is to be left unused for an extended period of time, such as a month or longer, the backup battery should be removed from the unit to prevent damage or corrosion.
13. Servicing – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.
14. Magnetic Interference: This product's speakers contain powerful magnets which could cause interference or damage to sensitive equipment such as hard drives, CRT televisions and monitors, as well as medical, scientific, and navigational devices. Keep this unit away from these products at all times.

FCC Information

HW4

FCC ID: EMOHW4
IC: 986B-HW4

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CAN ICES-3(B) / NMB-3(B)

IC Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

LIMITED 30 DAY WARRANTY

(valid in contiguous U.S.A. only: not valid in Hawaii or Alaska)

Hotel Technologies, a division of HTI Industries LLC, (hereafter referred to as Hotel Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 30 days from the date of receipt of the item.

Should service be required by reason of any defect or malfunction during the warranty period, Hotel Technologies will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

1. Fax a representative at 915.633.1388 with a Return Authorization request including proof of purchase date (i.e., invoice number and date from distributor or HTI) to receive a Return Authorization Number. Issuance of Return Authorization Number is subject to review prior to granting.

NO ITEM CAN BE ACCEPTED WITHOUT A RETURN AUTHORIZATION NUMBER.

2. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
3. Send the unit by method agreed to with your representative to the Factory Service Center listed below:

Consumer Repair Department
Hotel Technologies Inc.
1330 Goodyear Drive
El Paso TX 79936-6420

NOTE: Improperly packed items or Items received without an RA # cannot receive credit.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 30 days, and Hotel Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

If you did not purchase this product directly from Hotel Technologies, please contact the appropriate distributor for their warranty terms.

HW4 Quick Start Guide (English) - Front
Size: 432 x 140 mm
Color: 1C + 1C (Black)
Material: 100 gram YFP paper
Date: June 15, 2016

HW4 Staff Quick Start Guide

Included

- HW4 system
- Universal AC adaptor



Set Up

Connect the universal wireless AC adaptor to the DC Jack on the bottom panel of the unit and plug into a wall outlet that is not controlled by a light switch. This is the easiest way to set up the unit.



Charging Devices
Connect USB cable (not included) to USB port and the other end to your device to charge.

Bluetooth Pairing
Press and hold the Bluetooth button (B) on the top of the unit for 5 seconds. The unit will display "BT" on the screen. Select "Home HW4" on your device's Bluetooth menu. The unit will display "BT" when a device is connected.

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Bluetooth technology is a trademark owned by its proprietor(s).

When Low Battery icon flashes on the battery level of the display, replace the batteries with 2 fresh A.A. batteries. Do not connect to AC power when replacing batteries or you will lose settings. Make sure to match polarity (+/-) on batteries as shown below.



Battery Installation

- Only use the recommended/labelled batteries or equivalent.
- Do not mix old and new batteries and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Remove exhausted batteries from product.
- Do not open battery or lead their back and normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from product if it has been in use for a long time.
- Use extreme caution handling leaking batteries (avoid direct contact with battery) and do not touch the battery with your hands.
- Store in cool, dry, ventilated area away from hazardous or combustible materials.
- Do not dispose of batteries in the household trash or fire.

Dispose of used and low performance batteries in the household trash.

Setting the Time Zone and Clock (Factory Preset Clock)

The first time you connect your new preset clock to the AC outlet, the unit will automatically show the correct Eastern Standard Time, which is the default time zone of the unit. To change the time zone, press the **Time Zone Setting** button (T) on the front panel. The unit will display the **Manual Clock Setting** to set the correct hour, minute, year and date.

Time Zone Setting
Press and hold the **time zone button** located on the bottom of the unit. The default EASTERN time zone will flash in the bottom of the display.



Press and release the **= or + button** as needed until your time zone is displayed. The time display will also change according to zone selected.



Press and release the **time zone button** to confirm time zone setting.



Daylight Saving Time

The unit ships with the Daylight Saving Time (DST) feature set to ON. To change the DST setting, press the **Daylight Saving Time** button (D) on the front panel. The unit will display the **Manual Clock Setting** to set the correct hour, minute, year and date.

Volume Limiter
The unit ships with the Volume Limit switch in HI position and the maximum volume will be set at 100%. For smaller rooms, slide the switch to the LO position to limit/lower the maximum volume by 25%.



Press and hold the **time adjust button** on the bottom of the unit to enter clock setting mode. The time will flash and SET will appear on the clock display.



Press the **= or + button** to adjust time (hold for rapid adjust). The time will flash and SET will appear on the clock display. There is no AM/PM symbol.



Press the **time set button** to confirm time. The year will flash.



Press the **= or + button** to set the year.



HW4 FCC Information

FCC Radiation Exposure Statement
This transmitter complies with the FCC radio emission limits for an uncontrolled environment. This device is designed to operate in the uncontrolled environment. The user should not use this device near people who are pregnant or who have implanted medical devices. The user should not use this device near people who are using medical equipment. The user should not use this device near people who are using medical equipment.

- Warning: Changes or modifications to this unit not expressly approved by the manufacturer may void the user's authority to operate the equipment.
- This device must not be used near people who are pregnant or who have implanted medical devices.
- This device must not be used near people who are using medical equipment.
- This device must not be used near people who are using medical equipment.
- This device must not be used near people who are using medical equipment.

CAUTION: FIRE HAZARD
Do not use this device near flammable materials. Do not use this device near people who are using medical equipment.

RECYCLING INFORMATION
This device is made of recyclable materials. Please recycle this device properly.

LIMITED 30 DAY WARRANTY

WARRANTY COVERAGE
This warranty covers the product for 30 days from the date of purchase. The warranty does not cover damage caused by misuse, accidents, or unauthorized repairs.

- 1. The product must be used in accordance with the user manual.
- 2. The product must be used in its intended environment.
- 3. The product must be used in its intended environment.
- 4. The product must be used in its intended environment.
- 5. The product must be used in its intended environment.

EXCLUSIONS
This warranty does not cover damage caused by misuse, accidents, or unauthorized repairs.

HOW TO GET HELP
If you have a problem with your product, please contact our customer support team.

CONTACT INFORMATION
Customer Support: 1-800-XXX-XXXX

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.

IMPORTANT SAFETY INSTRUCTIONS
Read and follow all safety instructions. Do not use this device near flammable materials.