iBT232 Eng IB Size: 153mm x 120mm Printing color: Black Jun. 29, 21.



iBT232

Introduction

Thank you for purchasing the iHome iBT232. This product is designed to provide high quality wireless sound for your Bluetooth audio device.

This instruction booklet explains the basic operation and care of the unit. Please read it carefully and keep for future reference.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as benzene, thinner or similar materials can damage the surface of the unit.


iBT232

What's Included	
Meet Your iBT232	4
The Display/Setting Up the Unit	5
Installing and Replacing Clock Backup Batteries	6
Setting the Clock/Setting and Using the Alarms	7-8
Previewing the Alarm and Turning the Alarm On/Off	8
Snooze/Display Dimmer Button/Sleep Mode/FM Radio	9
Setting and Using FM Presets	
Pairing Your Bluetooth Device	11
Playing Audio Via Bluetooth	12
Using the Speakerphone Feature	12
Using the Voice Control Feature	12
Playing Audio via Aux-In	13
Charging Devices via USB Port	
Battery Use Cautions and Tips	15
Consumer Product Safety Guide	16
FCC Information	17
Troubleshooting	
Warranty	19
2	


Table of Contents

What's Included


- iBT232 unit
- 100V-240V universal AC adapter
- 2 AA batteries

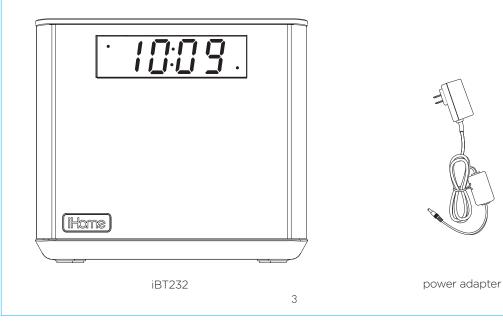

iBT232

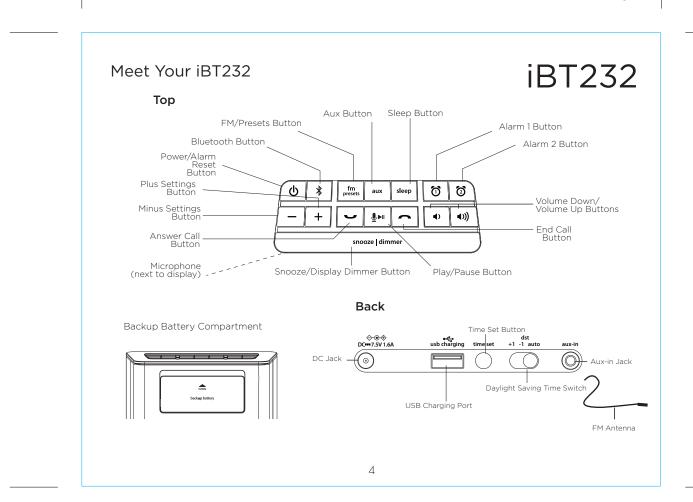

P5

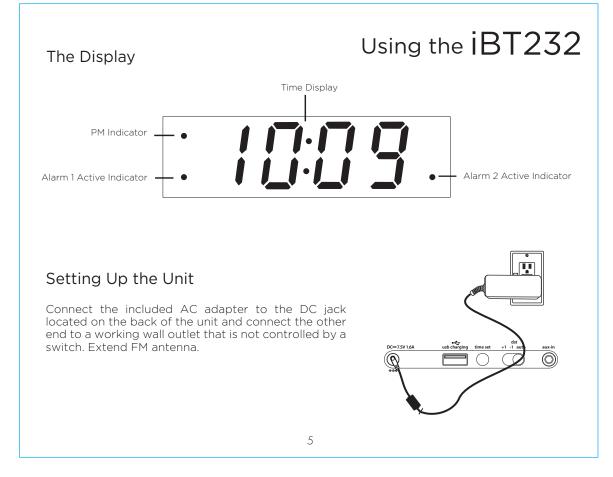

Installing and Replacing Clock Backup Batteries

Note: 2 AA batteries are included with the unit. Install batteries before using the unit.

This model is equipped with a battery backup circuit that will maintain the time and alarm time settings in the event of a temporary power interruption. The battery backup circuit will also operate the buzzer alarm to wake you up at the selected wake up time even if the power is out. When the backup battery is getting weak or isn't present, "LO BATT will flash twice in the display when the unit is powered on. When you see this flashing indicator you should replace the backup batteries as soon as possible.

 
To install/replace the backup batteries:

IMPORTANT: When replacing the backup batteries be sure to have the unit connected to the AC outlet to maintain all of your settings, otherwise it will be necessary to reset the time and alarm time after the batteries are replaced.

- 1. Press upwards on the battery compartment door to release it.
- 2. Insert 2 fresh AA batteries in the backup battery compartment as shown. Make sure polarity (+/-) matches illustration.
- Close the battery compartment door. Confirm that "LO BATT" battery indicator is not flashing in the display by powering unit on.

Note: Make sure you dispose of batteries properly (see your local regulations).

Installing/Replacing Backup Batteries



This unit has a **Daylight Saving Time** (DST) **Switch** located on the back of the cabinet. By default, it is set to auto and will automatically adjust the time at the start and end of daylight saving time. If your location does not observe daylight saving time or you wish to manually adjust, move the switch to +1 to add an hour or to -1 to subtract an hour.

- 1. *Press and hold* the **Time Set Button** located on back of the unit for 2 seconds until the clock display flashes and a beep sounds.
- 2. Press the or + Buttons to adjust the clock to the current time (hold for rapid setting). Make sure you set the correct AM/PM time. The PM indicator appears to the left of the display; there is no AM indicator.
- 3. Press the **Time Set Button** to confirm the time. The year will flash on the display.
- 4. Press the or + Buttons to adjust the clock to the current year (hold for rapid setting).
- 5. Press the **Time Set Button** to confirm the year. The month will flash on the display.
- 6. Press the or + Buttons to adjust the clock to the current month (hold for rapid setting).
- 7. Press the **Time Set Button** to confirm the month. The date will flash on the display.
- 8. Press the or + Buttons to adjust the clock to the current date (hold for rapid setting).
- 9. Press the **Time Set Button** to confirm the date and exit clock setting mode. 2 beeps will confirm clock setting is complete.
- TIP: To toggle the clock display between standard 12 hour time and 24 hour ("military") time display, press the ô Alarm Button or ô Alarm Button while the display is flashing during clock setting.

Setting and Using the Alarms

Setting the Clock

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as "Alarm Button"; use **3** Alarm Button or **3** Alarm Button to set respective alarms.

Note: Each step must be completed while display is flashing or step will time-out with any changes saved.

7

Setting and Using the Alarms (Continued)

- 1. *Press and hold* the **Alarm Button** for 2 seconds until the alarm time display, alarm button and alarm icon flash. A beep sounds.
- Press the or + Buttons to adjust the alarm time to the desired time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears to the left of the display; there is no AM indicator.
- 3. Press the **Alarm Button** to confirm the alarm time setting. The alarm schedule will flash.
- Press the or + Buttons to cycle to the desired schedule: "7 d" (every day), "5 d" (week days) or "2 d" (weekends).
- 5. Press the **Alarm Button** to confirm the alarm schedule setting. The wake-to source will flash.
- Press the or + Buttons to select the desired wake to alarm source: Bluetooth, FM radio or selected tone.

Wake to Bluetooth: You will wake to the currently linked Bluetooth device. If no device is detected at wake time, the alarm will default to tone one ("t1").

Wake to Radio: Press the **Alarm Button** to confirm. Press the **Presets Butto**n to select an FM preset to wake to, or press the **—** or **+ Buttons** to tune in a desired wake to station. (To set Presets, see *Setting and Using FM Presets* on page 10.)

Wake to Tones: You will wake to the selected tone. Press the **Alarm Button** to confirm, then press the - or + **Buttons** to preview and select a desired tone (t1 -t4).

- 7. Press the Alarm Button to confirm the wake to source. The alarm volume will flash.
- 8. Press the or + Buttons to select the desired alarm volume.
- 9. Press the **Alarm Button** to complete alarm setting and exit alarm setting mode. 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display, indicating the alarm is armed.
- 8. To turn off a sounding alarm and reset it to come on the next day at the same time, press the **(b)** Power Button or the associated alarm button (**(f)** or **(g)**) to reset alarm.

Previewing the Alarm and Turning the Alarm On/Off

Press and release the desired Alarm Button as needed to preview current alarm time/ toggle the alarm ON (indicated by the alarm icon and lit alarm button) or OFF (no alarm icon/alarm button is not lit).

Snooze/Display Dimmer Button

Using the iBT232

- 1. While the alarm is sounding, press and release the **Snooze/Display Dimmer Button** to temporarily silence the alarm for the set duration (9 minutes is the default). Snooze can be used several times during alarm.
- 2. To adjust the brightness of the display, press and release the **Snooze/Display Dimmer Button** during normal operation (when no alarm is sounding) to cycle through the brightness display settings, including turning the display off.
- 3. To program Snooze, press and hold the **Snooze/Display Dimmer Button** for 2 seconds during normal operation (when no alarm is sounding). A beep will sound.
- 4. Press the or + Buttons to select the desired snooze time (between 1 and 29 minutes).
- 5. Press and release the **Snooze/Display Dimmer Button** to confirm Snooze setting. 2 beeps will sound.

Sleep Mode

This unit allows you to sleep to the current sound source for a set time before turning the unit off.

- 1. To set Sleep time, press and release the **Sleep/Clock Adjust Button** as needed to cycle to the desired sleep duration: 120, 90, 60, 30 or 15 minutes or OFF (turns the unit off). Press and release the **Sleep/Clock Adjust Button** during sleep mode to review remaining sleep time.
- 2. Press the or •) Buttons to adjust the sleep volume on the unit. Note that the sleep volume setting is stored separately from other volume settings.

FM Radio

Extend the FM antenna for best reception.

- 1. Press and release the **FM Presets Button**. The current FM radio frequency appears on the display.
- 2. Press the or + Buttons to tune the radio to the desired station (hold to scan for the next clear station).
- 3. Press the or •) Buttons to adjust the volume on the unit.
- 4. When you are through listening, press the **O** Power Button to turn the unit off.



Setting and Using FM Presets

The unit allows you to store up to 6 FM radio station presets

- 1. Press and release the **FM Presets Button**. The FM current FM station frequency appears on the display.
- Press and release the FM Presets Button as needed until the preset number (P1- P6) you wish to set is displayed, then press and hold the FM Presets Button to enter setting mode.
- 3. Press the or + Buttons to tune the radio to the desired station (hold to scan for the next clear station).
- 4. Press and release the **FM Presets Button**. 2 beeps will sound to confirm the preset has been assigned. Repeat steps 2 4 until you have set up to 6 preset stations.
- 5. To listen to a preset FM station at any time, follow steps 1 2 to turn on FM radio mode and cycle to the desired preset.

Pairing is the set-up process to introduce your Bluetooth-capable device to the iBT232. to a previously paired device. Once your device is paired, the iBT232 can recognize it and you can play your audio through it. For manual pairing, follow steps below.



Pairing Your Bluetooth Device

- 1. Turn on your Bluetooth device and make it "discoverable" by turning on Bluetooth mode (check in Options or Settings).
- 2. Press the **\$Bluetooth Button** to turn on the unit in Bluetooth mode, indicated by "bt" on the display and the Bluetooth Button lighting up green.



- 3. Press and hold the *** Bluetooth Button** for 2 seconds. "PAIR" will flash on the display, indicating the iBT232 is in pairing mode.
- "iHome iBT232" should appear in your device's Bluetooth menu. Select
 "iHome iBT232" to connect it. If prompted for a passcode, enter "1234" on your device's keypad.
- 5. If pairing is successful, 2 beeps will sound and the **Bluetooth Button** will glow solid green indicating the iBT232 is ready to play music. There should also be an indication on your device. If no device is successfully paired within 3 minutes the iBT232 will default to previous mode. Once the iBT232 is paired to a device, it will attempt to autolink when the device is within range (about 33 feet).

Playing Audio via Bluetooth

- 1. Press the **Bluetooth Button** to turn the unit ON in Bluetooth mode. "bt" appears on the display and the Bluetooth Button lights up.
- 3. Press the **↓**►■ **Play/Pause/Voice Control Button** on the unit to play audio from your linked Bluetooth device.
- 4. Press the or + Buttons to go to the previous or next track.
- 5. Press the or) Buttons to adjust the volume on the unit. You may need to adjust the volume on your device, too.
- 6. When done listening, press the **\bigcirc Power Button** to turn the unit off.

Using the Speakerphone feature

NOTE: The unit must be powered on and linked to a Bluetooth phone to receive a call.

1. When a call is received, playing music is muted to hear the ring tone. "CALL" will flash on the display. Adjust call volume on your device and/or on the unit as needed.

Press the \frown Answer Button to answer the call; press the \frown End Button to ignore the call.

2. When a call is completed, press the **~** End Button to end the call and resume previous function.

Using the Voice Control feature

NOTE: The unit must be powered on and linked to an iOS or Android Bluetooth device to use Voice Control. Press and hold the Phay/Pause/Voice Control Button for 2 seconds and wait for beep to activate control with Siri or Google Now. Voice control requires an active internet connection on connected Bluetooth device with iOS10 or Android 4.1 and later. When activated, the speaker microphone acts as an extension of the microphone in your smartphone to make/take calls, enable you to ask Siri/Google Now to play music and more.






1. Connect one end of a standard stereo 3.5mm audio cable into the aux-in jack on the back of the unit and the other end into the headphone or output jack of your audio device.

- 2. Press the **Aux Button** on the unit to turn it on in AUX mode, indicated by "AUX" on the display and the Aux Button lighting up green.
- 4. Place your audio device in play mode. Navigate tracks and adjust output volume on the device.
- 5. Press the or •) **Buttons** to adjust the volume on the unit. You may need to adjust the volume on your device as well.
- 6. When done listening, press the **Opwer Button** to turn the unit off.

Playing Audio via Aux-In

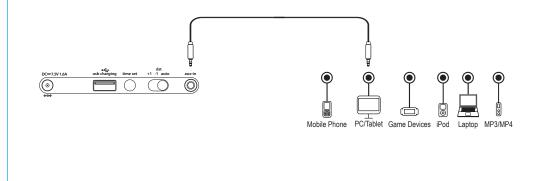

 Connect the standard size end of a USB cable (not included) to the USB Charging Port on back of the unit and connect the other end to the charging port on your device. It's often best to use the charging cable supplied with your device.

Charging Devices via USB Port

2. Monitor the charging on your device. Some devices use a proprietary charging method and will not charge using the USB Port. If this happens, you must charge your device using the charger that came with it.



P15

NOTE: Unit must be plugged into working outlet to charge devices

Battery Cautions and Tips

- Caution Risk of explosion if the battery is replaced by an incorrect type.
- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage, remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clean water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

Consumer Product Safety Guide IMPORTANT SAFETY INSTRUCTIONS

Please heed all warnings, read and follow all instructions and keep these instructions handy for future reference.

- 1. Do not use this product near water.
- 2. Unplug unit and clean only with damp cloth. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.
- 3. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 4. Heat This product should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 5. Only use attachments/accessories specified by the manufacturer.
- 6. Unplug this product during lightning storms or when unused for long periods of time.
- 7. Damage Requiring Service This product should be serviced by qualified service personnel when: - Plug has been damaged.
 - Objects have fallen into or liquid has been spilled into the enclosure.
 - The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.
 - The unit exhibits a marked change in performance or does not operate normally.
- 8. No naked flame sources, such as lighted candles, should be placed on this product.
- 9. Attention should be drawn to the environmental aspects of battery disposal. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.call2recycle.com
- 10. This product is suitable for use in tropical and/or moderate climates.

WARNING:

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.
- Do not dispose of batteries in the household trash or fire.
- The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

iBT232

P18

FCC Information

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

· Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ISED Information

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

 (2) This device may not cause interference.
 (2) This device must accept any interference, including interference that may cause undesired operation of the device. The device comply with ISED RF exposure requirement, users can obtain Canadian information on RF exposure and compliance. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes

L'appareil ne doit pas produire de brouillage;

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'appareil est conforme aux exigences d'exposition RF ISED, les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux RF et la conformité.

Cet'équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser l'équipement.

CAN ICES-3(B) / NMB-3(B)

Troubleshooting

Unit doesn't respond (no power)

- Check that all connections are correct and properly plugged in.
- Make sure your device is properly paired with the iBT232.
- Make sure the Power is ON.

Unit doesn't respond (locked up or frozen)

• The unit may need to be reset. To do so, unplug the unit from power source and remove the backup batteries. Let unit stand for 2 minutes. Re-install backup batteries and connect unit to power source. You will need to reset the clock, radio, and any other settings.

Trouble pairing device/computer with iBT232

Bluetooth implementation varies depending on your device's hardware and operating system. Please see our website for updates on pairing.

- When you power ON the unit, it will automatically link with the last previously paired Bluetooth device if the device is still within range (about 33 feet).
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.

For further information and to see the latest instructions, visit www.ihome.com/support

Limited 1 Year Warranty

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please visit ihome.com/support for more information. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2021 SDI Technologies, Inc. All rights reserved Questions? Visit www.ihome.com

iBT232-062921-D

Printed in China