Front Cover





Model: iBT297v2

Bluetooth Color Changing Dual Alarm Clock Radio

with USB Charging and Voice Control



Quick Start Guide

Questions? Contact Customer Service at 1-800-288-2792





What's Included:





Meet Your iBT297v2

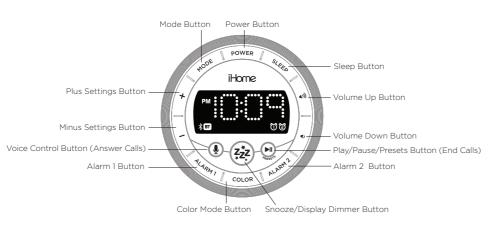

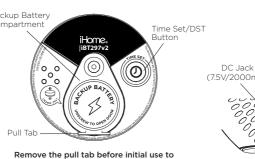

DC Jack USB Charging Port Bluetooth Pairing

Back

Quick Set-Up:

Step One

Connect the included AC adapter to the DC jack located on the back of the unit and connect the other end to a working wall outlet.

Step Two

 
- Press and hold the Time Set Button until the display flashes.
- Press the or + Buttons to adjust selections and tap **Time Set** to confirm.
- Do this for time, year, month and date. All done!

Automatic DST:

 
This product can automatically change your clock in March and November for daylight savings time! To enable, hold the Time Set **Button** for 5 full seconds. You'll notice the screen says "DST ON".

Step Three Adjusting Color Modes

Press and release the Color Mode Button as needed to cycle to the desired color mode light setting. Indicators on the display show the current light mode for 5 seconds.









Quick Set-Up:

Step Four

 
- Turn on your Bluetooth device and make it 'discoverable' by turning on Bluetooth mode.
- Press the **Mode Button** on the iBT297v2 as needed until the 'BT' indicator icon appears on the display.
- Press and hold the Bluetooth Pairing Button on the back of the unit for 2 seconds. A voice prompt will confirm pairing mode is active.
- Select 'iHome iBT297v2' on your device's Bluetooth menu to connect!





The Display

Time/Alarm Time/Radio Frequency Display



Bluetooth.

Fade, Fast, Sky, Lamp, Of

- Alarm Active Indicator - Sleep Mode Indicator

Setting and Using the Alarms

This unit features dual alarms which can be set to different times and alarm sources. Each is set in the same way. Instructions are given as "Alarm Button"; use Alarm 1 Button or Alarm 2 Button to set respective alarms. Note: Each step must be completed while display is flashing or setting will time-out with any changes saved.

1. Press and hold the **Alarm Button** for 2 seconds until the alarm time display and alarm icon flash.

- 2. Press the or + Buttons to adjust the alarm time to the desired time (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The AM and PM indicators appear to the left of the
- 3. Press the **Alarm Button** to confirm the alarm time setting. The alarm schedule will flash: 7 (every day), 5 (weekdays) or 2 (weekend only). Press the - or + Buttons to select the desired

4. Press the **Alarm Button** to confirm the alarm schedule. The wake-to source will flash.

5. Press the - or + Buttons to select the desired wake-to alarm source: Bluetooth, FM radio, Tone or Light Only (no alarm sound).

Wake to Bluetooth: You will wake to the currently linked Bluetooth device. If no device is detected, the alarm will default to the last tone selected. Wake to FM radio: Press the Alarm Button to confirm. Press the Presets Button to select an FM

preset to wake to, or press the - or + Buttons to tune in a desired wake to station. Wake to Tone: Press the Alarm Button to confirm. Press the - or + Buttons to select the desired

tone to wake to (Tone 1-Tone 4). Wake to Light Only: Press the Alarm Button to confirm. Select this mode to wake to silent light only alarm. (You will then skip volume setting and advance to step 9 Wake to Light setting.)

6. Press the **Alarm Button** to confirm wake-to source. The alarm volume will flash (unless Wake to Light is set wake to choice, then volume setting is skipped and you are done). 7. Press the - or + **Buttons** to adjust the alarm volume.

- 8. Press the **Alarm Button** to confirm alarm volume. The current Wake to Light mode will flash. 9. Press the - or + Buttons to select the desired light mode to wake to (Slow Fade, Fast, One Color, Pulse, Sky Gradient, Lamp, Off or Dawn).
- 10. Press the **Alarm Button** to confirm the alarm settings and exit alarm setting mode. 2 beeps will confirm alarm setting is complete. The alarm icon will remain on the display, indicating the alarm is
- 11. To turn off a sounding alarm and reset it to come on the next day at the same time, press the Power Button or the associated alarm button (Alarm 1 Button or Alarm 2 Button) to reset

Previewing the Alarm and Turning the Alarm On/Off

Press and release the desired **Alarm Button** as needed to preview the alarm and to toggle the alarm ON (indicated by the alarm icon) or OFF (no alarm icon).

Snooze/Display Dimmer

- 1. To program Snooze, press and hold the **Snooze/Display Dimmer Button** for 2 seconds during normal operation (when no alarm is sounding).
- 2. Press the or + Buttons to select the desired snooze time (between 01 and 29 minutes). 3. Press the **Snooze/Display Dimmer Button** to confirm Snooze setting. 2 beeps will sound.
- While the alarm is sounding, press the Snooze/Display Dimmer Button to temporarily silence the alarm for the set duration (9 minutes is the default). Snooze can be used several times during the one hour alarm cycle.
- To adjust the brightness of the display, press the **Snooze/Display Dimmer Button** during normal operation (when no alarm is sounding) to cycle through the brightness display settings, including OFF.

Sleep Mode

This unit allows you to sleep to the current sound source for a set time before turning the unit

- 1. To set Sleep time, press and release the **Sleep Button** as needed to cycle to the desired sleep duration: 120, 90, 60, 30 or 15 minutes or OFF (turns the unit off). The sleep icon will appear on the display.
- Press the lacktriangle or lacktriangle) **Buttons** to adjust the sleep volume on the unit. Note that the sleep volume setting is stored separately from other volume settings.

When Sleep mode is active, press and release the **Sleep Button** to display remaining sleep

FM Radio - Extend the FM antenna for best reception.

- 1. Press and release the **Mode Button** as needed until the FM indicator icon and current FM radio frequency appear on the display.
- 2. Press the or + Buttons to tune the radio to the desired station (hold to scan for the next clear station).
- 3. Press the or) Buttons to adjust the volume on the unit.
- 4. When you are through listening, press the **Power Button** to turn the unit off.

Setting And Using FM Presets

button will flash.

Bottom

The unit allows you to store up to 6 FM radio station presets

- 1. Press and release the **Mode Button** as needed until the FM indicator icon appears on the
- 2. Press the or + Buttons to tune the radio to the desired station (hold to scan). 3. Press and hold the Play/Pause Presets Button to enter Preset setting mode. The display and
- 4. Press and release the or + Buttons until the preset number (P1- P6) you wish to set is displayed.
- 5. Press and release the **Play/Pause Presets Button**. 2 beeps will sound to confirm the preset has been assigned. Repeat steps 2 - 5 until you have set up to 6 preset stations.
- 6. To listen to a preset FM station at any time, turn on FM radio mode and press the **Play/Pause** Presets Button to cycle to the desired preset.

Using FM Radio in Other Countries

- By default, this unit is set to USA frequency steps. To use the radio outside the USA: 1. Make sure unit is OFF.
- 2. Press and hold the **Mode Button** for 10 seconds until "USA" appears in the display. 3. Press and release - or + Buttons to cycle to your location: Europe, Japan, Australia, China or
- 4. Press and release the **Mode Button** to exit frequency setting mode. 2 beeps will confirm setting.

Playing Audio via Bluetooth

- 1. Press and release the **Mode Button** as needed until the "BT" indicator icon appears on the
- 2. Press the Play/Pause/Presets Button on the unit to play, pause and resume play of audio from your linked Bluetooth device.
- 3. Press the Button to go to the previous track (or start of current track). Press the **+ Button** to advance to the next track. 4. Press the • or •) Buttons to adjust the volume on the unit. You may need to adjust the
- volume on your device, too. 5. When done listening, press the **Power Button** to turn the unit off.
- NOTE: Bluetooth audio is only available when unit is in Bluetooth mode.

Using the Speakerphone feature

NOTE: The unit must be powered on and linked to a Bluetooth phone to receive a call. When a call is received, playing music is muted to hear the ring tone and the cabinet flashes

"CALL" will flash on the display. Adjust call volume on your device and/or on the unit as

Press the Voice Button to answer the call; press the IPlay/Pause/Presets Button to ignore Press the 🕊 **Voice Button** to answer a second call and place the first on hold (press again to


Using the Voice Control feature

NOTE: The unit must be powered on and linked to an iOS or Android Bluetooth device to use Voice Control. Press and hold the **Voice Button** for 2 seconds and wait for beep to activate voice control with Siri or Google Assistant. "CALL" will flash on the display. Short press to seek

When activated, the speaker microphone acts as an extension of the microphone in your smartphone to make/take calls,

Charging Devices Via USB Port

Connect a USB cable (not included) to the USB port on the back of the unit and connect the other end to the charging port on your device. It is often best to use the charging cable supplied with your device.

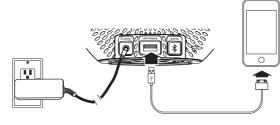

NOTE: Unit must be plugged into working outlet to charge devices.

Color Change Mode

Press and release the Color Mode Button as needed to cycle to the desired color mode light setting. Indicators on the display show the current light mode for 5 seconds:

SLOW FADE: Gradually fades from one color into the next FAST: Fades quickly from color to color

1-COLOR: Pauses on the last color shown in Fast Change mode PULSE Pulses to the beat of playing music if volume is up SKY: Matches the color of the sky at the current time of day LAMP: Changes colors to warm white light for maximum illumination

Turns cabinet lights OFF

Replacing and Installing Clock Backup Battery

Note: 1 CR2450 battery is included with the unit. Pull battery tab before using the unit.

A battery backup circuit will maintain the time and alarm time settings in the event of a temporary power interruption (the display is NOT maintained). The battery backup circuit will also operate the buzzer alarm to wake you up at the selected wake up time even if the power is out. When the Low Backup Battery Indicator flashes in the display, you should replace the backup battery as soon as possible.

To install/replace the backup battery:

IMPORTANT: When replacing the backup battery be sure to have the unit connected to the AC outlet to maintain all of your settings, otherwise it will be necessary to reset the time and alarm time after the batteries are replaced.

- 1. Use a Phillips screwdriver to unscrew the battery door located on the bottom of the unit. Remove the battery door. If replacing battery, remove the exhausted battery.
- 2. Insert 1 fresh CR2450 battery in the backup battery compartment. Make sure the "+" side of the battery is facing you (see illustration).
- 3. Replace the battery door and screw shut. Do not over-tighten. Confirm that the backup battery indicator is not flashing in the display.

Note: Make sure you dispose of batteries properly (see your local regulations)

IMPORTANT SAFETY INSTRUCTIONS

Heat - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances

Only use attachments/accessories specified by the manufacturer. This product is suitable for use in tropical and/or moderate

climates. The unit should be serviced by qualified service personnel when the enclosure damaged or does not operate normally. No naked flame sources, such as lighted candles, should be placed on the apparatus. • Do not use this apparatus near water Clean only with dry cloth

 Do not block any ventilation opening • Unplug this apparatus during lightning storm or when unused for long periods of time Warning: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture

Damage Requiring Service - This product should be serviced by qualified service personnel when:
- Plug has been damaged. objects have fallen into or liquid has been spilled into the enclosure.

the unit has been exposed to rain.
 the unit has been dropped or the enclosure damaged.

- the unit exhibits a marked change in performance or does not operate normally CAUTION - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

s swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

FCC INFORMATION CC Radiation Exposure Statement

iBT297V2 IC: 986B-IBT297V2

is device complies with Part 15 of the FCC Rules, operation is subject to the following two inditions: (1) This device may not cause harmful interference, and (2) this device must accept any terference received, including interference that may cause undesired operation.

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Canada IC statement

2. This device must accept any interference, including interference that may cause undesired operation of the device. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences e Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux

(1) L'appareil ne doit pas produire de brouillage; (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible

iBT297V2-031219-A Printed in China