



**FCC Information**

FCC ID: EMOIHV317

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**IMPORTANT SAFETY INSTRUCTIONS**

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read and follow all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

**Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.

**Cleaning** - The unit should be cleaned only with dry cloth. Do not use solvents, etc

**Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.

Only use attachments/accessories specified by the manufacturer.

**Damage Requiring Service** - The unit should be serviced by qualified service personnel when:

- A. the power supply cable or plug has been damaged.
- B. objects have fallen into or liquid has been spilled into the enclosure.
- C. the unit has been exposed to rain.
- D. the unit has been dropped or the enclosure damaged.
- E. the unit exhibits a marked change in performance or does not operate normally.

Attention should be drawn to the environmental aspects of battery disposal.

No naked flame sources, such as lighted candles, should be placed on this product.

This product is suitable for use in tropical and/or moderate climates.

CAUTION - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Do not dispose of batteries in the household trash or fire



For warranty information:  
visit <https://www.ihome.com/support>

iHv317\_022519-A

Printed in China



**EN Quick Start Guide**

**Color Changing Wireless Speaker**

Model: iHv317



**What's Included:**

- iHv317 Speaker
- USB Charging Cable

**CHARGE BEFORE USE**

 
Questions? Visit [www.ihome.com](http://www.ihome.com)  
or call 1-800-288-2792 Toll Free



**GETTING STARTED**


**Charging your speaker**

**Speaker must be charged before use.**

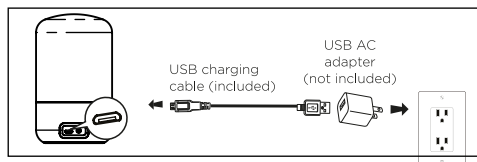


- Connect small plug of USB charging cable to USB port and connect the other end to a powered USB adapter.
- LED indicator will glow red while charging and turn off once charged.
- Speaker should provide about 3-4 hours of audio when fully charged.
- When battery is low, 3 tones will sound every 10 seconds until the unit shuts off.

**Basic Controls**

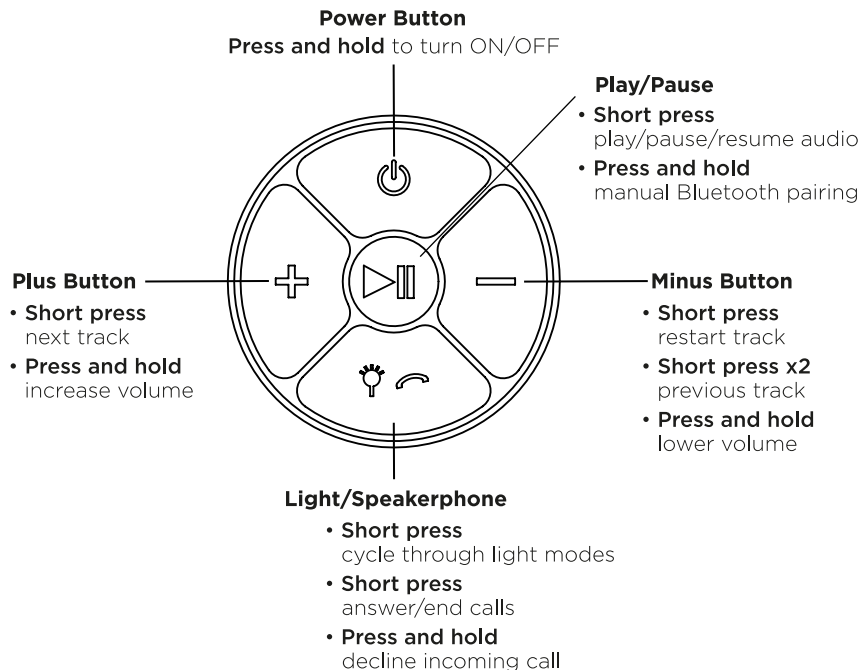 

**LED INDICATORS**

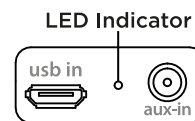 


Charging LED (red)	Pairing LED (blue)
solid = charging	flashing = pairing
OFF = fully charged	solid = connected
	slow flash = playing audio

**BLUETOOTH**

 Pairing establishes a unique communication connection between your Bluetooth device and the speaker. Once paired, you will be able to stream audio wirelessly to your iHv317 speaker.

1. The speaker will enter auto-pairing mode whenever you turn it ON. The LED indicator on the back of the speaker will flash blue.
2. Turn on Bluetooth mode on your device (under Settings, Connections or similar).




3. Select "iHv317" on your device's menu of Bluetooth devices. When pairing is successful, the LED will glow solid blue. You can now begin to stream audio and calls from your device. To conserve the battery, remember to shut off the speaker when you are done listening.

**SPEAKERPHONE**



 Press the **Light/Speakerphone Button** to answer or end a call.  
Press and hold the **Play/Pause Button** to decline a call.

**AUX MODE**

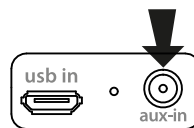

- Connect one end of an audio cable (not included) into the AUX-IN jack and the other end to the headphone jack of your audio device.
- Press PLAY on your audio device to start playback.
  - Control/navigate tracks from your audio device, too.
  - Press the **Play/Pause Button** on the speaker to mute audio.
  - Unplug the audio cable to resume Bluetooth audio operation.

**RESET**

To reset the unit, insert the extended tip of a paper clip or other thin tool into the AUX-in jack.