


iHome

SMARTSHARE FRAME

WI-FI ENABLED PHOTO FRAME

 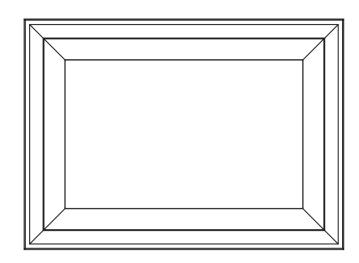


iPF1032 **Quick Start Guide**



For warranty visit: www.ihome.com/support

What's Included:







Controls + Indicators

Back Panel

Press to turn ON. If unit is on, press to enter Standby mode (screen off) or press and hold for 2 seconds to turn OFF.

 
To turn on the unit again, press and hold for 2 seconds





Note: The frame is compatible with SD cards up to 32GB.

Front Panel







- Tap the Display on the frame to Turn On the Main Menu.
- Tap the Settings Icon on the frame to the Settings Menu, to set up Wi-Fi, Display & photo manage etc. Tap the Power Button on the frame to access the Power Menu.
- Tap the Power Icon on the Power Menu to turn the frame OFF.
- Tap the Restart Icon on the Power Menu to restart the frame.
- Tap the Moon Icon on the Power Menu to enter Sleep Mode.

Getting Started

- 1. Connect the included DC adaptor to the DC jack on the back of the unit. Plug the adapter into an outlet not controlled by a light
- 2. Download the Frameo app from the App Store or Google Play.
- 3. Follow the in-app steps to connect your frame to Wi-Fi.
- 4. When you turn on the frame for the first time, you will be prompted to customize your settings:
 - a) Choose a language.
 - b) Set up Wi-Fi connect.
 - c) Set the appropriate time zone.
 - d) Update your name and location.

Importing Photos

The easiest way to import photos is by using the Frameo app. In addition, you can import photos using either the micro USB port or the micro SD slot. (The frame is compatible with SD cards up to

Importing via micro USB

- 1. Connect a micro USB drive to the micro USB port on the frame.
- 2. Select the photos you would like to import.
- 3. Tap the Import Button d to start the process.

Note: The micro USB port just for 5V adaptor and U-disk uses.

Importing via micro SD card:

- 1. Connect a micro SD card to the micro SD slot on the frame.
- 2. Select the photos you would like to import.
- 3. Tap the Import Button to start the process.

Backup frame to external storage (e.g. microSD card)

Tap to make a backup of your photos, friends and settings. The time of the latest successful backup is also displayed here.

2

Restore from backup

Before you attempt to restore your frame, start by confirming that your backup is up-to-date.

If you wish to restore a backup on a frame that has already been setup, then you must first reset the frame. This is done by pressing the "Reset frame" button. This will delete all data on the Frameo and reset the Frameo to its setup screen.

On the setup screen you can select the "Restore from backup" button which will restore your frame according to the backup. If the "Restore from backup" button isn't visible, then confirm that the external storage (e.g. microSD card) is correctly mounted.

Using the Frameo App

If you want to be able to send photos to the frame yourself, start by downloading the app for iOS or Android on App Store or **Google Play**. Then use the code to connect your frame and app as described below. You may also provide the code to your friends and family.

Connecting a new friend

- 1. Make sure that your friend has downloaded/installed the app.
- 2. Click the add friend icon 🛳 on your frame. A dialog will appear showing a connection code, which is valid for 12 hours.
- 3. Now share this code with your friend via SMS, e-mail, phone, 4. Once your friend has added the code in their Frameo app, they will automatically appear on your frame and will be able to

share photos. **Manage Photos**

Use the Manage Photos menu to import, export, and delete

Use the Gallery to navigate through your photos and videos.

Slideshow

Use the Slideshow Menu to set a timer, set photo display order (by date or 'shuffle'), enable photo captions, and adjust video

Sleep Mode

Frameo offers a sleep mode which turns off the screen to reduce power consumption. The default setting is to turn off the screen at 11:00pm and turn on the screen again at 7:00am. To adjust, set the sleep mode start/end time.

Please visit http://frameo.net/helpcenter for FAQ and app support

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, especially when children are present, safety precautions must always be followed.

READ ALL INSTRUCTIONS PRIOR TO USE.

- DANGER TO REDUCE THE RISK OF ELECTRICAL SHOCK;

 ALWAYS UNPLUG THIS PRODUCT FROM THE ELELCTRICAL OUTLET BEFORE CLEANING. DO NOT reach for any electrical device that has fallen into water. Unplug it from the outlet immediately, first
- DO NOT use while swimming, bathing or in the shower.

 DO NOT place the device in an area where it could fall or be pulled into a bathtub or sink.

 DO NOT drop or expose the device to water or other liquids.
- WARNING TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR PERSONAL INJURY
- Use this device only for its intended purpose as described in these instructions. Only use the attachments included
- . DO NOT operate this device if the cord or plug is damaged or frayed, has been dropped or damaged, or drop into water, or is not working properly. Inspect periodically for any signs of damage. If damage is found, DO NOT USE. Return the device to a service center for examination and repair.
- USE. Return the device to a service center for examination and repair.

 Keep the cord away from any sources of heat that could damage the cord's insulation. Such as stoves, radiators, heat registers, or other appliances that produce heat.

 DO NOT operate where aerosol products are in use or where oxygen is being administered.

 DO NOT block or inhibit the proper ventilation of the device by using it under a blanket, pillow or other soft surfaces (Bed or Sofa). Overheating can occur and can cause personal nijury, including fire or electric shock.

 ALWAYS keep the ventilation openings free of hair, lint, dust and other debris.

 For Indoor Use Only. DO NOT use outdoors.
- Never drop or insert any object into any opening
- Unplug unit and clean only with dry cloth. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

- can damage the surface of the unit.

 The mains plug of power adaptor is used as the disconnect device, it shall remain readily operable.

 Damage Requiring Service This product should be serviced by qualified service personnel when:

 Plug has been damaged.

 Objects have fallen into or liquid has been spilled into the enclosure.

 The unit has been exposed to rain. The unit has been dropped or the enclosure damaged.

 The unit exhibits a marked change in performance or does not operate normally.

 Attention should be drawn to the environmental aspects of disposal. Many electronics retailers now recycle batteries and other electronic components at no charge. To find a drop-off location near you, visit www.call2recycle.com

FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received,

cluding interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to

Part is of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Inese limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with minimum distance 20cm/8in between the radiator & your

• Operation in the 5.15-5.25GHz band are restricted to indoors usage only. The product integrates a transmitting

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must acceed any interference including interference.

(2) Lapharel total accepter total totalinage radioenectrique soul, ineme si e ortoninage est sasceptuile of en (infinitement le fonctionnement.

L'appareil est conforme aux exigences d'exposition RF ISED, les utilisateurs peuvent obtenir des informations canadiennes sur l'exposition aux RF et la conformité.

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité peut annuler l'autorité de l'utilisateur à utiliser l'équipement.

Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rt, utilisateurs peut obtenir l'Information canadienne sur l'exposition et la conformité de rf.

CAN ICES-3(B) / NMB-3(B), TSCA Title VI compliant

Limited One Year Warranty

Home Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store when it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage. If proof of purchase cannot be produced, the product will be deemed out-of-warranty. The date of purchase, vendor, product model number, and purchase price must be legible and verifiable.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CO's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their o cers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2022 SDI Technologies, Inc. All rights reserved. Questions? Visit www.ihome.cor

iPF1032-QSG-080222-A