IMRB-INT (IMR2) - label location:



view of the back.

## IMRB-EXT (IMR-XA/IMR-FT) - label location:



view of the back.