




12. FRONT VIEW OF PANEL(MODE 3,5)

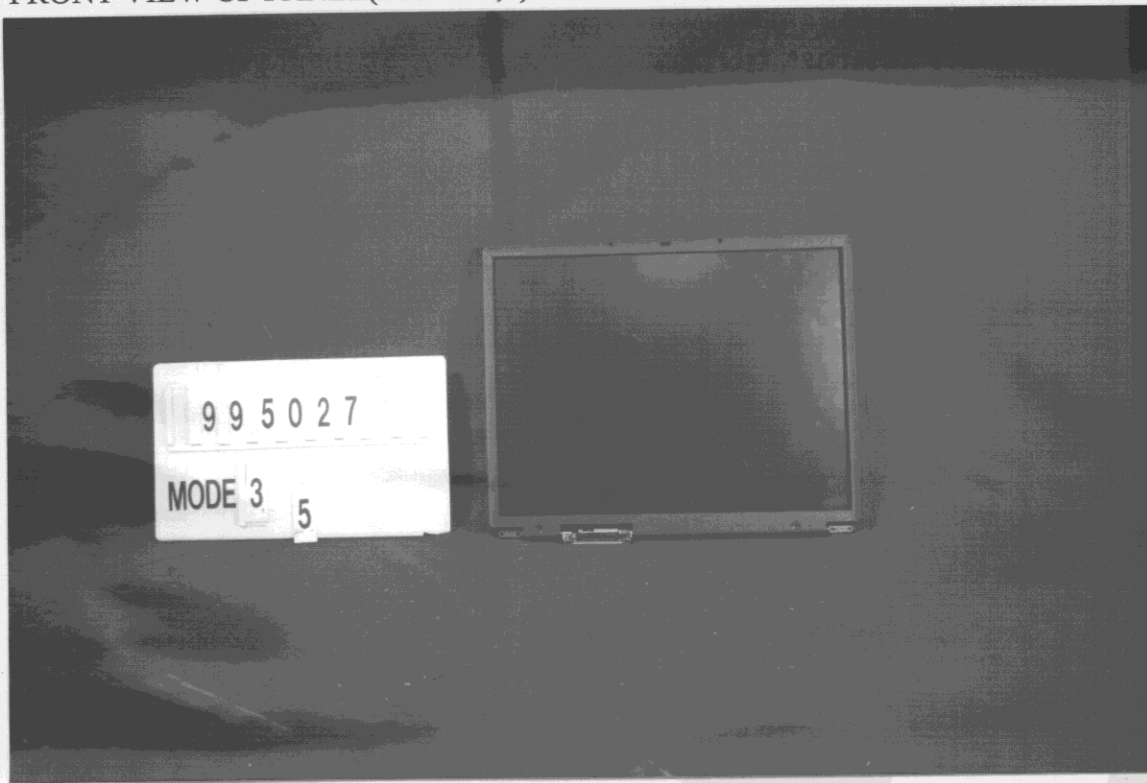


Gestek

13. INNER VIEW OF PANEL(MODE 3,5)

14. INNER VIEW OF PANEL(MODE 3,5)

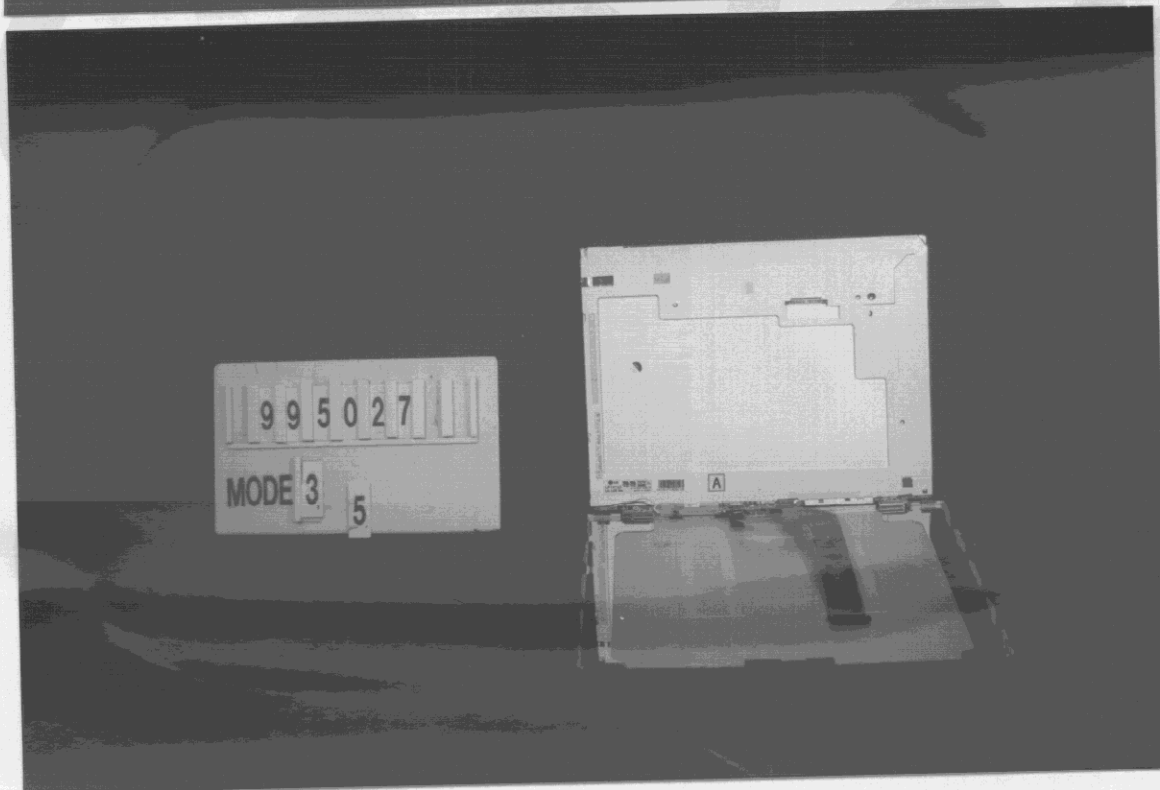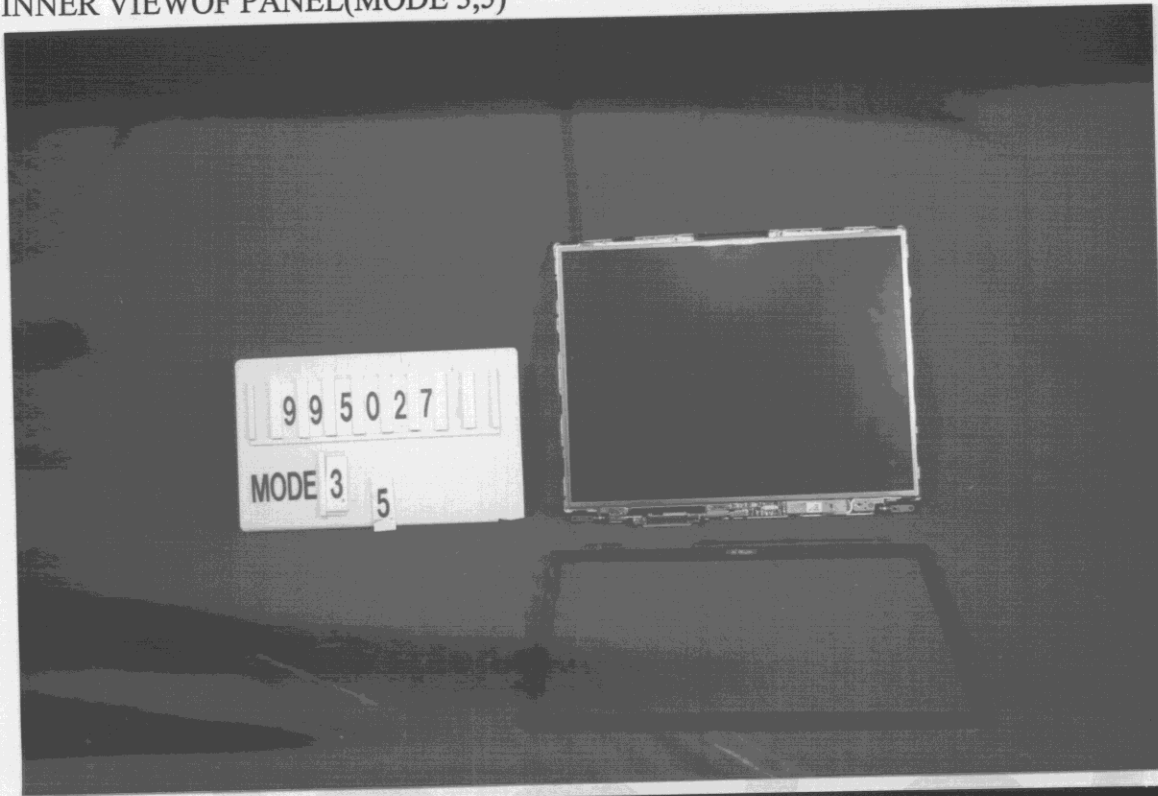



15. FRONT VIEW OF PANEL(MODE 4)

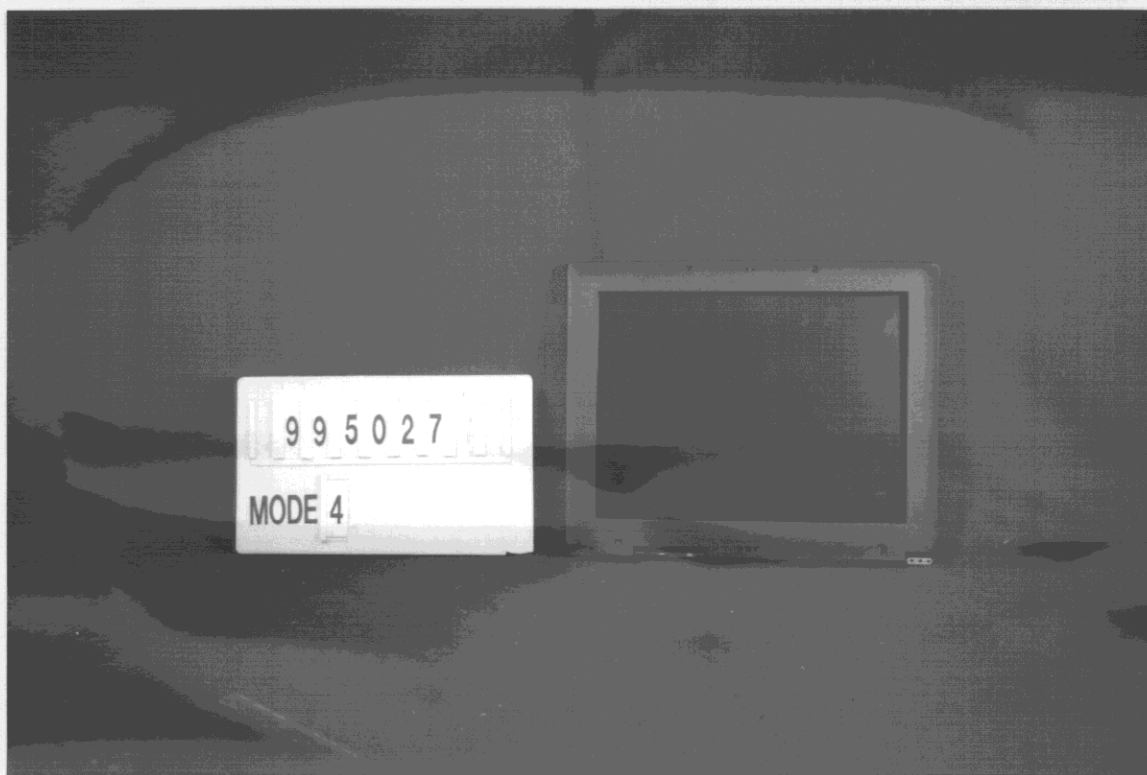

Ges / ek



16. INNER VIEW OF PANEL(MODE 4)

17. INNER VIEW OF PANEL(MODE 4)

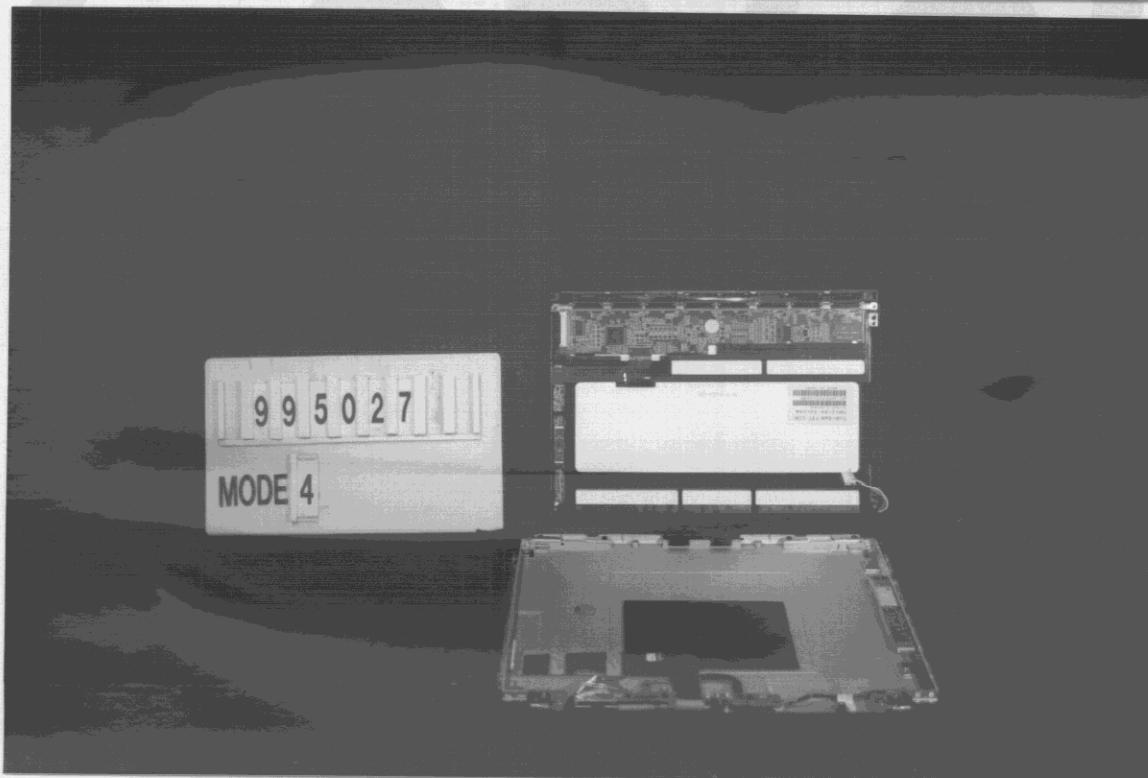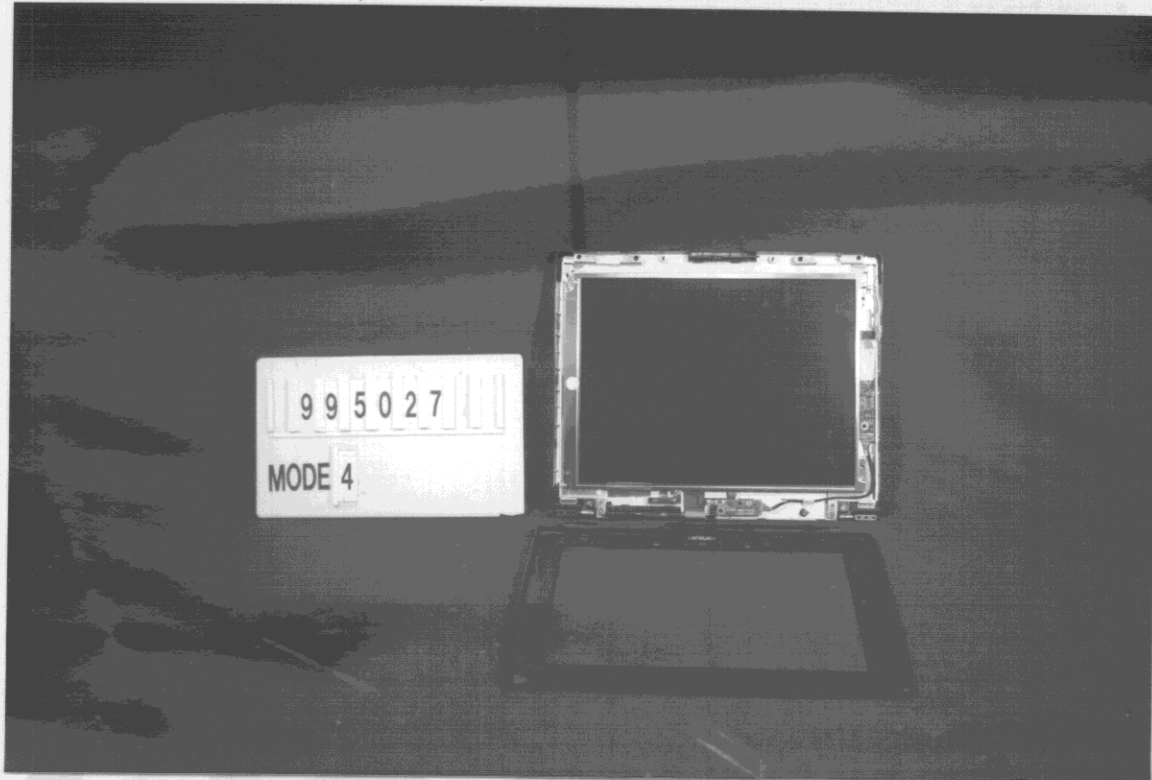


18. INNER VIEW OF NOTEBOOK

19. INNER VIEW OF NOTEBOOK

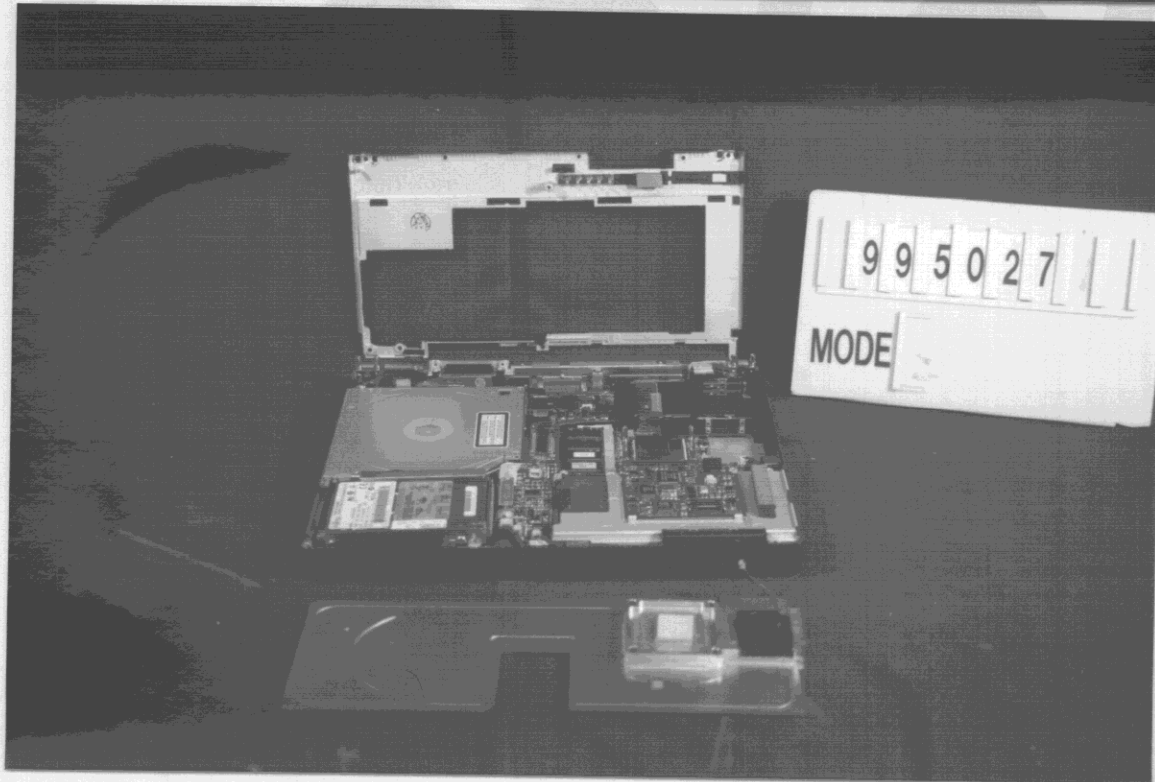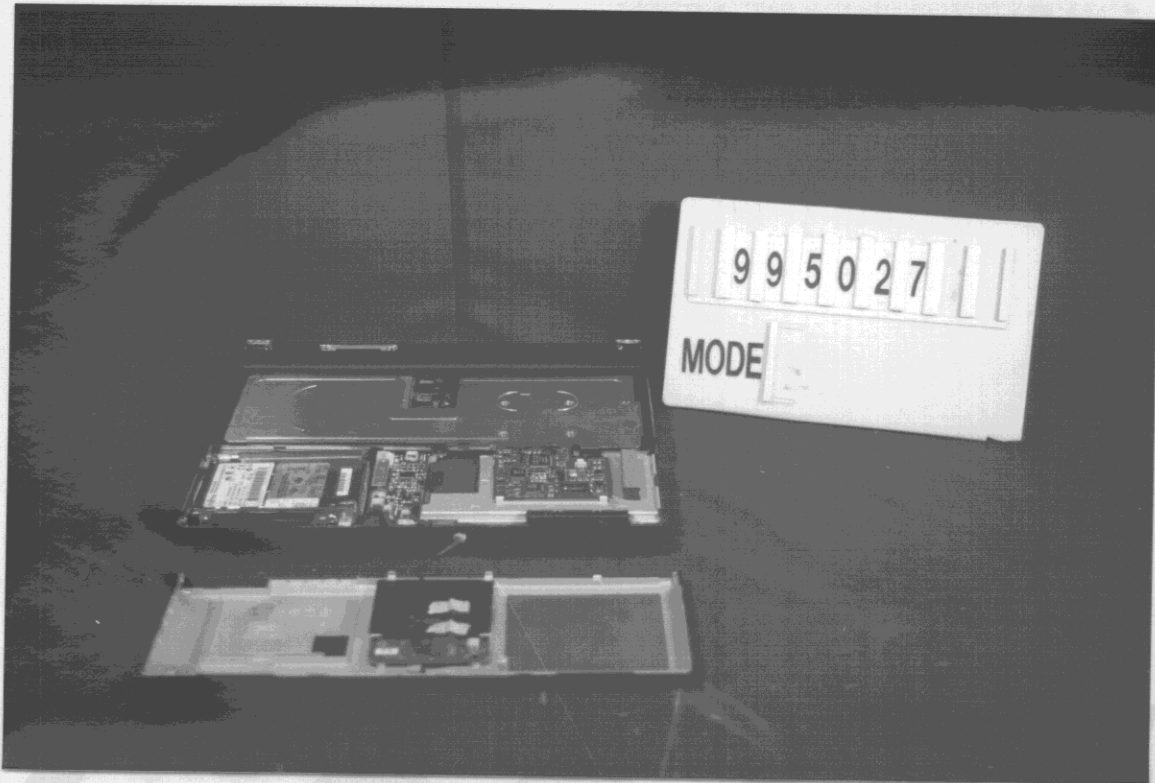



20. INNER VIEW OF NOTEBOOK

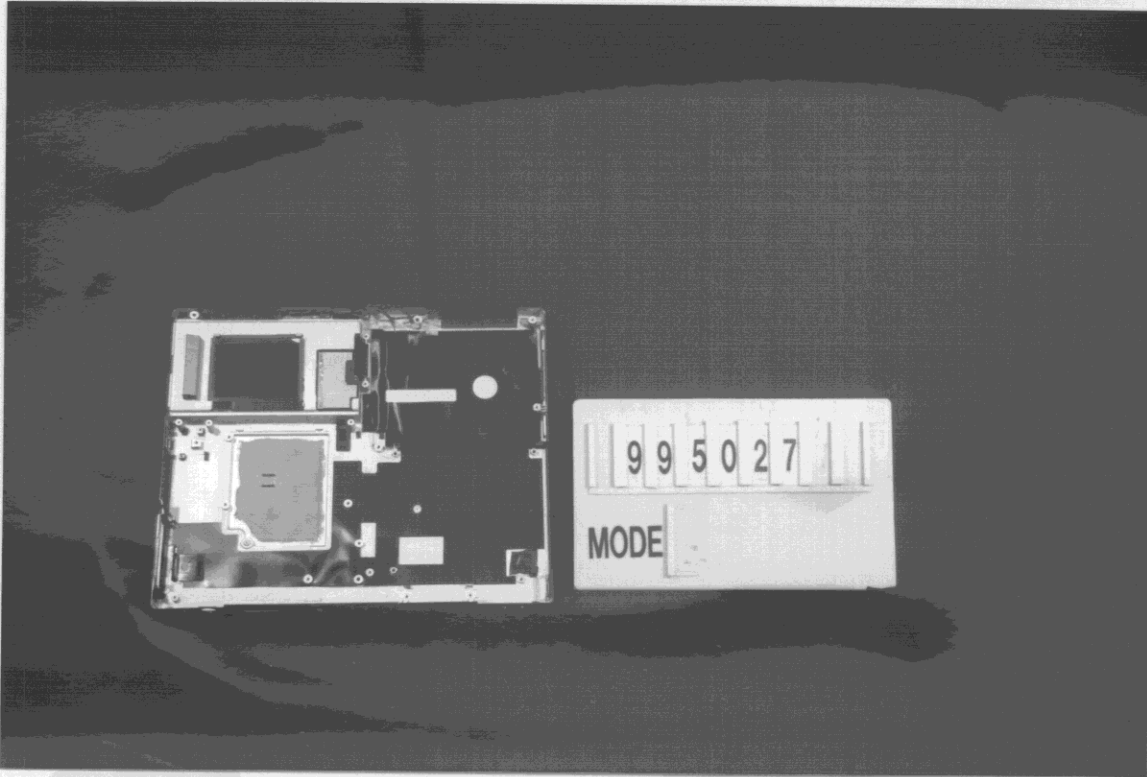

Gestek


21. FRONT VIEW OF CPU

22. BACK VIEW OF CPU

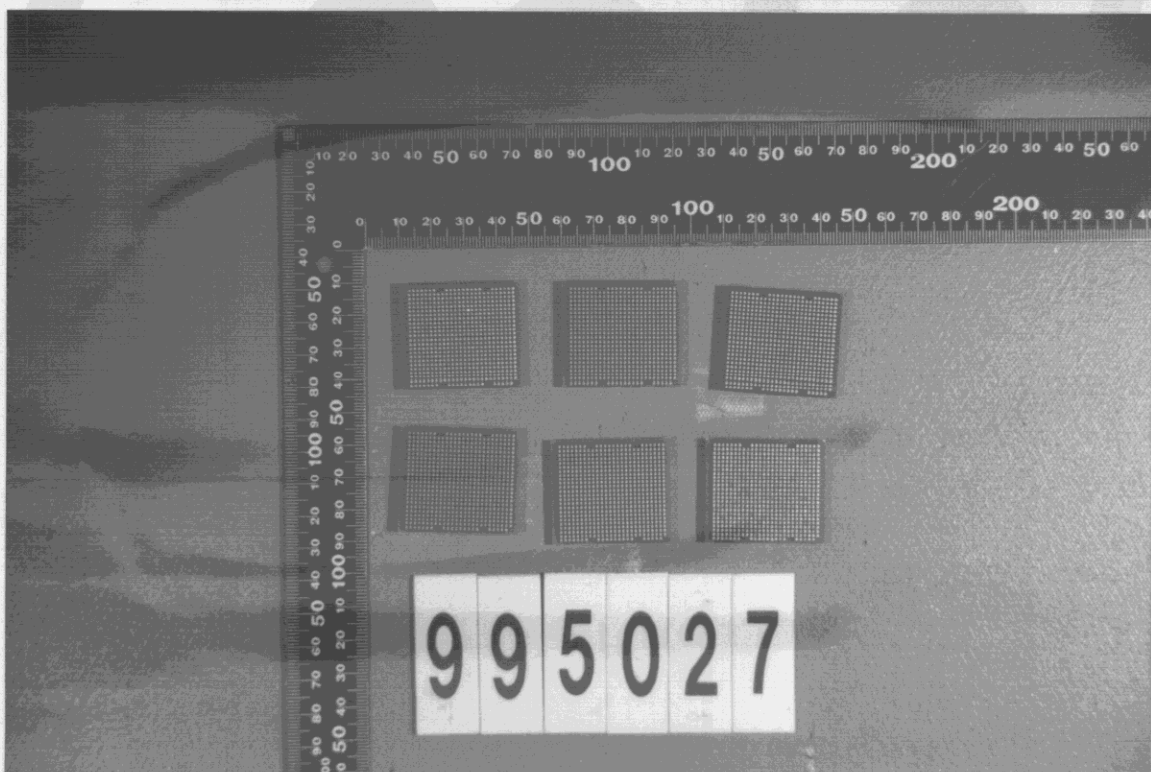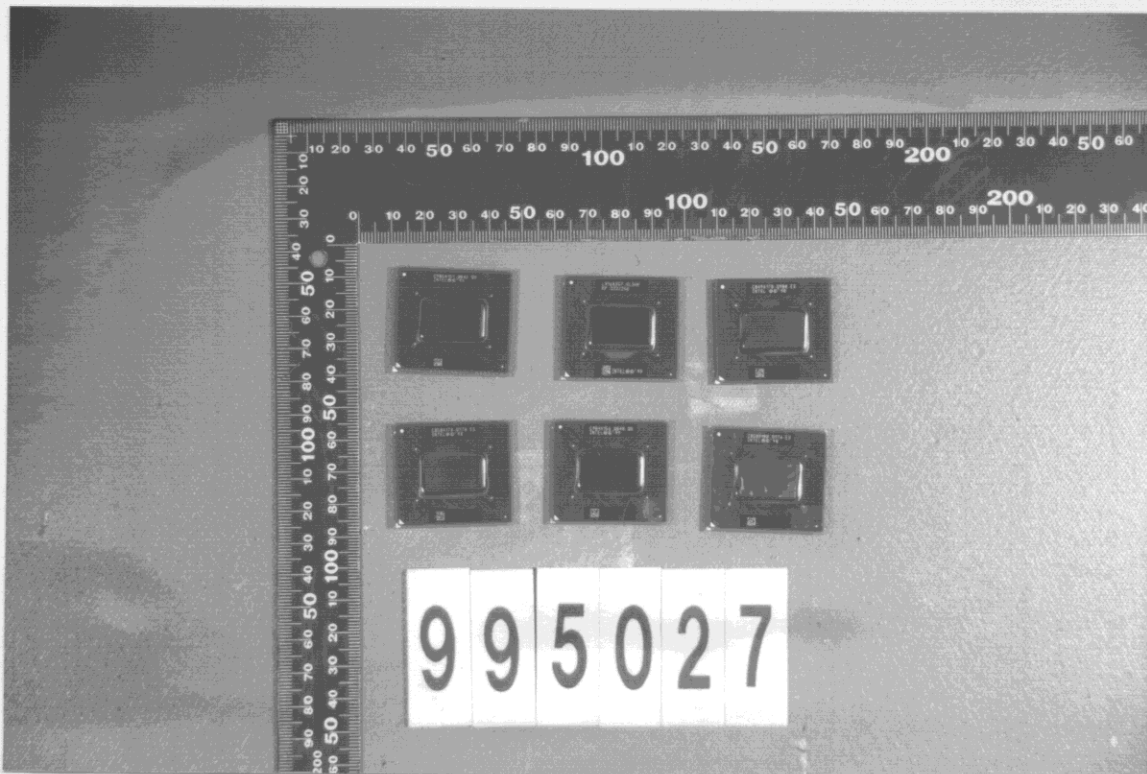

23. FRONT VIEW OF KEYBOARD & BATTERY & FDD



24. BACK VIEW OF KEYBOARD & BATTERY & FDD

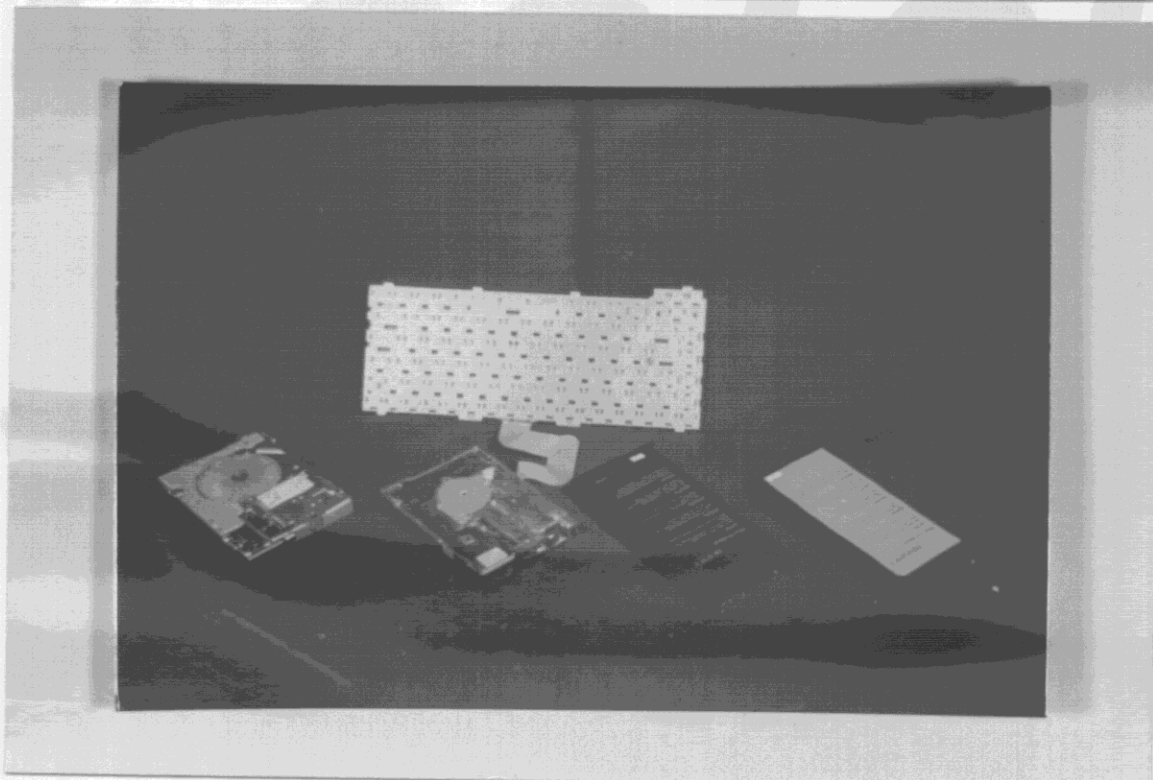



25. FRONT VIEW OF CD-ROM & DVD-ROM

26. BACK VIEW OF CD-ROM & DVD-ROM

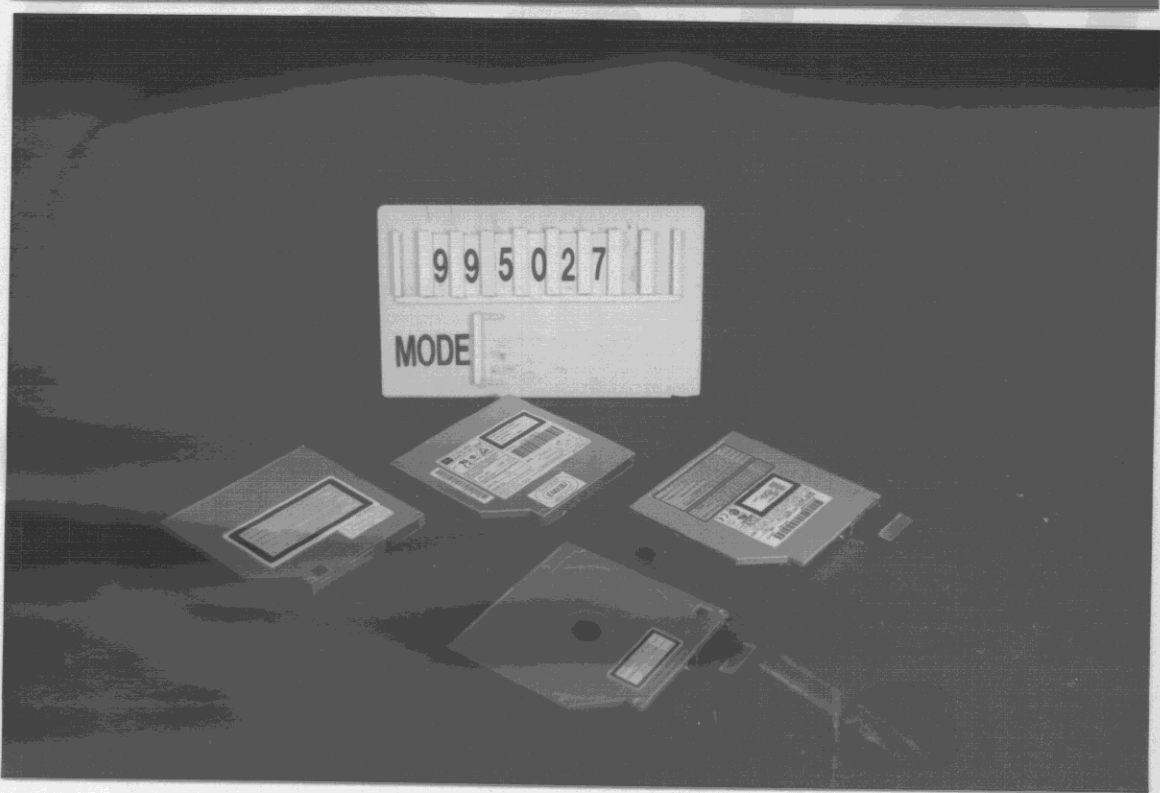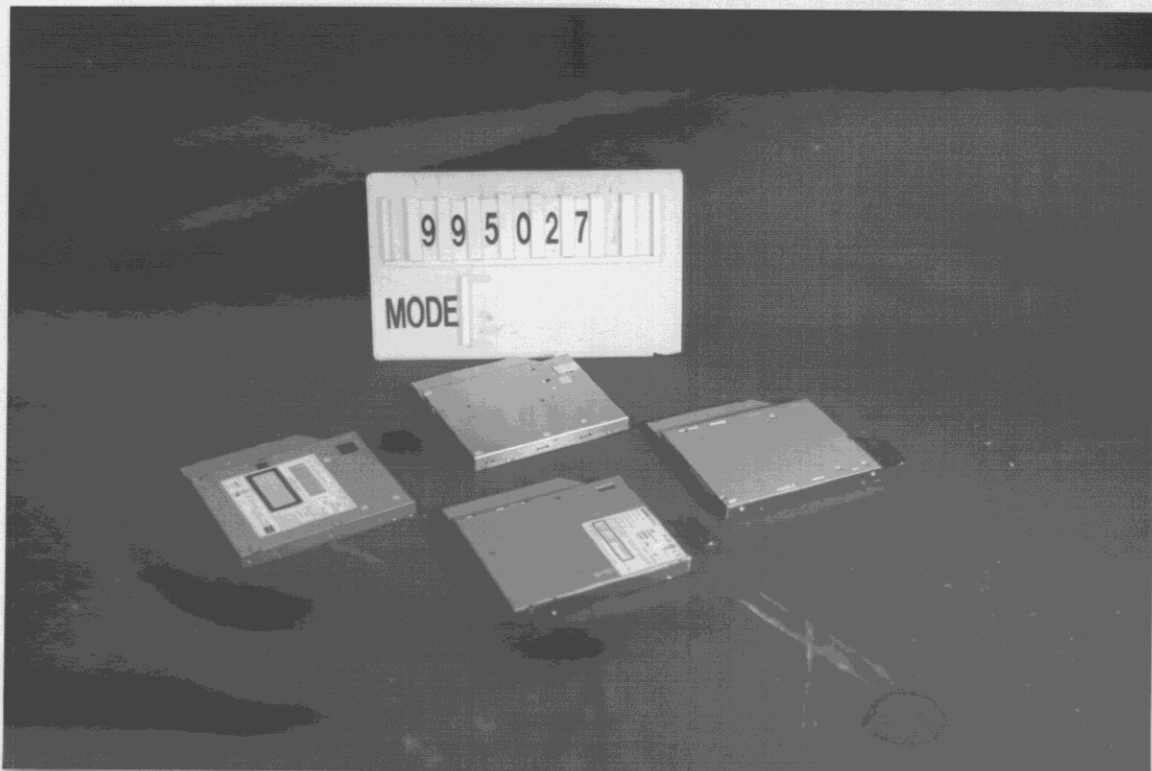

27. FRONT VIEW OF HDD

28. BACK VIEW OF HDD

