

Wireless Adapter Instruction Manual

1. Features

The Wireless Adapter is a peripheral device for the OXY. Network play for a maximum of five players is possible by connecting the Wireless Adapter to a OXY.

2. Connection

After confirming that the Power Switch is OFF on the OXY, plug in the Wireless Adapter 8 PIN plug into the OXY External Extension Connector.

3. Use

The Wireless Adapter will automatically begin to operate after being connected to the OXY and turning the Power Switch ON.

4. Specifications

Model name: OXY-004

Dimensions: 44.0 mm (width) x 21.9 mm (height) x 21.4 mm (depth)

Weight: approx. 7 g

Radio Frequency: 2.4 GHz bandwidth, ISM band

5. FCC Certification, Instructions to the User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Change the direction the Wireless Adapter is facing.
- Consult the dealer or an experienced radio/TV technician for help

In addition, this device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NEED HELP WITH INSTALLATION, MAINTENANCE OR SERVICE?

Customer Service

Visit www.nintendo.com

or call 1-800-255-3700

Mon – Sat: 6:00 a.m. to 9:00 p.m. (Pacific Time)

or Sun: 6:00 a.m. to 7:00 p.m. (Pacific Time)

(Times subject to change)

Nintendo of America Inc.

P.O. Box 957

Redmond, WA 98073-0957

U.S.A.

www.nintendo.com