

Adjust the sound sensitivity of the baby units

You can choose to hear sounds from the baby unit or from one or more baby units in your system, you can also monitor your baby in **PATROL** or **SPLIT-VIEW** mode.

You can choose to adjust the microphone sensitivity of your baby units from **Lowest** to **Highest**. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds or transmitting to the parent unit. The sound sensitivity level is preset to **Highest**.

Sound sensitivity table for reference

Sensitivity Level	Description
Highest	The parent unit speaker is constantly on and you will hear all sounds (including background noises) from your baby's room.
High	The parent unit speaker turns on for soft babbling and loud sounds from your baby. It remains quiet when your baby sleeps soundly.
Medium	The parent unit speaker turns on for loud babbling and loud sounds from your baby. It remains quiet when your baby makes soft sounds.
Low	The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.
Lowest	The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.

1. Press **MENU** when the parent unit is idle.

2. Press **▼** or **▲** to choose **Sensitivity**, then press **SELECT**.

• If you have more than one baby unit, press **▼** or **▲** to choose the desired baby unit or all baby units, press **▼** or **▲** to choose **ALL CAM** or **CAM #**, then press **SELECT**.

3. Press **▼** or **▲** to choose the desired sensitivity level, then press **SELECT** to confirm your selection.

• You can adjust the baby unit placement to improve the sound detection.

Monitoring mode

Every time the parent unit is turned on, it displays a baby unit in **SINGLE-CAM** mode. If there are more than one baby units in your system, you can also monitor your baby in **PATROL** or **SPLIT-VIEW** mode.

SINGLE-CAM

The screen displays a single baby unit in full screen.

PATROL

A single cam view that transitions to a different baby unit every 10 seconds.

SPLIT-VIEW

The screen displays all baby units.

In SINGLE-CAM or PATROL mode:

- Press **VIEW** to view the next baby unit.

In SPLIT-VIEW mode:

- Press **▲** or **▼** to select a baby unit.
- Press **▲** or **▼** key to view the selected baby unit temporarily in **SINGLE-CAM** mode. It returns to **SPLIT-VIEW** mode after 10 seconds.
- Press **PATROL** to enter **PATROL** mode.
- Press **SPLIT** to return to the mode (**SINGLE-CAM** or **PATROL**) used before entering **SPLIT-VIEW** mode.

Zoom

You can zoom in or out while viewing image from baby unit in **SINGLE-CAM** and **PATROL** mode.

- Press **▲** to zoom in.
- Press and hold **▲**, **▼**, **◀** or **▶** to move the zoomed image up/down, leftward or rightward correspondingly.
- Press **▲** again to zoom out.

Talk

You can use the **TALK** function of the parent unit to comfort your baby in **SINGLE-CAM** and **PATROL** mode.

- Press and hold **TALK** on the parent unit. The **TALK** light turns on.
- Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.
- Release the **TALK** key to stop the broadcast. The **TALK** light goes off.

- Press **SPLIT** to enter the **SPLIT-VIEW** mode.

Set alert tone

You can set the parent unit to beep when the parent unit operates in low battery condition.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Alert Tone**, then press **SELECT**.
- Press **SELECT** again to choose **Low Battery Tone**.

- Press **▼** or **▲** to choose **On** or **Off**, then press **SELECT** to confirm your selection.

No link alert

You can set the parent unit to beep when the link between the parent unit and the baby unit is lost.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Alert Tone**, then press **SELECT**.
- Press **▼** or **▲** to choose **No Link Alert**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**, then press **SELECT** to confirm your selection.

No link alert

You can set the parent unit to beep when the link between the parent unit and the baby unit is lost.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Minimum** or **Maximum**, then press **SELECT**.
- If you have more than one baby unit, press **▼** or **▲** to choose **ALL CAM** or **CAM #**, then press **SELECT**.
- Press **▼** or **▲** to choose the desired minimum or maximum temperature, then press **SELECT** to confirm your selection.

Turn on or off the vibration

You can turn on the vibration feature so that the parent unit vibrates when it receives any alert of **Low battery tone**. No link alert, **Sound alert** in **split-view** or **Temperature alert** after returning on the respective alert tones.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Vibration**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**.
- Press **SELECT** to confirm your selection.

Turn on or off the vibration

You can turn on the vibration feature so that the parent unit vibrates when it receives any alert of **Low battery tone**. No link alert, **Sound alert** in **split-view** or **Temperature alert** after returning on the respective alert tones.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Vibration**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**.
- Press **SELECT** to confirm your selection.

Temperature format

You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C).

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Fahrenheit** or **Celsius**, then press **SELECT** to confirm your selection.

Turn on or off the vibration

You can turn on the vibration feature so that the parent unit vibrates when it receives any alert of **Low battery tone**. No link alert, **Sound alert** in **split-view** or **Temperature alert** after returning on the respective alert tones.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Vibration**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**.
- Press **SELECT** to confirm your selection.

Temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Alert Tone**, then press **SELECT**.
- Press **▼** or **▲** to choose **Sound alert** in **split-view**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**, then press **SELECT** to confirm your selection.

Zoom

You can zoom in or out while viewing image from baby unit in **SINGLE-CAM** and **PATROL** mode.

- Press **▲** to zoom in.
- Press and hold **▲**, **▼**, **◀** or **▶** to move the zoomed image up/down, leftward or rightward correspondingly.
- Press **▲** again to zoom out.

Talk

You can use the **TALK** function of the parent unit to comfort your baby in **SINGLE-CAM** and **PATROL** mode.

- Press and hold **TALK** on the parent unit. The **TALK** light turns on.
- Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.
- Release the **TALK** key to stop the broadcast. The **TALK** light goes off.

Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is outside of the preset temperature range, the parent unit will display alert message.

Set temperature range

You can set the desired room temperature alert range. The minimum temperature can be set between 52°F (11°C) and 69°F (20°C).

The maximum temperature can be set between 70°F (21°C) and 86°F (30°C).

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Temperature**, then press **SELECT**.
- Press **▼** or **▲** to choose **Minimum** or **Maximum**, then press **SELECT**.
- If you have more than one baby unit, press **▼** or **▲** to choose **ALL CAM** or **CAM #**, then press **SELECT**.
- Press **▼** or **▲** to choose the desired minimum or maximum temperature, then press **SELECT** to confirm your selection.

Turn on or off the vibration

You can turn on the vibration feature so that the parent unit vibrates when it receives any alert of **Low battery tone**. No link alert, **Sound alert** in **split-view** or **Temperature alert** after returning on the respective alert tones.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Vibration**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**.
- Press **SELECT** to confirm your selection.

Temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Alert Tone**, then press **SELECT**.
- Press **▼** or **▲** to choose **Sound alert** in **split-view**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**, then press **SELECT** to confirm your selection.

Zoom

You can zoom in or out while viewing image from baby unit in **SINGLE-CAM** and **PATROL** mode.

- Press **▲** to zoom in.
- Press and hold **▲**, **▼**, **◀** or **▶** to move the zoomed image up/down, leftward or rightward correspondingly.
- Press **▲** again to zoom out.

Talk

You can use the **TALK** function of the parent unit to comfort your baby in **SINGLE-CAM** and **PATROL** mode.

- Press and hold **TALK** on the parent unit. The **TALK** light turns on.
- Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.
- Release the **TALK** key to stop the broadcast. The **TALK** light goes off.

Temperature format

You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C).

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Fahrenheit** or **Celsius**, then press **SELECT**.
- Press **▼** or **▲** to choose **Fahrenheit**, then press **SELECT**.
- Press **▼** or **▲** to choose **Fahrenheit** or **Celsius**, then press **SELECT** to confirm your selection.

Turn on or off the vibration

You can turn on the vibration feature so that the parent unit vibrates when it receives any alert of **Low battery tone**. No link alert, **Sound alert** in **split-view** or **Temperature alert** after returning on the respective alert tones.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Vibration**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**.
- Press **SELECT** to confirm your selection.

Temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.

- Press **MENU** when the parent unit is idle.
- Press **▼** or **▲** to choose **Alert Tone**, then press **SELECT**.
- Press **▼** or **▲** to choose **Sound alert** in **split-view**, then press **SELECT**.
- Press **▼** or **▲** to choose **On** or **Off**, then press **SELECT** to confirm your selection.

Zoom

You can zoom in or out while viewing image from baby unit in **SINGLE-CAM** and **PATROL** mode.

- Press **▲** to zoom in.
- Press and hold **▲**, **▼**, **◀** or **▶** to move the zoomed image up/down, leftward or rightward correspondingly.
- Press **▲** again to zoom out.

Talk

You can use the **TALK** function of the parent unit to comfort your baby in **SINGLE-CAM** and **PATROL** mode.

- Press and hold **TALK** on the parent unit. The **TALK** light turns on.
- Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.
- Release the **TALK** key to stop the broadcast. The **TALK** light goes off.

General product care

To keep this product working well and looking good, follow these guidelines:

- DO NOT immerse the parent and baby units in water.
- DO NOT immerse the parent unit and baby unit in water and do not clean them under the tap.
- DO NOT clean using alcohol.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

Frequently asked questions

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtech.com or contact 1 (800) 996-8511 for customer service.

Why does the baby monitor not respond normally?

Try the following (in the order listed) for common cause:

1. Disconnect the power to the baby units and the parent unit.
2. Remove the batteries in the parent unit. Then install the batteries again.
3. Wait a few seconds before connecting power back to the baby units and the parent unit.
4. Turn on the baby units and the parent unit.
5. Wait for the parent unit to synchronize with the baby units. Allow up to one minute for this to take place.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power-on lights of the parent unit and put the adapter in a wall socket?

Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold **Q** on when 1 power indicator light on the parent unit and switch on the parent unit and to establish connection with the baby unit.

Why don't the power