for support and the latest VTech product news.

DS5151-2 DS5151-3



# vtech

Abridged user's manual (Canada version)

### Congratulations





What's in the box

(C)

۵.

1 set for DS5151-2; 2 sets for DS5151-3



Telephone base overview

1 – Antenna 2 – LCD display 3 – IN USE light

On when the phone is in use, or when the answering system is answering an incoming call.
 On when a handset is being registered.

call.
Flashes when handsets are being deregistered.
Flashes when another telephone on the same line is in use.

n Press to scroll up while in menus and list While entering or modifying names or numbers, press to move the cursor to the right.

Press to review the directory when the base is not in use.

▼ CID

• Press to scroll down while in menus and lister

■ All Parks once to repeat the playing message.

During playback, press twice to play the previous message.

While in a menu, press to cancel an operation, back up to the previous menu of exit the menu display; or press and hold to go back to idle mode.

 Press and hold to erase the missed call indicator when the phone is not in use. Press to silence the base ringer

11 - 00:# Press repeatedly to display other dialing options when reviewing a caller ID log

Press to enter space during text edition

14 - ▲ VOLUME ▼

15 - Microphone 16 - Charging pole 17 - REDIAL/PAUSE - LCD display

Press and hold to insert a dialing pause

Press to page all handsets when the phone is not in use.

PTT/FLASH
 Press to initiate a one-to-one or one-to-group broadcast.

group proapeast.

Press and hold to broadcast to a group of system devices.

During a call, press to answer an incoming call when you receive a call waiting alert.

Press and hold to set or dial your voicemail

Press and hold to set and turn on quiet Press repeatedly to display other dialing options when reviewing a caller ID log entry

Potting an outside call, intercom ca message or announcement playba press to change the audio quality t suit your hearing.

 Press to delete the displayed entry wh reviewing the directory, caller ID log or redial list. Press to delete digits or characters when entering numbers or names

11 - TOBE \* Press to switch to tone dialing during a call if you have pulse service. While entering names, press to change the next letter to upper or lower case.

12 − ਾਾ0 s to enter space during text editing

While reviewing a caller ID log entry, press repeatedly to add or remove 1 in front of the telephone number before dialing or saving it in the directory.

Press and hold to set or dial your voicemail number.

While in a menu, press to cancel an operation, back up to the previous menu or exit the menu display; or press and hold to go back to idle mode. During a call, press to answer an incoming call when you receive a call waiting alert. During message playback, press to cal back the caller if the caller's number is

16 - 19054 · Press repeatedly to view the last

Press and hold to insert a dialing pause while dialing or entering numbers.

telephone base and its screen displays
\*\* Paging \*\*. All idle handsets ring and display
\*\* Paging \*\*

To stop paging:

Press \TALK €8, or any of the dialing keys on the cordless handset

Press PHANDSET LOCATOR MUTE, or CANCEL on the telephone base.

not press and hold HANDSET LOCATOR
more than four seconds. It may lead to be a feed to be a fee

Call waiting

Join a call in progress

When you are using the base speakerphone, press

Volume

• During a call, press ▲VOLUME/▼ on the handset or telephone base to adjust the listening volume.

During a call, press MUTE on the telephone base. The telephone base displays Muted for a few seconds and the MUTE light turns on until the mute function is turned off.

Press MUTE on the telephone base again to resume the conversation. The telephone bas displays Microphone ON briefly.

While on an outside call, you can transfer the call from the telephone base to a handset, or from a handset to another handset or the telephone base 1. During a call, press MENU.

To start paging:
Press P/HANDSET LOCATOR on the

Transfer a call

Press MENU again to choose Transfer, the screen shows TRANSFER TO:

all devices.

To answer the call on the destination device press \\_TAUK €0 or any dialing key on the handset, or press €0 or any dialing key on telephone base.

out a cash in progress and a cordless andset, or two cordless handsets at a time on a stade call.

When a handset or the telephone base is already on a call, press \\_TAX or \(^4\)\(^6\) on another handset to join the call.

Press \(^6\)\(^6\)\(^7\)

Delete a redial list entry

While the screen displays the desired press DELETE.

-URDuring a call, press MENU on the handset or telephone base. Press ♥ or ♣ to scroll to Intercom, then press SELECT.
Choose the device(s) you would like to transfer the call.

To answer at the telephone base:

Call transfer using intercom

Press €9 twice. The intercom call end:

Use the intercom feature to transfer an out to another cordless handset or the telephor 1. During a call, press INT on the handset

To automatically.

To end the intercom call without answering or canceling the incoming call, press 

(3), the telephone continues to ring.

the call.

Press 0 for the telephone base, 1:9 for handsets 1:9, TONEX followed by 0-2 for handsets 1:0-1, 2 if or a single headset speakerphone, if followed by 1 or 2 for headset/speakerphone 1 or 2, or TONEX followed by if for all devices.

re rundwing options:
You can transfer the call. Press SELECT twice to choose Transfer. The handset or telephone base shows Call transferred. I other device automatically connects to the outside call.

You can let the other device join you on the

You can directly broadcast messages from one device to the speakerphone of one or a group or devices. To begin two-way communication per PTT on the handset or the telephone base, and then select a device; or grees and hold PTT on handset or the telephone base to broadcast to agroup of devices.

## Handset display icons

The entry you are reviewing is new the caller ID log.

The handset microphone is off

wall switches.
The adapters are intended to be correctly oriented it a vertical or floor mount position. The prongs are no designed to hold the plug in place if it is plugged into acciding under the table or exhibit outsit



Connect the telephone base



Connect the charger



Mount the telephone base







If the battery icon is () () or (), then go to Before use section to set the date and time and set the answering system through voic guide.

## Install the battery as shown below.















If you place the handset in the telephone base or the charger without plugging in the battery, the screen displays No battery.

The screen is blank, or charge. The battery has no or very little charge. The incharger hand of flashes. be used.

Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to chapse ▲M or PM

After the setting for the date and time, the telephone base will display Voice guide to set up Ans sys?. Set answering system through voice

Abridged user's manual

Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press SFI FCT

Press SELECT to save.

the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

e enough charge to back up the telephone wer, the handset displays Not enough batt to

Check for dial tone Press \TALK on the handset or ◀3 on the telephone base. If you hear a dial tone, the installation is successful. If you do not hear a dial tone:

Operating range cordiess telephone operates with the num power allowed by the Federal num power allowed by the Federal the power allowed by the Federal the telephone base can communicate the power of the telephone base and handset, about the superal power bear office. the weather, and the layout of your home or office. When the handset is cut of range, the handset displays Out of range OR No pwr at base. If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press. YALK. Move closer to the telephone base, then press \TALK to answer the call.

Press ▼ or ▲ until the screen displays the desired feature menu.

Press SELECT to enter that menu.

To return to the previous menu, press OFF on the handset or CANCEL on the telephone base.

To return to idle mode, press and hold OFF or the handset or CANCEL on the telephone have

# During a call, press TONEX.

. Press MENU when the handset or the

Press ▼ or ▲ to scroll to Settings, then press SELECT. SELECT.

Press SELECT again to select LCD language.

Press ▼ or ▲ to select English, Français or Español, then press SELECT twice to save your setting. You hear a confirmation tone.

**⊘**NOTE If you accidentally change the LCD language to French or Spanish, you can reset it to English easily by pressing MENU then entering 364s.

Set date and time orrectly; otherwise the answering system does nounce the correct day of the week for your ed messages time stamp.

 Press MENU when the handset or the telephone bare is not in use. Press ▼ or ▲ to scroll to Set date/time, then press SELECT. Use the dialing keys (0-9) to enter the month (MM), date (DD) and year (YY). Then press SELECT

# Use the dialing keys (0-9) to enter the hour (HH) and minute (MM). Then press ▼ or ▲ to choose AM or PM

Voice language Voice language

You can select the voice language (English or French) to be used for the voice prompts in the answering system and caller 10 announce.

1. Press MENU on the handset or the telephone base when the phone is not in use.

2. Press ▼ or ▲ to scroll to Settings, then press SFI FCT. Press ▼ or ▲ to scroll to Voice language, then press SFLECT

press SELECT.

4. Press ♥ or ♠ to select Answering sys or Caller ID anne, then press SELECT.

5. Press ♥ or ♠ to select English or Français.

6. Press SELECT to save and you hear a confirmation tone.

Press ■3 or any of the dialing keys on the

Press ▼ A or REDIAL repeatedly until the

one is not in use.

-ORPress MENU on the telephone base when it is not in use. Press **Y** or **A** to scroll to Intercom, then press **SELECT**.

Choose the device(s) you would like to transfer the call.

Push-to-talk (PTT)

Add a directory entry

Use the dialing keys to enter the number.

Press SELECT to move on to enter the name . Use the dialing keys to enter the name. Additional key presses show other characters

Entries are sorted alphabetically 1. Press <sup>®</sup>O on the cordless handset or **ADIR** on the telephone base when it is not in use.

2. Press **▼** or **A** to browse through the directory, or use the dialing keys to start a name search.







Press SELECT on the telephone base to start the voice guide for the answering system setup. You hear the voice prompt "Heliof This voice guide will assist you with the basic setup of your answering system."

Set up your answering system by inputting the designated numbers as instructed in the voice

Before use

Set date and time

5 - ►/■ /PLAY/STOP

8 - € SPEAKER

7 - MUTE/DELETE

Press to delete are perpending announcement.

Press to delete the displayed entry while reviewing the directory, caller ID log, redial list or call block list. Press to delete digits or characters when entering numbers or names. Press twice to delete all old messages when the phone is not in use.

10 - CANCEL

Temporary tone dialing

signals. It automatically returns to pulse dialing mode after you end the call.







iset control key na

FOI

Press to show the menu

While in a menu, press to select an item, or save an entry or setting.

Press and hold to broadcast to a group of

Press and hold to erase the missed call indicator when the phone is not in use.

Answer a call

• Press STALK, ¶0 or any of the dialing keys or

Press OFF on the handset or place the handset in the telephone base or handset charger.

Handset speakerphone During a call, press 48 on the handset to switch between the handset speakerphone and the handset semicon

Mute
The mute function allows you to hear the other
party but the other party cannot hear you.

D. During a call, pross MUTE on the handset. The
handset displays Muted for a few seconds, and
the MUTE loon displays on the handset until the
mute function is turned oil.

Press MUTE on the handset again to resume
the convetsation. The handset displays
Microphone ON boofly.

# Redial list

Review and dial a redial list entry

Press to scroll up while in menus and lists.
While entering or modifying names or numbers, press to move the cursor to the right.
Press to review the directory when the phone is not in use.

Press to increase the listening volume when on a call, or to increase the mess playbank volume

VOLUME/VCID

Press to scroll down while in menus and lists.

While entering or modifying names or numbers, press to move the cursor to the

Press to view the caller ID log when the

Press to decrease the listening volume when on a call, or to decrease the message playback volume.

On when the handset is charging.

18 - CHARGE light

-OR-Press €) on the telephone base to dial.

JR-Press ♥3 on the telephone base to join the call. Press ♥3 on the telephone base to exit the call. The call continues until both devices hang up. Use the intercom feature for conversations between two of your devices.

1. Press INT on the cordless handset when the phone is not in use. Call waiting if you subscribe to call waiting service from your telephone service provider, you hear an alert tone when there is an incoming call while you are already or a call. Press FLASH on the handset or telephone base to put your current call on hold and take

the call.

Press 0 for the telephone base, 1:8 for handsets 1:9. TONEK followed by 0:2 for handsets 10:12, # for a single headset/ speakerphone, # followed by 1 or 2 for headset/speakerphone 1 or 2, or TONEX followed by # for all devices.

To end the intercon call on either handset, on party presses OFF, or places the handset back in the telephone base or handset charge -OR-To end the intercom call at the telephone base press CANCEL or ◀3. Answer an incoming call during an intercom call

If you receive an incoming outside call during an intercom call, you will hear an alert tone.

Telephone base display icons The telephone base ringer is off.  $\overline{\mathbf{x}}$ NFW The entry you are reviewing is new in the caller ID log.

e Q+Q+@

ANS ON

ထ

NEW

MUTE

1/13

To answer on a cordless handset:

To answer the call, press \times TALK The intercom call ends automatically.

To end the intercom call without answering or canceling the incoming call, press \( \times \) OFF. The telephone continues to length


The directory can store up to 50 entries, which are shared by all handsets and the telephone base. Each entry may consist of a telephone number with up to 30 digits and a name with up to 15 characters.

Enter the number when the phone is not in use Press MENU, then go to Step 3. OR-Press MENU when the phone is not in use then press ♥ or ▲ to scroll to Directory, then press SELECT. Press ♥ or ▲ to scroll to Add contact, thet press SELECT.

Copy a number from the redial list by pressing REDIAL and then press V. A or REDIAL repeatedly to find the desired number. Press SELECT to copy the number.

5. Press SELECT to save. While entering names and numbers, you can

> Press 0 to add a space (for entering names Press TONEX to change the next letter to uppe or lower care.

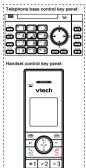

9-14 30-5 Mei 6 100-7 10-8 90-9 100-X 000-0 000-# 40 Milk 0000

Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional Fees may apply.

When you received a voicemail, the handset a the telephone base display as and New voice for retrieve, you typically as and an access numb provided by your telephone service provider, then enter a security code. Contact your telep service provider for instructions on how to com the voicemail settings and listen to messages.

Set your voicemail number

3. Press SELECT to save

Set your voiceman number
You can save your access runwher on each hands
and the telephone base for easy access to your
voicemal. After you saved the voicemal number,
you can gress and hold \$61 to retrieve voicemal.

1. Press and hold \$61 to the handset or the
telephone base when it is not in use.

2. Use the dailing keys to enter voicemal
access number provided by your telephone
services gree (up to \$0 digs) when prompt

Turn off the new voicemail indicator

NOTE
This feature turns off the indicators only, it does not delete your universal messages.

. Press MENU on the handset or the telephone

base when it is not in use.

Scroll to Settings, then press SELECT.

Scroll to Cir voicemail, then press SELECT.

Press SELECT again to confirm.

Expand your telephone system

You can add new handsets (DS5101), cordless headsets (ISS200) or speakerphones (MA3222 or ATS T LB40133) to your telephone system has cossories are sold separately. Your telephone base supports a maximum of 12 devices. For more details, refer to the user's manual that comes with your new device.

Retrieve voicemail

**Ø**NOTE

### Dial a directory entry

Edit a directory entry

. Use the dialing keys to edit the number, the press SELECT

 Use the dialing keys to edit the name, then press SELECT Delete a directory entry

## When the desired entry appears, press DELETE. When the screen displays Delete contact?, press SELECT. Speed dial

You can copy up to nine directory entries into the speed dial locations (0 and 2-9) so that you can dial these numbers more quickly.

Assign a speed dial number AFNU on the handset or the telephone

...
3. Press ♥ or ▲ to scroll to Speed dial, then press
SELECT Press ▼. ▲ or a dialing key (0 or 2-9) to choose the desired speed dial location.

i. Press SELECT. The screen displays Copy from Directory

Press ▼ or ▲ to scroll to desired entry, then press SELECT.

Dial a speed dial number

When the phone is not in use, press and hold a dialing key (0 or 2-9) on the handset or telephone base to dial the number stored in the corresponding speed dial location.

Delete a speed dial number

1. Press MENU on the handset or the telephone
base when it is not in use. 2. Press ▼ or ▲ to scroll to Directory, then press

3. Press ♥ or ▲ to scroll to Speed dial, then press SELECT.

Press ▼. ▲ or a dialing key (0 or 2-9) to choose the desired speed dial location, then press SELECT to show the speed dial entry.

Press SELECT again. Then press ♥ or ▲ to scroll to Clear SD and then press SELECT.

Press DELETE on the handset or telephone

ECO mode

General product care

Avoid rough treatment Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Taking care of your telephone
Your cordless telephone contains sophisticate
electronic parts, so it must be treated with care

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

four telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a dry non-abrasive cloth. Do not use tampened cloth or cleaning solvents of any kind.

Below are the questions most frequently asked

Make sure the telephone does not work at all.

Make sure the telephone does not work at all.

Make sure the telephone does not work at all and charged correctly. For optimum daily performance, return the handset to the telephone base after use.

near a sink, bathfub or shower. Electrical storms can sometimes cause p surges harmful to electronic equipment. I own safety, take caution when using elec appliances during storms.

Cleaning your telephone

When the desired entry appears:

Press \TALK or €8 on the handset, or press

\$3 on the telephone base

The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number an

Caller ID

view a caller ID log entry

. Press VCID on the cordless handset or the telephone base when the phone is not in use Press ▼ or ▲ to browse through the caller ID log

When there are calls that have not been rev in the caller ID log, the screens display XX Missed calls.

XX Missed caller a caller ID log entry marked MEW on the handest or on the telephone base, the missed calls message goos away.

By our don't want to review the missed calls on the second calls message goos away.

By our don't want to review the missed calls on the caller on the cal

When the desired entry displays, press ►TALK or ◀0 on the handset to dial.

Save a caller ID log entry to the directory Save a caller ID log entry to the director, I. When the desired caller ID log entry displays, press SELECT. If you are using the telephone base, you need to press SELECT again to select Directory. 2. Use the dailing keys to modify the number, if necessary. Then press SELECT.

Use the dialing keys to modify the name, if necessary. Then press SELECT.

Delete caller ID log entries When the desired caller ID log entry displays, press DELETE.

elete all caller ID log entries:

 Press MENU on the handset or the telephone base when the phone is not in use.
 Scroll to Caller ID log and then press SELECT.
 Scroll to Del all calls then press SELECT twice. 

existing telephone jacks i your home may no longe work. Contact your servic provider for solutions.

The handset is deregistered from the telephone base.

Place the handset in the telephone base to registe

hear a beep when registration process

the registration process completes. This process takes about 60 seconds

Make sure the answering system is on. When the answering system is on, ANS ON should display of the handest and the

the handset and the **6/ANS ON/OFF** light of the telephone base shide on.

be on. "When the answering machine memory is ful, it does not record new messages are deleted. If you subscribe to voicemail service, change the number of rings so that your answering system answers before answers. To determine how many rings activate your voicemail service, contage when the number of rings so many rings activate your voicemail service. To determine how your telephone service when the number of rings are not record to the number of rings and record to the number of rings and record to the number of rings and record number of rings and record number of rings and rings are number of rings and rings are number of rings and rings and rings are number of rings and rings are number of rings and rings are number of rings and rings and rings are number of rings are number of rings and rings are number of rings are number of rings and rings are number of r

The answering system does not

This feature is only available in the telephone has

Add a call block entry

8 Press SELECT to save

Review call block list

Edit a call block entry

I accidentally set my LCD language to Spanish or French, and I

change it back to English.

Press SELECT to choose Block list

When the desired entry displays on the telephone base, press SELECT.

Use the dialing keys to edit the number, and then press SELECT.

Use the dialing keys to edit the name, and then press SELECT to save.

Save a caller ID log entry to call block list

When the desired caller ID log entry displays of the telephone base, press SELECT.

the telephone base, press SELECT:

2. Scroll to Call block, and then press SELECT.

3. Use the dialing keys to edit the number, and then press SELECT.

Use the dialing keys to edit the name, and then press SELECT to save.

If a caller leaves a very long message, part of it may be lost when the answering system disconnects the call after the preset recording tim

If the memory on the answering system becomes full during a message, the answering system stops recording and disconnects the call. While the handset is not in use, press MENU and the nerter 364# to chang the handset LCD languag back to English.

Important safety instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the ris of fire, electric shock and injury, including the following:

Head and understand all instructions.
Follow all warnings and instructions marked on the

clearing, to not the regars or selection and the control of the co

talephone base and handset are provided for ventilation. To protect them thom overhasing, these openings must not be blocked by placing the product on a soft surface such as a bea, color or rug. This product should never be placed near or over a nadator or hear negister. This product should not be placed in any area where proper ventilation is not provided.

4. Press SELECT to choose Review.

Block unknown calls Press MENU on the telephone base when it is

Call block

not in use. Scroll to Call block and then press SELECT. Scroll to choose Calls w/o num, and then press SELECT. Scroll to choose Not block or Block, and then press SELECT to save

ess SELECT to choose Block list

by default, the mute first ring feature is set to Off.

1. Pross MENUO on the telephone base when it is not in use.

2. Press 74649 on the telephone base.

3. Press ¥ or A to choose On to mute the first ring. or Off to keep the first ring.

4. Press SELECT to save. **⊘**NOTE

If you have muted the first ring, you will hear one ring less before the answering system and voicem answer the incoming calls. Soroll to Call block and then proce SELECT

Sound settings

Delete a call block entry

Mute first ring

Scroll to choose Add new entry, and then press SELECT. Key tone by control of the key tone on or off for each andset and the telephone base.

Press MENU on the handset or the telephone base when it is not in use. Use the dialing keys to enter the number (up to 30 digits). Drage SEI ECT to move on to enter the name Press SELECT to move on to enter the name.
Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.

base when it is not in use.

Scroll to Settings and then press SELECT.

Scroll to choose Key tone, then press SELECT.

Press ♥ or ▲ to select the degined volume or Off, then press SELECT to save.

Ringer tone You can choose from different ringer tones for each handset and the telephone base.

1. Press MENU on the handset or the telephone base when it is not in use. Scroll to Call block and then press SELECT

 Scroll to Ringers and then press SELECT.
 Scroll to choose Ringer tone, then press SELECT. Press ▼ or ▲ to sample each ringer tone, then press SELECT to save.

If you turn off the ringer volume on a cordless handset, you will not hear ringer tone samples

Telephone base ringer volume

Telephone base ringer volume Press \$VOLME/A on the telephone base to adjust the ringer volume when the telephone base is not in use. When you set the ringer volume to Off, the base ringer is off. The telephone base screen displays Caller ID won't be announced briefly, and byte.

Do not allow anything to rest on the power cord.
Do not install this product where the cord may be

wasked on.

Never push objects of any kind into this product through the slots in the telephone base or handset because they may fouch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

on the product.

To reduce the first of electric shock, do not disassemble this product, but take it to an authorized sentrole facility. Opening or removing parts of the takephone base or hardset other parts of the takephone base or hardset offer the parts of the takephone base or hardset offer parts of the takephone base or hardset offer removed the subsequence of the takephone base of the first parts incorrect reassembling can cause electric shock when the product is subsequently used.

Do not overload wall outsites and extension cords upting this product from the wall outsit and refer

When the power supply cord or plug is damaged or fraved

If the product has been exposed to rain or water

If me product has been exposed to rain or water. If the product loss not operate normally by following the operating instructions. Adjust only following the operating instructions. Adjust only those controls that are covered by the operation controls may result in damage and often requires excessive work by an authorized technician to restore the product to normal operation. If the product has been dispead and the telephone base and/or handset has been damaged.

If the product exhibits a distinct change in nerformance

or frayed.
If liquid has been spilled onto the product

Handset ringer volume

You can adjust the handset ringer volume level, or turn the ringer off.

1. Press MENU on the handset or the telephone base when it is not in use.

roll to Rinners and then press SFI FCT twice

Temporary ringer silencing

When the telephone is ringers, you can temporarly slence the ringer without disconnecting the call. The next call rings normally at the preset volume. To allence the handeet ringer:

To allence the handeet ringer:

To allence the call of the handeet and it the handeet and it the handeet and it the handeet and it displays Ringer mutted and Xa.

Quiet mode

You can turn on quiet mode for a period of time (1-12 hours). During this period, all tones (except paging tone) and call screening are muted. paging used) and call screening are muted.

To set and turn the quiet mode on:

1. Press and hold QUIET# on the handset or the telephone base when it is not in use.

Use the dialing keys to enter the desired duration (1-12), then press SELECT.

To turn the quiet mode off:

While the quiet mode is on, press and hold QUIET#.

Equalizer

The equalizer enables you to change the quality of the audo to best suit your hearing.

While on a call or intercom call, or listening to a message or uncouncement.

Press: EQE on the heardset to select the equalizer setting Troble 1, Troble 2, Bass or Natural (the default setting). The cut of the setting is shown on the handset screen for two

R-Press MENU on the telephone base. Press ▼ or ▲ to scroll to Equalizer, then press SELECT.

press SELECT.

3. Press ▼ or ▲ to select the equalizer setting Treble 1, Treble 2, Bass or Natural (the default setting), and then press SELECT to save. You hear a confirmation tone.

SAVE THESE INSTRUCTIONS

Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.

Terruccions.

Do not open or mufilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if outsilized.

Exercise care in handling batteries in order not to create a short circuit with conductive materials.

Precautions for users of implanted cardiac

Cardiac pacemakers (applies only to digital cordless elephones):

About the built-in answering

e recording, your telephone has a vering system, and it also supports ervice offered by your telephone

You messages will not be deleted automatically. You have to delete your message manually. When you received new messages, the handset and the telephone base both display XX New messages, and the >/#PLAY/STOP When you telephone base display and Press
Press
P/BPLAY/STOP
on the telephone
base; or
Access remotely
with an access
code.

### Set your built-in answering system

The answering system can record and store up to 99 messages. Each message can be up to three minutes in length. The total storage capacity for the announcement, messages and memos is approximately 22 minutes. The actual

Delete your announcement

1. Press MENU on the handset or the telephone base when the phone is not in use.

2. Scroll to Answering sys, then press SELECT twice

Telephone base control key pane

in differences between them are:

) — | <del>-</del> Turn the answering system on or off

nswer and record messages.

Press **G**/ANS ON/OFF on the telephone base to turn the built-in answering system on or off.

Press MENU on the handset or the telephone

pase when it is not in use.

Scroll to Answering sys, then press SELECT.
Scroll to Answer ON/OFF, then press SELECT.
Press Y or A to choose On or Off, then press SELECT.

Default announcement

lefault announcement he telephone is preset with a greeting that nowers calls with, "Hello, Please leave a sessage after the tone." You can use this preset nnouncement, or replace it with your own. Record your own announcement

. Press MENU on the handset or the telephone Scroll to Answering sys. then press SELECT

twice.

Press SELECT again to select Record anno.
the system announces, "Record after the tone.

Press 5 when you are done." After the tone,
speak towards the microphone. Press 5 when done.

Play your announcement

1. Press MENU on the handset or the telephone base when the phone is not in use.

2. Scroll to Answering sys. then press SELECT twice.

Scroll to Play anno, then press SELECT.

FCC, ACTA and IC regulations

### FCC Part 15

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

RNING: Changes or modifications to this equipment expressly approved by the party responsible for pliance could void the user's authority to operate the imment.

pment.

device complies with Part 15 of the FCC rules.
ration is subject to the following two conditions: (1)

Consult the dealer or an experienced radio/TV technician for help.

The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger. and the battery charger.

Nickel-metal hydride rechargeable batteries:
Dispose of these batteries in a safe manner. Do burn or puncture the battery. Like other batteries this type, if burned or punctured, they could relect

prevent such interference, do not place the telephone base of the cortises belephone near or not pol TV or VCR. If interference is experienced, moving the cordises telephone farther away from the TV or VCR other reduces or eliminates the interference.

Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducing material such as imple, bracelets and keys.

Charge the battery provided with this product only in accordance with the instructions and limitations

Should keep wireless telephones at least six inches Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON. 

Should use the wireless telephone at the ear opposite the pacemaker

• The product enriches a control change in Anode surject pashines do not have controlled during an electrical storm. There is a remoter field of leave the choice from Egistration to the Development of the Egistration to the Development of Egistration to the cordisas telephone conversations as being as private as those on corridad telephone. Electrical power: The telephone base of this cordise telephone must be connected to a working electrical curiet. The electrical outlet should not be controlled to a wall switch. Calls cannot be made from the cordises handset if the telephone base is unplugged, switched off or if the electrical power is interrupted. Only put the handset of your telephone next to your ear when it is in normal talk mode.

Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to telephones and VCRs. To minimize a

VTech's participation in RBRC® makes it easy for you drop of the spent battery at local retaillers participating in the RBRC® program or at authorized VTech product service centres. Please call 1, (800) 8 BATTERY\* for information on N-MH battery recycling and disposal bane/septicipies in your area. VTech's involvement in this program is part of its commitment to protecting our performment and represented matter all records.

RBRC<sup>o</sup> and 1 (800) 8 BATTERY<sup>o</sup> are registered trademarks of the Rechargeable Battery Recycling

ensured when using this ballephone.

To ensure safely object, the CDL is exceptibled criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystande according to the infernded usage of the product. This product has the contract of the This Class B digital apparatus compiles with Canadian

Operation is subject to the following two conditions: (1 this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

CAN ICES-3 (B)/NMB-3(B). FCC Part 68 and ACTA

contains, among other things, a product identifier in the ormat US:AAAEQ#FTXXXX. This identifier must be provided to your telephone convice. provided to your telephone service provider upon request. The plug and jack used to connect this equipment to premises witing and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A complaint telephone cord and

base when the phone is not in use.

Press ♥ or ▲ to scroll to Answering sys, then
press SELECT.

Press ♥ or ▲ to scroll to Ans sys setup, then
press SELECT. Press ▼ or ▲ to scroll to Msg alert tone, then

ce. roll to Play anno, then press SELECT.

but number of nings but can set the answering system to answer an coming call after two, three, four, five or six rings reflect toll saver. If you choose toll saver, the uswering system answers a call after two rings if su have new messages, or after four rings when ere are no new messages.

Press MENU on the handset or the telephone base when the phone is not in use

Scroll to # of rings, then press SELECT

If you have muted the first ring, you will hear one ring less before the answering system answers the

can set the recording time allowed for each

base when the phone is not in use. Scroll to Answering sys, then press SELECT. Scroll to Ans sys setup, then press SELECT. Scroll to Recording time, then press SELECT. Scroll to Recording time, then press SELECT. Press  $\overline{Y}$  or  $\underline{A}$  to select 3 minutes, 2 minutes or 1 minute, and then press SELECT.

Turn the message alert tone on or off

When the message alert tone is set to on, and there is at least one new message, the telephot base beeps every 10 seconds. The message al tone is preset to off.

Press MENU on the handset or the telephone

There is no audible alert at the handset

Press ♥ or ▲ to select 2, 3, 4, 5, 6 or Toll saver, and then press SELECT.

ase when the phone is not in use. croll to Answering sys, then press SELECT. croll to Ans sys setup, then press SELECT.

While the announcement is playing, press
 DELETE to delete your recorded announcement

When your announcement is deleted, calls are answered with the default announcement

Set number of rings

Set recording time

and 7th characters following the US: in the product identifier (e.g., if ## is 03, the REN is 0.3). In most, but not all areas: the sum of all RENs should be five (5.0) or

press SELECT. Press ▼ or ▲ to select On or Off.

Press MYCLUME.

Press MYSKIP to skip to the next message.

Press MYREPEAT to repeat the message.

Press MYREPEAT twice to hear the previous

equipment is 1.0. The REN Indicates the maximum number of devices allowed to be connected to a telephone interface. The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not acceed they. his product meets the applicable Innovation, Science nd Economic Development Canada technical

Voice guide

This feature is an alternative way for you to do the basic setup of the answering system. You can folion the voice guide to record your own announcement, set the number of rings and the message alert tone

not in use.

Scroll to Answering sys, then press SELECT.

Scroll to Voice guide, then press SELECT.

You hear the voice prompt "Hello! This voice guide will assist you with the basic setup of your answering system."

Set up your answering system by inputting designated numbers as instructed in the voice guide.

Use your built-in answering system

New message indication
When there are new answering system messag
the handset and the telephone base display XX
New messages, and the PMPLAY/STOP light
the telephone base flashes.

3-Press MENU when the phone is not in use. Press SELECT to select Play messages.

Press A/VOLUME/V to adjust the message

If there are new and old messages, scroll to select Play new msgs or Play old msgs, and then press SELECT or ▶/■PLAY/STOP.

If the message alert tone is turned on, the telephone base beeps every 10 seconds on there are messages that have not been re

Message playback

Options during playback:

Limited warranty

What does this limited warranty cover?
The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided in the sales

provider. This equipment must not be used with Party Linea. If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installer. installar.

If this equipment is mailfunctioning, it must be unplugged from the modular jack until the problem has been cornected. Rejeats to this telephone equipment can only be made by the manufacturer or its authorized agents, under the Limited warranty.

If this equipment is causing harm to the steephone network may be made on the content of the Limited warranty.

the limited warranty period ("Materially Defective Uniform the Intellection and Intellection and Intellection During the Intellection and Intellection and Intellection service representative will repair or replace at VTecht's replacement parts. If we choose to replace the Product of will be under the Intellection and Intellection and Intellection will be under the Intellection and Intellection modules, or equipment. Repair or replacement of the Product, at VTecht point, is your exclusive emissiple, you in working condition. You all bould expect the repair or replacement to take appointment to the Intellection you in working condition. You should expect the repair or replacement to take appointments of the Intellection. low long is the limited warran

The second of th The limited warranty period for the Product extends or ONE (1) YEAR from the date of purchase. If VTech Perform such activities in off-peak hours, such as early noming or late evening.

industry Canada Phis device complies with Industry Canada licence-exempt RSS standard(s).

service provider is required to notify you before interrupting service. It alwance notices is not practical, you will be notified as soon as possible. You will be given the opportunity to connect the problem and the talephone service provider is required to inform you of your right to till a compatible with the PCC. Your right to till a compatible with the PCC. You resightness service provider may make changes in its stacilises, equipment, operation, or procodures that could affect the proper functioning of this product. The sillephone service provider is equal to notify you it such changes are

planned.
If this product is equipped with a corded or cordless handset, it is hearing aid compatible.

empr RSS standard(s).

eration is subject to the following two conditions: (1) device may not cause harmful interference, and this device must accept any interference received, using interference that may cause undesired ration. operation.

Privacy of communications may not be ensured when using this telephone.

The term "IC" before the certification/registration runder only signifies that the Industry Clandat sechrical specifications were mist.

The Brigger Equivalence Number (PEN) for this terminal

authorized service representative of VTech;

3. Product to the extent that the problem experienced is caused by signal conditions, natwork reliability, or cable or antenna systems;

4. Product to the extent that the problem is caused by use with non-VTech accessories;

i longer. What is not covered by this limited warranty?

This limited warranty does not cover:

Product that has been subjected to missue, accident,
Product that has been subjected to missue, accident,
installation, abnormal operation or handling, neglect,
insundation, fire, water or other liquid intrusion; or
Product that has been dramaged due to repair,
alloration or modification by anyone other than an
authorized service representative of VTech:

6. Press SELECT to save and you hear a Press DELETE to delete the playing message.
 The system advances to the next message.
 Press ►/M/PLAY/STOP to stop the playback.

The anowering system must be turned on for the message alart tone to be functional. Press any key on the telephone base (except S/HANDSET LOCATOR) to temporarily silend the message alart tone. To play messages with a handset:

1. Press MENU when the phone is not in use.

2. Press SELECT to select Play messages.

If there are new and old messages, select Play new msgs or Play old and then press SELECT

ayback volume. ress EQE to adjust the message playback.

Delete all old messages

Remote access

Delete all oid messages
You can only delete old (reviewed) message
You cannot delete new messages until you i
them. You cannot retrieve deleted message

o delete all messages with the telephone

ress DELETE twice when in idle mode.

To delete all old messages with a handset:

Press MENU when the phone is not in us

2. Scroll to Delete all old, and then press
SELECT.
SET IN THE SELECT

A two-digit security code is required to access the answering system remotely from any touch-tone telephone. The preset code is 19. You can use this preset code, or set your own.

1. Dial your telephone number from any touch-tone telephone.

Command Description

3 Delete the current message (du playback).

Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible;

Product returned without a valid proof of purchase (see item 2 below); or

Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit. ow do you get warranty service?

Non- on you get warrantly service?

To obtain warrantly service? In Canada, please visit our website at www.vebcharanda.com or call (800) 287-737.

NOTE: Before calling for service, please review the (800) 287-737.

NOTE: Before calling for service, please review the call controls and statutures may avery our as service call.

Except as provided by applicable law, you assume the (sk) of loss of damage during transfar and transportation and are responsible for delivery or handling changes (accept the call the ca

and are segontable for delivery or handling chappes incurred in the stangen of the Productify to the service incurred in the stangen of the Productify to the service incurred in the stangen of the Productify the Stangen of the Stan

What must you return with the Product to get warranty service?

and "

Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the right of numbers or receipt; and

Provide your name, complete and correct mailing address, and telephone number.

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other

written or oral communications related to this Product.

VTech provides no other warranties for this Product.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or remains to provide the control of the

2 Play only new messages.

33 Delete all old messages

4 Repeat the current (during playback).

When the system plays your an enter the two-digit security code

enter the two-digit security cool.
 Enter one of the following remote of

Press 6 to skip to the next message

 Press MENU on the handset or the telephone have when the phone is not in use. Press 4 to repeat the message. Press 4 twice to hear the previous message.

Press DELETE to delete the playing message.

The puttern advances to the past message.

Press 5 or FOFF to stop the playbac

base when the phone is not in use. Scroll to Answering sys. then press SELECT. Scroll to Ans sys setup, then press SELECT. Scroll to Remote code, then press SELECT. Press  $\nabla$  or  $\Delta$ , or us use the dialing keys (0-9) to enter a two-digit number.

4. Hang up or press 8 to end the call.

Set your remote access code

 Press DELETE on the handset or telephone
 Press Delete and delete a digit. Press SELECT to save and you hear a

5 Stop.

\*5 Hear a list of remote commands.

7 Record a new announcement.
8 End the call.
0 Turn the answering system on or off.

6 Skip to the next message (during playback).

You can set your own remote access code from 00 to 99.

Use the built-in answering syster and voicemail service

You can use your answering system and voicem service together by setting your answering syste to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact your telephone service.

provider.

If you are on a call, or if the answering system is busy recording a message and you receive another call, the second caller can leave a voicemail message.

voicemail message. Set your answering system to answer call sat least two rings carrier than your voicemail is se answer. For example, if your voicemail is sea answer. For example, if your voicemail answer answer after burnings. Some voicemail provide may program the delay before answering calls in seconds instead of rings. the is case, allow six seconds per ring when determining the appropriate self-in the case.

Technical specifications Frequency Crystal controlled PLL synthesize Handset: 1921.536-1928.448 MHz Telephone base: 1921.536-1928.448 MHz

> Handset: 2.4V Ni-MH battery Telephone base: 6V DC @ 600mA Charger: 6V DC @ 400mA

Directory: 50 memory locations; up to 30 digits and 15 characters Caller ID log: 50 memory locations; up to 24 digits and 15 characters

Specifications are subject to change without notice.
© 2016 for VTech Technologies Canada Ltd.
All rights reserved. 04/18. DS5151-X, CA, ACIB\_V1.0