


OVERVIEW - BABY UNIT

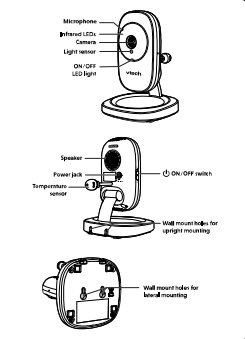

SOUND SENSITIVITY AND SOUND ACTIVATION

Adjust sound detection sensitivity

With sound sensitivity set, you can choose to have sounds from the baby unit fill the room, or to have sounds that exceed a certain level.

Sound level	Sound level	What you need to do
Low	High	Press the LOW or HIGH button on the remote control to adjust the sound level.
Medium	Low	Press the LOW button on the remote control to adjust the sound level.
High	Medium	Press the HIGH button on the remote control to adjust the sound level.

Sound activated screen

When the baby unit is on, the screen will turn off to save power. When the baby unit detects sound, the screen will turn on automatically. If you want to turn the screen on manually, press the **ON** button on the remote control.

NOTE

- If you are using the baby unit in a room with a lot of background noise, the screen may not turn on automatically.
- If you are using the baby unit in a room with a lot of background noise, the screen may not turn on automatically.

For details, please see Adjust the sound sensitivity of the baby unit in the user manual.

NIGHT VISION

The baby unit has infrared LEDs that allow you to see your baby clearly at night in a dark room. The baby unit will automatically turn on the night vision when the infrared LEDs are activated.

NOTE

- In order to see a clear image, you need to adjust the camera zoom in the night vision mode.
- When the infrared LEDs are activated, the camera zoom will be set to the normal position.

TIP

- Depending on the surrounding environment, the image may be blurry. In this case, you can adjust the camera zoom to get a clearer image.

DIM MODE

With dim mode present, only your camera and display will turn on. The camera and display will turn on automatically after 30 minutes of inactivity, in which time a standby signal is presented that is received from the baby unit.

NOTE

- If you do not want LCDs dim automatically, turn off the Dim Mode.

MOUNT THE BABY UNIT ON DRY WALL (OPTIONAL)

Items to purchase

- 2 screws
- 2 anchors

NOTE

- The type of screw and anchor you use depends on the material of the wall.

- Drill two holes in the wall. If you drill the holes into a stud, go to step 2.
- Press the holes into an object other than a stud. Insert the wall anchors into the holes. Tap gently on the end with a hammer until the wall anchors are flush with the wall.
- Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

NOTE

- Check for reception strength and camera angle before mounting.
- Use a specific screw for each type of wall. Refer to the user manual for details.

For VMS251-2 ONLY

Status check - Two baby units

If you are viewing baby unit 1, the POWER LED (at the top) will turn on. If you are viewing baby unit 2, the POWER LED (at the bottom) will turn on.

Change different views - Single CAM

In Single CAM or Patrol mode, press **VIEW** to switch between the range of baby unit 1 and 2.

Change different views - Patrol

Select **Patrol** in your monitoring mode to alternately view the image from baby unit 1 and 2 every 20 seconds.

Change different views - Split

Select **Split** in your monitoring mode to view the image from both baby units at once.