


Go to www.vtechphones.com to register your product for enhanced warranty support and latest Vtech product news.

VS112
VS112-2
VS112-3
VS112-4
VS112-17
VS112-27
VS112-37
VS112-47

DECT 6.0 Cordless Answering System with Smart Call Blocker

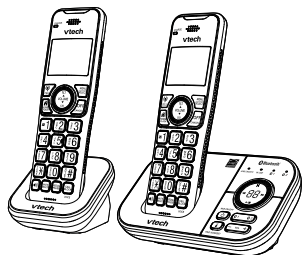

vtech Quick start guide

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth, not in a wet basement or shower.
- Do not use this product near water such as near a bath tub, wash bowl, kitchen sink, laundry tub or a swimming pool, not in a wet basement or shower.
- Do not place this product on an unstable table, shelf, stand or other unstable surface.
- Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
- Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa, rug. The product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is subsequently used.
- Do not overload wall outlets and extension cords.
- Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled onto the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally following the operating instructions.
 - If the product has been dropped or the power cord has been plugged into a power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- Only put the handset of your telephone next to your ear when it is in normal talk mode.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

18. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

CAUTION: Use only the batteries indicated in this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT24342/29342) for the handset. Do not dispose of batteries in a fire. They may explode.

20. Use only the adapter included with this product. Incorrect adapter polarity or voltage can seriously damage the product.

SAVE THESE INSTRUCTIONS

Battery

- CAUTION: Use Only Supplied Battery.
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers applies only to digital cordless telephones:

Wireless Technology Research, LLC (WTR), an independent research entity, led a multicenter clinical evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones.

ABOUT CORDLESS TELEPHONES

Privacy: The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.

Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.

Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.

Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm. Observe proper polarity between the battery and the battery charger.

Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

WHAT'S IN THE BOX

- Quick start guide
- Introducing Smart call blocker
- 2 sets for VS112-2
- 3 sets for VS112-3
- 4 sets for VS112-4
- 2 sets for VS112-27
- 3 sets for VS112-37
- 4 sets for VS112-47
- 1 set for VS112-2
- 2 sets for VS112-3
- 3 sets for VS112-4
- 1 set for VS112-27
- 2 sets for VS112-37
- 3 sets for VS112-47

CONNECT AND INSTALL

- Connect the telephone base**
If you subscribe to digital subscriber line (DSL) high-speed Internet service through your telephone line, make sure you connect a DSL filter (not included) to the telephone wall jack.
- Connect the charger**
Plug the power adapter into a wall outlet and the charging base into the power adapter.
- Charge the battery**
Place the handset on the charging base. The battery will be fully charged in 12 hours.
- Install the battery**
Remove the back cover of the handset and insert the battery. The battery will be fully charged in 12 hours.

SETUP

After you install your telephone or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time, and to configure the Smart call blocker and answering system through voice guide.

Date and time
Follow the steps below to set the date and time. For example, if the date is 25 December, 2019, and the time is 10:59 AM:

- Enter the date.
- Press SELECT.
- Enter the time.
- Press SELECT.

Voice guide for Smart call blocker
After setting the date and time, the handset will prompt if you want to set Smart call blocker. For more details, see **Use voice guide to set Smart call blocker** in the **Introducing Smart call blocker** leaflet.

Voice guide for answering system
After setting the Smart call blocker, the handset will display **Start voice guide to set up Answering system now?** This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

TECHNICAL SPECIFICATIONS

Frequency control: Crystal controlled PLL synthesizer

Transmit frequency: Handset: 1921.536-1928.448 MHz; Telephone base: 1921.536-1928.448 MHz

Channels: DECT channel: 5

Normal: Maximum power allowed by FCC and IC

Range: Actual operating range may vary according to environmental conditions and line of sight.

Power: Handset: 2.4 WCC, 444 x 2.2 NiMH battery requirement; Telephone base: 6W DC @ 400mA; Charger: 6W DC @ 400mA

Memory: Phonebook: 1000 memory locations; Caller ID log: 50 memory locations; up to 10 rings and 15 characters; Call block: 1000 entries

Interference: Interference limited with this logo has reduced noise and interference when used with most FCC equipped hearing aids and cochlear implants. The TIA1088 Compliant Logo is a trademark of the Telecommunications Industry Association. View under license.

ENERGY STAR: The ENERGY STAR program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect the environment. We are proud to make this product with the ENERGY STAR label indicating meets the latest energy efficiency guidelines.

DISCLAIMER AND LIMITATION OF LIABILITY
Vtech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of the user's manual. Vtech Communications, Inc. and its suppliers do not warrant, represent or make any claim for third parties that may arise through the use of this product.

Specifications are subject to change without notice.
© 2010 Vtech Communications, Inc.
All rights reserved. 09.20 VS112_X_055_V1.0

Document order number: 96-013068-010-100

BASIC OPERATION

- Make a home call**
Press **HOME FLASH** - OR - **CALL**
- Enter the phone number. - OR - Press any dialing keys
- Make a cell call**
Press **CELL**, then **SELECT** to select a device.
Enter the phone number. - OR - Press any dialing keys
- Answer a home call**
Press **HOME FLASH** - OR - **CALL**
- Answer a cell call**
Press **CELL** - OR - **CALL**
- End a home call**
Put the handset in the telephone base or charger. Press **OFF CANCEL** - OR - **CALL**
- End a cell call**
Put the handset in the telephone base or charger. Press **OFF CANCEL** - OR - **CALL**
- Volume**
Press **VOLUME UP/DOWN**

LCD LANGUAGE SETTING
If you accidentally set the LCD language to Spanish or French, press **MENU** and then enter ***364#** to change the handset LCD language back to English while the handset is not in use.

PHONEBOOK

Phonebook
The phonebook can store up to 1000 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a phonebook entry

- Enter the phone number.
- Press **MENU**.
- Press **SELECT**.
- Enter the name.
- Press **SELECT**.

Review phonebook entries

- Press **CALL**, then the number of entries displays.
- Press **UP/DOWN** to browse the entries.

Dial a phonebook entry
When your desired phonebook entry displays:

- Press **HOME FLASH** - OR - **CALL**

Delete a phonebook entry
When your desired phonebook entry displays:

- Press **DELETE**.
- Press **SELECT**.

CALLER ID

Caller ID
If you subscribe to caller ID service, information about each caller appears after the first or second ring. The caller ID log stores up to 50 entries. Each entry has up to 24 digits for the phone number and 15 characters for the name.

Review caller ID log entries

- Press **CID**.
- Press **UP/DOWN** to browse the entries.

Save a caller ID log entry to the phonebook

- Press **MENU**.
- Press **SELECT** to select **To Phonebook**.
- Edit the number if needed, then press **SELECT**.
- Edit the name if needed, then press **SELECT**.

Delete a caller ID log entry

- Press **HOME FLASH** - OR - **CALL**
- Press **DELETE**.

Voice guide for Smart call blocker
After setting the date and time, the handset will prompt if you want to set Smart call blocker. For more details, see **Use voice guide to set Smart call blocker** in the **Introducing Smart call blocker** leaflet.

Voice guide for answering system
After setting the Smart call blocker, the handset will display **Start voice guide to set up Answering system now?** This feature assists you to do the basic setup of the answering system. You can follow the voice guide to record your own announcement, set the number of rings and the message alert tone.

When the handset prompts you to set up the answering system via voice guide
Press **SELECT**.

**Includes licensed Qaltec™ technology. Qaltec™ is a trademark of Truecall Group Limited.*

