



at&t

User's manual

TL92278/TL92328/TL92378
DECT 6.0 cordless
telephone/answering system
with Bluetooth®
wireless technology



Congratulations

on your purchase
of this AT&T product.

Before using this AT&T product, please
read the **Important safety information**
on pages 74-76 of this manual.

Please thoroughly read this user's
manual for all the feature operations
and troubleshooting information necessary
to install and operate your new
AT&T product. You can also visit our
website at **www.telephones.att.com** or call
1 (800) 222-3111.

In Canada, dial **1 (866) 288-4268.**

Model #: TL92278 (two handsets)
TL92328/TL92378 (three handsets)
Type: DECT 6.0 cordless telephone/answering system with
Bluetooth wireless technology

Serial #: _____

Purchase date: _____

Place of purchase: _____

Both the model and serial number of your AT&T product can be found on the
bottom of the telephone base.

Save your sales receipt and original packaging in case it is necessary to return
your telephone for warranty service.



The ENERGY STAR[®] program (www.energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR[®] label indicating it meets the latest energy efficiency guidelines.

© 2008 Advanced American Telephones. All rights reserved.
AT&T and the AT&T logo are trademarks of AT&T Intellectual Property II, L.P. d/b/a
AT&T Intellectual Property licensed to Advanced American Telephones. Printed in China.

The Bluetooth[®] word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a member of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Before you begin


you must install and charge the battery.
See page 8 for **Battery installation** instructions.

Please read and follow these instructions carefully:


- Use only the supplied rechargeable battery or replacement battery.
- Observe the proper polarity orientation between the battery and handset during battery installation.
- Do not dispose of the battery in a fire. Check with local codes for special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
- Exercise care in handling batteries in order not to create a short circuit with conductive materials such as rings, bracelets, and keys. The battery or conductor may overheat and cause harm.
- Charge the supplied battery or replacement battery with this product only in accordance with the instructions and limitations specified in this manual.
- Do not disassemble your telephone. There are no user-serviceable parts inside. Refer to qualified service personnel for servicing.
- To prevent fire or shock hazard, do not expose this product to water or any type of moisture.

Parts checklist

Your telephone package contains the following items.

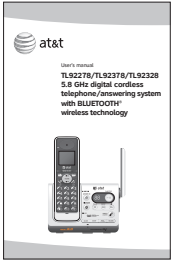

User's manual

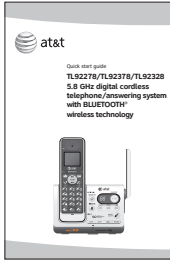

Quick start guide



 
Cordless handset
(2 for TL92278)
(3 for TL92328/
TL92378)



Telephone base




Charger for cordless handset
with power adapter installed
(1 for TL92278)
(2 for TL92328/
TL92378)



Battery for cordless handset
(2 for TL92278)
(3 for TL92328/
TL92378)



Battery compartment cover
(2 for TL92278)
(3 for TL92328/
TL92378)

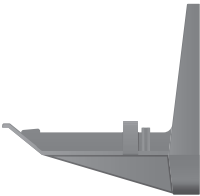

Wall mount bracket



Telephone line cord



Power adapter for
telephone base

User's manual

TL92278/TL92328/TL92378

DECT 6.0 cordless answering system with Bluetooth® wireless technology



Table of contents

Getting started

Quick reference guide	
handset	1
telephone base	3
Handset status icon	4
Installation setup.....	5
Telephone base installation.....	6
Charger installation.....	7
Battery installation & charging.....	8
Installation options.....	9
Expansion handset	14
Adding & registering handsets	15
Replacing a handset.....	16

Bluetooth

Introducing Bluetooth.....	17
Glossary of terms.....	28
Bluetooth setup	19

Handset settings

Handset main menu.....	20
Handset settings.....	21

Telephone operation

Handset operation.....	26
Options while on calls.....	32

Chain dialing.....	35
Intercom.....	36
Call transfer using intercom	38

Directory

About the directory.....	40
Creating directory entries.....	41
Directory review	43
Directory search.....	44
To dial, delete or edit entries.....	45

Caller ID

Caller ID operation.....	46
To review the caller ID history	50

Answering system

About the answering system.....	52
Day & time announcement.....	54
Answering system mode	56
Outgoing announcements	57
Answering system setup.....	59
Message playback.....	63
Recording & playing memos.....	65
Message counter displays.....	66
Remote access.....	67

Table of contents

Appendix A,	
Alert tones and lights	69
Appendix B,	
Handset display screen	
messages	70
Appendix C,	
Maintenance.....	73
Appendix D,	
Important safety information	74
Appendix E,	
FCC Part 68 and ACTA.....	77
Appendix F,	
FCC Part 15.....	79
Appendix G,	
Limited warranty.....	80
Appendix H,	
Technical specifications	83
Appendix I,	
Troubleshooting	84
Index.....	94

Quick reference guide - handset

CHARGE indicator

On when the handset is charging in the telephone base or charger.

DIR / CID

Press **DIR** to display directory entries (page 43). Press to scroll up while in menus.

While entering names or numbers, press to move the cursor to the right. Press to increase the listening volume when on a call.

Press **CID** to display caller ID history (page 50). Press to scroll down while in menus.


While entering names or numbers, press to move the cursor to the left. Press to decrease the listening volume when on a call.

REDIAL/PAUSE

Press to view redial memory (page 30). While entering numbers, press and hold to insert a dialing pause (page 41).

HOME/FLASH

Press to make or answer a **HOME** call. Flashes rapidly when there is an incoming **HOME** call. Flashes slowly when a **HOME** call is on hold. During a **HOME** call, press to receive an incoming call if call waiting is activated (page 26).

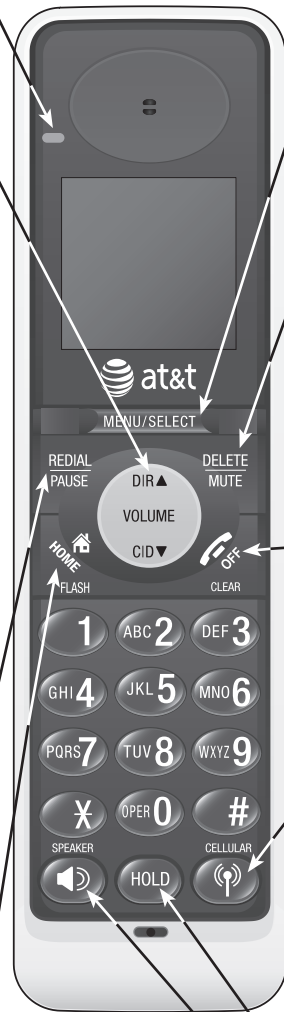

MENU/SELECT

Press to display the menu. While in the menu, press to select an item or save an entry or setting.

DELETE/MUTE

During a call, press to mute microphone (page 33). While reviewing the caller ID history, press to delete an individual entry, or press and hold to clear the caller ID history (page 51). While predialing, press to delete digits (pages 26 & 28).

OFF/CLEAR

During a **HOME** or **CELLULAR** line call, press to end the call. While in a menu, press to cancel an operation, back up to the previous menu, or exit the menu display.

CELLULAR

Press to make or answer a **CELLULAR** call. Flashes rapidly when there is an incoming **CELLULAR** call. Flashes slowly when a **CELLULAR** call is on hold. During a **CELLULAR** call, press to receive an incoming call if call waiting is activated (page 28).

SPEAKER

Press to turn on the handset speakerphone. Press again to resume normal handset use (page 30).

HOLD

Press to put the **HOME** or **CELLULAR** call on hold (page 34).

Quick reference guide - handset

Feature menu

The > symbol shows a highlighted menu item.



Menu

Feature menu

- DIRECTORY (page 40)
- CALL LOG (page 46)
- INTERCOM (page 36)
- RINGER VOLUME (page 21)
- RINGER TONE (page 22)
- KEY TONE (page 23)
- LANGUAGE (page 23)
- CLR VOICEMAIL (page 24)
- HOME AREA CODE (page 25)

Using menus

Press or to scroll through menu items.


Press **MENU/SELECT** to select or save changes to a highlighted menu item.

Press **OFF/CLEAR** to cancel an operation, back up to the previous menu, or exit the menu display.

Quick reference guide - telephone base

IN USE indicator

- On when the handset is in use, when the answering system is answering an incoming call or when you are registering a handset.
- Flashes when another telephone is in use on the same line, or when you are de-registering handset(s) from the telephone base.
- Flashes quickly when there is an incoming call.

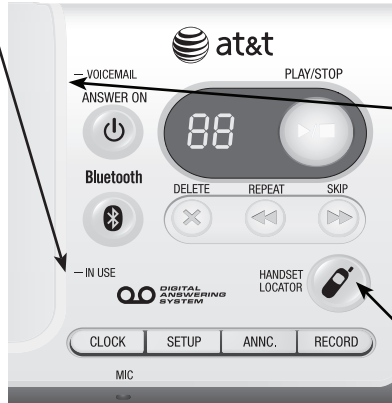

VOICEMAIL indicator

Flashes when you have new voicemail. Voicemail is a service offered by your local telephone company, and is different from answering system messages (page 24).

HANDSET LOCATOR

Press to make handsets beep so you can locate them (page 31).

MESSAGE COUNTER

Number of messages (or during playback, message number currently playing).

Answering system functions

ANSWER ON

Press to turn the answering system on or off (page 56).

X/DELETE


Press to delete the message currently playing (page 63).
Press twice to delete all old messages when the phone is not in use (page 64).

Bluetooth

Press **and hold** to enable the Bluetooth feature on the telephone base (page 19).
On when the telephone base is paired and connected with a cellular phone.
Flashes when the Bluetooth feature is activated and waiting for pairing and connection.

CLOCK

Press to review or set the clock (page 54).

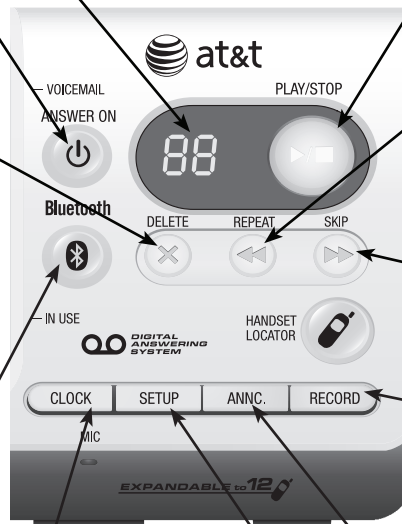

PLAY/STOP

Press to start or stop message playback (page 63).

REPEAT

Press to repeat a message. Press **twice** to play the previous message (page 63).

SKIP

Press to skip a message (page 63).

RECORD

Press to record a memo (page 65) or, after pressing **ANNC.** to record an outgoing announcement (page 57).

ANNC.









Press to review or record the outgoing announcement.
Press again to end announcement playback or recording (page 57).

SETUP

Press to hear and change setup options (page 59).

Handset status icons



	HOME line - on steady when the HOME line is in use.
	CELLULAR line - on steady when the CELLULAR line is in use.
	BLUETOOTH - on steady when a cellular phone is connected with the telephone base.
	NEW VOICEMAIL - new voicemail received from the local telephone company.
	SPEAKERPHONE - the speakerphone is in use.
	Ringer off - the handset ringer is turned off.
	Battery status - battery is charging (animated display).
	Battery status - low battery (flashing); place handset in telephone base or charger to recharge.
MUTE	Microphone is muted.
NEW	Missed and unreviewed calls.

Installation setup

You must install and charge the handset battery before using the cordless handset.



See page 8
for easy instructions.

Install the telephone base close to a telephone jack and a power outlet not controlled by a wall switch. The telephone base can be placed on a flat surface or vertically mounted on the wall (see page 9). For optimum range and better reception, place the telephone base in a central and open location.

Depending on the environmental conditions, make sure that your Bluetooth enabled cellular phone is within 12 feet of where you install the telephone base in order to maintain a reliable connection among your Bluetooth cell phone, telephone base, and cell tower.

If you subscribe to high-speed Internet service (Digital Subscriber Line - DSL) through your telephone line(s), you must install a DSL filter between the telephone base and the telephone wall jack (see the following page). The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

Your product may be shipped with a protective sticker covering the handset or telephone base display - remove it before use.

For customer service or product information, visit our website at **www.telephones.att.com** or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.

Avoid placing the telephone base too close to:


- Communication devices such as: television sets, VCRs, or other cordless telephones.
- Excessive heat sources.
- Noise sources such as a window with traffic outside, motors, microwave ovens, refrigerators, or fluorescent lighting.
- Excessive dust sources such as a workshop or garage.
- Excessive moisture.
- Extremely low temperature.
- Mechanical vibration or shock such as on top of the washing machine or workbench.

Telephone base installation

Install the telephone base as shown below. Make sure that the electrical outlet is not controlled by a wall switch.

If you subscribe to high-speed Internet service (Digital Subscriber Line - DSL) through your telephone line(s), you must install a DSL filter between the telephone base and the telephone wall jack. The filter will prevent noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.

The telephone base is set for desktop use. **If you want to change to wall mounting position, you will need to install the supplied wall mount bracket to the telephone base, see page 9 for details.**

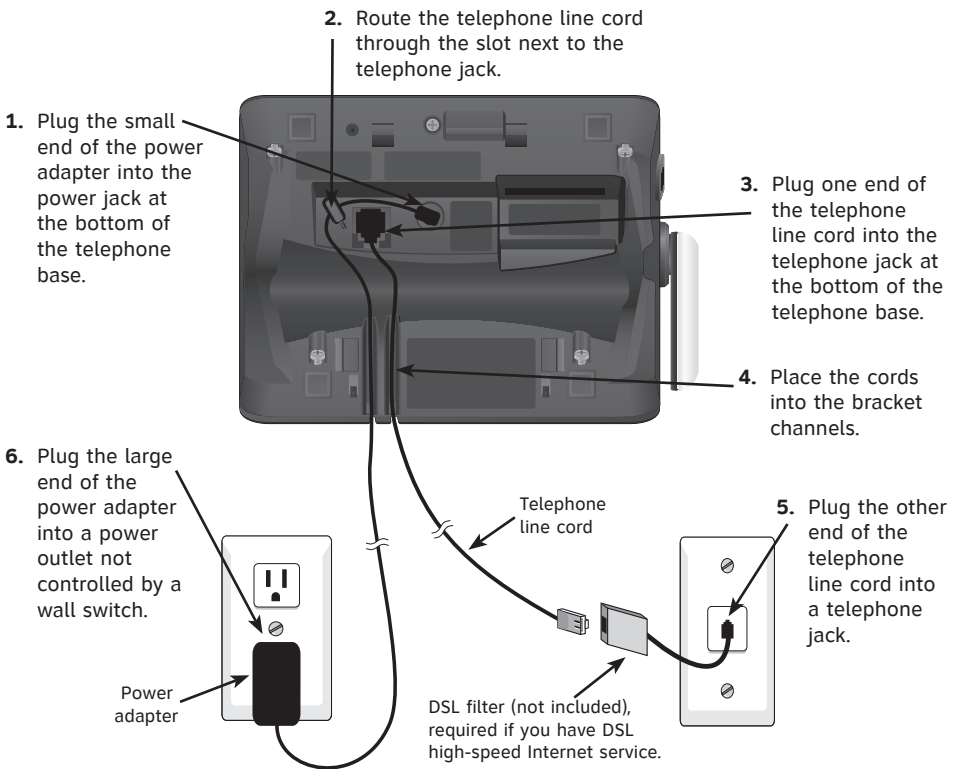


7. Raise the antenna.



Charger installation

Plug the power adapter into an electrical outlet not controlled by a wall switch.

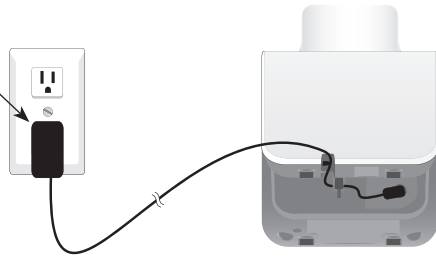

IMPORTANT INFORMATION

1. Use only the power adapter(s) supplied with this product. To order a replacement power adapter, visit our website at **www.telephones.att.com**, or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.
2. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.

Battery installation & charging

Install the battery as shown below. After installing the battery, you can make and receive short calls. Place the handset in the telephone base or charger when not in use. For optimal performance, charge the handset battery for at least 16 hours before use. See the table on page 83 for battery operating times.



 
Step 1

Press the depression and slide the battery compartment cover downwards (if necessary).



Step 2

Plug the battery securely into the connector inside the handset battery compartment, matching the color-coded label. Insert the supplied battery with the label **THIS SIDE UP** facing up as indicated.



Step 3

Align the cover flat against the battery compartment cover, then slide it upwards until it clicks into place.

Step 4

Charge the handset by placing it face up in the telephone base or charger. The **CHARGE** light will be on when charging.



IMPORTANT INFORMATION

Use only the supplied rechargeable battery or replacement battery (model BT8001). To order, visit our website at www.telephones.att.com or call **1 (800) 222-3111**. In Canada, dial **1 (866) 288-4268**.