

 
Installation options

The telephone base is set for desktop use. It is possible to change to wall mounting position by installing the wall mount bracket provided. Wall mounting requires a telephone outlet wall mounting plate with mounting studs that may require professional installation. You can purchase the mounting plate from many hardware or consumer electronics retailers.

Desktop to wall mount installation

To change the telephone base to the wall mount position, make sure that you first unplug the telephone line cord and power adapter cord from the wall outlets before you begin. In addition, to prevent possible damage, remove the handset from the telephone base.

1. Position the telephone base as shown below, and insert the extended tabs of the bracket into the slots under the telephone base.

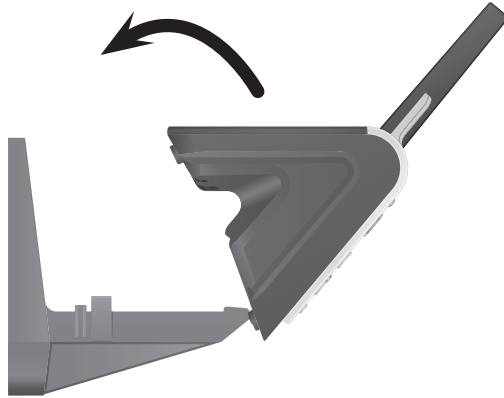


2. Push down the telephone base until it clicks into place on both sides of the bracket.




Installation options

Desktop to wall mount installation

 3. Bundle the telephone line cord and power adapter cord, and secure them with a twist tie before placing them behind the telephone base as shown below.

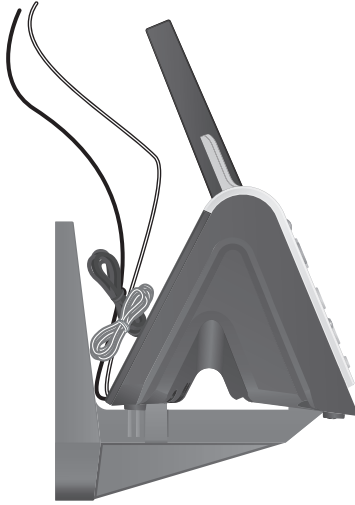

 4. Align the holes on the bracket with the standard wall plate and slide the bracket until the telephone is secured as shown below. Plug the telephone line cord into a telephone wall jack. Plug the power adapter into a power outlet not controlled by a wall switch.

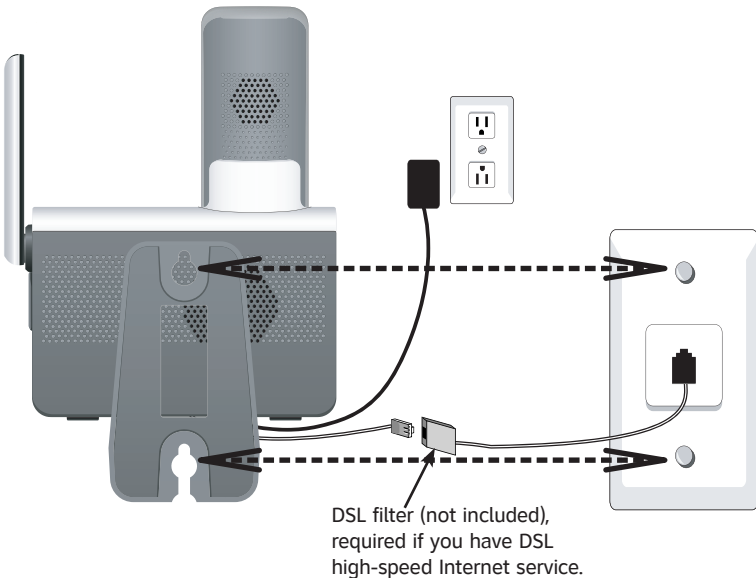

Installation options

Desktop to wall mount installation

5. Make sure the telephone is securely positioned as shown below.



Installation options

 
Wall mount to desktop installation

To change the telephone base to the desktop position, make sure that you first unplug the telephone line cord and power adapter cord from the wall outlets before you begin. In addition, to prevent possible damage, remove the handset from the telephone base.


1. Remove the telephone base from the wall and untie the bundled telephone line cord and power adapter cord.
2. Press on the catches on both sides of the bracket (indicated by arrows below) to unlock the telephone base from the bracket.



The catch on the side of the telephone base.

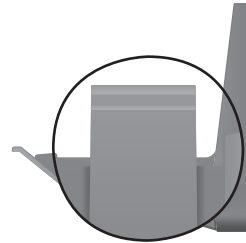


 3. Pull the telephone base up to detach it from the bracket.

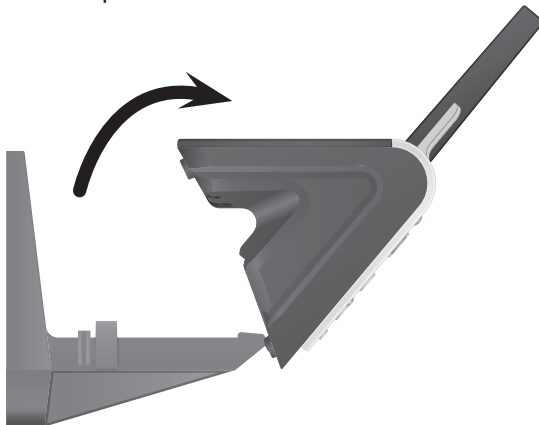

Installation options

 4. Plug the telephone line cord into a telephone wall jack, and plug the power adapter cord into a power outlet not controlled by a wall switch. Route the cords through the bracket channels.

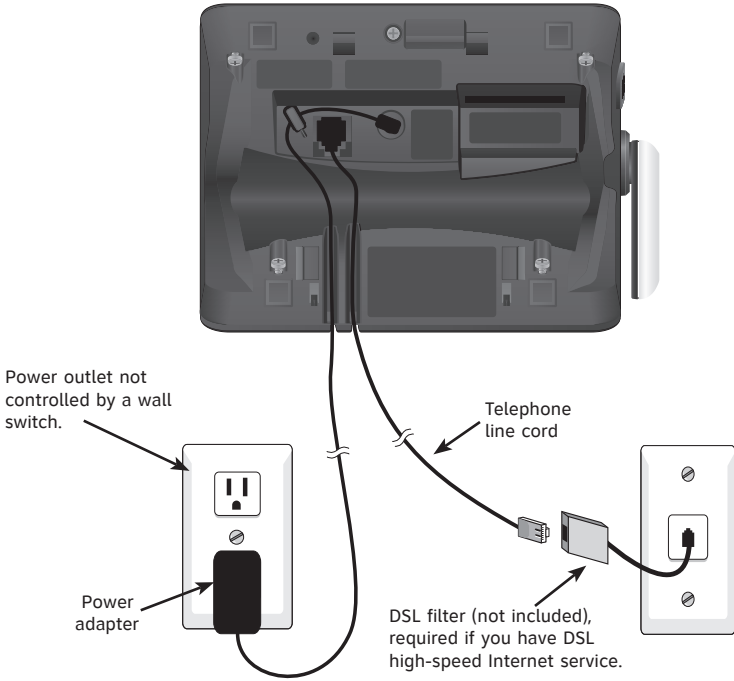


Expansion handset

Your new AT&T TL92278/TL92378/TL92328 telephone system can accommodate up to 12 handsets. You can add new handsets (AT&T TL90078, purchased separately) to your telephone system, but each device must be registered with the telephone base before use. To register a new handset, see page 15.

The handsets provided with TL92278 come pre-registered as **HANDSET 1** and **HANDSET 2**. You can register up to 10 additional handsets to the telephone base, and they will be assigned numbers in the order they are registered (**HANDSET 3, HANDSET 4, HANDSET 5** and so on).


The handsets provided with TL92328/TL92378 come pre-registered as **HANDSET 1, HANDSET 2** and **HANDSET 3**. You can register up to nine additional handsets to the telephone base, and they will be assigned numbers in the order they are registered (**HANDSET 4, HANDSET 5, HANDSET 6** and so on).

 Adding and registering handsets (optional)

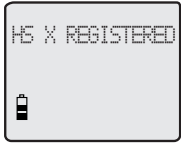

Handsets purchased separately (AT&T TL90078) need to be registered to the telephone base before use. When first purchased, all expansion handsets will show **NOT REGISTERED** on the screen. The new handset(s) may need to be charged for five minutes before registering to the telephone base.

To register a handset to your telephone base

1. Place the unregistered handset into the telephone base. If **PRESS HNDST LOC 4 SEC ON BASE** does not appear on the handset screen after a few seconds, remove the handset and place it in the telephone base again.
2. On the telephone base, press and hold  **HANDSET LOCATOR** for about four seconds (until the red **IN USE** light on the telephone base turns on) and then release the button. The handset will show **PLEASE WAIT...** and it will take about 10 seconds to complete the registration. The handset will display **HANDSET X REGISTERED**, with **X** being the handset number (1-12). There will be a beep sound if the registration is successful.



NOTES:

1. If the registration is not successful, the display will show **NOT REGISTERED**. To reset the handset, remove the handset from the telephone base and place it back in. Try the registration process again.
2. You cannot register a handset if any other system handset is in use.

Replacing a handset

You may need to de-register your handsets if:

You have twelve registered handsets and need to replace a unit.





-OR-

You wish to change the designated handset number of your registered handsets.

You must first de-register ALL the handsets, and then re-register each handset you wish to use.



Please read carefully through all the instructions on this page before beginning the de-registration process.

To de-register all handsets

1. Press and hold  **HANDSET LOCATOR** on the telephone base for about 10 seconds (until the **IN USE** light turns on and starts to flash), then release the  **HANDSET LOCATOR** button.
2. Immediately press and release  **HANDSET LOCATOR** again. You must press  **HANDSET LOCATOR** while the **IN USE** light is still flashing. (The light flashes for about seven seconds. If the light stops flashing, pick up the handset and place it back into the telephone base, then start again with step one above.)
3. The handset(s) will show **SEARCHING FOR BASE** and it will take about 10 seconds to complete the de-registration process. ALL handsets will show **NOT REGISTERED** if de-registration was successful.
4. To re-register the handset(s) to the telephone base, follow the registration instructions on page 15.



NOTES:

1. If the de-registration process was not successful, you may need to reset the system and try again. To reset: pick up the handset and press the  **HOME/FLASH** button, then press the  **OFF/CLEAR** button and place the handset back into the telephone base. You may also reset by unplugging the power from the telephone base and plugging it back in.
2. You cannot de-register the handset(s) if any other system handset is in use.

Introducing Bluetooth

Your new AT&T TL92278/TL92328/TL92378 telephone system with Bluetooth wireless technology has the following features:

- Pair a Bluetooth enabled cell phone with the telephone base.
- Connect a cell phone to make and receive **CELLULAR** calls. Only one cell phone can be paired and connected on a call at a time.
- Make and receive calls using your cell phone plan while benefiting from the ease and comfort of your home telephone system.

IMPORTANT INFORMATION

- Refer to your cell phone user's manual for more information about its Bluetooth function.
- Operate your Bluetooth device within 12 feet from the telephone base. Bluetooth technology operates best within a short range. Keeping within 12 feet will maintain the connection quality of the Bluetooth device with the telephone base.
- Make sure that your cellular phone has sufficient signal strength. You may need to move the cellular phone and telephone base to a location where the cellular signal may be stronger.
- Charge your Bluetooth cell phone while it is connected to the telephone base because your cell phone's battery will discharge faster while it is connected wirelessly to the telephone base.
- Monitor your cell phone's usage because airtime is deducted from your cellular plan for the duration of the **CELLULAR** calls.

Refer to the **Bluetooth Setup** section (page 19) to learn how to set up your Bluetooth device. Refer to the **Handset operation** section (page 26) on how to operate your Bluetooth devices with your new AT&T telephone system with Bluetooth wireless technology. Refer to the **Troubleshooting** section (page 84) if you experience difficulty when using the telephone system.

Glossary of terms

Below are some terms used in this user's manual to help you become familiar with using your Bluetooth devices and your new AT&T telephone system.

Bluetooth cell phone - Refers to a mobile Bluetooth enabled cellular telephone.

CELLULAR line - The communications service provided through your Bluetooth enabled cellular telephone.

HOME line - Your conventional telephone land line.

Connected - A Bluetooth device can only be used when it is connected to the telephone base.

Paired Devices - Once a Bluetooth device has been paired with the telephone base, it will be identified as registered to the telephone base. Only one Bluetooth cellular phone can be paired with the telephone base.

Pairing - This refers to the process of two Bluetooth devices registering device information with each other. The telephone base must be paired with a Bluetooth cellular phone before the Bluetooth device can be used. Depending on the manufacturer, this is also referred to as **Bonding**.

PIN - By default, the PIN is 0000 for the telephone base and for most Bluetooth devices. PIN information must be exchanged between Bluetooth devices before they can be used. This is also known as a Passkey or Passcode.

Bluetooth Setup


To use a Bluetooth enabled cellular phone with you telephone, you must first pair and connect your Bluetooth cellular phone with the telephone base.



Before you begin, make sure that your Bluetooth-enabled cellular phone is not connected to any other Bluetooth device. Refer to your cellular phone user's manual to learn how to search for or add new Bluetooth devices.

To pair and connect a cellular phone:

1. Press and hold the **Bluetooth** button on the telephone base until it is flashing. The Bluetooth feature will be activated.
2. Using your cellular phone, turn on the Bluetooth feature and search for a new device.
3. Once your cellular phone has found the **AT&T DECT 6.0** telephone base, select it.
4. Using your cellular phone, enter the **PIN** of the telephone base (the default PIN is 0000) to continue the pairing process.

When a device is successfully connected, the  status icon will display on the cordless handset screen, and the light of the **Bluetooth** button on the telephone base will be on steadily.



Once you have paired a device with the telephone base, the pairing information is stored in the telephone base. However, if the paired device becomes disconnected, the telephone base will not automatically search and re-connect to that device. To re-connect a paired device, make sure the Bluetooth feature is turned on in your cellular phone, select **AT&T DECT 6.0** from the paired device list in your cellular phone. The connection will then be established again.






NOTE: Only one Bluetooth device can be paired with the telephone base at a time.

If you want to pair and connect a new device when there is already a connected device on the telephone base, press and hold the **Bluetooth** button on the telephone base until it is flashing, then start with step two above. If you do not pair a new device within two minutes, the **Bluetooth** light on the telephone base will turn off and the system will return to idle.

Handset main menu

To enter the main menu:

 
1. Press **MENU/SELECT** when the handset is in idle mode.
2. Press  **DIR** /  **CID** to select a handset feature menu, then press **MENU/SELECT** to enter that menu.

To return to the idle mode, press and hold  **OFF/CLEAR**.

DIRECTORY allows you to store and search for names and numbers (page 40).

CALL LOG allows you to view caller ID history (page 46).




INTERCOM allows you to intercom with other handsets (page 36).

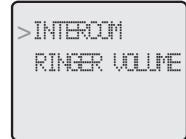

RINGER VOLUME allows you to set the ringer volume (page 21).

RINGER TONE allows you to set the ringer for the **HOME** and **CELLULAR** lines (page 22).

   
KEY TONE allows you to turn the keypad tones on or off (page 23).

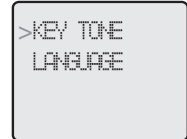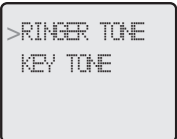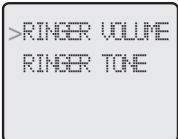

LANGUAGE allows you to set your handset display language (page 23).

 CLR VOICEMAIL allows you to turn off the new voicemail indication (page 24).

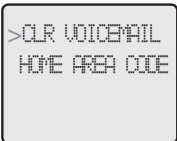

HOME AREA CODE allows you to set your home area code (page 25).





Handset settings

Using the feature menu, you can customize many of the telephone's settings.




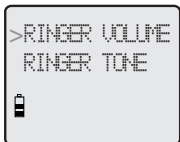 
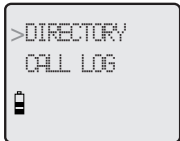 
1. Press **MENU/SELECT** when in idle mode (when the phone is not in use) to enter the feature menu.
2. Use  **DIR** /  **CID** to scroll to the feature to be changed. When scrolling through the menu, the top menu item is always highlighted with a > symbol.
3. Press **MENU/SELECT** to select the highlighted item.







NOTE: Press  **OFF/CLEAR** to cancel an operation, back up to the previous menu or exit the menu display. Press and hold  **OFF/CLEAR** to return to idle mode.

Ringer volume

Using this menu, you can set the ringer volume level (1-6), or turn the ringer off. When the ringer is turned off,  will appear on the handset screen. The volume setting will apply to both **HOME** and **CELLULAR** calls.



To adjust the **RINGER VOLUME:**

1. Press **MENU/SELECT** when in idle mode to enter the feature menu.
2. Use  **DIR** /  **CID** to scroll to **>RINGER VOLUME**, then press **MENU/SELECT**.
3. Press  **DIR** /  **CID** to sample each volume level.
4. Press **MENU/SELECT** to save your preference and return to the feature menu.







NOTE: The ringer volume also determines the ringer volume of the intercom calls (pages 36-37) and the paging tone for the handset locator feature (page 31). If the handset ringer volume is set to off, that handset is silenced for all incoming calls and paging.

Handset settings







Ringer tone

 
 
 
 
 
 
You can select different ringer tones for the **HOME** and **CELLULAR** calls. You may choose one of 10 ringer tones.

To choose a ringer tone for the **HOME** line:

1. Press **MENU/SELECT** when in idle mode to enter the feature menu.
2. Use  **DIR** /  **CID** to scroll to **>RINGER TONE**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** to select **HOME TONE**.
4. Press  **DIR** /  **CID** to get to the next ringer tone and to hear a sample of it.
5. Press **MENU/SELECT** to save your preference and return to the feature menu.

To choose a ringer tone for the **CELLULAR** line:

1. Press **MENU/SELECT** when in idle mode to enter the feature menu.
2. Use  **DIR** /  **CID** to scroll to **>RINGER TONE**, then press **MENU/SELECT**.
3. Press  **DIR** /  **CID** to scroll to **CELLULAR TONE**, then press **MENU/SELECT**.
4. Press  **DIR** /  **CID** to get to the next ringer tone and to hear a sample of it.
5. Press **MENU/SELECT** to save your preference and return to the feature menu.

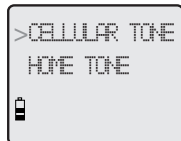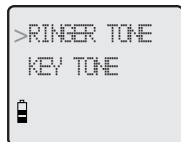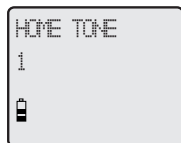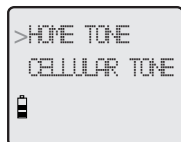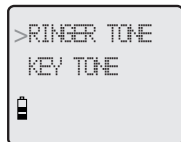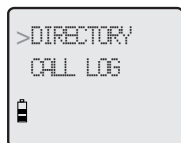





Handset settings

Key tone

The handset is factory programmed to beep with each key press. If you turn off the **KEY TONE**, there will be no beeps when keys are pressed.

To turn the **KEY TONE** on or off:





1. Press **MENU/SELECT** when in idle mode to enter the feature menu.
2. Use  **DIR** /  **CID** to scroll to **>KEY TONE**, then press **MENU/SELECT**.
3. Press  **DIR** /  **CID** to select **ON** or **OFF**.
4. Press **MENU/SELECT** to save your preference and return to the feature menu.

 
 
 


Language

In this menu, you can select the language used for all screen displays.


To select a language:

1. Press **MENU/SELECT** when in idle mode to enter the feature menu.
2. Use  **DIR** /  **CID** to scroll to **>LANGUAGE**, then press **MENU/SELECT**.
3. Press  **DIR** /  **CID** to select **ENGLISH**, **FRANCAIS** or **ESPANOL**.
4. Press **MENU/SELECT** to save your preference and return to the feature menu.

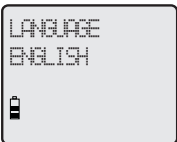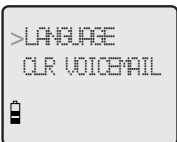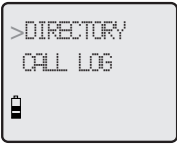

Handset settings

Visual message waiting (voicemail) indicator


If you subscribe to a voicemail service offered by your local telephone company, the voicemail waiting indicator feature will provide a visual indication when you have new voicemail messages. The **VOICEMAIL** light on the telephone base will flash, and **NEW VOICEMAIL** and the  icon will appear on the handset screen(s).






NOTES:

1. This feature does not indicate new answering system messages recorded on your phone.
2. For more information about the difference between your answering system and voicemail, see page 52.

Clear voicemail indication

Use this feature when the telephone indicates there is new voicemail but there are none (for example, when you have accessed your voicemail while away from home). This feature only turns off the displayed **NEW VOICEMAIL** message,  icon and **VOICEMAIL** light; it does not delete your voicemail message(s). As long as you have new voicemail messages, your local telephone company will continue to send the signal to activate the visual message waiting indicator.

To manually turn off the new voicemail indicator:

1. Press **MENU/SELECT** when in idle mode to enter the feature menu.
2. Use  **DIR** /  **CID** to scroll to **>CLR VOICEMAIL**, then press **MENU/SELECT**.
3. Press **MENU/SELECT** again to turn the voicemail indication off, or press  **OFF/CLEAR** to cancel the procedure.



NOTES:

1. Telephone company voicemail may alert you to new messages with stutter (broken) dial tone. Contact your telephone company for more details.
2. For information about using your voicemail service, contact your telephone company for assistance.