








TONE X GOES ONE THE

WHAT'S IN THE BOX



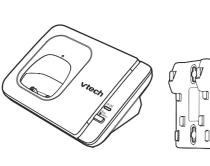



2 sets for CS6919-2/

CS6919-26/CS6919-27

SETUP



INSTALL AND CONNECT | MOUNT (OPTIONAL)

Install the battery

Change LCD language settings

used in all screen displays

HAMBET

11:07AM

1. Press MENU.

♦ LCD language

You can select English, French, or Spanish to be


‡Settings


2. Press **▼**/**▲** to scroll


to Settings, then


press **SELECT**.

♦ English

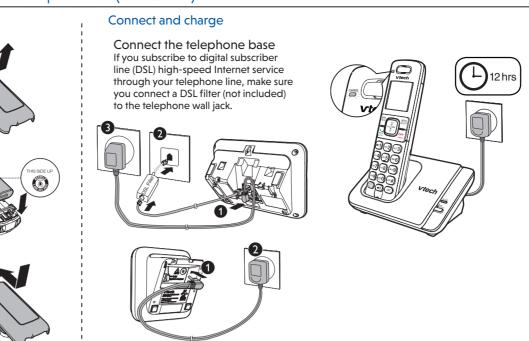

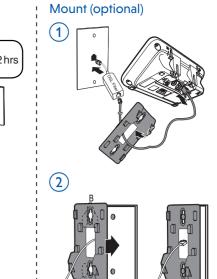

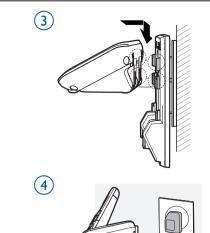

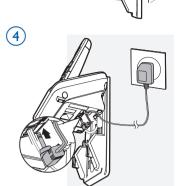

· Answer an incoming call when you receive a

while dialing or entering numbers into the

• Review the phonebook when the phone is

• Press and hold to insert a dialing pause

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- 1. Read and understand all instructions 2. Follow all warnings and instructions marked on the product.
- 3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 4. CAUTION: Do not install the telephone base at a height above 2 meters.
- 5. Do not use this product near water such as near a bath tub wash bowl, kitchen sink, laundry tub or a swimming pool
- 6. Do not place this product on an unstable table, shelf stand or other unstable surfaces.
- 7. Avoid placing the telephone system in places with extreme temperature, direct sunlight, or other electrical devices. Protect your phone from moisture, dust, corrosive liquids and fumes.
- 8. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect m from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where proper ventilation is not provided.
- 9. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company.
- 10. Do not allow anything to rest on the power cord. Do not install this product where the cord may be walked on.
- 11. Never push objects of any kind into this product through the slots in the telephone base or handset because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.
- 12. To reduce the risk of electric shock, do not disassemble his product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect eassembling can cause electric shock when the produc is subsequently used.
- 13. Do not overload wall outlets and extension cords.
- 14. Unplug this product from the wall outlet and refer servicing to an authorized service facility under the following conditions:
- When the power supply cord or plug is damaged
- If liquid has been spilled onto the product. If the product has been exposed to rain or water
- · If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation.
- If the product has been dropped and the telephone
- base and/or handset has been damaged. If the product exhibits a distinct change in performance.

15. Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.

- 16. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the power outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a power outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire or explosion. Such environments might include: medical use of oxygen without adequate ventilation; industrial gases (cleaning solvents; gasoline vapors; etc.); a leak of natural gas; etc.
- 17. Only put the handset of your telephone next to your ear when it is in normal talk mode
- 18. The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- 19. For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily
- CAUTION: Use only the batteries indicated n this manual. There may be a risk of explosion if a wrong type of battery is used for the handset. Use only the supplied rechargeable batteries or replacement batteries (BT162342/BT262342) for the handset. Do not dispose of batteries in a fire. They may explode. Disposed of used batteries according to the
- Do not use the battery in following conditions High or low extreme temperature during use, storage or transportation.
- Replacement of a battery with an incorrect type that can defeat a safeguard.
- » Disposal of a battery into fire or a hot oven, or
- mechanically crushing or cutting of a battery, that can result in an explosion » Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable
- liquid or gas » A battery subjected to extremely low air pressure that can result in an explosion or the leakage of
- lammable liquid or gas. 21. Use only the adapter included with this product. ncorrect adapter polarity or voltage can seriously
- 22. The applied nameplate is located at the bottom or near of the product. SAVE THESE INSTRUCTIONS

damage the product.

- Use only the battery provided or equivalent. To order a replacement, visit our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to phones, vtech canada, com or call
- Do not dispose of the battery in a fire. Check with local waste management codes for special disposal instructions.

Do not open or mutilate the battery. Released electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte may be toxic if

- Exercise care in handling batteries in order not to create a short circuit with conductive materials.
- Charge the battery provided with this product only in accordance with the instructions and limitations specified in this manual.

Precautions for users of implanted cardiac pacemakers Cardiac pacemakers (applies only to digital cordless

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians

Pacemaker patients

- Should keep wireless telephones at least six inches from the pacemaker.
- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is
- Should use the wireless telephone at the ear opposite the pacemaker. WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless telephones

ABOUT CORDLESS TELEPHONES

- **Privacy:** The same features that make a cordless telephone convenient create some limitations. Telephone calls are transmitted between the telephone base and the cordless handset by radio waves, so there is a possibility that the cordless telephone conversations could be intercepted by radio receiving equipment within range of the cordless handset. For this reason, you should not think of cordless telephone conversations as being as private as those on corded telephones.
- Electrical power: The telephone base of this cordless telephone must be connected to a working electrical outlet. The electrical outlet should not be controlled by a wall switch. Calls cannot be made from the cordless handset if the telephone base is unplugged, switched off or if the electrical power is interrupted.
- Potential TV interference: Some cordless telephones operate at frequencies that may cause interference to televisions and VCRs. To minimize or prevent such interference, do not place the telephone base of the cordless telephone near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR often reduces or eliminates the interference.
- Rechargeable batteries: Exercise care in handling batteries in order not to create a short circuit with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause harm Observe proper polarity between the battery and the battery charger.
- Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a safe manner. Do not burn or puncture the battery. Like other batteries of this type, if burned or punctured, they could release caustic material which could cause injury.

ate:MM/DD/1

ime:11:07 AM

4. Press **▼**/**▲** to select

AM to PM.

After the telephone is installed or power returns following a power outage and battery depletion, the handset will prompt you to set the date and time.

Date and time

When the handset

Time:17:MM -

3. Enter the time.

5. Press **SELECT** to save.

prompts you to set the

Follow the steps below to set the date and time. For example, if the date is 25 July, 2023, and the time is 11:07 AM:





NOTE: If you have skipped the prompt, you can set up again by a service a service.

Then, follow the steps above.

can set up again by pressing MENU. Scroll

to choose Set date/time and press SELECT.



4. Press ▼/▲ to choose your desired language and press SELECT.



NOTE: If you accidentally set the LCD language to Spanish or French, press MENU and then enter *364# to change the handset LCD language back to English while the handset is not in use.

OVERVIEW

Telephone base


- IN USE light
- Flashes when there is an incoming call, or another telephone sharing the same line is in
- On when the telephone is in use.
- FIND HANDSET
- Page all system handsets
- 3 Charging pole
- 4 Charge light

Charger



1 – Charging pole

Handset

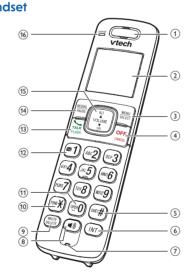

1 – Handset earpiece 2 - LCD display

3-MENU/SELECT

5 - QUIET#

6 – INT

8 – ◀》

10 - TONE X

11 - OPER ()

12 – 🔀 1

7 - Microphone

speakerphone

9-MUTE/DELETE

the phone is ringing.

numbers or names.

- Show the menu
- · While in a menu, press to select an item, or save an entry or setting.

4-OFF/CANCEL · Hang up a call

- · Return to the previous menu Press and hold to exit menu display without
- making changes. • Delete digits while predialing.

• Press and hold to turn on or off the quiet

when reviewing a caller ID log entry.

• Press to start an intercom conversation or

· Make or answer a call using the handset

· Delete the displayed entry while reviewing

the phonebook, caller ID log, or redial list.

• Delete digits or characters when entering

· Switch to tone dialing temporarily during a

· Press to add a space when entering names.

• Press repeatedly to add or remove 1 in front

of the caller ID log entry before dialing or

• Press and hold to set or dial your voicemail

• Press repeatedly to show other dialing options

transfer a call (for multi-handset models only).

- Silence the handset ringer temporarily while
- the phone is ringing.
- Move the cursor to the right when entering • Press and hold to erase the missed call numbers or names. indicator while the handset is not in use.
 - VOLUME/▼CID

• Review the caller ID log when the telephone

13 - TALK/FLASH

14 - REDIAL/PAUSE

phonebook

15 - ♥ ▲/VOLUME

not in use.

· Make or answer a call

· Review the redial list.

call waiting alert.

is not in use.

• Scroll up while in a menu, or in the

phonebook, caller ID log or redial list.

• Increase the listening volume during a call.

- Scroll down while in a menu, or in the
- phonebook, caller ID log or redial list.
- · Move the cursor to the left when entering
- numbers or names.
- Decrease the listening volume during a call. 16 - CHARGE light


· On when the handset is charging.

Display icons

n n	The battery icon flashes when the battery is low and needs charging.
	The battery icon animates when the battery is charging.
	The battery icon becomes solid when the battery is fully charged.
Ø	The handset ringer is turned off.
××	There are new voicemail received from your telephone service provider.
NEW	New caller ID log entry.
ECO	The ECO mode activates automatically to reduce power consumption when the handset is within range from the telephone base.

BT_HSDE26-BSDE58BVSD

2023 VTech Communications, Inc. |

 

teals of the latest of the lat

VTech product news.

To to www.vtechphones.com (US) to register your

TELEPHONE OPERATIONS



- 3. Press **SELECT** to enter that menu.
- To return to the previous menu, press CANCEL.

Make a call

 Press TALK or

, and then dial the telephone number.

• Press **OFF** or put the handset back in the

Speakerphone During a call, press ■ on the handset to switch

During a call, press ▲/VOLUME/▼ to adjust

The mute function allows you to hear the other party but the other party cannot hear you.

- 2. Press MUTE again to resume the conversation.
- The handset displays Microphone ON briefly.

You can use up to two system handsets at a time

- on an outside call. When a handset is already on a call, press TALK or ■) on another handset to join the call.
- Press **OFF** or place the handset in the telephone base or charger to exit the call. The call continues until all handsets hang up.

Call waiting

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are already on a call.

- · Press FLASH to put the current call on hold and take the new call.
- forth between calls.

Find handset

Use this feature to find the system handset.

when not in use. All idle handsets ring and

· Place the handset in the telephone base or charger.

display ** Paging **.

Press FIND HANDSET at the telephone base.

Press TALK, ■), OFF or any dialing keys on the

Do not press and hold FIND HANDSET for more than 4 seconds. It may lead to handset deregistration.

Pair and connect a Bluetooth®

Before you begin, make sure that your

to any other Bluetooth device. Bluetooth wireless technology operates within a short range (a maximum of approximately 15 feet) from the telephone base. Keep

connected headset within this range.

You can pair a Bluetooth headset to your telephone system and answer calls with your Bluetooth headset

1. Set your Bluetooth headset to pairing mode. Refer to your Bluetooth headset user's manual to learn how.

2. Press TALK or ♥ on the handset. The telephone

- base's **IN USE** LED turns on. 3. Use the dialing keys to enter \$\$\$##2828.
- The handset dials the entered numbers. The telephone will then enter pairing mode and the **IN USE** LED flashes.
- beep every 2 seconds.

- connected to the telephone, the telephone plays a confirmation tone. If pairing process times out or fails, the
- telephone plays an error tone. 5. Press **OFF** on the handset or place the handset

4. When the Bluetooth headset is paired and

To cancel pairing, press **OFF** on the handset or place the handset in the telephone base

in the telephone base or charger to end the pairing process.



To check if the Bluetooth headset is

connected, use another telephone or a cell phone to make a call to your CS6719/CS6719 15/CS6719-16/CS6719-17/CS6719-2/CS6719-26/ CS6719-27 telephone, and answer the call with your Bluetooth headset. You can use your Bluetooth headset to answer

If you fail to answer the call with your Bluetooth headset, re-try the pairing steps above.

calls or end the calls.

While on a call using your Bluetooth headset,


keep your headset closer to the telephone base (within 15 feet) and make sure that there are no physical obstacles such as large furniture or thick wall in between.

C267Ĭ9-X_BT_DE56_US-CAN_ACIB_V3_2308018 © 2023 VTech Technologies Canada Ltd. All rights reserved. 08/23. Specifications are subject to change without notice.

American Telephones and its parent, VTech Holdings Limited, is under license. VTech Holdings Limited is a The Bluetooth $^{\odot}$ word mark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by Advanced

Viech product news.

product for enhanced warranty support and latest

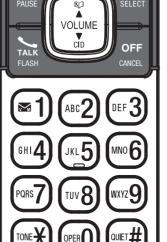

1. Press **MENU** when the phone is not in use. 2. Press ▼ or ▲ until the screen displays the

desired feature menu

To exit menu display, <u>press and hold</u> CANCEL.

Answer a call Press TALK, ■ or any dialing keys.

End a call

between speakerphone and handset earpiece.

the listening volume.

1. During a call, press MUTE. The handset displays

Join a call in progress

Press FLASH at any time to switch back and

 
To start paging: • Press FIND HANDSET on the telephone base

HEADSET

saving it to the phonebook




Bluetooth enabled headset is not connected



· While pairing, the telephone plays one short

 • The pairing process takes up to 90 seconds.



Review and dial a redial list entry

- 2. Press ▼, ▲ or **REDIAL** repeatedly until the
- 1. Press **REDIAL** when the handset is not in use. desired entry displays
- 3. Press TALK or ♥ to dial.

Delete a redial list entry

 When the desired redial entry displays, press DELETE.

INTERCOM

Use the intercom features for conversations between two handsets

- 1. Press INT on your handset when not in use. Use the dialing keys to enter a destination handset number if necessary.
- 2. To answer the intercom call, press TALK, (1), INT or any dialing key on the destination handset.
- 3. To end the intercom call, press OFF or place the handset back in the telephone base or charger. 2. Use the dialing keys to enter the number.

Answer an incoming call during an intercom If you receive an incoming call during an intercom

call, there is an alert tone. • To answer the outside call, press TALK. The

- intercom call ends automatically
- To end the intercom call without answering the outside call, press OFF. The telephone continues to ring

Call transfer using intercom

While on an outside call, you can use the intercom feature to transfer the call from one handset to

- 1. Press INT on your handset during a call. The current call is put on hold. Use the dialing keys to enter a destination handset number if
- 2. To answer the intercom call on the destination handset, press TALK, (1), INT or any dialing key on the destination handset. You can now have a private conservation before transferring the 3. From this intercom call, you have the following
- · You can let the destination handset join
- you on the outside call in a three-way conversation. Press and hold INT on the originating handset.

• You can transfer the call. Press OFF, or place your handset back in the telephone base or charger. The destination handset is then connected to the outside call.

- You can press INT to switch between the outside call (Outside call displays) and the intercom call (Intercom displays)
- · The destination handset can end the intercom call by pressing **OFF**, or by placing the handset back in the telephone base or charger. The outside call continues with the original system handset.

PHONEBOOK

The phonebook can store up to 50 entries, which are shared by all handsets. Each entry may consist of a telephone number up to 30 digits, and a name up to 15 characters.

Add a phonebook entry

1. Enter the number when the phone is not in use. Press **MENU**, then go to Step 3.

Press **MENU** when the phone is not in use then scroll to **Phonebook** and press **SELECT**. Press **SELECT** again to choose **Add new entry**.

- -OR-Copy a number from the redial list by pressing
- **REDIAL** and then press **▼**, **△** or **REDIAL** repeatedly to select a number. Press **SELECT** to copy the number 3. Press **SELECT** to move on to enter the name.
- 4. Use the dialing keys to enter the name.
- Additional key presses show other characters of that particular key.

5. Press **SELECT** to save.

While entering names and numbers, you can:

- Press **DELETE** to backspace and erase a digit or character • Press and hold **DELETE** to erase the entire entry.
- Press ▼ or ▲ to move the cursor to the left or
- Press and hold PAUSE to insert a dialing pause (for entering numbers only).
- Press **0** to add a space (for entering names
- Press TONE

 ★ to add ★ ()- appears) or QUET # to add # (Happears) (for entering phone numbers only).

Review a phonebook entry

Entries are sorted alphabetically.

- Press when the phone is not in use.
- 2. Scroll to browse through the phonebook, or use the dialing keys to start a name search.

des autres commandes pourraient provoquer un

dommage qui pourrait exiger un travail exhaustif

de la part d'un technicien autorisé afin de rétablir le

· Si le produit a été échappé et que le socle et/ou le

gaz à proximité de la fuite. En certaines circonstances, une

flammèche pourrait être provoquée lorsque l'adaptateu est branché à une prise de courant, ou lorsque le

combiné est déposé sur le socle. Ceci est un événement

commun associé à la fermeture d'un circuit électrique. L'utilisateur ne devrait pas brancher le téléphone à une

prise de courant, et ne devrait pas déposer le combiné

chargé sur le socle, si le téléphone se trouve à proximité d'un endroit comportant des concentrations de gaz

inflammables, à moins que la ventilation soit adéquate

Une flammèche dans un tel endroit pourrait provoque un incendie ou une explosion. De tels environnements

peuvent comprendre: des endroits où l'on utilise de

l'oxygène médical sans ventilation adéquate; des gaz industriels (dissolvants de nettoyage, des vapeurs

position verticale ou montés au sol. Les broches ne sont pas conçues pour maintenir l'adaptateur en place si celui-ci

est barnché dans une prise au plafond ou sous une table/

socle de prise de courant doit etre installe a proximite du

d'explosion si vous utilisez le mauvais type de piles pour le téléphone. N'utilisez que les piles rechargeable inclus

ou les piles de rechange (BT162342/BT262342). N'incinérez

pas les piles. Celles-ci risqueraient d'exploser. Mettre au rebut les batteries usagées conformément aux instructions

du fabricant. Débrancher les lignes téléphoniques avant le

Évite d'utiliser la batterie dans les conditions suivantes

remplacement d'une batterie par un type

des températures extrêmes faibles ou élevées

pendant l'utilisation, le stockage ou le transport.

mise au rebut d'une batterie dans un feu ou dans

coupure d'une batterie, susceptible de provoque

un four chaud, ou écrasement mécanique ou

maintien d'une batterie dans un environnement

à très haute température pouvant provoquer une explosion ou la fuite de liquide ou de gaz

batterie soumise à une pression de l'air extrêmement faible pouvant provoquer une

explosion ou la fuite de liquide ou de gaz

L'utilisation d'un adaptateur dont la polarité ou la tension

serait inadéquate risque d'endommager sérieusement le

21. N'utilisez que les adaptateurs inclus avec ce produit

22. La plaque signalétique appliquée est située au bas ou à proximité du produit.

CONSERVEZ CES INSTRUCTIONS

produit et mettre votre sécurité en péril.

19. Pour le MATERIEL RACCORDE PAR PRISE DE COURANT, le

20. MISE EN GARDE: Il peut y avoir un risque

d'essence, etc.); une fuite de gaz naturel, etc.

votre oreille lorsqu'en mode de conversation

materiel et doit etre aisement accessible.

remplacement des piles.

une explosion

inflammables.

17. Ne placez que le combiné de votre téléphone près de

18. Ces adaptateurs ont été concus pour être orientés en

nnement normal de l'appareil

15. Évitez d'utiliser un téléphone (autre qu'un sans fil) pendant

un orage. Les éclairs peuvent être à l'origine d'une électrocution.

16. N'utilisez pas le téléphone pour rapporter une fuite de

combiné a été endommage

performance

1. Press **MENU** when the phone is not in use.

2. Scroll to Phonebook, and then press SELECT.

When the desired entry displays, press **DELETE**.

2. When the handset displays Delete entry?, press

1. Search for or review the phonebook entries

2. When the desired entry displays, press SELECT.

3. Use the dialing keys to edit the number, then

4. Use the dialing keys to edit the name, then

1. Search for or review the phonebook entries

2. When the desired entry appears, press TALK or

If you subscribe to caller ID service, information

second ring. If you answer a call before the caller

information appears on the screen, it will not be

The caller ID log stores up to 50 entries. Each entry

has up to 24 digits for the phone number and 15

If the telephone number has more that 15 digits,

only the last 15 digits appear. If the name has more

than 15 characters, only the first 15 characters are

shown and saved in the caller ID log.

3. Press SELECT to choose Review.

1. Press CID when the phone is not in use.

2. Scroll to browse through the caller ID log.

1. Press **MENU** when the phone is not in use.

4. Scroll to browse through the caller ID log.

2. Scroll to Caller ID log, and then press SELECT.

Press # repeatedly to show different dialing

· Press 1 repeatedly if you need to add or

remove 1 in front of the phone number.

Review a caller ID log entry

about each caller appears after the first or

(see Review a phonebook entry).

(see **Review a phonebook entry**).

3. Scroll to **Review**, and then press **SELECT**

Delete a phonebook entry

Edit a phonebook entry

press **SELECT** to save.

Dial a phonebook entry

saved in the caller ID log.

characters for the name.

SELECT.

press **SELECT**.

■® to dial.

CALLER ID

4. Scroll to browse through the phonebook.

- N'utilisez que la pile incluse ou l'équivalent
- · Si le produit affiche une nette diminution de sa toxique si avalé.
 - conducteurs. Rechargez la pile incluse avec cet appareil, selon les
 - instructions et limites spécifiées dans ce guide d'utilisation Stimulateurs cardiaques implantés dans l'organisme

Les simulateurs cardiaques (s'applique uniquement aux téléphones numériques sans fil)

L'organisme 'Wireless Technology Research, LLC (WTR)', une firme de recherche indépendante, a mené une évaluation pluridisciplinaire des interférences entre les téléphones sans fil portatifs et les stimulateurs cardiaques implantés dans l'organisme. Appuyée par l'Administration des aliments et drogues (FDA) des États-Unis, la firme WTR recommande aux

- Ils ne doivent PAS placer le téléphone sans fil directemen sur le stimulateur cardiaque, tel que dans une poche de
- Ils doivent utiliser le téléphone sans fil en l'appuyant ur l'oreille qui se trouve dans la direction opposée au stimulateur cardiaque.

L'étude effectuée par l'organisme WRS n'a pas identifié de risque pour les détenteurs de simulateurs cardiaques causés par les gens qui utilisent un téléphone sans fil à proximité de

À propos des téléphones sans fil

des avantages pour les téléphones sans fil affichent galement des restrictions. Les appels téléphonique ont transmis entre le combiné sans fil et le socle par le biais d'ondes radio : il v a donc la possibilité que vos conversations téléphoniques sans fil soient interceptées des équipements de réception radio se trouvant dans la portée du combiné sans fil. Pour cette raison, vous ne devez à cordons. Alimentation électrique: Le socle de ce téléphone sans fil

doit être branché à une prise électrique fonctionnelle. La prise électrique ne doit pas être contrôlée par un interrupteu mural. Les appels ne pourront pas être effectués du combiné sans fil si le socle est débranché ou mis hors tension ou si le

téléphones sans fil fonctionnent sur des fréquences pouvant causer des interférences aux téléviseurs et aux agnétoscopes. Pour réduire ou prévenir de telles ou sur un téléviseur ou magnétoscope. S'il y a présence de parasites, il est conseillé d'éloigner le téléphone sans fil du téléviseur ou du magnétoscope afin de réduire possibleme les interférences.

Piles rechargeables: Manipulez les piles avec soin afin de Les piles ou le conducteur peut surchauffer et causer des blessures. Respectez la polarité adéquate entre la pile et le

Ne les incinérez pas et ne les percez pas. Tel que les autres piles de ce type, elles pourraient dégager une matière toxique qui peut causer des blessures corporelles si elles sont brûlées ou percées.

Missed call indicator

When there are calls that have not been reviewed in the caller ID log, the handset displays XX missed

Each time you review a caller ID log entry marked

NEW, the number of missed calls decreases by

When you have reviewed all the missed calls, the missed call indicator no longer displays.

If you do not want to review the missed calls one by one, press and hold CANCEL on the idle handset to erase the missed call indicator. All the entries are then considered old.

Dial a caller ID log entry

- 1. Search for or review the caller ID log entries (see Review a caller ID log entry).
- 2. When the desired entry appears, press TALK or ■)) to dial

Save a caller ID log entry to the phonebook

- 1. Search for or review the caller ID log entries (see Review a caller ID log entry). 2. When the desired caller ID log entry displays
- oress **SELECT**.
- 3. Use the dialing keys to edit the number, if necessary. Then press **SELECT**.
- 4. Use the dialing keys to edit the name, if necessary. Then press **SELECT** to save.
- 1. Search for or review the caller ID log entries (see Review a caller ID log entry).

Delete the caller ID log entries

2. When the desired caller ID log entry displays, press **DELETE**.

To delete all caller ID log entries:

- 1. Press **MENU** when the phone is not in use.
- 2. Scroll to Caller ID log and then press SELECT. 3. Scroll to Delete all and then press SELECT.
- 4. When the screen shows **Delete all?**, press

SELECT to confirm.

SOUND SETTINGS

You can turn the key tone on or off.

1. Press MENU when the handset is not in use.

3. Scroll to choose **Key tone**, then press **SELECT**.

4. Scroll to chooseOn or Off, then press SELECT

You can choose from different ringer tones for

1. Press MENU when the handset is not in use.

4. Scroll to sample each ringer tone, then press

You can adjust the handset ringer volume level, or

1. Press **MENU** when the handset is not in use.

3. Press **SELECT** again to choose **Ringer volume**.

4. Press ▼ or ▲ to sample each volume level,

NOTE: When the ringer volume is set to Off, the handset still rings when you press

FIND HANDSET at the telephone base.

When the telephone is ringing, you can temporarily

silence the ringer without disconnecting the call. The

• Press OFF or MUTE on the handset. The handset

next call rings normally at the preset volume

displays 🔌 and **Ringer muted** briefly.

You can turn on the quiet mode for a period of

tone) and call screening are muted.

and then press **SELECT** to save.

time. During this period, all tones (except paging

1. Press and hold QUIET# on the handset when it

2. Use the dialing keys (0-9) to enter the duration,

QUIET# on the handset when it is not in use.

• To turn off the quiet mode, press and hold

2. Scroll to **Ringers** and then press **SELECT**.

then press **SELECT** to save.

Temporary ringer silencing

To silence the handset ringer

Quiet mode

is not in use.

2. Scroll to **Ringers** and then press **SELECT**.

3. Scroll to choose **Ringer tone**, then press

NOTE: If you turn off the ringer volume, you will not hear ringer tone samples.

2. Scroll to **Settings** and then press **SELECT**.

Key tone

to save.

Ringer tone

each handset.

SELECT.

SELECT to save.

Ringer volume

turn the ringer off.

- TELEPHONE SERVICE
- Voicemail is a feature available from most telephone service providers. It may be included with your telephone service, or may be optional.

RETRIEVE VOICEMAIL FROM

Retrieve voicemail

Fees may apply.

When you received a voicemail, the handset displays and New voicemail. To retrieve, you typically dial an access number provided by your telephone service provider, and then enter a security code. Contact your telephone service provider for instructions on how to configure the voicemail settings and listen to messages.



NOTE: After you have listened to all new voicemail messages, the indicators on the handset turn off automatically.

Set your voicemail number You can save your access number on each handset

for easy access to your voicemail. After you saved the voicemail number, you can press and hold **1** to retrieve voicemail

- 1. Press **MENU** when the phone is not in use. 2. Scroll to **Settings** and then press **SELECT**.
- 3. Scroll to Voicemail # and then press SELECT.
- 4. Use the dialing keys to enter the voicemail number (up to 30 digits).
- 5. Press **SELECT** to save.

Clear the new voicemail indicators If you have retrieved your voicemail while away

from home, and the handset still displays the new voicemail indicators, use this feature to clear the



only, it does not delete your voicemail messages 1. Press **MENU** when the phone is not in use.

NOTE: This feature clears the indicators

- 2. Scroll to **Settings** and then press **SELECT**.
- 3. Scroll to Clr voicemail and then press SELECT.
- 4. Press **SELECT** again to confirm. You hear a confirmation tone.

ECO MODE

This power conserving technology reduces power consumption for optimal battery performance. The ECO mode activates automatically whenever the handset is synchronized with the telephone base.

GENERAL PRODUCT CARE

Taking care of your telephone

Your cordless telephone contains sophisticated electronic parts, so it must be treated with care

Avoid rough treatment

Place the handset down gently. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

should retain its luster for many years. Clean it

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electrical appliances during storms

Cleaning your telephone Your telephone has a durable plastic casing that

only with a dry non-abrasive cloth. Do not use dampened cloth or cleaning solvents of any kind.

NEED HELP?

online help.

For operations and guides to help you using your telephone, and for the latest information and supports, go and check the online help topics and

Use your smartphone or mobile device to access our

 Go to https://help.vtechphones.com/CS6719 (US): OR https://phones.vtechcanada.com/en/support/ general/manuals?model=CS6719 (Canada)

• Scan the QR code on the

right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame it. Tap the notification to trigger the redirection of the online help.

displayed, adjust your camera's focus by moving your device closer or further away until it is You can also call our Customer

- If the QR code is not clearly

Support at 1 (800) 595-9511 [in US] or 1 (800) 267-7377 [in Canadal for help.





(For the US only)

FOR C-UL COMPLIANCE ONLY

Mesures de sécurité importantes Afin de réduire les risques d'incendie, de blessures

corporelles ou d'électrocution, suivez toujours ces mesures éventives de base lorsque vous utilisez votre téléphone

- 2. Observez toutes les instructions et mises en garde inscrites Débranchez ce téléphone de la prise murale avant de le
- nettoyer. N'utilisez pas de nettoyeurs liquides ni en aérosol N'utilisez qu'un chiffon doux et légèrement humecté. 4. ATTENTION: Ne pas installer le socle téléphonique à une
- nauteur supérieure à 2 mètres. N'utilisez pas ce produit près de l'eau, tel que près d'un bain, d'un lavabo, d'un évier de cuisine, d'un bac de lavage ou d'une piscine, ou dans un sous-sol humide ou sous la

Évitez d'installer le système téléphonique dans les endroits

- Ne déposez pas ce téléphone sur un chariot, support ou table chancelants. L'appareil pourrait tomber et être sérieusement endommagé.
- soumis à une température extrême, à la lumière directe du soleil ou à proximité immédiate d'autres appareils électriques ou électroniques. Protégez votre téléphone ontre les sources d'humidité, la poussière, les vapeurs et 8. Le boîtier de l'appareil est doté de fentes et d'ouverture d'aération situées à l'arrière ou en dessous. Afin d'empêcher la surchauffe, ces ouvertures ne doivent pas être obstruées en plaçant l'appareil sur un lit, divan, tapis ou autre surface similaires. Ne placez pas cet appareil à proximité d'un élément de chauffage ni d'une
- d'aération adéquate. 9. Ne faites fonctionner cet appareil qu'avec le type Si vous ne connaissez pas le voltage de votre maison

plinthe électrique. De plus, ne l'installez pas dans une

10. Ne déposez rien sur le cordon d'alimentation. Installez cet appareil dans un endroit sécuritaire, là où personne ne pourra trébucher sur la ligne d'alimentation ni le cordon 11. N'insérez jamais d'objets à travers les fentes et ouvertures de cet appareil, car ils pourraient toucher à des point

de tension dangereux ou court-circuiter des pièces, ce qui constituerait un risque d'incendie ou d'électrocution.

consultez votre marchand ou votre fournisseur d'électricité

- N'échappez pas de liquides dans l'appareil. 12. Afin de réduire les risques d'électrocution, ne démonter pas l'appareil, mais apportez-le plutôt à un centre de service qualifié s'il doit être réparé. En enlevant le couvercle, vous vous exposez à des tensions dangeres ou autres dangers similaires. Un remontage inadéquat peut être à l'origine d'une électrocution lors d'une ıtilisation ultérieure de l'appareil. Débranchez l'appareil avant de procéder au nettoyage. Utilisez un chiffor humide et doux.
- 14. Débranchez cet appareil de la prise de courant et communiquez avec le département de service à la clientèle de VTech dans les cas suivants : • Lorsque le cordon d'alimentation est endommagé ou

13. Ne surchargez pas les prises de courant et les rallonges

- écorché. · Si du liquide a été échappé dans l'appareil. Si l'appareil a été exposé à une source d'humidité telle
- que la pluie ou l'eau. Si le produit ne fonctionne pas normalement en respectant les instructions de fonctionnement. Réglez

uniquement les commandes indiquées dans le les

instructions de fonctionnement. Les réglages incorrects

- échapperait est corrosif et pourrait causer des brûlures ou des blessures aux yeux ou à la peau. L'électrolyte est

Avis aux détenteurs de stimulateurs cardiaques

- Ils doivent tenir le téléphone sans fil à une distance d'au moins six pouces du stimulateur cardiaque.

courant est coupé. Possibilité d'interférences aux téléviseurs : Certains

: Jetez ces blocs-piles de manière écologique et sécuritaire

- Ne jetez pas la pile au feu. Vérifiez les instructions spécifiques de mise aux rebus auprès des autorités locales. N'ouvrez pas et ne mutilez pas la pile. L'électrolyte qui s'en
- Soyez prudents lorsque vous manipulez les piles afin d'éviter les courts-circuits provoqués par des matériaux

- chemise, lorsque celui-ci est en marche

Confidentialité: Les mêmes caracté pas percevoir les communications téléphoniques sans fil comme étant aussi confidentielles que celles des téléphones

ences, ne placez pas le socle du téléphone sans fil près

Les bloc-piles rechargeables à l'hydrure métallique de nickel



The RBRC seal on the nickel-metal hydride battery indicates that VTech Communications, Inc. is voluntarily participating in an industry ogram to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

FCC, ACTA and IC regulations

NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or elevision reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Regrient or relocate the receiving antenna
- WARNING: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any

riteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the approximately 20 cm (8 inches) or more. This Class B digital apparatus complies with Canadian

CAN ICES-3 (B)/NMB-3(B).

FCC Part 68 and ACTA

provider upon request



The RBRC program provides a convenient alternative to placing used nickel-metal hydride batteries into the trash or municipal waste, which may be illegal in your area. VTech's participation in RBRC makes it easy for you to drop off the spent battery at local retailers participating in the RBRC program or at authorized VTech product service centers. Please call **1 (800) 8 BATTERY®** for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources. The RBRC Seal and 1 (800) 8 BATTERY® are registered

FCC Part 15

- Increase the separation between the equipment and
- Connect the equipment into an outlet on a circuit different om that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician

interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this telephone.

intended usage of the product. This product has been tested and found to comply with the FCC/ISEDC criteria. The handset may be safely held against the ear of the user. The telephone base shall be installed and used such that parts of the user's body other than the hands are maintained at a distance of

This equipment complies with Part 68 of the FCC rules and

with technical requirements adopted by the Administrativ Council for Terminal Attachments (ACTA). The label on the

nings, a product identifier in the format US:AAAEQ##TXXXX.nis identifier must be provided to your telephone service

back or bottom of this equipment contains, among other

To ensure safety of users, the FCC/ISEDC has established

The plug and jack used to connect this equipment to premise wiring and the telephone network must comply with applicable Part 68 rules and technical requirements adopted by ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected

should normally be used for connecting to a single line and ar RJ14 jack for two lines. See the installation instructions in the user's manual. The Ringer Equivalence Number (REN) is used to determine how many devices you may connect to your telep and still have them ring when you are called. The REN for this oduct is encoded as the 6th and 7th characters following to the product identifier (e.g., if # is 03, the REN is 0.3). I most, but not all areas, the sum of all RENs should be five (5.0)

or less. For more information, please contact your telephone service provider.

This equipment must not be used with Party Lines. If you have

a compatible modular jack that is also compliant. An RJ11 jack

specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone service provider or a qualified installe If this equipment is malfunctioning, it must be unplugged from the modular jack until the problem has been corrected. Replacement to this telephone equipment can only be made by the manufacturer or its authorized agents. For replacement

Limited warranty. If this equipment is causing harm to the telephone network the telephone service provider may temporarily discontinu your telephone service. The telephone service provider is required to notify you before interrupting service. If advance notice is not practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem and one service provider is required to inform you of your right to file a complaint with the FCC. Your telephone service provider may make changes in its facilities, equipment operation, or procedures that could affect the proper functioning of this product. The telephone service provider is

ocedures, follow the instructions outlined under the

If this product has memory dialing locations, you may choose to store emergency telephone numbers (e.g., police, fire, medical) in these locations. If you do store or test emergency

Remain on the line and briefly explain the reason for the call

If this product is equipped with a corded or cordless handset,

Perform such activities in off-peak hours, such as early morning or late evening **Industry Canada** This device contains licence-exempt transmitter(s)/receiver(s)

that comply with Innovation, Science and Econo

(1) This device may not cause interference (2) This device must accept any interference, including interference that may cause undesired operation of the

The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN indicates the maximum number of devices allowed to be connected to a telephone interface.

This product meets the applicable Innovation, Science and nic Development Canada technical specifications

his telephone is set up to comply with the energy-conserving standards right out of the box. These instructions are intended

- batteries before proceed
- CEC battery charging testing mode, all handsets display To

Communications, Inc. ("VTech"), warrants to the holder of a workmanship, pursuant to the following terms and conditions

During the limited warranty period, VTech's authorized service representative will replace at VTech's option, without charge, a Materially Defective Product. If we choose to replace the Product, we may replace it with a new or refurbished Produc

ONF (1) YEAR from date of purchase (90 days on products the date the replacement Product is shipped to you or (b)

- telephone functions, except battery charging, will be disabled To activate the CEC battery charging testing mode:
- telephone base power adapter back to the power outlet 3. After about 20 seconds, when the **IN USE** light starts

When the phone fails to enter this mode, repeat Step 1 through

powered up as normal 2. Place the handset in the telephone base to register it back. The handset displays **Registering...**

What does this limited warranty cover: The manufacturer of this VTech product, VTech valid proof of purchase ("Consumer" or "you") that the Product and all accessories provided by VTech in sales package ("Product") are free from material defects in material and when installed and used normally and in accordance with operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United

from material defects in materials and workmanship during the limited warranty period ("Materially Defective Product") of the same or similar design. VTech will return replacement

How long is the limited warranty period he limited warranty period for the product extends for e time remaining on the original one-year limited warra (90-day limited warranty on products that are purchased as

What is not covered by this limited warranty? This limited warranty does not cove

 Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation abnormal operation or handling, neglect, inundation,

fire, water or other liquid intrusion; or

- Product that has been damaged due to repair, alteration or modification by anyone other than an authorized service representative of VTech; or Product to the extent that the problem experienced is
- with non-VTech electrical accessories; or Product whose warranty/quality stickers, Product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or
- Product purchased, used, serviced, or shipped for repair from outside the United States, or used for com or institutional purposes (including but not limited to Products used for rental purposes); or

Product returned without valid proof of purchase (see 2

Charges for installation or set up, adjustment of custome controls, and installation or repair of systems outside the

How do you get warranty service? To obtain warranty service in the United States of America, please visit our website at www.vtechphones.com or call L (800) 595-9511 for instructions regarding where to return the Product. In Canada, go to phones.vtechcanada.com or dial

NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may

Except as provided by applicable law, you assume the risk

responsible for delivery or handling charges incurred in the transport of Product(s) to the service location. VTech will return replaced product under this limited warranty to you transportation, delivery or handling charges prepaid. VTech issumes no risk for damage or loss of the Product in transit

What must you return with the Product to get warranty

Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; Include "valid proof of purchase" (sales receipt)

identifying the Product purchased (Product model) and

Provide your name, complete and correct mailing Other limitations

the date of purchase or receipt; and

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this product. VTech provides

not apply to you.

1 (800) 267-7377.

save you a service call.

describes all of VTech's responsibilities regarding the product. There are no other expressed warranties. No one is authorized to make modifications to this warranty and you should not rely on any such modification. State Law Rights: This warranty gives you specific legal rights and you may also have other rights which vary from state to

Limitations: Implied warranties, including those of fitness for a

at the product is fit for ordinary use) are limited to one year

from date of purchase. Some states do not allow limitations on

how long an implied warranty lasts, so the above limitation may

use of this product. Some states do not allow the exclusion limitation of incidental or conseque above limitation or exclusion may not apply to you

In no event shall VTech be liable for any indirect, special

ncidental, consequential, or similar damages (including,

but not limited to lost profits or revenue, inability to use the

product, or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the

Please retain your original sales receipt as proof of DISCLAIMER AND LIMITATION OF

LIABILITY VTech Communications, Inc. and its suppliers assume no responsibility for any damage or loss resulting from the use of this user's manual. VTech Communications, Inc. and its

suppliers assume no responsibility for any loss or claims by

third parties that may arise through the use of this product.

Company: VTech Communications, Inc. Address: 9020 SW Washington Square Road - Ste 555 Tigard,

Phone: 1 (800) 595-9511 in the U.S. or 1 (800) 267-7377 in

TECHNICAL SPECIFICATIONS

OR 97223, United States

Frequency

requirement

Memory

Power

control	
Transmit frequency	Handset: 1921.536-1928.448 MHz Telephone Base: 1921.536-1928.44 MHz
Channels	DECT channel: 5
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range ma

Crystal controlled PLL synthesizer

vary according to environmental

conditions at the time of use.

Handset: 2.4V Ni-MH battery

Charger: DC 6V @ 0.4A

 
Telephone base: DC 6V @ 0.4A

Phonebook: 50 memory locations;

Caller ID log: 50 memory locations;

up to 30 digits and 15 characters

up to 24 digits and 15 characters



reduced noise and interference when used with most T-coil equipped hearing aids and cochlear implants. The TIA-1083 Compliant Logo is a trademark of the nmunications Industry Association. Used under license. The ENERGY STAR program (www.



energystar.gov) recognizes and encourages the use of products that save energy and help protect our environment. We are proud to mark this product with the ENERGY STAR label indicating it meets the latest energy

it is hearing aid compatible.

before hanging up.

this telephone.

Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions

Privacy of communications may not be ensured when using

The term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications

The termination of an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices not exceed five.

CALIFORNIA ENERGY COMMISSION

for California Energy Commission (CEC) compliance testing o When the CEC battery charging testing mode is activated, all

- outlet. Make sure all handsets are plugged with charged 2. While you press and hold /FIND HANDSET, plug the

LIMITED WARRANTY

States of America and Canada

What will VTech Communications do if the Product is not free

purchased as Refurbished*). This limited warranty also applies to replacement Products for a period of either (a) 90 days from

caused by signal conditions, network reliability or cable or antenna systems; or Product to the extent that the problem is caused by use

To deactivate the CEC battery charging testing mode: 1. Unplug the telephone base power adapter from the power outlet, and then plug it back in. Then the telephone base is

products to you in working condition. VTech will retain defective parts, modules, or equipment. Replacement of

the Product, at VTech's option, is your exclusive remedy. You

should expect the replacement to take approximately 30 days

Refurbished*), whichever is longer

*Refurbished products purchased from our online store carry a

90-day replacement warranty.

BATTERY CHARGING TESTING

INSTRUCTIONS

- 1. Unplug the telephone base power adapter from the power
- flashing, release #/FIND HANDSET and then press it again within 2 seconds. When the phone successfully enters the

The handset show **Registered** and you hear a beep when the registration process completes. The registration process takes about 60 seconds to complete.