Go to wayy ytechnhones com to register your product for enhanced warranty support and latest VTech product news

DS6291 DS6291-2 DS6291-3

DECT 6.0 cordless telephone with BLUETOOTH® wireless technology





aids and cocniear implants The TIA-1083 Compliant Logo is a trademark of the mmunications Industry

Congratulations

on purchasing your new VTech product. Before using this product, please read Important safety instructions.

This user's manual provides you with installation and use instructions. Please read this manual thoroughly to ensure proper installation and operation of this VTech product.

For support, shopping, and everything new at VTech visit our website at



o not place this product on an unstable ble, shelf, stand or other unstable surfa 6. Slots and openings in the back or bottom of the telephone base and handset are provided for ventilation. To protect them from overheating, these openings must no be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register. This product should not be placed in any area where

proper ventilation is not provided. proper ventilation is not provided.

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home or office, consult your dealer or local power company 8. Do not allow anything to rest on the powe

cord. Do not install this product where the cord may be walked on. cord may be walked on.

Never push objects of any kind into this product
through the slots in the telephone base or
handset because they may touch dangerous
voltage points or create a short circuit. Never
spill liquid of any kind on the product.

10. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the telephone base or handset other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling car cause electric shock when the product is subsequently used

Use only the power adapters supplied with this product.

Even if you do not subscribe to any

If you subscribe to telephone service

11. Do not overload wall outlets and extension

even if you do not subscribe to any conventional telephone service, you can pair a Bluetooth enabled cell phone to your telephone base (see Bluetooth), and use the cell line alone without plugging in a telephone line cord.

Important safety instructions

When using your telephone equipment, basic ione chould always he followed to reduce the risk of fire, electric shock and injur including the following:

- Read and understand all instructions
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aeroso cleaners. Use a dry non-abrasive cloth for
- 4. Do not use this product near water such as near a bath tub. wash bowl, kitchen sink laundry tub or a swimming pool, or in a wet basement or shower
 - If the product exhibits a distinct change in performance.
 - Avoid using a telephone (other than cordless) during an electrical storm. There is a remote risk of electric shock from lightning.

If the product has been dropped and the

one hase and/or handset has been

12. Unplug this product from the wall outlet

facility under the following conditions

and refer servicing to an authorized service

When the power supply cord or plug is damaged or frayed.

. If liquid has been spilled onto the product

. If the product has been exposed to rain or

- 14. Do not use the telephone to report a gas leak in the vicinity of the leak. Under certain circumstances, a spark may be created when the adapter is plugged into the wall outlet, or when the handset is replaced in its cradle. This is a common event associated with the closing of any electrical circuit. The user should not plug the phone into a wall outlet, and should not put a charged handset into the cradle, if the phone is located in an environment containing concentrations of flammable or flame-supporting gases, unless there is adequate ventilation. A spark in such an environment could create a fire of explosion. Such environments might include: medical use of oxygen without adequate entilation: industrial dases (cleaning solvents; gasoline vapors; etc.); a leak of
- 15. Only put the handset of your telephone next to your ear when it is in normal talk mode. to your ear when it is in normal talk mode.
 16. The power adapter is intended to be correctly oriented in a vertical or floor mount position.
 The prongs are not designed to hold the plug in place if it is plugged into a ceiling, underthe-table or cabinet outlet.

SAVE THESE INSTRUCTIONS

Battery

- . Use only the battery provided or equivalen To order a replacement, visit our website a www.utochphonos.com.or.coll W.Vtechphones.com or can 100) 595-9511. In Canada, go to
- www.vtechcanada.com or call 1 (800) 267-7377. Do not dispose of the battery in a fire. Check
- with local waste management codes for special disposal instructions. Do not open or mutilate the battery. Beleased electrolyte is corrosive and may cause burns or injury to the eyes or skin. The electrolyte
- water.

 If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and often requires extensive work by an authorized technician to restore the product to normal operation. may be toxic if swallowed.

 Exercise care in handling batteries in order not to create a short circuit with conductive
 - Charge the battery provided with or identified for use with this product only in accordance with the instructions and limitations specified in

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital ordiace talanhonae)

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless telephones and nted cardiac nacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

· Should keep wireless telephones at least six inches from the nacemaker

- Should NOT place wireless telephones directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- Should use the wireless telephone at the ear opposite the pacemaker.
- ned or punctured, they could rele WTR's evaluation did not identify any risk to caustic material which could cause injury using wireless telephones.

Your product package contains the following items. Save your sales receipt and original











Quick start quide







Abridged user's manual



1 - CHARGE light

2 – LCD display 3 - Soft keys

6 – 1 🐯

7 - X-tone

While in a menu, press to select an item: or

4 - (t)/CELL 1 and (t)/CELL 2

5 - M/HOME/FLASH Answer an incoming home call when you hear a call waiting alert.

Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.
Press and hold to set or dial your voicemail number.

While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

handset is ringing.

Press and hold to erase the missed call indicator while the phone is not in use.

Press to return to the previous menu, or press and hold to return to idle mode, without making changes. Make or answer a home call.
 Press to put the current call on hold.

 Prace to add a enace when entering names 15 - #quiet

8 - M • Make or answer a call using the handset

9 - REDIAL/PALISE

11 - PUSH TO TALK

12 - VOLUME/^63

VOLUME/S/CID

12 OFFICANCEI

10 - Ferniece

buring a call, press to switch between the speakerphone and the handset.

E stedly to review the redial list

Press and hold to insert a dialing pause while entering a number

Press to display the Push to talk (PTT) menu to begin a PTT call.

Press and hold to begin a one-to-group PTT call.
 Press and hold while talking in a PTT call.

Review the directory when the phone is not

in use.
Increase the listening volume during a call or

message playback.

Scroll up while in a menu, or in the directory, caller ID log, or redial list.

Move the cursor to the right when entering numbers or names.

Beview the caller ID log when the phone is

not in use.

Decrease the listening volume during a call or message playback.

Scroll down while in a menu, or in the directory, caller ID log, or redial list.

Move the cursor to the left when entering numbers or names.

Press and hold to enter quiet mode Press repeatedly to show other dialing options when reviewing a caller ID log entry.

16 - MUTE/DELETE

Mute the microphone during a call Delete digits or characters while using the dialing keys.

Delete the playing message on the handset

Silence the ringer temporarily while the handset is ringing.

For Android cell phones, you may also download your cell phone contacts to your D\$6291 via the VTech Contact Share application. Scan the QR code on the right, or

Press MENU on the handset or telephone

Press SELECT to enter that menu. To return to the previous menu, press CANCEL

To return to idle mode, press and hold CANCEL connected to the telephone base, the Θ_2 icon displays. The CELL 2/HEADSET Θ light turns on

menu		
LCD anguage	Set the screen display language.	English* Français Español
Voice anguage	Set the voice prompt language.	English* Français
Voicemail#	Save the speed dial voicemail number to 1 .	Voicemail#
Clear voicemail	Turn off the voicemail indicators (see the note below).	Reset Voicemail indication?
Key tone	Turn an audible beep on or off whenever a key is pressed.	1; 2*; 3; Off
CID time	Turn the CID time sync	On

2. Scroll to Bluetooth, and then press STATE Scroll to Download dir, and then press SELEGI

5. Press OK to exit when the download is

npleted.

For certain cell phones, you may need to press a key on your cell phone to confirm the directory download.

The performance of directory download feature depends on the compatibility of your Bluetooth cell phone. Refer to the user's manual of your cell phone for more information about how that device uses Bluetooth connectivity.

Visch Connect to CellTM application.
This application helps you integrate your Android phones with your Deader.
For more information and application.

And scan the Officede on the Connection of the Connection right, or go to http://www.vtechphones.com/app_cor Download contacts from your Bluetooth

When the headest is successfully

1. Press MENU on the telephone base when idle

Scroll to choose among Phone memory, SIM card only, or Phone and SIM, and ther press SELECT.

If you have downloaded contacts before, press (NEXT) to start downloading.

Certain cell phones do not support SIM card download. If this is the case, transfe the contacts from your SIM card to your cell phone memory first. Then download from your cell phone memory. For more information on how to transfer contacts fr your SIM card to your cell phone memory see the user's manual of your cell phone

While in a menu press to select an item: or

Press repeatedly to add or remove 1 in front of the caller ID log entry before dialing or saving it to the directory.
 Press and hold to set or dial your voicemain number.

- Hang up a call.
 Silence the ring Hang up a call.
 Silence the ringer temporarily while the telephone base is ringing.

 Press and hold to erase the missed call indicator while the phone is not in use.
- Press to return to the previous menu, or press and hold to return to idle mode, w

4 - FIND HANDSET Press to page all system handsets

- Press to put the current home call on hold. Answer an incoming home call when you hear a call waiting alert.
- 6 ▲/VOL/▼
 Artist the volume during a call or message 21 - ₱/SKIP
 - рыураск. Adjust the telephone base ringer volume when the phone is not in use.
- While you have set the dial mode to pulse and on a call, press to switch to tone dialing temporarily.

 23 A/HOME

 Make or
- 8 Charging pole

Abridged user's manual

- Press and hold to begin a one-to-group PTT call.
 Press and hold while talking in a PTT call.
- 10 MIC (Microphone)
- 12 CELL 1 and CELL 2/HEADSET (1) lights On when the telephone base is paired and connected with a Bluetooth device

13 - LCD display

- 17 CVANS ON/OFF

Turn the answering system on or off

- Make or answer a cell call.
 Answer an incoming cell call when you hear a call waiting alert.
- Delete the playing message. Press twice to delete all previously revie messages when the phone is not in use

20 - ₩REPEAT

. Press to display the PTT menu to begin a PTT call.

vtech

- 11 Droes

Flash when the telephone base is in

Press and hold to insert a dialing pause while entering a number.

- 16 PHONEBOOK / ▲
- Scroll up while in a menu, or in the directory.
- 18 (1) CELL 1 and (1) CELL 2

- 22 F/M/PLAY/STOP

- 24 MUTE
- 25 IISB nort

Press to add a space when entering names

14 - REDIAL/PAUSE

15 - CALLER ID / ▼ w the caller ID log when the phone is

- 19 X/DELETE Delete digits or characters while using dialing

- Press to repeat a message.
 Press twice to play the previous message.
- Play messages. Stop playing messages
- Make or answer a home call

- Mute the microphone during a call
- The standard size USB port in the telephor base is used for charging your cell phones



1 - Charging pole





- Silence the ringer temporarily while the telephone base is ringing.
 - extedly to show other dialling options wing a caller ID log entry



Install the battery as shown below Use only the battery provided or equivalent.









. For best performance, keep the handset The battery is fully charged after 12 hours of continuous charging.

charge indicators and actions to take.					
	Battery indicators	Battery status	Action		
	The screen is blank, or shows Place in charger and ⇒ flashes.	The battery has no charge or very little charge. The handset cannot be used.	Charge without interruption (at least 30 minutes).		
	The screen shows Low battery and flashes.	The battery has enough charge to be used for a short time.	Charge without interruption (at least 30 minutes).		
	The screen shows HANDSET X.	The battery is charged.	To keep the battery charge place it in the telephone base		

The following table summarizes the hatteny

The telephone comes ready for tabletop use. If you have already installed the telephone for tabletop use, unplug the telephone line cord from the telephone wall jack, and unplug the telephone base power adapter from the wall outlet before mounting your telephone on a wall. Follow the steps below to mount your telephone on a wall.

Press down on the tabs on the wall mount bracket on the telephone base to release it from tabletop









Slide the telephone base down until it clicks so in place. Bundle the telephone line cord and

Operating range This cordless telephone operates with the maximum power allowed by the Federal Communications Commission (FCC). Even so, this handset and telephone base can

If you choose to set up the date and time, you can do it manually. Set date and time Use the dialing keys (0-9) to enter the month, date, and year, and then press NEXII.

To skip setting, press CANCEL IMPORTANT:

If you do not hear a dial tone:

Make sure the installation procedures
described above are properly done.

It may be a wiring problem. If you have
changed your telephone service to digital
service from a cable company or a VolP
service provider, the telephone line may
need to be rewired to allow all existing
telephone jacks to work. Contact your cable/
VolP service provider for more information.

to minimize and telephone base can communicate over only a certain distance which can vary with the locations of the elephone base and handset, the weather, and the layout of your home or office. When the handset is out of range, the handset displays Out of range OR no power at base

alternately. If there is a call while the handset is out of range, it may not ring, or if it does ring, the call may not connect well when you press #/HOME or *P/CELL. Move closer to the telephone base,

headset with your DS6291, you must first pair

a short range (a maximum of approximately 30 feet). When you pair a Bluetooth cell phone

3. Press STATEMI to choose Add device.

4. Press SELECT to choose Add cellular.

Disconnect your cell phone from any Bluetooth device, and then press NEXII.

Place your cell phone next to the telephone base, and then press NEXT.

Use the dialing keys (0-9) to enter the hour and minute.

About cordless telephones

Privacy: The same features that make a

between the telephone base and the

cordless telephone convenient create some

limitations. Telephone calls are transmitted

cordless handset by radio waves, so there

is a possibility that the cordless telephone

conversations could be intercented by radio

receiving equipment within range of the cordless handset. For this reason, you should

not think of cordless telephone conversations

Electrical power: The telephone base of this.

cordless telephone must be connected to a

should not be controlled by a wall switch.
Calls cannot be made from the cordless

interrupted

handset if the telephone base is unplugged, switched off or if the electrical power is

Potential TV interference: Some cordless

telephones operate at frequencies that may

cause interference to televisions and VCRs

To minimize or prevent such interference, do not place the telephone base of the cordless

telephone near or on top of a TV or VCR.
If interference is experienced, moving the

TV or VCR often reduces or eliminates the

cordless telephone farther away from the

Rechargeable batteries: Evergise gare in

handling batteries in order not to create a

conductor may overheat and cause harm

Nickel-metal hydride rechargeable batteries: Dispose of these batteries in a

safe manner. Do not burn or puncture the

hattery Like other batteries of this type if

short circuit with conducting material such as rings, bracelets and keys. The battery or

Observe proper polarity between the battery and the battery charger.

working electrical outlet. The electrical outlet

as being as private as those on corded

If you do not hear a dial tone:

To use a Bluetooth enabled cell phone or

 Scroll to choose AM or PM, and then press
 SAVE to save. Bluetooth wireless technology operates within

30 teet). When you pair a Billetooth cell phone to the telephone base, place your Billetooth cell phone closer to the telephone base to maintain sufficient signal strength. For optimal performance, keep your cell phone within 15 feet of the telephone base while using the cell line. Check for a dial tone by pressing #/HOME. If you hear a dial tone, the installation is

Pair and connect your Bluetooth enabled cell phone

1. Press MENU on the telephone base when idle. Press CALLER ID/▼ or PHONEBOOK/▲ to scroll to Bluetooth, and then press SELECTI

or \(\psi/CELL. \) Move closer to the telephone base, and then press \(\psi/MCBL \) to answer the call. If the handset moves out of range during a telephone conversation, there may be interference. To improve reception, move closer to the telephone base.

base, and then press XIEXAI

7. Turn on the Bluetoth feature of your cell
phone and search for or add new devices.
Once your cell phone finds VTech DS6291,
press the appropriate key on your cell phon
to continue the pairing process.

• Enter the PIN of your cell phone if required. The PIN for most Bluetooth devices is 0000 (refer to the user's manual of your cell phone), and then press SELECT.

press <u>SIREMI</u>.

When the cell phone is connected to the telephone base, the corresponding status icon (**(3**, or **(3**)) displays when idle. The corresponding device light (CELL 1 or CELL 2/HEADSET **(3**))

If the pairing fails, turn off the Bluetooth

feature on your cell phone. Then repeat the steps above to pair and connect again. In some cases, it may take you a few attempts to

Pair and connect your Bluetooth enabled Press MENU on the telephone base when idle

Press CALLER ID/Y or PHONEBOOK/A to scroll to Bluetooth, and then press SELECT.

Press SELECT to choose Add device. Press CALLER ID/▼ or PHONEBOOK/▲ to scroll to Add headset, and then press SIBION Disconnect your headset from any Bluetooth device, and then press NEXI.

i. Set your headset to discoverable mode, and then press NEXII. over press (14-3):

Scroll to highlight your headset if necessary, and then press SITEOI.

Enter the PIN of your headset if required The PIN for most Bluetooth devices is 0000 (refer to the user's manual of your headset), and then press SITEOI.

relephone settings		
efault sett	ings are indicated by as	terisks(*).
Settings menu	Description	Options
LCD language	Set the screen display language.	English* Français Español
Voice language	Set the voice prompt language.	English* Français
Voicemail#	Save the speed dial voicemail number to 1 .	Voicemail#
Clear voicemail	Turn off the voicemail indicators (see the note	Reset Voicemail



When the CID time sync feature is on, the

Set the telephone to be touch-tone or pulse Touch-ton

Use the Clear voicemail feature when the telephone indicates there is new voicemail but there is none. For example, when you have accessed your voicemail while away

The following are some of the telephone features you may wish to set

Ringer volume (handset)

You can adjust the handset ringer volume leve Press MENT on the handset when idle

Scroll to Ringers, and then press SELECT.

Press SELECT to select Ringer volume.

Scroll to adjust the volume, and then press If the handset ringer volume is set to off, that handset is silenced for all incoming calls

Ringer volume (telephone base)

You can adjust the base ringer volume leve when idle by pressing **▲/VOL/▼**.

Dinger tone You can choose from different ringer tones. 1 Press MaNII on the handset or telephone

- Scroll to Ringers, and then press SELECI.
- 3. Scroll to Ringer tone, and then press
- SERECTION STATES SERECTION STATES SERECTION STATES SERECTION STATES SERECTION STATES SERECTION SAVE.
- If you turn off the ringer volume, you will not hear ringer tone samples.

Sat data and time

If you subscribe to caller ID service, the day, month, and time are set automatically with each incoming call. You can also set the date and time manually. Press MENU on the handset or telephone

- 2. Scroll to Set date/time, and then press
- 3. Use the dialing keys (0-9) to enter the month, date, and year, and then press NEXT.

 4. Use the dialing keys (0-9) to enter the hour and
- Scroll to choose AM or PM, and then press
 SAVE to save. After first pressing %/CELL 1 or %/CELL 2, you may need to choose a coll discount.
- Quiet mode

You can turn on the quiet mode for a period of time. During this period, all tones (except paging tone) and call screening are muted. When you turn on the quiet mode, the answering system turns on automatically.

Use the built-in answering system and voicemail service

You can use your answering system and voicemail service together by setting your answering system to answer before voicemail service answers as described below. To learn how to program your voicemail settings, contact your telephone service provider. If you are on a call, or if the answering system is busy recording a message and you recei another call, the second caller can leave a

voicemail message.

Set your answering system to answer calls at least two rings earlier than your voicemail service is set to answer. For example, if your voicemail service answers after six rings, sel your answering system to answer after four ings. Some voicemail service providers ma ings. Some voiceman service provides his program the delay before answering calls in seconds instead of rings. In this case, allow six seconds per ring when determining the appropriate setting.

Retrieve voicemail from telephone service

Retrieve voicemail

When you received a voicemail, the handset displays
and New voicemail. To retrieve, oicemail settings and listen to messages

Expand your telephone system

Add and register a handset ess handsets DECT 6.0 cordies

headsets or speakerphones to your telephone system (purchased separately). Visit www.vtecheanada.com for a list of compatible devices. Your telephone system supports a maximum of 12 devices.

Additional devices registered to the telephone system are assigned numbers in the sequential order. Registe each device with the telephone base before use. When first purchased and properly charged, each expansion handset shows To register HS, see manual. Charge the handset before registering it

To register a DECT 6.0 cordless headset or speakerphore To register a handset:

Place the new/non-registered handset in the telephone base. The handset and telephone show Registering... Please wait.

1. Press and hold #quet on the handset or

Caller ID announce
The caller ID announce feature lets you know who's calling without having to look at the display. When you have an incoming call, the handset speaks "Call from..." and the name of the caller based on the phone-book or caller or unknown, the phone number up to the last I digits will be announced. If the caller's phone number is also private or unknown, no information will be announced.

Press MENU on the handset or telephone

Scroll to Anno Caller ID, and then press

Press #/HOME or # and then dial the

Press (ti)/CELL 1 or (ti)/CELL 2 on the handse

Caller ID appounce

SELECT to save.

Make a home call

Make a cell call

or base. Enter the to dial.

2. Use the dialing keys (0-9) to enter the note #quiet on the handset or telephone base

Proce OEE on the handest, or put the handest to the base or charger

Conference calls

To conference home and/or cell calls:

To select an option during a conference:

to choose On or Off, and then press Scroll to End Home line End Cell 1 line To use the caller ID announce feature

During a call, press ✓/VOLUME/^ on the handset or ▲/VOL/▼ on the telephone bas to adjust the listening volume.

akerphone are independent

Nute
he mute function allows you to hear the other
arty but the other party cannot hear you.

During a call, press MUTE on the handset or
telephone base. The screen displays Muted.

Press MUTE again to resume the conversatior
The screen displays Microphone ON.

you may need to choose a cell device.
Scroll to select the desired cell device in necessary, and then press \$\frac{3\text{3\text{-}}}{2\text{-}}\$ while using the cell line, place your cephone closer to the base, and make si that there are no physical obstacles bit the base and the cell phone, such as I furniture or thick walls.

Deregister all devices

To replace a handset or reassign the designated vandset number of a registered handset, you museregister all devices and then individually registe ach handset.

Press and hold FIND HANDSET on the telephone base for about 10 seconds, when the telephone base shows Deregister all devices? Immediately press #/FIND HANDSET again with 2 seconds.

handsets show To register HS, see manual illematery when the deregistration process of The deregistration process takes about 10 sec

ECO mode

er conserving technology reduces power tion for optimal battery performance. The ECO

aking care of your telephone

Avoid rough treatment
Place the handset down gently. Save the original 'ng materials to protect to ship it.

Avoid water
Your telephone can be damaged if it gets wet. Do not use the handset outdoors in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathlub or shower.

Electrical storms Electrical storms can

armful to electronic equipment. For your own safety, ta author when using electrical appliances during storms

Cleaning your telephone
Your telephone has a durable plastic casing that should with a durable plastic casing that should have been durable plastic casing the durable plastic casing the durable planting that should have been durabl r leveprione has a durable plastic casing that shot in its luster for many years. Clean it only with a non-abrasive cloth. Do not use dampened cloth o ning solvents of any kind.

Answer a home/cell call

Press 6/HOME, %/CELL 1, %/CELL 2, 4.

End a home/cell call

Press #8/HOME, \psi/CELL 1, or \psi/CELL 2

Press OPTION on the handset or telephon

Press OPTION on the handset or teleph base during a call.

Scroll to Conference, and then press

STECT. The conferencing devices' so display Conf.

Press OPTION on the handset or base.

End Cell 2 line, Equalizer, Caller ID log, or Directory, and then press STATEON. To use the caller ID announce feature, you must subscribe to caller ID service from your telephone service provider. When there are up to five handsets registered, the telephone system supports caller ID announce for all handsets. If six or more handsets are registered, the system supports caller ID announce for the

To end conference:

Press OFF on the handset, or put the handset to the telephone base or charger.

Press #6/HOME, #6/CELL 1, or #6/CELL 2

Handset sneakernhone During a call, press on the handset to switch

The volume settings of handset earpiece landset speakerphone, and base

When you subscribe to call waiting service from your telephone service provider, you hear an alert tone if there is an incoming call while you are on another call.

n you are not going to use the handset for ie, remove the rechargeable battery from iset. Store the handset, the charger and th dapter in a cool and dry place

quently asked questions

Below are the questions most frequently asked about puestion, contact customer service by visiting our le at www.vtechphones.com or call () 595-9511. In Canada, visit rechcanada.com or call 1 (800) 267-7377. My telephone • Make sure the telephone base is

	does not work at all.	installed properly, and battery is installed and charged correctly. For optimum daily performance, return the handset to the telephor base after use.
		 Make sure the handset has registered to the telephone base.
	The display shows No Line. I cannot dial out or get a dial tone.	 Make sure the telephone line cor is plugged into the telephone bas properly. Contact your telephone service provider (chargers may apply).
	I cannot add and connect my cell phone or headset to the telephone base.	Make sure you have collular coverage and the Blaetoch function of your cell phone or headate is turned on. See the metade is turned on. See the metade is turned on. See the metade is the second of t
	The cell phone reception in my house is poor and I cannot connect it to my DS6291.	 If there is a location in your hous with better reception, you can leave your cell phone at that location while you use the DS625 cell line. In order for this to work, the telephone base must be within 30 feet of the cell phone.
	The answering system does not answer after correct number of rings or does not record	 Make sure the answering system on. When the answering system is on, the telephone base and hands show ANS ON and the QANS ON light on the telephone base is on.

If toll saver is selected, the number of rings changes to two when there are new marranes

 Press FLASH to put the current call on hold and take the new call Press FLASH to switch back and forth

Call waiting on the home line:

Call waiting on the cell line:

Press M/CELL 1 or M/CELL 2, to put the current call on hold and take the new call Press (*)/CELL 1 or (*)/CELL 2 to switch

Temporary ringer silencing When the telephone is ringing, you can temporarily silence the ringer of the handse without disconnecting the call. The next call in normally at the preset volume.

ss MUTE, MUTE, CANCEL, or #quiet on

Temporary tone dialing

If you have pulse (rotary) service only, you can switch from pulse to tone dialing temporarily during a call.

During a call, press * Use the dialing keys to enter the relevant number. The telephone sends touch-tone signals. It automatically returns to pulse dialing mode after you end the call.

Find handest Use this feature to find all system handsets. To start paging:
Press */FIND HANDSET on the base. All idle handsets ring and display ** Paging **.

To mute paging:

Press MUTE, MUTE, CANCEL, or #quiet on the handset.

To end paging:

• Press //FIND HANDSET or STOP on the base OH-Press MB/HOME, ∜P/CELL 1, ∜P/CELL 2, ■I.

or any dialing key on the handset. Do not press and hold WFIND HANDSET for more than four seconds. It may lead to

Redial list

The base and each handset store the last 10 telephone numbers dialed. When there are already 10 entries, the oldest entry is deleted to make room for the new entry.

To review and dial a number from the redial list

The RBRC® seal

The RBRC® seal on the nickel-metal hydride battery

VTach's participation in BBBC® makes it easy for you to VTech's participation in RBRC" makes it easy for you to drop of the spent battery at local retailers participating in the RBRC" program or at authorized VTech product service centers. Please call 1 (600) 8 BATTERY" for information on N-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.



RBRC[®] is a registered trademark of Rechargeable Battery Recyclin Corporation.

FCC Part 15

Part to othe receral communications commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipm generates, uses and can radiate radio frequency o radio communications. However, there is no guarantee that interference will not occur in a particular nstallation. If this equipment does cause harmful interference to radio or television reception, which can determined by turning the equipment off and on, the ser is encouraged to try to correct the interference by the or more of the following measures:

Regrient or relocate the receiving antenna Increase the separation between the equipment and Connect the equipment into an outlet on a circuit different from that to which the receiver is connected Consult the dealer or an experienced radio/TV

Changes or modifications to this equipment not sy approved by the party responsible for ince could void the user's authority to op ioment. This device complies with Part 15 of the FCC rules.

2 Scroll or press REDIAL repeatedly until the

- desired entry displays.

 3 Press #/HOME W/CELL 1 W/CELL 2 or #

To delete a redial entry: When the desired redial entry displays, press

Join a call in progress You can use up to four system handsets at a time on a home line call. You can buy addition expansion handsets for this telephone base You can register up to five handsets to the

- ephone base. When a device is on a home call, press **%/HOME**
- when a device is on a home call, press **MHOME** or **II** on another device to join the call. Press **OFF** on the handset or **MHOME** on the base to exit the call. The call continues until all devices hang up.

Push-to-talk (PTT)

To start a PTT communication:

Press PUSH TO TALK on the handset or PTT on the base when idle. Scroll to a desired device or Group, and then press SELECT.

Only one device can talk at a time. Press and hold PUSH TO TALK while you are talking. Release PUSH TO TALK to let the other party respond.

Hea the intercom features for conversations

tween two devices.

Press MENU on then handset or telephone

Scroll to Intercom, and then press SELECT.

Use the dialing keys to enter a destination device number. device number. To answer the intercom call, press **%/HOME**, ⟨₱/CELL 1, ⟨₱/CELL 2, ■, or any dialing key

To end the intercom call, press **IND**. Transfer a call

While on an outside call, you can use the intercom feature to transfer the call from o

Press OPTION on the handset or telephone Scroll to Intercom, and then press SELECTI.
The current call is put on hold. Use the dialin keys to enter a destination device number.

ensure safety of users, the FCC has established eria for the amount of radio frequency energy criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The base shall be installed and used such that parts of all persons' body are maintained at ance of approximately 8 in (20 cm) or more. This Class B digital apparatus complies with Canadian

requirement: CAN ICES-3 (B)/NMB-3(B)

ECC Part 68 and ACTA This equipment complies with Part 68 of the FCC
rules and with technical requirements adopted by
the Administrative Council for Terminal Attachmen the Administrative Council for Terminal Attachm (ACTA). The label on the back or bottom of this

(ACTA). The label on the basic or bottom of this ecuprement contains, among other things, a product identifier in the Cormat USA-DB year templates service provider upon request.

The plug and jack used to connect this equipment to premise writing and the telephone revoke comply with applicable Part 66 rules and technical comply with applicable Part 66 rules and technical conditions of the product of the connection of the conditions of the connection of the conditions of the connection of the conditions of the conditions of the conditions of the conditions of the connection of the conditions of the connection of the conditions of the connection of the connection of connections of connectio used for connecting to a single line and an RJ14 k for two lines. See the installation instructions in

he Ringer Equivalence Number (REN) is used The kinger Equivalence Number (REN) is used to determine how many devices you may connect to your telephone line and still have them ring when you are called. The REN for this product is encoded as the 6th and 7th characters following the US: In the product identifier (e.g., 1ft #1 0.3. the REN & 0.5.). In most, but fall REN & 1.5. the rend, the control of the control of lease. For more indumed all all REN's should be five (5.0) or lease. For more indumed all rends and control of lease. For more indumed all rends and lease. For more indumed all rends lease. For more indumed lease. For more i

This equipment may not be used with Party Lines If you have specially wired alarm dialing equipment connected to your telephone line, ensure the connection of this equipment does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephon service provider or a qualified installer.

If this equipment is malfunctioning, it must be unplugged from the modular jack until the prot been corrected. Repairs to this telephone equi can only be made by the manufacturer or its a agents. For repair procedures, follow the instru-outlined under the Limited warranty. ourinea under the Limited warranty.

If this equipment is causing harm to the telephone network, the telephone service provider may temporarily discontinue your telephone service. The telephone service provider is required to notify you To answer the intercom call, press **%/HOME**, **%//CELL**, **%//CELL** 2, **4**, or any dialing key on the destination handset. You can now have a private conservation before transferring the call.

To transfer the call, press **OPTION** on the initiating device, and then press **SELECT** to select **Transfer**.

Answer an incoming call during an intercom call

- If you receive an incoming call during an intercom call, there is an alert tone. To answer a home call proce #/HOME The com call ends automaticall
- To end the intercom call without answering the outside call, press (170). The intercom ands and the telephone of ends and the telephone continues to ring.

 To answer a cell call, press No to end the intercom call. The telephone continues to ring. Then press W/CELL.

The home directory stores up to 200 entries with up to 30 digits for each phone number and 15 characters for each name. Each of the downloaded directories stores up to 1 500 entrie vith up to 30 digits for each phone number and

To add a directory entry:

Press MENU on the handset or telephone Scroll to Directory then press Salaci

Press OPTION to select Home. 4. Press STUTEM to choose Add contact

Use the dialing keys to enter the number to 30 digits), and then press NEXT. Scroll to select Home, Cell, Work, or Other, and then press (13XI). Use the dialing keys to enter the name (up to 15 characters). Additional key presses show other characters of that particular key.

8 Press SAVE to save While entering numbers and names you can:

Press DELETE to erase a digit or character. Press and hold DELETE to erase the entire entry Scroll to move the cursor to the left or right.

Press and hold PAUSE to insert a dialing pause (for entering phone numbers only).

Press 0 to add a space (for entering names only) Press * to add * or # to add # (for entering phone numbers only).

will be given the opportunity to correct the problem and the telephone service provider is required to inform the telephone service provider is required to inform the telephone service provider may make changes in its telephone service provider may make changes in the telephone service provider may make changes in the telephone service provider is required to notify you if such changes are glarmed.

If this product is equipped with a corded or cordies such changes are glarmed.

If the product is demandy already collation, you may choose to store emergency telephone numbers (e.g., police, its, medical) in these location. If you do not the control of the provider is made to the control of the provider is made to the control of the provider is made to the provider is made to the provider in the provider is made to the provider is made to the provider in the provider is made to the provider in the provider is made to the provider in the provider in the provider is made to the provider in the provider in the provider is the provider in the provider in the provider in the provider is the provider in the provider in the provider in the provider is the provider in the pro

Remain on the line and briefly explain the reason for

Perform such activities in off-peak hours, such as early morning or late evening.

Industry Canada This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, (2) this device must accept any interference receive including interference that may cause undesired Privacy of communications may not be ensured when using this telephone.

the term "IC:" before the certification/registration number only signifies that the Industry Canada technical specifications were met. The Ringer Equivalence Number (REN) for this terminal equipment is 0.1. The REN is an indicar terminal equipment is 0.1. The REN is an indication of the maximum number of devices allowed to be connected to a telephone interface. The terminatio an interface may consist of any combination of dev subject only to the requirement that the sum of the RENs of all the devices does not exceed five. This product meets the applicable Industry Canada

RF radiation exposure statemen

RF radiation exposure statemen.
The handset complies with FCC RF radiation exposure limits set forth or an uncontrolled environment. The base should be installed and operated with a minimum distance of 8 in (20 cm) between the base and the control that of the property o ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

To review and dial from the directory:

- Entries are sorted alphabetically.

 1. Press © or PHONEBOOK when idle
- Scroll to the desired directory and then
- Scroll to browse through the directory, or use the dialing keys to start a name search (you can enter up to 3 characters for the search) can enter up to 3 characters for the search).

 When the desired entry appears, press

 AB/HOME, W/CELL 1, W/CELL 2, or ul to dial.
- To edit a directory entry:
- When the desired entry displays, press Use the dialing keys to edit the number, and then press N≅XII.
- unen press NEXI:
 Scroll to select Home, Cell, Work, or Other,
 and then press NEXI:
 Use the dialing keys to edit the name, and
 then press SAVE to save.

To delete a directory entry: When the desired entry displays, press When the careen displays Delete contact?

Caller ID This product supports caller ID services provided n your service subscription, you may see the

the first or second ring. Caller ID log

press WES to confirm delet

The caller ID log stores up to 50 entries. If

you answer a call before the caller information appears, it will not be saved in the caller ID log. The screens display XX missed calls when there are calls that have not been reviewed

the caller ID log.

If you want to erase the missed call indicator, press and hold CANCEL or press CID when idle To review and dial a number in the caller ID log:

Press CID or CALLER ID when idle Scroll to browse through the caller ID log.
 When the desired entry appears:

Press # repeatedly to show different

to dial the displayed number

dialing options.

Press 1 repeatedly if you need to add or remove 1 in front of the phone number. 3 Press #/HOME (N/CELL 1 or (N/CELL 2

What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a vaid proof of purchase ("Consumer" or you') that the Product and all accessories provided defects in material and workmanthin, pursuant to the following terms and conditions, when installed and used nominally and in accordance with the Product only to the Consumer for Products purchased and conditions are supported to the Consumer for Products purchased and used in the United States of America and Canada.

What will VTech do if the Product is not free from

product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's extending the product of the product of the product we repair the Product, we may use new or refurbished replacement parts. If we choose to replace the Product we may replace it with a new or refurbished Product of the same or smillar design. We will retain the form we may replace in which relevo in relutionate of roduction of the same or similar design. We will retain defectly parts, modules, or equipment. Repair or replacemer of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replaceme Products to you in working condition. You should exthe repair or replacement to take approximately 30 of the repair or replacement to take approximately.

the repair of replacement to take approximately 30 chow long in the limited warranty period? The limited warranty period for the Product extends to ONE (1) YEAR from the date of purchase. If VTed repairs or replaces a Materially Defective Product under the terms of this limited warranty, this limited warranty, the similar of the terms of the limited warranty, the similar of the product of a period of either (a) 90 days from the date the repaired or replacement product is shippely uou or (b) the time remaining on the original one-ywarranty; whichever is longer. What is not covered by this limited warranty?

nas is not covered by this limited warranty? is limited warranty does not cover: Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or

liquid infrusion; or Product that has been damaged due to repair, alteration or modification by anyone other than an sulfortuces service representative of VT ech; and the control of the control of the control of seasons of the control of the control of readed in caused by signal conditions, network reliability, or cable or antenna systems; or Product to the extent that the problem is caused by use with non-VTech accessories; or

Product whose warranty/quality stickers, product serial number plates or electronic serial numbers have been removed, altered or rendered illegible; Product purchased, used, serviced, or shipped for repair from outside the United States of America or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or used for rental purposes); or

Product returned without a valid proof of purchase
(see item 2 on the next page); or

Charges for installation or set up, adjustment
of customer controls, and installation or repair of
systems outside the unit.

To save a caller ID log entry to the directory:

- When the desired caller ID log entry displays, press SAVE.

 Use the dialing keys and BACKSE to edit
- the number, and then press NEX Scroll to select Home, Cell, Work, or Other
- and then press NEXU Use the dialing keys to edit the name, and then press SAVE to save.
- o delete a caller ID log entry: When the desired caller ID log entry displays, press DELETE
- To delete all caller ID log entries Press MENU on the handset or telephone
- base when idle. Scroll to **Caller ID log** and then press ভারমান্ত্রা.
- Scroll to Del all calls and then press When the screen displays Delete all calls?, press YES to confirm delete.

About answering system and voicemail

built-in answering system, and it also support voicemail service offered by your telephone service provider (subscription is required, and fee may apply). For message recording, your telephone has a

The main differences between them are as follows stegory Built-in answering Voicemail from

	System	relephone service
torage	Messages are stored in the telephone base.	Messages are stored in a server or system provided by your telephone service.
laximum umber of essages	This depends on the design of telephone base. You cannot change the maximum number of messages that can be recorded.	This may vary with your telephone service plan (fee may apply). Contact your telephone service provider for more information.
lethod retrieve essages	Usually, there are two ways to retrieve messages: • Press a button on the telephone base; or • Access remotely with an access	To retrieve messages, you need an access number and/or a secret code provided by your service provider.

NOTE: Before calling for service, please review the ser's manual - a check of the Product's controls an satures may save you a service call. resures may save you a service call.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. Virech will return repaired or replaced Product under this limited warranty. Transportation, delivery

r proof of purchase does not meet the terms of this miled warranty. Viech will notify you and will request hat you authorize the cost of repair prior to any further epair activity. You must pay for the cost of repair and elum shipping costs for the repair of Products that are to covered by this limited warranty.

- What must you return with the Product to get warranty service? Return the entire original package and conte including the Product to the VTech service I along with a description of the malfunction o difficulty; and
- difficulty; and Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and Provide your name, complete and correct mailing address, and telephone number.

Other limitations Other immissions. This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other with the complete and exclusive agreement of the control of the con not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province. which vary from state to state of province to province. Limitations: Implied warranties, including flowe of of Limitations integrity developed the control of the Limitation straining that the Product is lift to ordinary unwritten warranty that the Product is lift or ordinary Some statesportwoods for our drive intradiction on he long an implied warranty lasts, so the above installation to long an implied warranty lasts, so the above installation long an implied warranty lasts, so the above installation for any indices, special, indicental consequential, profits or revenue, installation to use the Product or any indices, special, indicental consequential, profits or revenue, installation to see the Product or any indices, special indicental consequential, serious and the product of the product serious and the product serious states of the product serious serious states serious se

Please retain your original sales receipt as

Set your built-in answering system Your answering system has various t read below for the basic settings.

Default settings are indicated by asterisks(*

Menu Description Options

Play, record, or reset the

Delete all old (reviewed)

s sys setup Change the settings of call screening, number of rings, re code, message afert alone, recording time

of rings Set the number of times the

Msg alert Set to alert you when you have new messages.

Recording time Set a two-digit security code to access the answering system remotely from any touch-tone telephone.

You can use the preset announcement to answer calls, or replace it with your own

ecorded announcement. It can be up to

Scroll to Answering sys and then press
 SELECT.

Set number of rings

DECT: 5

Press MENU on the handset or telephone

Press SELECT to select Announcement Press SELECT to select Record anno.

The handset or telephone base announces "Record after the tone. Press STOP when you

are done." After the tone, speak towards the handset microphone. Press STOR when done.

DECT frequency: 1921.536-1928.448 MH: Bluetooth frequency: 2402 000-2480 0008

Maximum power allowed by FCC and IC. Actual operating range may vary according to environment conditions at the time of use.

Handset: 2.4V 400mAH AAAx2 Ni-MH batte

Telephone base: dual output, 6VDC @ 600mA 5.1VDC @ 1000mA

Each cell line: 1500 memory locations, up to 30 digits and 15 characters

Caller ID log: 50 memory locations; up to 24 digits and

Charger: 6V AC @ 300mA

Record your own announcement

Set a two-digit security code

data all old

case when idle. Scroll to **Answering sys** then press SELOU IO

Scroll to Ans sys setup then press

Scroll to # of rings then press SELECI.

Scroll to choose 6, 5, 4, 3, 2 or Toll saver, and then press STATION.

Press MEXIII on the handset or telephone

Use your built-in answering system

Turn the answering system on or off The answering system must be turned on to answer and record messages.

Proce (MANS ON/OFF on the telephone has Message playback at the telephone base

When you received a message on your answering system, ΩO displays on both the handset and telephone base, XX new message displays on the handset, and XX new message displays on the telephone base. To retrieve,

It can record up to 99 messages, depending on the length of each message. Each message can be up to three minutes in length. The total recording time is approximately 11 minutes. Options during playback:

Proce A/VOI /▼ to adjust the eneaker volume Press »/SKIP to skip to the next message. Press */REPEAT to repeat the message currently playing. Press */REPEAT twice to listen to the previous message.

Press X/DELETE to delete the playing me The system advances to the next messa Press ►■/STOP to stop. Press 格/HOME, (♦/CELL 1, or (♦/CELL 2 to

call back the caller if the message contains caller ID information. The telephone base screen displays Call back? with the caller ID

Press CALL to call back the caller. Press EACK to restart the message Delete all old messages at the telephone base Press X/DELETE twice when the phone is not in use

Specifications are subject to change without notice © 2014 for VTech Technologies Canada Ltd. All rights reserved. 04/14. DS6291_CAN_ACIB_V1:

You can set the answering system to answer an incoming call after 2, 3, 4, 5 or 6 ings; or toll saver, it you choose toll saver, the answering system answer after 2 rings when you have new messages, or after 4 rings when you have no new messages. Call intercent

chnical specifications

equency Costal controlled PLL synthesize