



**REPLACEMENT TRANSMITTER**  
Model 492T 2-Button 302 MHz 2"

The following Learn Routine can be used to program the replacement transmitter to the system. In order to

enter the Learn Routine, the system's Valet/Program button must be plugged into the blue port.

To enter the transmitter/receiver Learn Routine™:

1. **Door.** Open a Door.
2. **Key.** Turn the ignition on to the run position.
3. **Choose.** Within 15 seconds, press and release the Valet/Program button the number of times corresponding to the channel you wish to program.

Once you have selected the channel, press the button once more and **HOLD** it. The unit will chirp one, two or three times depending on the channel selected. Do **NOT** release the Valet/Program button.

4. **Transmit.** While holding the Valet/Program button, press the button on the transmitter that you would like to control the selected receiver channel. One chirp will confirm that the code has been learned.

5. **Release.** Once the code is learned, the button can be released. You can advance from one channel to another by releasing the Valet/Program button and tapping it to advance channels and then holding it. For instance: You have programmed channel one and you want to program channel two. Release the Valet/Program button. Press it one time and release it to advance from channel one to channel two. Press and hold the button down and the unit will chirp twice. As before, **do not release**. Then if you want to program channel three after programming channel two, release the Valet/Program button, press the button again and release it to advance to channel three. Then press it once more to hold it. The siren will chirp three times to confirm that it is ready to receive the


| Channel | Press and Release | To Program                                      |
|---------|-------------------|---|
| 1       | One time          | Arm/Disarm/Flash                                |
| 2       | Two times         | Channel two output (Silent Mode™/Remote Valet™) |
| 3       | Three times       | Channel three output                            |

Learn Routine™ will be exited if:

- Ignition is turned off.
- Door is closed.
- Valet/Program button is pressed too many times.
- More than 15 seconds elapses between steps.

One long chirp indicates that Learn Routine has been exited.

**INTERNAL PROGRAMMING JUMPERS**

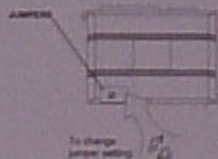

(V) Valet Only (L) Learn Enabled (LO) Light Flash Output

**Learn Enabled/Valet Only Jumper:** In the learn enabled position (L), you can use the Valet/Program button to access both the Learn Routine™ and Valet mode. In the Valet only position (V), the Valet/Program button will only function as the Valet button. Entering Learn Routine™ is not possible with the jumper in the (V) position.

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

P/N 492C



0 93207 04923 1

MADE IN TAIWAN  
©2002 Directed Electronics, Inc. Vista, CA 94088  
All rights reserved. 2002

LHD492C0

# Directed

REPLACEMENT TRANSMITTER

Model 492T, 2-Button 302 MHz 2"

| SYSTEM          | Unit Code |
|-----------------|-----------|
| AutoMate 2      | 9G-7D     |
| AutoMate 3+     | 5L-7E     |
| AutoMate 5+     | 5L-7E     |
| Hornet 718T     | 6G-7B     |
| Hornet 718T     | 8F-7C     |
| Hornet 732T     | 6C-7E     |
| Python 600      | 5L-7E     |
| Python 700      | 8L-7C     |
| Schweitzer 8000 | 5L-7E     |
| Schweitzer 8000 | 5L-7E     |
| Shaco 217W      | 6F-7C     |
| Shaco 217T      | 6A-6P     |
| Shaco 710F      | 6C-7D     |
| Star 500        | 5L-7E     |
| Viper 500       | 5L-7E     |
| Viper 500+      | 5L-7E     |
| Viper 6000x     | 3G        |



WIPE

HORNET  
Auto Security Systems