

Photo 1 Optional 3 button configuration. Notice same PCB as original 4 button configuration.

PHOTO 1



PHOTO 2



Photo 2 Original 4 button configuration. Again, same PCB is used for either 3 or 4 button configuration.



Photo 3: Back of 474P PCB



Photo 4: Front of 474P PCB

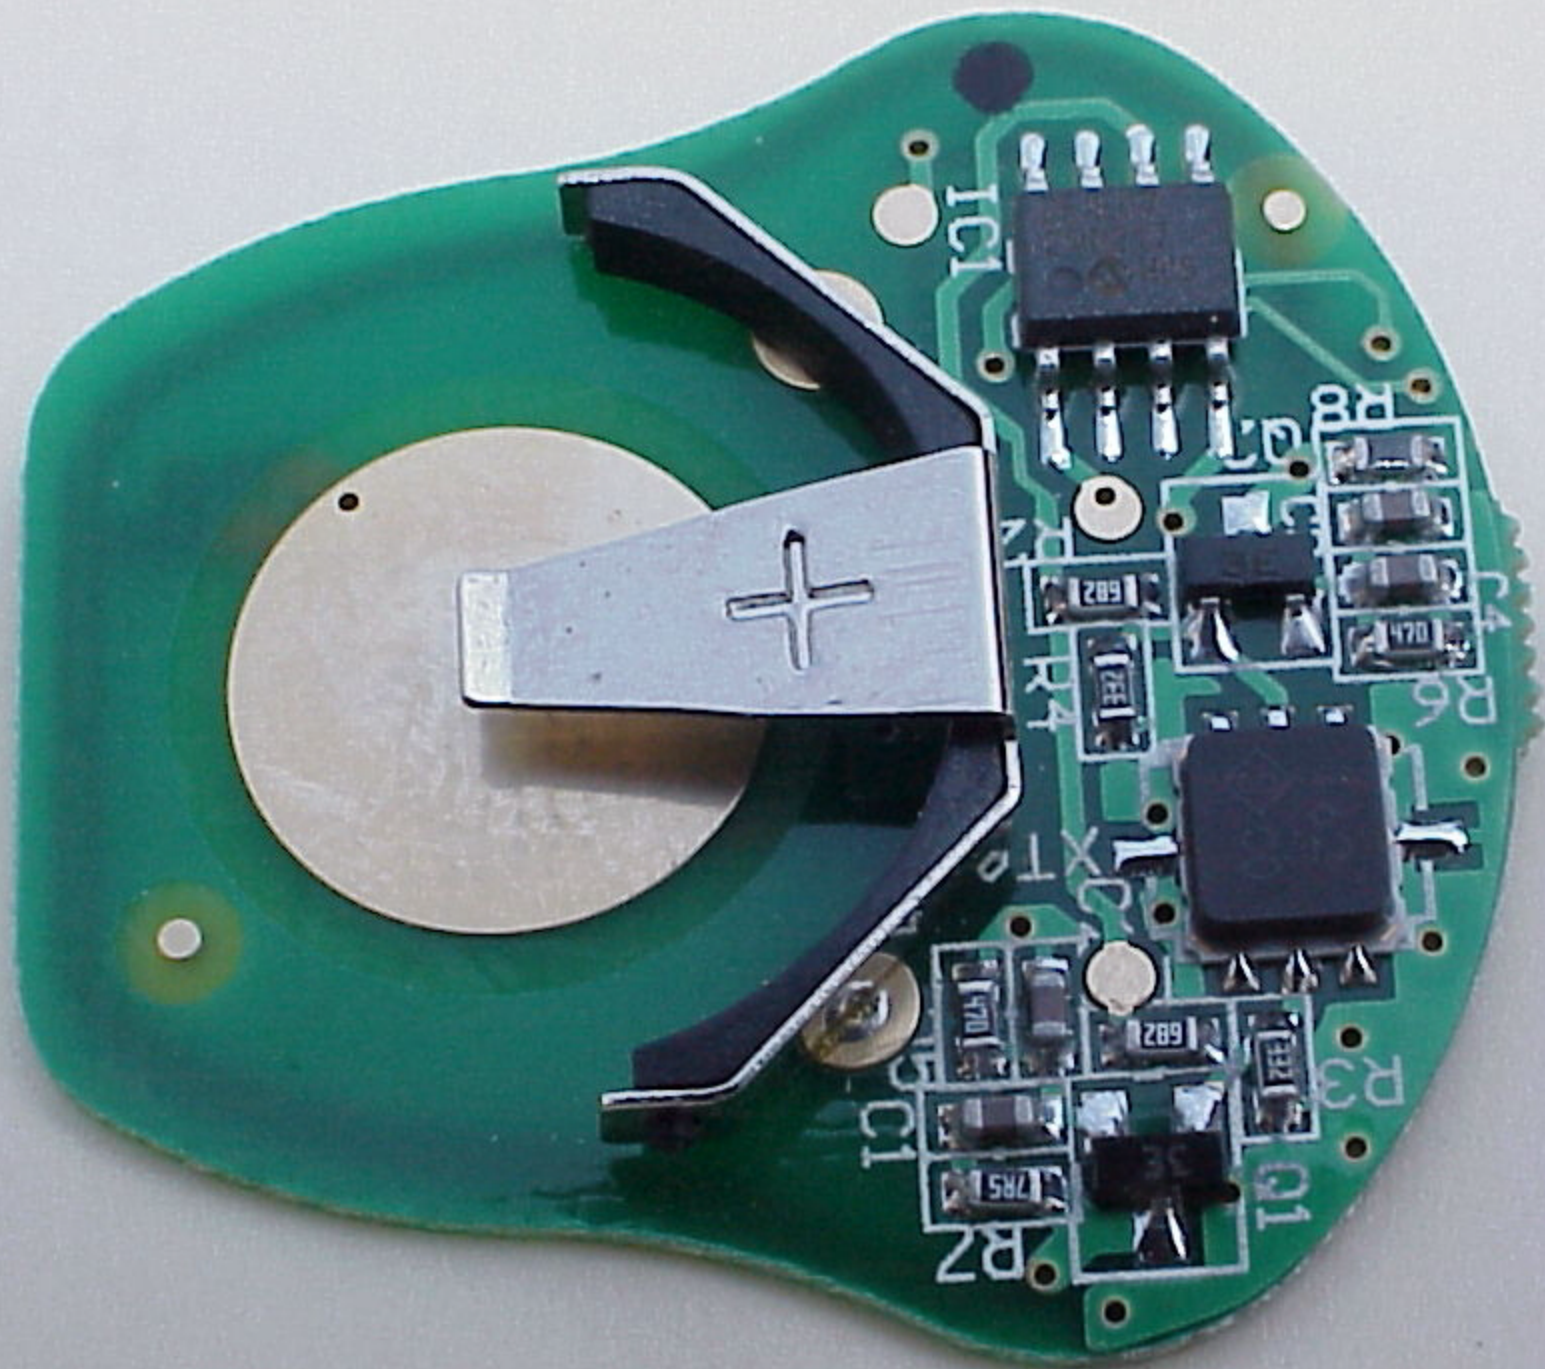


Photo 5 Rubber keypad used in 3 button configuration. (473P)

PHOTO 5



Photo 6 Rubber keypad for original 4 button configuration. (474P)

PHOTO 6

